TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

NT-80

USER MANUAL

5 WATT HAND-HELD RADIO SERVICE

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

NT-80

TABLE OF CONTENTS

	PAGE
USER`S MANUAL	 59
THEORY OF OPERATION	 61
LIST OF ACTIVE DEVICES	 68
BLOCK DIAGRAM	 69
SCHEMATICS	 70
PCB MAP	 71
LINE DRAWING	 72
PARTS LIST	 73
PARTS DATA	 77
PHOTOGRAGH	 78

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

USER'S MANUAL

1. PRODUCT INTRODUCTION

The NT-8 LMR (LAND MOBILE RADIO) FROM TELSON I&C CO.,LTD. UTILIZES THE LATEST TECHNOLOGY IN ITS DESIGN AND MANUFACTURING. NT-80 IS PLL (PHASE LOCK SYNTHESIZER)/MICROPROCESSOR CONTROLLED, AND OFFER 5 WATTS OF POWER WITH 16 CHANNEL CAPABILITY, MULTIPLE FUNCTIONS INCLUDING SCAN AND CTCSS/DCS SIGNALING ARE STANDARD IN THESE FULLY PROGRAMMABLE **WIDE** BANDWIDTH HANDHELD UNITS.

THE USE OF MICROPROCESSOR TECHNOLOGY MAKES CHANGING RADIO CHARACTERISTICS SUCH AS OPERATING FREQUENCIES AND SQUELCH CODES BOTH FAST AND ECONOMICAL. ANY COMPUTER EQUIPPED NT-8 DEALER CAN **EASILY** REPROGRAM YOUR RADIO'S **OPERATING** CHARACTERISTICS, OR YOUR RADIO CAN BE "CLONED" FROM A ALREADY PROGRAMMED TO YOUR FREQUENCIES AMD CODES. THE NT-8 LMR SATISFIES THUGH ENVIRONMENTAL REQUIREMENTS WHILE PROVIDING COST EFFECTIVE AND RELIABLE COMMUNICATIONS.

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

2. HOW TO USE

POWER ON/OFF, VOLUME CONTROL – TURN THE RADIO ON AND ADJUST THE VOLUME LEVEL.

ROTARY CHANNEL SELECTOR SWITCH – SELECT THE OPERATING CHANNEL OR INITIATES SCAN OPERATION.

ACCESSORY CONNECTOR (PHONE JACK AND MIC JACK) – PROVIDES ACCESSIBILITY FOR CONNECTION TO REMOTE ACCESSORIES SUCH AS A REMOTE SPEAKER MICROPHONE.

PUSH TO TALK (PTT) BUTTON – WHEN EDPRESSED AND HELD, ENGAGES THE TRANSMITTER AND PUTS RADIO IN THE TRANSMIT MODE. WHEN RELEASED, THE RADIO OPERATES IN THE RECEIVE MODE.

MONITOR BUTTON – SELECTS THE MODE OF OPERATION, CARRIER SQUELCH OR TONE SQUELCH. IT HAS TWO CASES. FIRST CASE OF PRESSING THE MONITOR KEY FOR LESS THAN 2 SEC, CHECKS THE CHANNEL IN USE SCANNING EACH CHANNEL. THEN MONITOR OPERATION STOPS AS MONITOR KEY IS RELEASED, THE RECEIVE MODE BEGINS. SECOND CASE OF PRESSING THE MONITOR KEY FOR 2 SEC, STOPS TO THE CHANNEL IN USE AND KEEPS THE RECEIVE MODE UNTIL IDENTIFYING THE NEXT MONITOR KEY. WHEN THE MONITOR KEY IS PRESSED, THE CURRENT OPERATION STOPS AND RETURNS TO THE RECEIVE MODE.

ANTENNA - HELIFLEX OR WHIP WITH THREADED BASE.

LED INDICATOR – A TRI-COLORED LIGHT EMITTING DIODE(LED) INDICATES SCAN OPERATING STATUS.

TRAMSMIT TIME-OUT-TIMER (TOT) – THE TOT IS SYSTEM PROGRAMMABLE FOR 15 SECONDS TO 225 SECONDS, IN 15 SECOND INCREMENTS AND CAN ALSO BE SELECTED AS DISABLED. THE DEFAULT VALUE IS DISABLED.

CHANNEL SCAN – TO INITATE THE SCAN FEATURE, ROTATE THE CHANNEL SELECTOR TO THE LOCATION WITH THE SCAN LIST PROGRAMMED TO IT.

POWER SAVING MODE – POWER SAVING MODE OPERATES BY THE FOLLOWING CONDITIONS. ONLY IF THE RECEIVE MODE DOES NOT HAVE THE CARRIER, POWER SAVING MODE IS ON. BUT IT IS OFF IN THE SCAN MODE. POWER SAVING MODE BEGINS AFTER 2 SEC OF FOLLOWING CONDITIONS POWER ON SELECTING

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

3. THEORY OF OPERATION

FREQUENCY GENERATION CIRCUITRY

THE FREQUENCY GENERATION CIRCUITRY IS COMPOWED OF THE SYNTHESIZER IC(U102) AND THE VCO. THE BLOCK DIAGRAM ILLUSTRATES THE INTERCONNECT AND SUPPORT CIRCUITRY USED IN THE DESIGN. REFER TO THE SCHEMATIC FOR REFERENCE DESIGNATOR.

THE SUPPLY FOR THE SYNTHESIZER IS REGULATED 5.0 VOLTS WHICH ALSO SERVES THE REST OF THE RADIO. IN ADDITION TO THE VCO, THE SYNTHESIZER MUST INTERFACE WITH THE LOGIC AND AUDIO FILTER CIRCUITRY. PROGRAMMING FOR THE SYNTHESIZER IS ACCOMPLISHED THROUGH THE CLOCK, DATA AND ENABLE SIGNALS FROM THE MICROPROCESSOR, U200.

A SERIAL DATA IS SENT WHENEVER THE SYNTHESIZER IS PROGRAMMED. A 5.0 VOLTS DC SIGNAL FROM PIN 7 INDICATES TO THE MICROPROCESSOR THAT THE SYNTHESIZER IS LOCKED. WHILE UNLOCK IS INDICATED BY A LOW VOLTAGE ON THIS PIN. THE AUDIO SIGNAL FORM THE AUDIO FILTER IS MODULATED BY THE VARICAP DIODE(D59) OF VCO.

PLL FREQUENCY SYNTHESIZER

THE U102 PLL IC INCLUDES ALL THE FUNCTIONS SUCH AS THE PHASE COMPARATOR, THE PROGRAMMABLE DIVIDER, THE LOCK DETECTOR AND REFERENCE OSCILLATOR. THE SYNTHESIZER USES A 14.4MHz VCTCXO(U103) TO PROVIDE THE REFERENCE FREQUENCY FOR THE SYSTEM.

THE CHARGE PUMP CIRCUIT AND LOOP FILTER, COMPRISED OF Q58, Q59, R133 AND R138, R139, R140, R141, C172, C173, C174, PROVIDE THE NECESSARY DC STEERING VOLTAGE FOR THE VCO AS WELL AS FILTERING OF SPURIOUS SIGNALS FROM THE PHASE DETECTOR. THE PRESCALER FOR THE LOOP IS INTERNAL TO U102 WITH THE VALUE DETERMINED BY THE FREQUENCY BAND OF OPERATION.

THE VCTCXO IS THE TEMPERATURE COMPENSATION CIRCUIT TO MAINTAIN THE FREQUENCY WITHIN THE ALLOWABLE ERROR RANGE EVEN UNDER A LOW TEMPERATURE OF -30° C.

VCO

THE VCO IS OSCILLATED BY THE CONTROL VOLTAGE SUPPLIED FROM THE SYNTHSIZER AND CONSISTS OF THE COLPITTS OSCILATOR OF THE Q61(RX), Q62(TX).

THE OPERATION OF RX AND THX IS SELECTED BY 5V SWITCH TR(Q75,Q77) AND THE TX VCO OSCILLATES FROM 146MHz TO 174MHz BY CONTROL VOLTAGE (1.5V~5.5V) AND THE RX VCO OSCILLATES FROM 191MHz TO 219MHz BY CONTROL VOLTAGE (1.5V~5.5V).

IN THE TRANSMIT MODE, THE VCO IS OSCILLATED BY THE COLPITTS OSCILLATOR, WHICH CONSISTS OF D58, D57, C157, C158, R134, D59, C187, C188, VC2,

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

IN THE RECEIVE MODE, THE VCO IS OSCILLATED BY THE COLPITTS OSCILLATOR, WHICH CONSISTS OF D55, D56, C177, VC1, L72, C178, L72, C179, C180 AND Q61. THE Q63 AND PERIPHERAL COMPONENTS AMPLIFY AN RF CARRIER OSCILLATED FROM TX AND RX VCO, MAINTAIN -10dBm OUTPUT LEVEL AND REJECT THE EFFECTS OF REVERSE POWER CONNECTED TO OUTPUT TERMINAL.

POWER DRIVE

TX DRIVE STAGE AMPLIFIES THE RF POWER FOR THE MODULE INPUT TO BE SATISFIED, AS WELL AS HAS THE ABILITY FOR VCO NOT TO BE OSCILLATED. IT IS COMPOSED OF THE TWO STAGES AMPLIFIER. THE FIRST AMPLIFIER (Q65) OPERATES AS CLASS A AND HAS THE FUNCTION TO BLOCK THE OSCILLATION CAUSED BY THE MISMATCHING BETWEEN VCO AND POWER MODULE. THE SECOND ONE (Q66) AMPLIFIES THE INPUT POWER FOR THE MODULE TO BE AMPLIFIED INTO 5 WATTS. RF POWER DRIVE AMPLIFIES BY 17dBm (50mW).

TX MODULE AND APC

THE TX MODULE (U101), WHICH FINALLY AMPLIFIES THE RF CARRIER, IS CONNECTED WITH THE APC (AUTOMATIC POWER CONTROL) CIRCUIT TO CONTROL A POWER. IT AMPLIFIES 50mW OBTAINED FROM TX DRIVE TO 7 WATTS. THE VOLTAGE OF TX MODULE IS PASSED THROUGH THE BEAD COIL BD1.

THE APC IS SENSING AN RF POWER AND CONSTANTLY MAINTAINS AN RF POWER REGARDLESS OF VOLTAGE CHANGES BY DECREASING THE CONTROL VOLTAGE OF POWER MODULE IN OVER CARRIER CASE AND INCREASING THAT OF POWER MODULE IN UNDER CARRIER CASE.

THE APC CONSISTS OF RF CARRIER SENSING PARTS. THE RF CARRIER IS TRANSFORMED TO VOLTAGE BY C226, D60 AND C227. THE VOLTAGE IS SUPPLIED INTO THE BASE OF DIFFERENTIAL AMPLIFIER, Q68. THEN LOW POWER (1 WATT) IS CONTROLLED BY THE VR13, WHEREAS HIGH POWER BY VR14 AND Q67.

THE DIFFERENTIAL AMPLIFIER, Q68 CONTROLS BY COMPARING THE BASE REFERENCE VOLTAGE FROM SENSING PART. THE CONTROL VOLTAGE OF AN POWER MODULE TO BE THE SPECIFIED RF POWER.

ANTENNA SWITCH AND HARMONIC FILTER

THE ANTENNA SWITCH IS COMPOSED OF SWITCHING DIODE. THE ANTENNA SWITCH SELECTS TX CARRIER OR RX SIGNAL. THE R/TX SWITCHING IS ACCOMPLISHED BY D50, D51.

IN TRANSMITTION MODE, 5.0V DC IS APPLIED TO R175, L85 THEN D50, D51 ARE ON. TX CARRIER PASSED BY D50 AND THROUGH THE HARMONIC FILTER TO ANTENNA.

IN RECEIVER MODE, 5.0V DC IS NOT APPLIED TO D50. THEN D50 IS OPENED. RX SIGNAL IS PASSED TO C107.

THE HARMONIC FILTER IS COMPOSED OF C100, C102, C103, C104, C105, C106, L50, L51, L52 AND L53. THIS FILTER REMOVES HARMONIC SPURIOUS LIKE A 2nd, 3rd CONDUCTED SPURIOUS. IN TRANSMITTION MODE, THIS FILTER HAS INSERT LOSS

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

FRONT END

FRONT END SELECTS AND AMPLIFIES THE SIGNALS OF WANTED BAND AMONG RF SIGNALS EXISTING IN THE FREE SPACE. IT CONSISTS OF THE BANDPASS FILTER (BPF) AND LOW NOISE AMPLIFIER (LNA).

THE FILTER IS COMPOSED OF 5TH BPF BEFORE THE LNA AND 7TH BPF AFTER THE LNA. IT SELECTS THE BANDS BETWEEN 146MHz AND 174MHz.

ESPECIALLY THE BILATERAL DIODE, D52 BLOCKS FOR LNA TO BE BROKEN OR SATURATED BY LIMITING THE CRITICAL RF SIGNALS FROM THE ANTENNA. THE GAIN OF THE LNA IS 20Db. THE LNA MAKES SIGNALS MAXIMUM, HAS THE MINIMUM NOISE FIGURE.

MIXER

THE MIXER USES THE FET TO GENERATE THE FIRST IF, 45MHz BY MIXING THE RF CARRIER SIGNAL AND LOCAL SIGNAL FROM THE VCO. ITS FREQUENCY IS $F_{IF} = F_{RF} - F_{LOCAL}$.

LOCAL DRIVE

THE LOCAL DRIVE SUPPLIES LOCAL CARRIER (191MHz~219MHz) GENERATED FROM THE SYNTHESIZER INTO MIXER, AND BLOCKS TO AFFECT THE UNWANTED FREQUENCY GENERATED IN MIXING TO THE VCO. IT IS COMPOSED OF Q64, PERIPHERAL CAPACITORS AND RESISTORS. THE SIGNAL TOBE BUFFERED MAXIMALLY LIMIT THE SPURIOUS BY USING LOW PASS FILTER THAT IS COMPOSED OF C204, C205 AND L80.

CRYSTAL FILTER AND IF AMP

THE CRYSTAL FILTER CONSISTS OF A PAIR OF F2 AND F3, ITS PASS BAND WIDTH IS +/- 7.5kHz AND ITS ATTENUATION BANDWIDTH IS +/- 22kHz. ITS RIPPLE IS LESS THAN I dB AND INSERT LOSS IS 4 dB.

THE IF AMP (Q52) AMPLIFIES 20dB THE FREQUENCY SELECTED BY THE CRYSTAL FILTER.

IF IC AND NOISE SQUELCH

THE IF IC (U100) CONSISTS OF THE 2ND MIXER, CERAMIC FILTER, CERAMIC DISCRIMINATOR, NOISE SQUELCH.

THE 2ND MIXER GENERATE THE 2ND IF 455kHz BY MIXING THE 1ST IF, 45MHz AND LOCAL FREQUENCY,44.545MHz (X60). THE MIXED SIGNAL, 455kHz IS PASSED THE CERAMIC FILTER F5, F6 EACH CASE OF 12.5/25kHz. THE CERAMIC DISCRIMINATOR (X61) AND DAMPING RESISTOR (R127) OPERATE WITH A QUADROTURE CIRCUITRY, ENABLE THE RECOVERED AUDIO BY 90° PHASE SHIFTING IF CENTER FREQUENCY. THE DAMPING RESISTOR DETERMINES THE PEAK SEPARATION OF THE DETECTOR.

WHEN UNWANTED SIGNAL IS RECEIVED, THE NOISE SQUELCH IS ENABLED BY DETECTION OF NOISE LEVEL. NOISE DETECTION IS GIVEN FROM NOISE HIGH

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

MICROPROCESSOR UNIT (MPU)

THE MPU (U200) IS TH HIGH SPEED AND HIGH PERFORMANCE 8-BIT SIGNLE CHIP MICROCOMPUTER. THE MPU CONTAIN CPU CORE, ROM, RAM, INPUT/OUTPUT PORTS, A/D CONVERTER, TIMER/COUNTER.

MPU PORT ASSIGNMENT

PORT	PORT	FUNCTION	PORT	PORT	FUNCTION
	NAME			NAME	
P0	P0.0	PLL DATA	P6	P6.0	CH. SWITCH 1
	P0.1	PLL ENABLE		P6.1	CH. SWITCH 2
				P6.2	CH. SWITCH 4
P2	P2.2	PC PROGRAM		P6.3	CH. SWITCH 8
	P2.3	BEEP GEN.		P6.6	LOW BAT, DET.
	P2.4	TONE DET.			
	P2.6	PLL LOCK			
	P2.7	TONE DET	P8	P8.0	TX B+
				P8.1	RX B+
				P8.2	TX ENABLE
P4	P4.0	RX LED		P8.3	VCO ENABLE
	P4.1	TX LED		P8.4	H/L POWER
	P4.2	AK2342 RSTN		P8.5	AUDIO MUTE
	P4.3	AK2342 STB		P8.6	MIC ENABLE
	P4.4	AK2342 SCLK		P8.7	12.5/25 CON.
	P4.5	AK2342 SDATA			
			DO.	DO O	SOLET CH
			P9	P9.0	SQUELCH
P5	P5.2	EEROM DATA	 	P9.1	PTT KEY
	P5.3	EEROM CLK		P9.2	MONITOR KEY


AK2342B

THE AK2342B IS AN IC WHICH SUPPORTS CTCSS (CONTINUOUS TONE CONTROLLED SQUELCH SYSTEM), COMPATIBLE WITH THE EIA STANDARD. ALSO VOICE SIGNAL FILTERS, A LIMITER, OP-AMP, AND OTHER CIRCUITS ARE INTEGRATED, MAKING IT POSSIBLE TO CONFIGURE A RADIO BASE BAND UNIT. THIS CHIP HAS THE VARIOUS MODES ARE SET BY WRITING DATA TO THE CONTROL REGISTER FROM THE SERIAL INTERFACE PINS (SDATA, SCLK, STB). IT MAKES POSSIBLE THAT AUDIO PASS TO FILTER, AMP, OR LIMITER AT EACH RX/TX MODE.

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

AK2342B BLOCK DIAGRAM

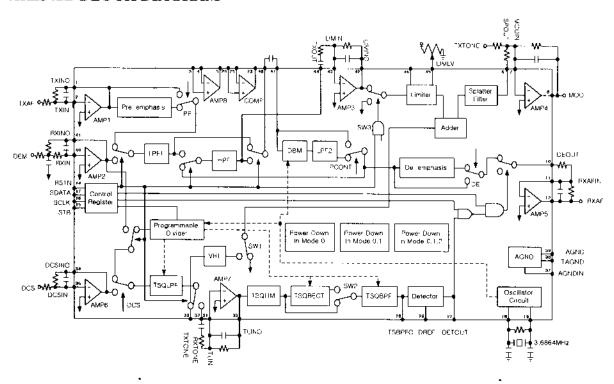

AUDIO AMP.

THE AUDIO AMP AMPLIFIES AN AUDIO SIGNAL FOR A USER TO LISTEN TO THE VOICE, ALSO AMPLIFIES AN ERROR TONE OF EACH FUNCTION. IT IS COMPOSED OF THE VOLUME SWITCH, MUTE SWITCH (Q206), AND AUDIO AMP. (U205).

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

4. GENERAL SPECIFICATIONS

GENERAL			
POWER SUPPLY	Rechargeable Nickel-Cadmium Battery, 7.5 VDC		
POWER SUPPLY VOLTAGE RANGE	6.75 – 8.25 VDC		
ENVIRONMENTAL	Designed to meet TIA/EIA-603		
TEMPERATURE RANGE	-30°C to +60°C		
RELEATIVE HUMIDITY	90% at 40°C Non-condensing		
FREQUENCY CONTROL	PLL Synthesizer		
NUMBER OF RX/TX CHANNELS	16 Maximum		
SPEAKER IMPEDANCE	8 ohm		
DIMENSIONS	133(L) X 63.5(W) X 37.5(H)		
WEIGHT	360g with Battery		
CURRENT CONSUMPTION			
STANDBY	< 30 mA (Battery Save On)		
RECEIVE .	< 250 mA		
TRANSMIIT	< 2000 mA (5W)		
BATTERY LIFE(5-5-90% DUTY CY	CLE)		
1100mAh	8 hrs @ 5W (Battery Save On)		
	6 hrs @ 5W (Battery Save Off)		
FREQUENCY BANDS			
VHF OPERATION BANDWIDTH R/TX 146 – 174MHz			
TRANSMITTER			
OUTPUT POWER	1W / 5W		
CONDUCTED SPURIOUS EMISSIONS	-60 dBc max		
RADIATED SPURIOUS EMISSIONS	-60 dBc max		
MODULATION SYSTEM	8K50F3E/16K0F3E		
AUDIO FREQUENCY RESPONSE	6dB per octave Pre-emphasis response		
AUDIO DISTORTION	< 5% @ 60% System Deviation		
MAXIMUN DEVIATION	+/- 5kHz @ 25kHz BW		
THE SERVICE OF A DEC 10037	. / CDDS /		

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

RECEIVER			
SENSITIVITY (12dB SINAD)	-116dBm		
ADJACENT CHANNEL SELECTIVITY	-65dB @ 25kHz		
INTERMODULATION REJECTION	<-60dB		
SPURIOUS RESPONSE REJECTION	<-60dB		
AUDIO POWER OUTPUT	400MW min. @ 10% THD		
AUDIO DISTORTION	5% THD		
AUDIO FREQUENCY RESPONSE	6dB per octave De-emphasis response		
FM HUM & NOISE	40dB		

TEL: 82-2-887-2690 (EXT 766)

FAX: 82-2-887-2693

LIST OF ACTIVE DEVICE

NO	REF.NO	VALUE	DESCRIPTION	VENDOR	
1	U201	24C02	EEPROM IC	ROHM	
2	U203	AK2342B	AUDIO IC WITH CTCSS	AKM	
3	U205	TDA7233D	AUDIO AMP IC	ST	
4	Q51	BF998	FET	PHILIPS	
5	D51	BAR63	PIN DIODE	SIEMENS	
6	D50	UPP9401	PIN DIODE	MICROSEMI	
7	D52	KDS226	CHIP DIODE	KEC	
8	D60	MMBD353LT1	SCHOTTKY BARRIER DIODE	MOTOROLA	
9	D53 D54 D203	DAP202U	CHIP DIODE	ROHM	
10	D204	SM12	TVS DIODE	SEMTECH	
11	U100	TA31136	IF IC	TOSHIBA	
12	Q66	28C3356	RF AMP TRANSISTOR	NEC	
13	Q50 Q52 Q61 Q62 Q63 Q64 Q65	2SC4226	RF AMP TRANSISTOR	NEC	
14	Q59	DTC114EUA	SWITCHING TRANSISTOR	ROHM	
15	Q53 Q54 Q55 Q67 Q80 Q200 Q204 Q206	DTC114TUA	SWITCHING TRANSISTOR	ROHM	
16	Q69	KTC3875	NPN TRANSISTOR	KEC	
17	Q68	UMWIN	COMPLEX TRANSISTOR	ROHM	
18	U102	MB15A02	PLL IC	FUJITSU	
19	Q58 Q75 Q76 Q77 Q78 Q201	DTA114EUA	SWITCHING TRANSISTOR	ROHM	
20	Q79	KRA223S	SWITCHING TRANSISTOR	ROHM	
21	Q70	KTA1505	PNP TRANSISTOR	KEC	
22	U101	PF0314	RF POWER MODULE	HITACHI	
23	U206	TK11450	REGULATOR IC	TOKO	
24	U204	RN5VL45CV	VOLTAGE DETECTOR IC	RICHO	
25	U200	UPD789405	MPU IC	NEC	
26	U103	VX-23VA	VCTCXO	JRC	
27	X21	3.68MHz	RESONATOR	MURATA	
28	X20	4.19MHz	CRYSTAL	KONY	