


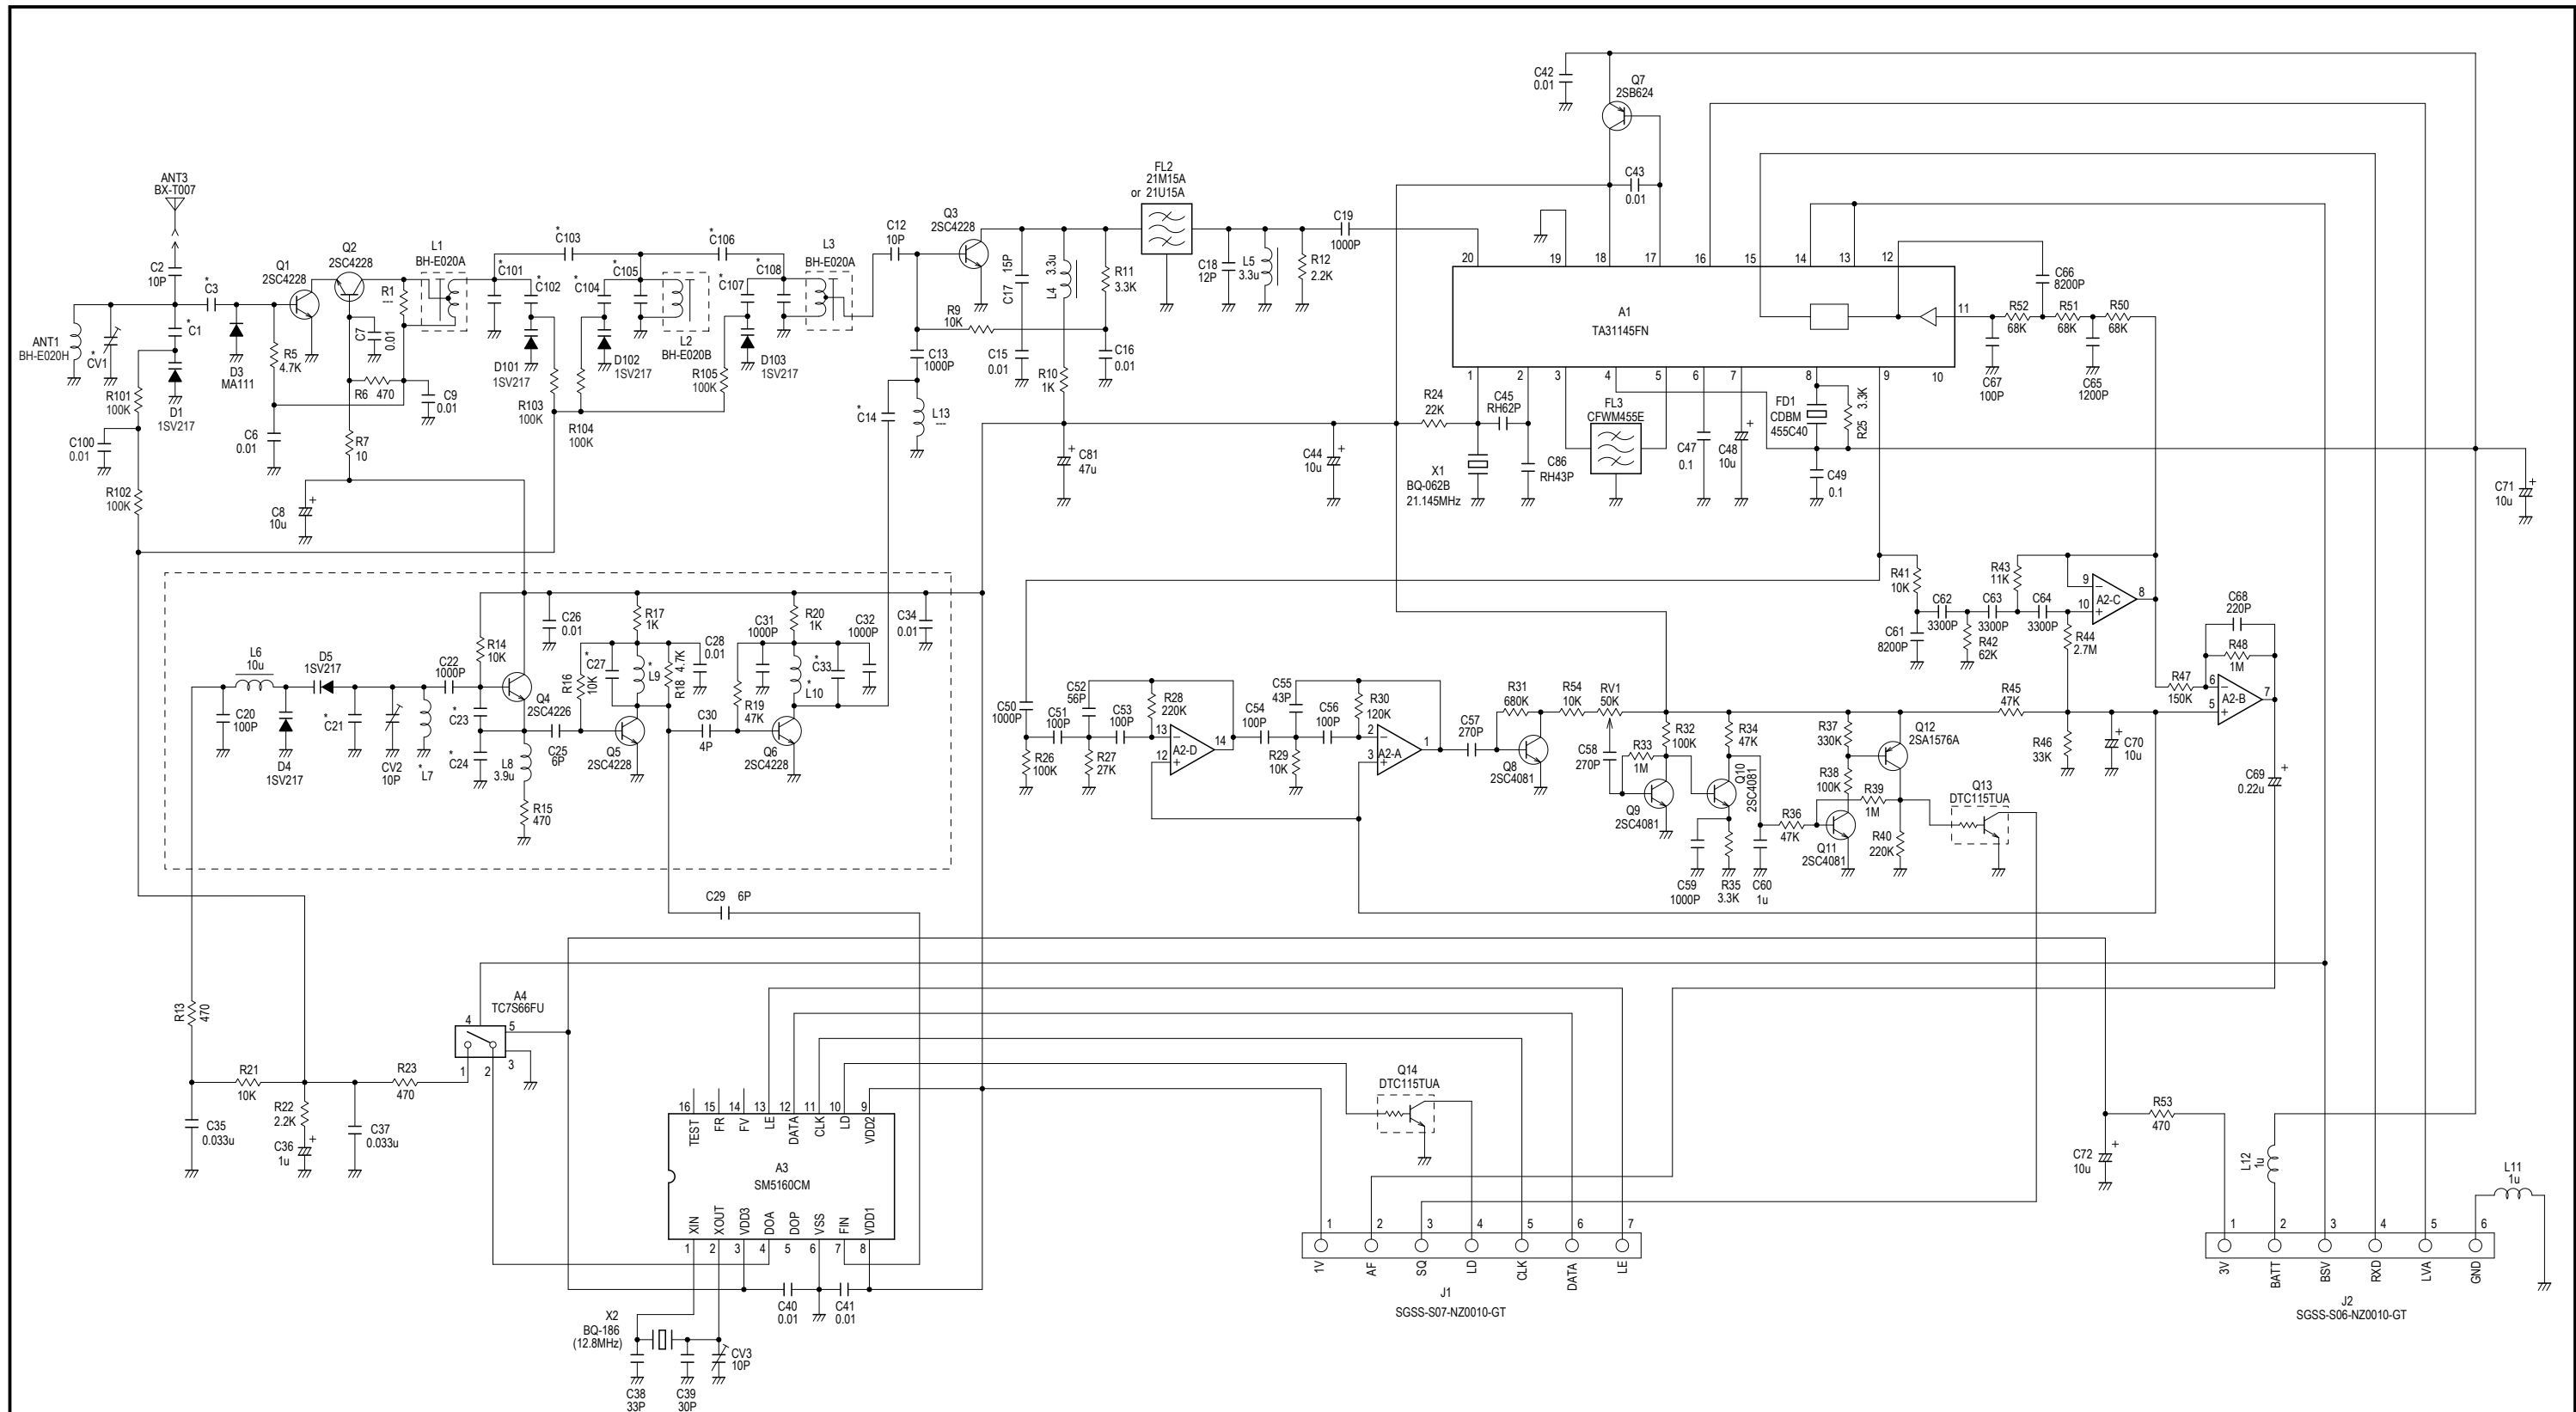

* MARK: FREQUENCY SENSITIVE COMPONENTS

FREQUENCY (MHz)	C1	C3	C101	C102	C103	C104	C105	C106	C107	C108	C21	L7	C23	C24	C27	L9	L10	C33	C14	CV1	
LL BAND (30-33 MHz)	150P	2P	27P	470P	4P	470P	27P	4P	470P	27P	22P	100n	62P	68P	10P	0.47u	0.47u	12P	4P	50P	
L BAND (33-37 MHz)	82P	2P	24P	82P	4P	82P	24P	4P	82P	24P	27P	82n	62P	68P	8P	0.47u	0.47u	10P	3P	50P	
M BAND (37-41 MHz)	68P	2P	18P	62P	3P	62P	18P	3P	62P	18P	22P	82n	56P	62P	12P	0.33u	0.33u	13P	3P	20P	
H BAND (41-45 MHz)	68P	1P	12P	51P	3P	51P	12P	3P	51P	12P	30P	68n	56P	62P	10P	0.33u	0.33u	12P	3P	20P	
HH BAND (45-50 MHz)	56P	1P	10P	36P	2P	36P	10P	2P	36P	10P	33P	56n	47P	56P	8P	0.33u	0.33u	10P	3P	10P	

MODEL CP-AV03
RX BOARD SCHEMATIC DIAGRAM
3DC-E131Z-R1