



MANI INDUSTRIES LIMITED

30/F. Wharf Cable Tower, 9 Hoi Shing Road, Tsuen Wan, Hong Kong.
Telephone: (852) 2416 4499 Facsimile: (852) 2417 4455, (852) 2417 4747


TT1000 Walkie-Talkie User's Manual

INTRODUCTION

Congratulations on your purchasing the TT1000 Walkie-Talkie. Consisting of two identical units, the TT1000 is a user-friendly radio equipment offering quick and clear five-channel voice communication over an effective range of 500 meters indoors and up to 1000 meters in the open. The product is suitable for use with both home and industrial environments.

Operating the TT1000 is easy. Simply follow the instructions below and you will soon discover a whole new world of communication.

MAIN FEATURES

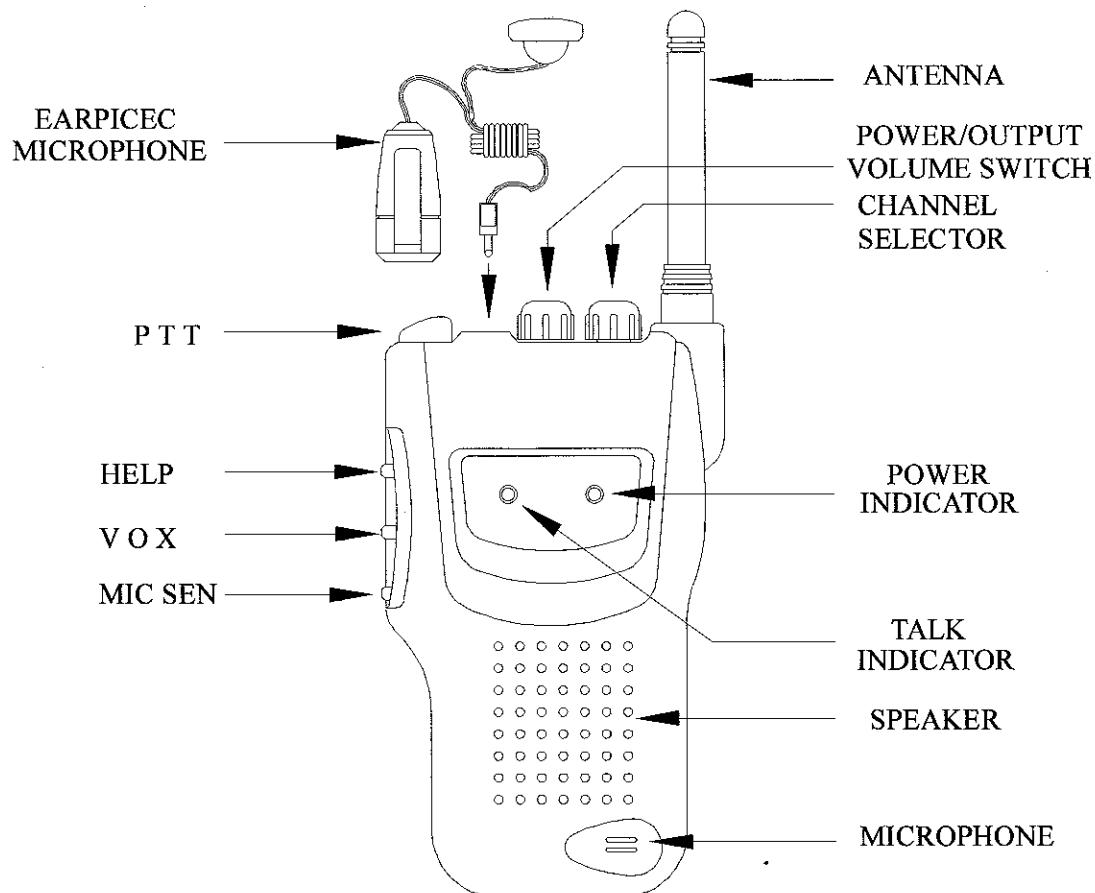

PTT (Push-to-Talk) Switch: - For talking to the remote party

HELP On/Off Switch: - For transmitting an emergency signal to the remote party

VOX Switch: - For turning on or off the voice-activated transmission mode

MIC SEN (Sensitivity) Switch: - For adjusting the voice pitch for different users

POWER/OUTPUT VOLUME Switch: - For turning on or off the unit as well as adjusting the volume of the incoming message

CHANNEL SELECTOR: - For selecting different channels

ANTENNA: - For transmitting and receiving radio signals

ANTENNA CONNECTOR: - For connecting the antenna

EARPIECE WITH MICROPHONE: - For receiving and transmitting messages

EARPIECE CONNECTOR: - For connecting the earpiece

POCKET CHIP: - For securing the microphone onto a pocket or collar

SPEAKER: - For broadcasting the incoming message

MICROPHONE: - For transmitting the outgoing message

POWER INDICATOR: - Lights up red when the power is turned on

TALK INDICATOR: - Lights up green when a message is being transmitted

BATTERY COMPARTMENT: - Accommodates three 1.5V AAA-size batteries


CARRYING BAG: - For protecting and carrying the unit around

BATTERY INSTALLATION

Each unit uses four 1.5V AAA-size or UM-4 batteries, which are not included with the product. To insert the batteries,

1. Slide open the battery compartment door at the back of the unit.

2. Insert the batteries strictly according to the polarities shown therein.

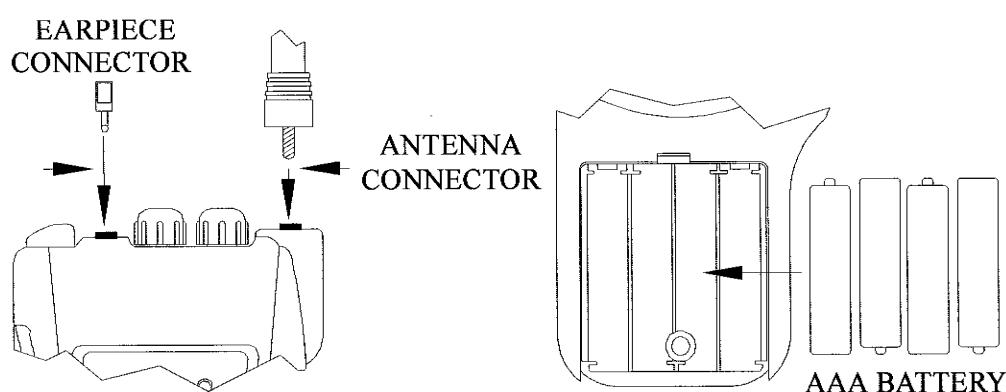

3. Replace the battery compartment door.

The life span of batteries varies with the types of batteries and conditions under which the unit is used. Alkaline batteries are recommended for longer operating hours. Change batteries when there is a significant drop in effective range or quality of transmission.

ANTENNA AND EARPIECE INSTALLATION

Connect the antenna to the antenna connector. If you want to use the earpiece, connect it to the earpiece connector. You can secure the earpiece with the pocket clip.

HOW TO TURN ON OR OFF THE UNIT

Turn the POWER/OUTPUT VOLUME until the power indicator lights up. Turn the unit off when

HOW TO SELECT A CHANNEL

This product supports five channels. Use the channel selector to locate the channel for best

HOW TO TRANSMIT MANUALLY

Press and hold the PTT switch. Speak clearly into the microphone. Release the PTT switch when

HOW TO VOICE-ACTIVATE A TRANSMISSION

Slide the VOX switch to ON. Speak clearly into the microphone. Transmission will be activated automatically. The unit will return to standby mode when the transmission is complete.

HOW TO RECEIVE A MESSAGE

The incoming message will be broadcast through the microphone automatically when the unit is turned on. Use the POWER/OUTPUT VOLUME switch to adjust the loudness of the message. Note that when the earpiece is inserted, the microphone will be muted and the incoming message will be broadcast through the earpiece.

HOW TO ACTIVATE EMERGENCY TRANSMISSION

Slide the HELP switch to ON. The unit will automatically transmit an emergency beeping to the remote unit. To stop it, slide the switch to OFF.

HOW TO ADJUST MICROPHONE SENSITIVITY

When the VOX switch is turned ON, THE MIC SEN switch can be used to adjust the pitch of the outgoing message for different users. Select the pitch that allows best transmission.

HOW TO USE THE CARRYING BAG

The carrying bag is for protecting and carrying the unit around. It comes with a velcro strap that can be adjusted to fit the shoulder or thigh.

PRECAUTIONS

This product is engineered to give you years of satisfactory service if you handle it carefully:

1. Do not immerse the product in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
2. Do not clean the product with abrasive or corrosive materials.
3. Do not subject the product to excessive force, shock, dust, temperature or humidity.
4. Do not tamper with the product's internal components. The product contains no user-serviceable parts.
5. Only use fresh batteries as specified in this manual. Do not mix new and old batteries as the old ones may leak.
6. Always read the manual thoroughly before operating the product.

MANI INDUSTRIES LIMITED



30/F, Wharf Cable Tower, 9 Hoi Shing Road, Tsuen Wan, Hong Kong.
Telephone: (852) 2416 44 99 Facsimile: (852) 2417 44 55, (852) 2417 4747

7. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.