


7-11-02 10:00 AM 10:00 AM 10:00 AM

# CORE™


*Products "care" every baby*

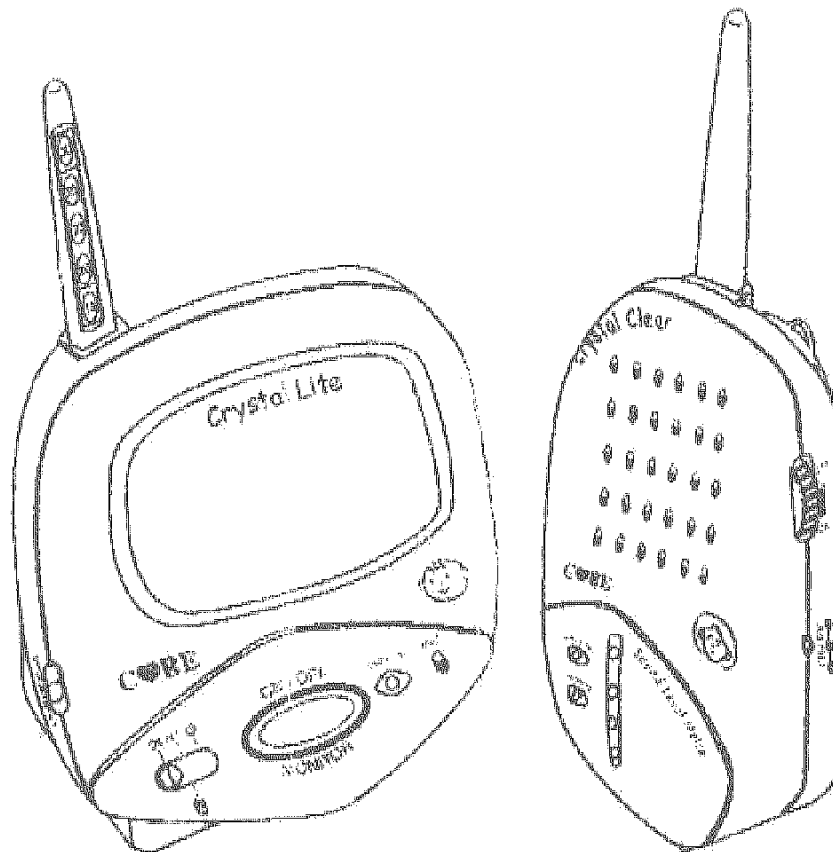

## ***Mobile Baby Monitor***

### ***Instruction Manual***

## LIST OF COMPONENTS

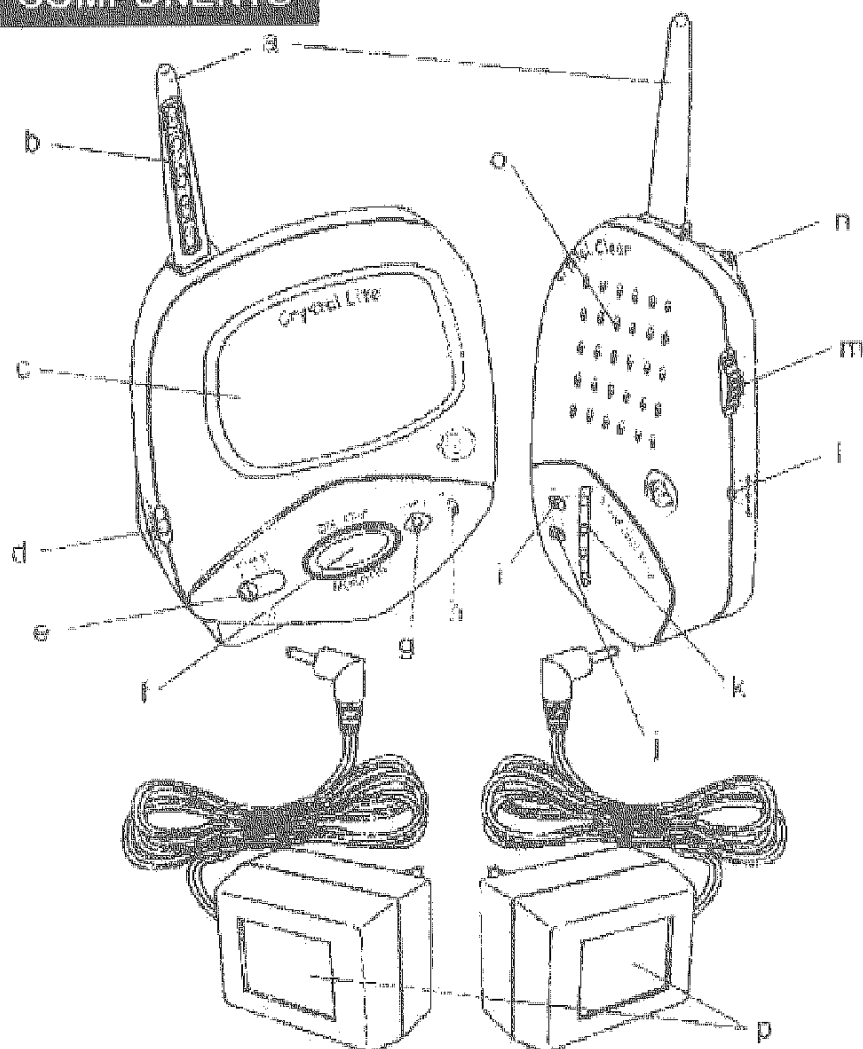

- |                                                     |                                                |
|-----------------------------------------------------|------------------------------------------------|
| (a) Integrated antenna                              | (i) Receive indicator (Parent's Unit)          |
| (b) Temperature strip indicator                     | (j) Power indicator (Parent's Unit)            |
| (c) Night light diffuser                            | (k) Sound level metre                          |
| (d) 2 selectable channel slide switch               | (l) DC jack                                    |
| (e) Night light power On / Off / Timer slide switch | (m) Volume On / Off rotary switch              |
| (f) Power On / Off press button                     | (n) Belt clip                                  |
| (g) Power indicator (Baby's Unit)                   | (o) Speaker holes                              |
| (h) Built-in-microphone (Baby's Unit)               | (p) AC / DC adaptors (may be an optional part) |

## INTRODUCTION

Mobile Baby Monitor features mini size, portable and with special 2 channels to minimize interference from other device.

## WARNING

1. Do not allow the product to be used in damp conditions or immersed in water.
2. Do not place the product next to heat sources such as radiators and sunny window etc.

3. Mobile Baby Monitor does not contain any user serviceable parts. Do not dismantle.
4. When the Mobile Baby Monitor is not in used for long periods of time, remove all batteries from it, otherwise the batteries may leak and cause damage to the product.

## BATTERY CAUTIONS

- Read and follow all warnings and instructions supplied by the battery manufacturer.
- When insert the batteries, make sure that the (+) and (-) terminals face in the correct directions.
- Never use batteries that shows signs of leaking or cracking.
- To prevent leaking or bursting, never mix batteries of different type, brand, age or charge
- Used batteries should not be discarded in fire.
- Keep all batteries away from children.
- DO NOT USE RECHARGEABLE BATTERIES.

## BATTERY INSTALLATION

1. Remove the battery door by sliding it out and place 1 x FRESH "DC 9V (006P)" size battery (Alkaline battery is highly recommended). Follow the position and polarity indicated inside the battery compartment shown (See diagram 1).

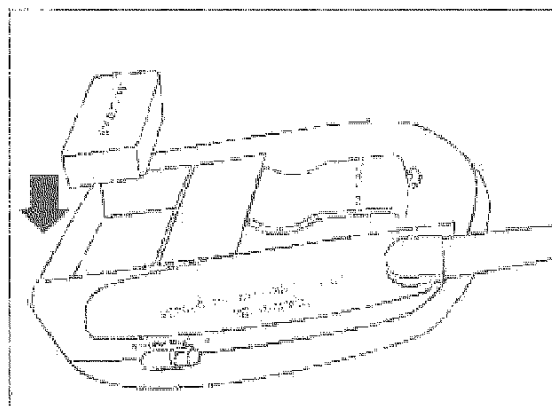


Diagram 1

2. Cover the battery door by sliding it towards to the battery compartment.

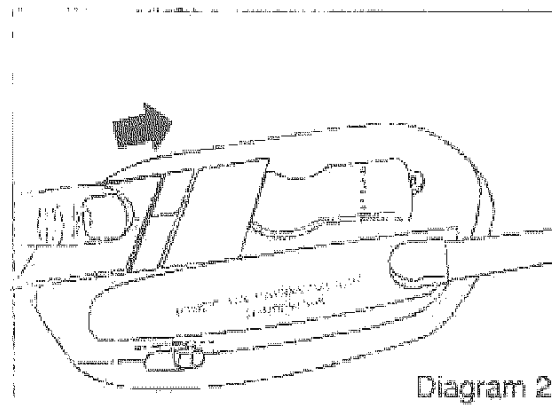


Diagram 2

- Apply the same procedures 1 and 2 on both Baby's Unit and Parent's Unit to install battery.

## PRODUCT IDENTIFICATION

Embossed letter of "Baby's unit" and "Parent's unit" is marked on the rear of each unit for identification.  
(See Diagram 3)

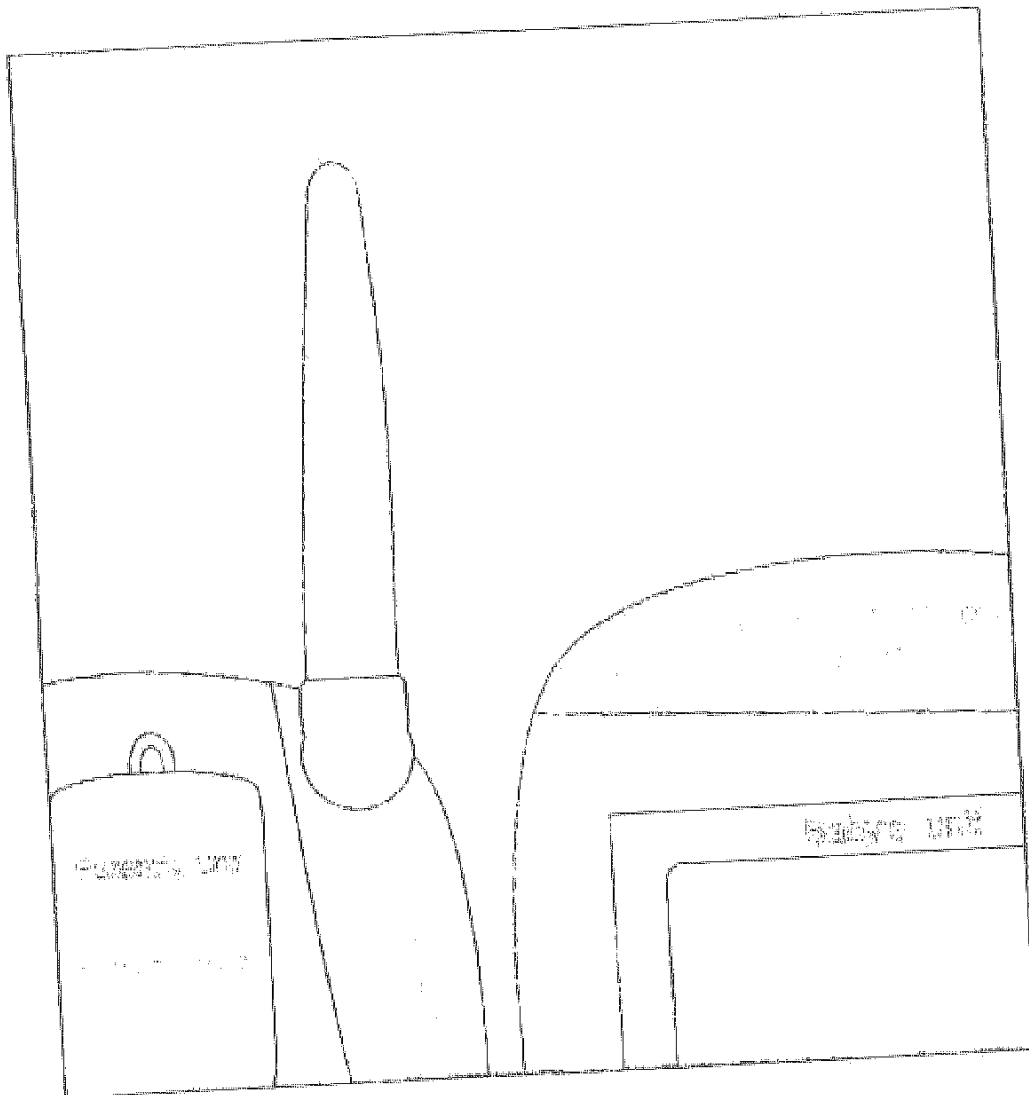


Diagram 3

## MONITOR SET UP - CHANNEL SELECTION

As the Mobile Baby Monitor is design to incorperate 2 user selectable channels to minimize the interference from different environment. Channel set up and selection is very important. User needs to understand clearly from the following steps to do the channel selection.

1. Both Baby's Unit and Parent's Unit must be set the channel switch to the same position to receive the correct signal. Wrong setting will cause weak reception or no reception from the Baby's Unit.

2. Channel switch has 2 position to select 2 different channels. Different channel has assigned an alphabet to avoid confusion. The 2 channels on the Mobile Baby Monitor have been used **A** and **B** and for the user to identify which channel has been selected. (See diagram 4).

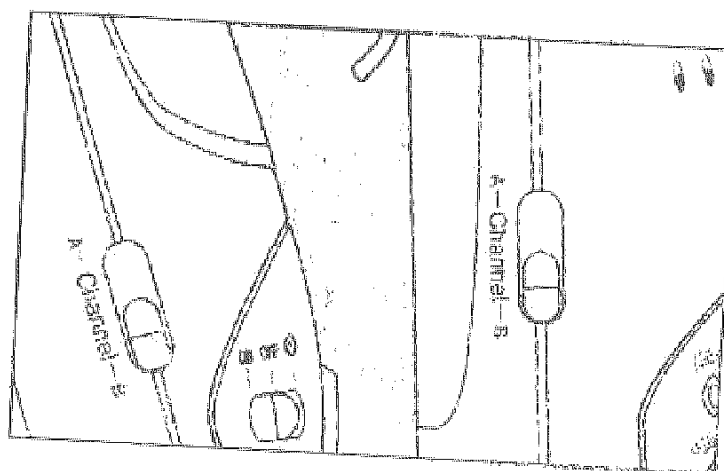


Diagram 4

3. Diagram 5 shown a **CORRECT** example for the channel setting. The channel has been set to channel **B** on both Baby's Unit and Parent's Unit.

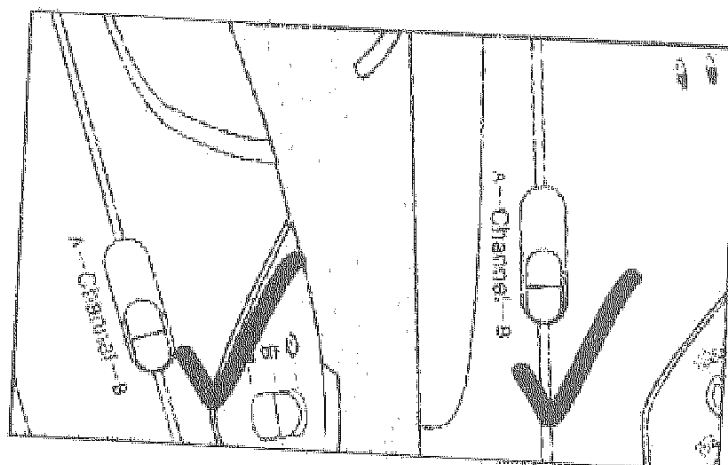


Diagram 5

4. Diagram 6 shown a **WRONG** example for the channel setting. The channel has been set to channel **A** on Baby's Unit and channel **B** on the Parent's Unit. Monitor set to this kind of wrong channel arrangement will make the product not working properly or make the system malfunction.

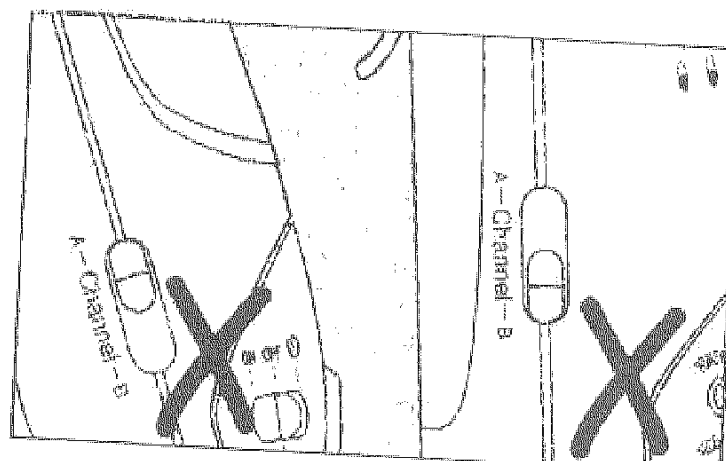


Diagram 6

## MONITOR SET UP - OPERATION

After the battery installation and channel setting procedures completed, you can now try to set up the monitor for operation.

1. The baby's unit should be placed in a convenient place within 3 metres (10 feet) of baby. A flat surface is recommended to place the baby's unit.
2. The baby's unit can be used via the mains adaptor \*\* (DC 9V 100mA).
3. To operate the baby's unit via the mains adaptor \*\* (DC 9V 100mA), just plug the adaptor into a convenient wall power socket and make sure you switch the power on: if the socket has a switch.
4. Turn the Baby's Unit ON by pressing the power on/off button (ⓘ) once. The power indicator light will illuminate (As diagram 7).

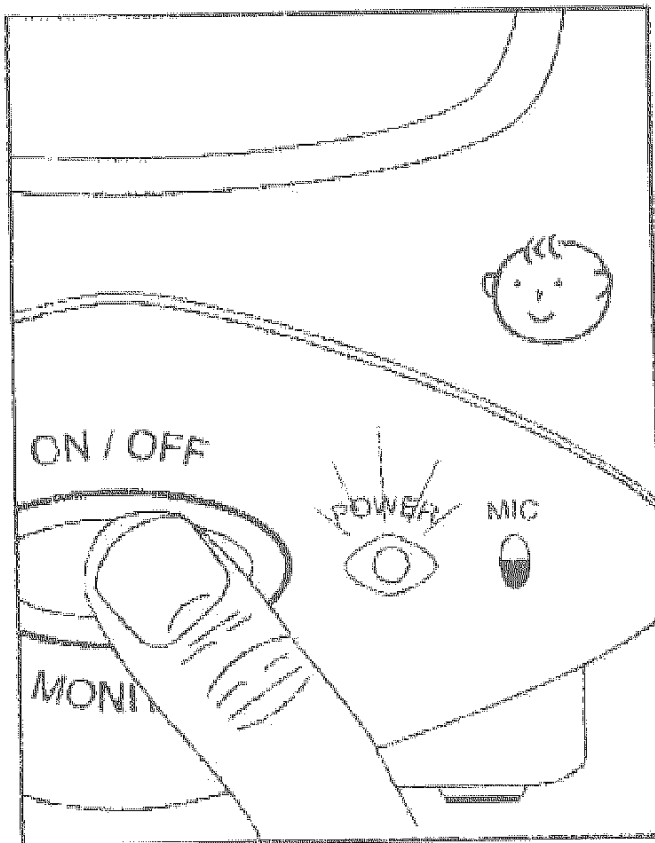


Diagram 7

5. The night light can be continuous ON or 'Timer On'. Slide to "ON" position, the night light will be continuous ON. To slide to "Timer On", it will provide approximate 5 minutes night light; if you need to re-activate the "Timer On" night light, just to slide the button to "Off" position and then back to the "Timer On" position, the night light will light up again for approximate 5 minutes.  
If you don't need night light function, you can slide the switch to "Off" position, then the night light will not be lighted up.

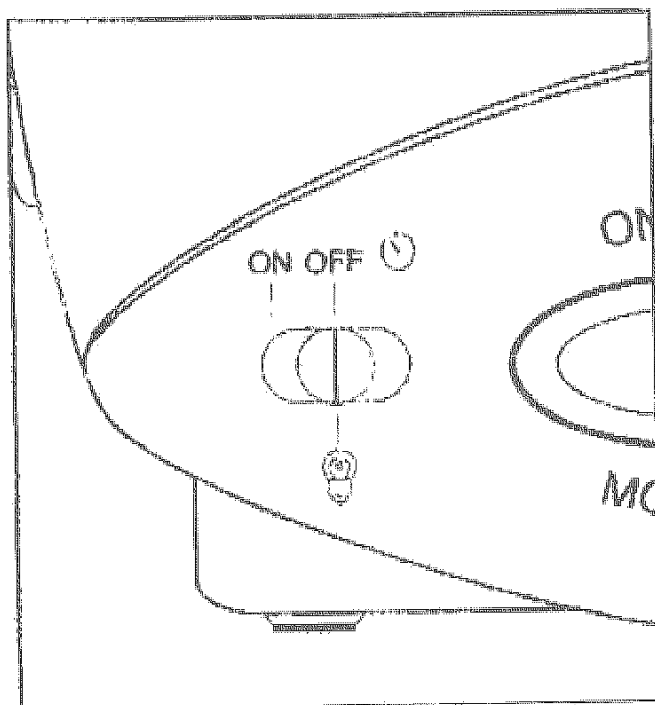


Diagram 8

\* Mains adaptor (DC 9V 100mA) may be an optional item.

+ If your version of monitor has only packed with one adaptor, this adaptor can use on either Baby's Unit or Parent's Unit.

## Parent's unit

1. Turn on the parent's unit by rotating the volume/on/off switch (m) (See diagram 9), the LED power indicator (i) should glow in red.

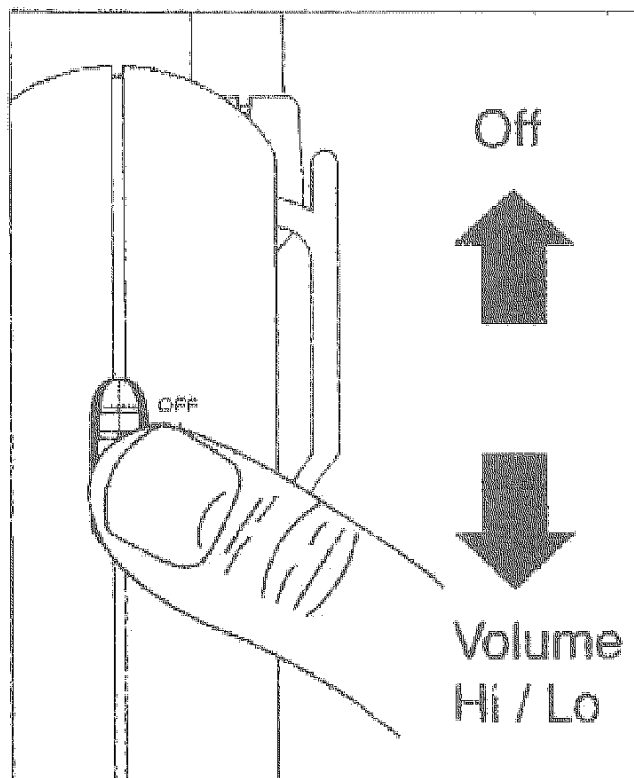


Diagram 9

2. The Parent's Unit can receive the sound / signal transmitted from the Baby's Unit. If the environment is not suitable to have sound, you can just turn the parent's unit to the "mute" location from the "volume/on/off" switch (m). The sound light (k) will show the environment sound level of baby's area, louder sound, more lights. (See diagram 10 and 11)

You can also watch the sound level indicator and listen to your baby by turning the "volume/on/off" switch (m) to a sound level that you think it is suitable to your environment. The Parent's Unit will then show both lights and sound.

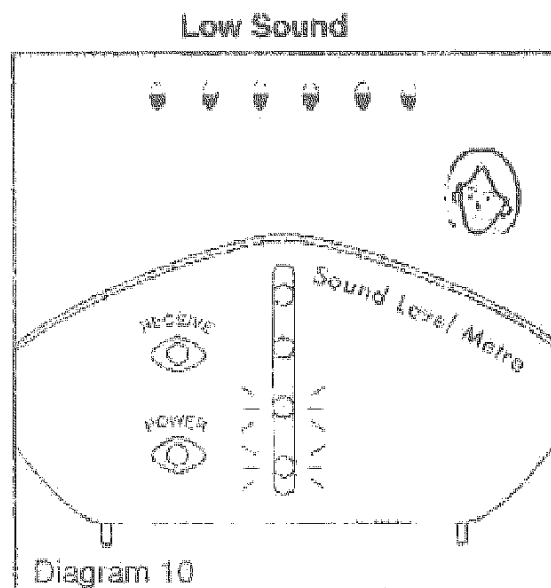


Diagram 10

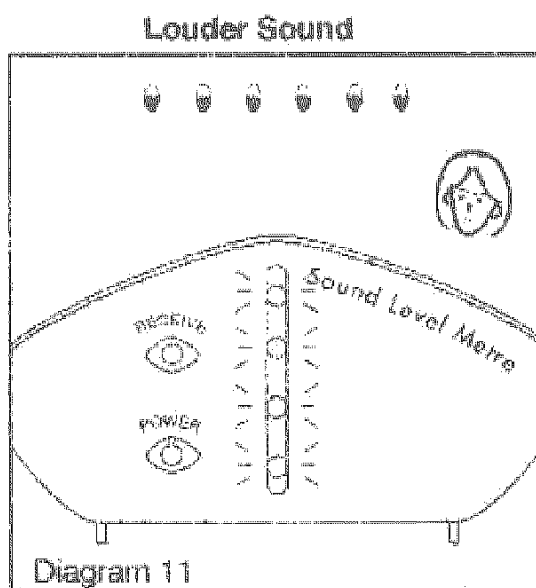


Diagram 11

3. A receive indicator (i) will be turned on when the Parent's Unit receive signal from the Baby's Unit. Wrong channel setting and out of reception range will cause receive indicator turn off. Check both units channel position and the range if this indicator is "off". (See diagram 12)

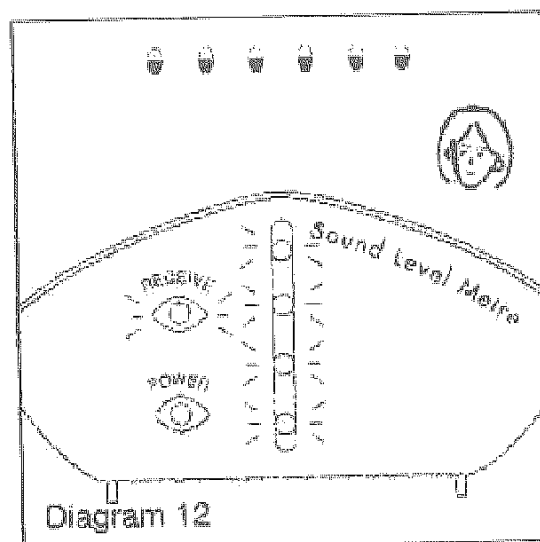


Diagram 12

## TROUBLE SHOOTING

If the Mobile Baby Monitor system does not operate correctly please check the following:

| Fault                                     | Cause                                                                                                                                                                                                                               | Action                                                                                                                                                                                                                                                                                 |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Night light does not work (Baby's Unit)   | <ul style="list-style-type: none"> <li>- Flat batteries</li> <li>- Wrong battery polarity</li> </ul>                                                                                                                                | <ul style="list-style-type: none"> <li>- Fit new batteries</li> <li>- Fit the battery again in the right position as shown inside the battery compartment</li> </ul>                                                                                                                   |
| Night light too dim                       | <ul style="list-style-type: none"> <li>- Weak batteries</li> </ul>                                                                                                                                                                  | <ul style="list-style-type: none"> <li>- Fit new batteries</li> </ul>                                                                                                                                                                                                                  |
| No sound from parent's unit               | <ul style="list-style-type: none"> <li>- Flat batteries</li> <li>- Wrong batteries polarity</li> <li>- Channel switch is not at the same setting</li> <li>- AC/DC adaptor has not switched on or jack plug not connected</li> </ul> | <ul style="list-style-type: none"> <li>- Fit new batteries</li> <li>- Fit the battery again in the right position as shown inside the battery compartment</li> <li>- Check channel setting on Parent's &amp; Baby's Units</li> <li>- Check correct fitting of mains adaptor</li> </ul> |
| Power light dim or not lit on Baby's Unit | <ul style="list-style-type: none"> <li>- AC/DC adaptor has not switched on or connected</li> </ul>                                                                                                                                  | <ul style="list-style-type: none"> <li>- Check correct fitting at mains</li> </ul>                                                                                                                                                                                                     |
| Sound level metre lights not working      | <ul style="list-style-type: none"> <li>- Power has not switched on</li> </ul>                                                                                                                                                       | <ul style="list-style-type: none"> <li>- Check adaptor, batteries and volume/mute/on/off switch</li> </ul>                                                                                                                                                                             |
| Weak reception                            | <ul style="list-style-type: none"> <li>- Parent's Unit &amp; Baby's Unit are out of range</li> <li>- Weak batteries</li> <li>- Metal Clad building</li> </ul>                                                                       | <ul style="list-style-type: none"> <li>- Move Parent's Unit closer to baby's unit</li> <li>- Replace batteries</li> </ul>                                                                                                                                                              |
| Buzzing, interference etc                 | <ul style="list-style-type: none"> <li>- Could be due to another baby monitor or environmental interference</li> </ul>                                                                                                              | <ul style="list-style-type: none"> <li>- Change Channels on both Parent's and Baby's Units</li> </ul>                                                                                                                                                                                  |
| Static and other noises                   | <ul style="list-style-type: none"> <li>- Interference possibly from home appliances</li> <li>- Out of range</li> </ul>                                                                                                              | <ul style="list-style-type: none"> <li>- Switch off other appliances if possible</li> <li>- Move units closer to each other</li> </ul>                                                                                                                                                 |
| High pitched sound (electronic feedback)  | <ul style="list-style-type: none"> <li>- Units are too close to each other</li> <li>- Volume is too high</li> </ul>                                                                                                                 | <ul style="list-style-type: none"> <li>- Move the units further apart</li> <li>- Reduce volume</li> </ul>                                                                                                                                                                              |

\* Specifications and designs are based on the latest information available at the time of printing and subject to change without notice.



**Caution:**

The user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.