

CS-2002DC Operation Manual

(K6MA-1)


5-Button Remote Functions:

BANK #1 (Directly Press Buttons)

- Button 1: Arm
- Button 2: Disarm
- Button 3: Aux #1 (Trunk)
- Button 4: Keep press for Panic
When Ignition ON short press for Carjacking by
"Programming options 13 with [Active] and 14 with [Enabled]"
- Button 5: (Change to Bank #2)

BANK #2 (Press Button 5 First, then within 3 seconds Buttons 1-4)

- Button 1: Silent Arm (No Chirp)
- Button 2: Silent Disarm (No Chirp)
- Button 3: Car Locator (Successive Chirp)
- Button 4: Aux #2

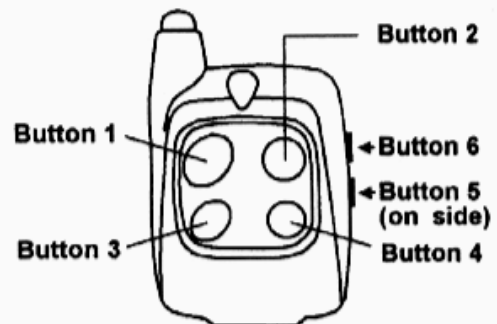

Remote Transmitter Programming

1. Turn Ignition ON.
2. Press the Program/Override Button 4 times and you should see 4 light flashes.
3. Press #1 (LOCK) Button on the new transmitter. LAMP flash one time for Code-learn confirmation. Press #1 Button on a second, third or fourth remote at this time (If needed).
4. Turn OFF Ignition to stop Code-learn.

Note 1: This system will learn a total of 4 transmitters max.

Option Programming

1. Turn the Ignition ON and press the Override/program button 5 times. Parking Light flash 5 times for "Programming" confirmation.
2. Within the next few seconds, press the Override/Program button [again] the number of times that corresponds to the feature list below. The siren will chirp for each button press. DO NOT LOSE COUNT!!
3. When you get to the desired option number, press the appropriate button on the transmitter according the chart below. Turn Ignition OFF. See below for Option numbers, description, and values. (Button 1 give a single light flash/chirp, Button 2 give two light flashes/chirps, and Button 3 gives three light flashes/chirps.)
4. Change One option at a time repeating steps 1-3 as needed. When you are finished customizing options, check operation to see if the option(s) have changed.

Programming Options Chart

*=Default Settings

Option #	Option Description	Button 1 LOCK	Button 2 UNLOCK	Button 3 TRUNK
1.	Factory Horn Chirps / Pulses	Pulse with trip only	Arm/Disarm Chirps & Pulse with trip	Arm/Disarm/Warn Chirps & Pulse with trip *
2.	Passive Arming / Passive Chirp Countdown	ON	OFF*	Passive Arm with Chirp Countdown
3.	Passive Lock / Custom Override	ON	OFF*	Custom Override
4.	Ignition Controlled Locks	ON*	OFF	Ignition Lock Only
5.	10/60 Sec. Door Open Warning	10 Sec.	60 Sec.*	
6.	Active Re-Arm	Enabled*	Disable	
7.	Double Unlock Pulse	Disabled*	Enable	
8.	Silent Arm/Disarm (Chirp Defeat w/Button 1 or 2)	Disabled*	Enable	
9.	Parking Lights on with Disarm	Enabled*	Disable	
10.	Disarm with trunk pop	Disabled	Enabled*	
11.	Silent Arm/Disarm with Remote (Button #2)	N./A.	N./A.	
12.	Door Lock Pulse Time	0.7 Sec.*	3 Sec.	
13.	Type of CarJack Protection	Active*	Passive	Full-Time
14.	Carjack Feature Enable/Disable	Disabled*	Enabled	
15.	Arm/Disarm with Ignition ON (**Overrides Carjack functions)	Disabled*	Enabled**	

NOTE: Options can be instantly restored to Factory Default Values: To Restore default values: Perform step #1 above, then press button 3. The siren will chirp 4 times and lights will flash 4 times. Turn OFF Ignition. All programming options should be restored to factory values (See chart above).

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Important Note: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void user's authority to operate the device.

This statement will be placed in User's Manual:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.**
 - 2. This device must accept any interference received, including interference that may cause undesired operation.**
-