

ANT-916-CW-HW

Data Sheet

Product Description

HW Series ½-wave center-fed dipole antennas deliver outstanding performance in a rugged and cosmetically attractive package. The antenna contains a helical element and internal counterpoise which eliminates external ground plane dependence and maximizes performance. HW Series antennas attach via a standard SMA or Part 15 compliant RP-SMA connector. Custom colors and connectors are available for volume OEM customers.

Features

- Low cost
- Internal counterpoise
- Bandwidth covers entire ISM 900MHz band
- Excellent performance
- Omni-directional pattern
- Outstanding VSWR
- Rugged & damage-resistant
- Standard SMA or Part 15 compliant RP-SMA connector
- Internal O-ring seal on connector


Electrical Specifications

Center Frequency:	916MHz
Recmd. Freq. Range:	900–930MHz
Wavelength:	½-wave
VSWR:	≤ 2.0 typical at center
Peak Gain:	1.2dBi
Impedance:	50-ohms
Connection:	SMA or RP-SMA
Oper. Temp. Range:	–20°C to +85°C


Electrical specifications and plots measured with a 10.16 cm x 10.16 cm (4.00" x 4.00") reference ground plane.

Ordering Information

ANT-916-CW-HW (with RP-SMA connector)
ANT-916-CW-HW-SMA (with SMA connector)

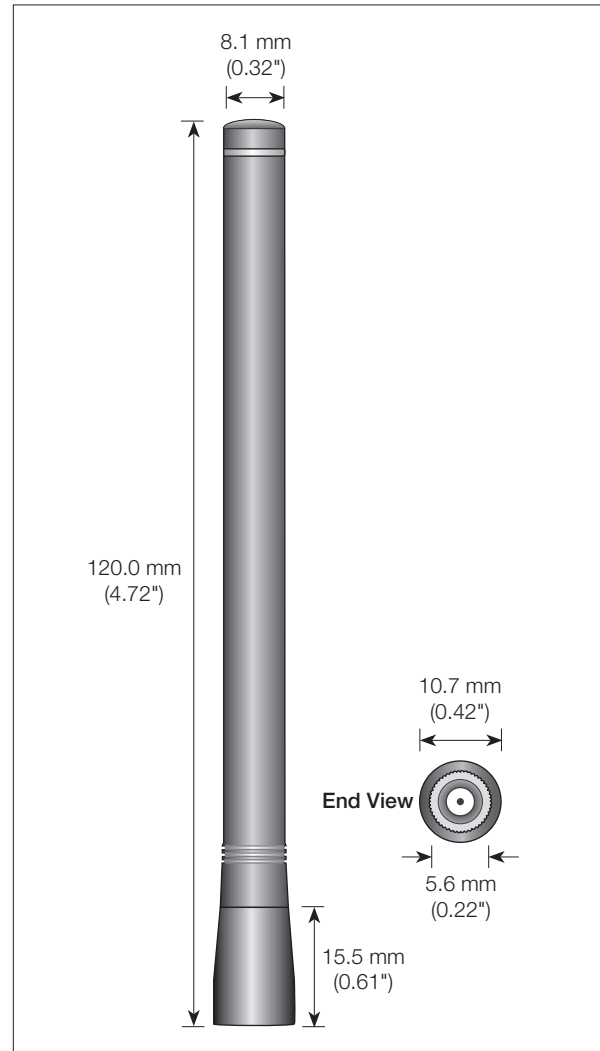

VSWR Graph

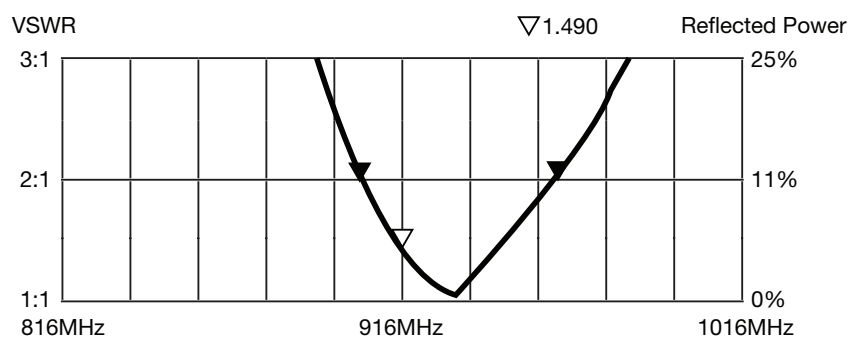

What is VSWR?

The Voltage Standing Wave Ratio (VSWR) is a measurement of how well an antenna is matched to a source impedance, typically 50-ohms. It is calculated by measuring the voltage wave that is headed toward the load versus the voltage wave that is reflected back from the load. A perfect match will have a VSWR of 1:1. The higher the first number, the worse the match, and the more inefficient the system. Since a perfect match cannot ever be obtained, some benchmark for performance needs to be set. In the case of antenna VSWR, this is usually 2:1. At this point, 88.9% of the energy sent to the antenna by the transmitter is radiated into free space and 11.1% is either reflected back into the source or lost as heat on the structure of the antenna. In the other direction, 88.9% of the energy recovered by the antenna is transferred into the receiver. As a side note, since the “:1” is always implied, many data sheets will remove it and just display the first number.


How to Read a VSWR Graph

VSWR is usually displayed graphically versus frequency. The lowest point on the graph is the antenna’s operational center frequency. In most cases, this will be different than the designed center frequency due to fabrication tolerances. The VSWR at that point denotes how close to 50-ohms the antenna gets. Linx specifies the recommended bandwidth as the range where the typical antenna VSWR is less than 2:1.


Efficiency and Gain and 3D Data

Passive Test For WIFI2										
Freq (MHz)	Effi (%)	Effi (dB)	Gain (dBi)	Gain (dBd)	UHS (%)	DHS (%)	Max (dB)	Min (dB)	Attenu t Hor	Attenu t Ver
2400	73.3	-1.35	1.13	-0.62	39.113	34.188	1.13	-19.75	53.58	53.59
2420	71.02	-1.49	1.15	-0.7	37.158	33.864	1.15	-18.86	53.83	53.76
2450	75.35	-1.23	1.20	-0.3	37.977	37.368	1.20	-17.95	54.17	54.08
2480	66.98	-1.74	1.04	-0.61	32.936	34.048	1.04	-20.36	54.08	53.86
2500	67	-1.74	1.05	-0.5	32.476	34.521	1.05	-22.18	54.04	53.84


2400.000MHz

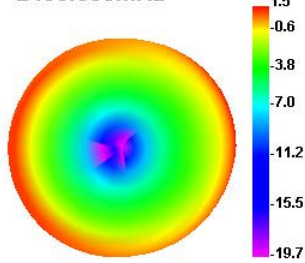


2400.000MHz H

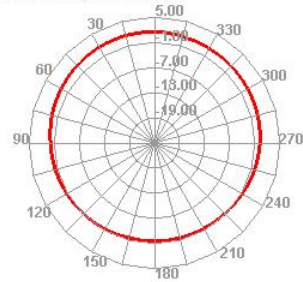


2400.000MHz E1

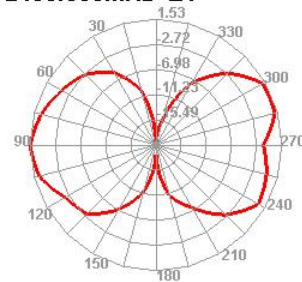


2400.000MHz E2

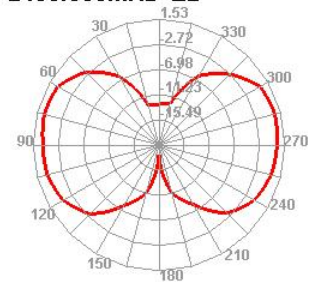


2450.000MHz

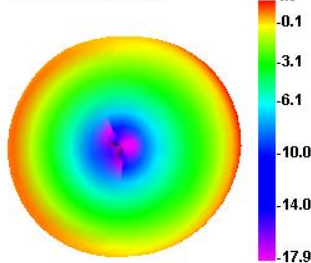


2450.000MHz H

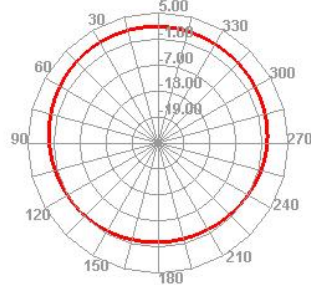


2450.000MHz E1

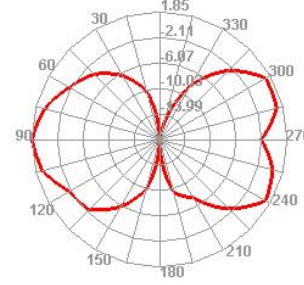


2450.000MHz E2

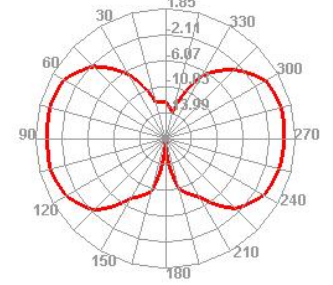


2500.000MHz

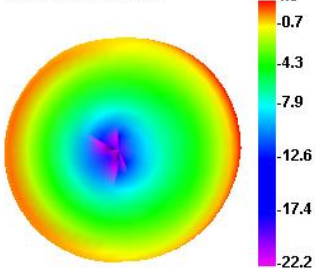


2500.000MHz H

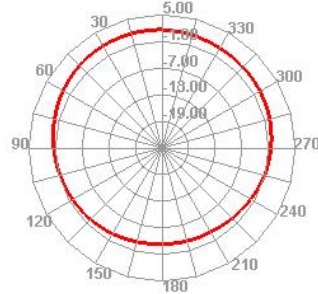

2500.000MHz E1

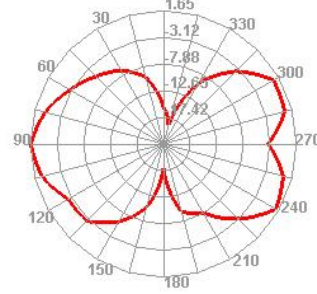

2500.000MHz E2

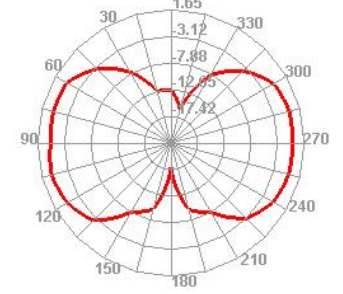

te.com

TE Connectivity, TE, TE connectivity (logo), Linx and Linx Technologies are trademarks owned or licensed by the TE Connectivity Ltd. family of companies. All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

TE Connectivity warrants to the original end user customer of its products that its products are free from defects in material and workmanship. Subject to conditions and limitations TE Connectivity will, at its option, either repair or replace any part of its products that prove defective because of improper workmanship or materials. This limited warranty is in force for the useful lifetime of the original end product into which the TE Connectivity product is installed. Useful lifetime of the original end product may vary but is not warranted to exceed one (1) year from the original date of the end product purchase.

©2023 TE Connectivity. All Rights Reserved.

04/23 Original