

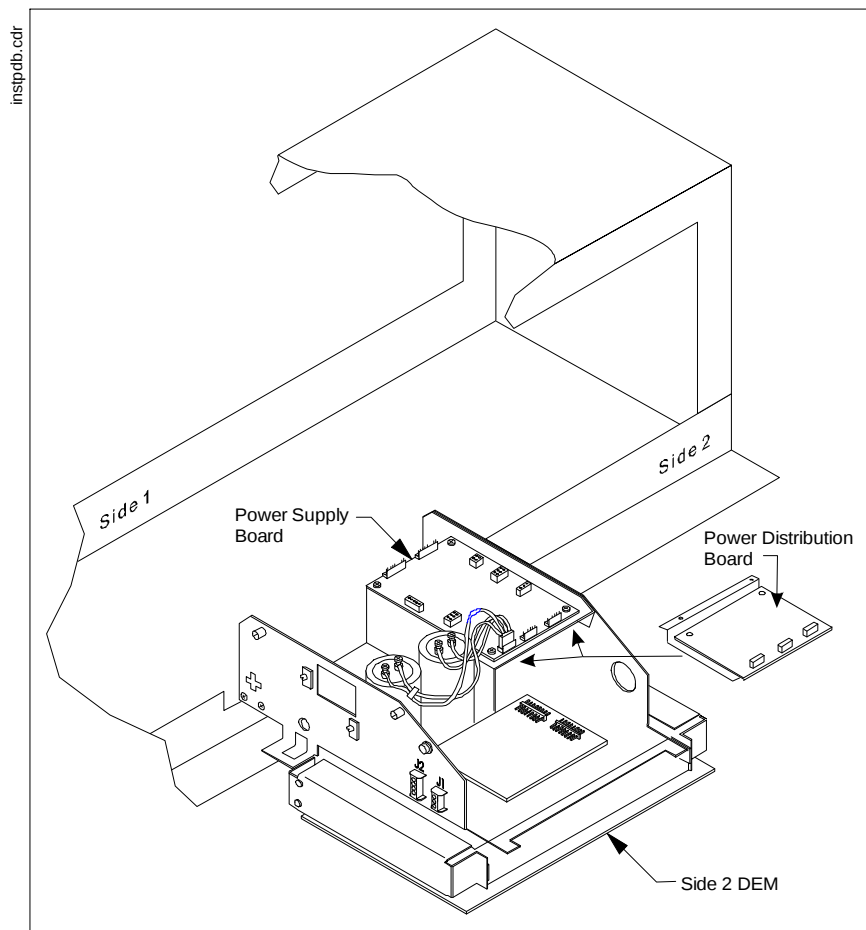


Figure 2-7 Installing the Power Distribution Board (PDB)

4. Return the power supply to the operation position after PDB is in place.

2.8.1 Installing Power Supply Cables

1. Connect cable PN 880586-001 to P1 on PDB.
2. Connect P3 of cable PN 881984-002 to P3 on PDB.
3. Connect cable PN 886011-001 from J1 on PDB to J1 on power supply board.
4. Connect cable PN 886005-001 from J3 on the PDB to J3 on the power supply board.

2.9 Installing the DCB (PN 887123-001) in Electronic Head

Important: Before installing the DCB in the Vista dispenser, you must first identify the printer base. If the dispenser is equipped with printer base PN 883727-001, then you equip the dispenser with the EasyPAY assembly PN 887123-001 shown in Figure 2-8. If the dispenser is equipped with a printer base PN 886208-001 then you must modify the assembly. To do so, refer to 2.9.2.

2.9.1 Installing DCB Assembly in Electronic Heads Equipped with Printer Base PN 883727-001

If you are installing the DCB in a Vista with the "old" printer base PN 883727-001, refer to Figure 2-8.

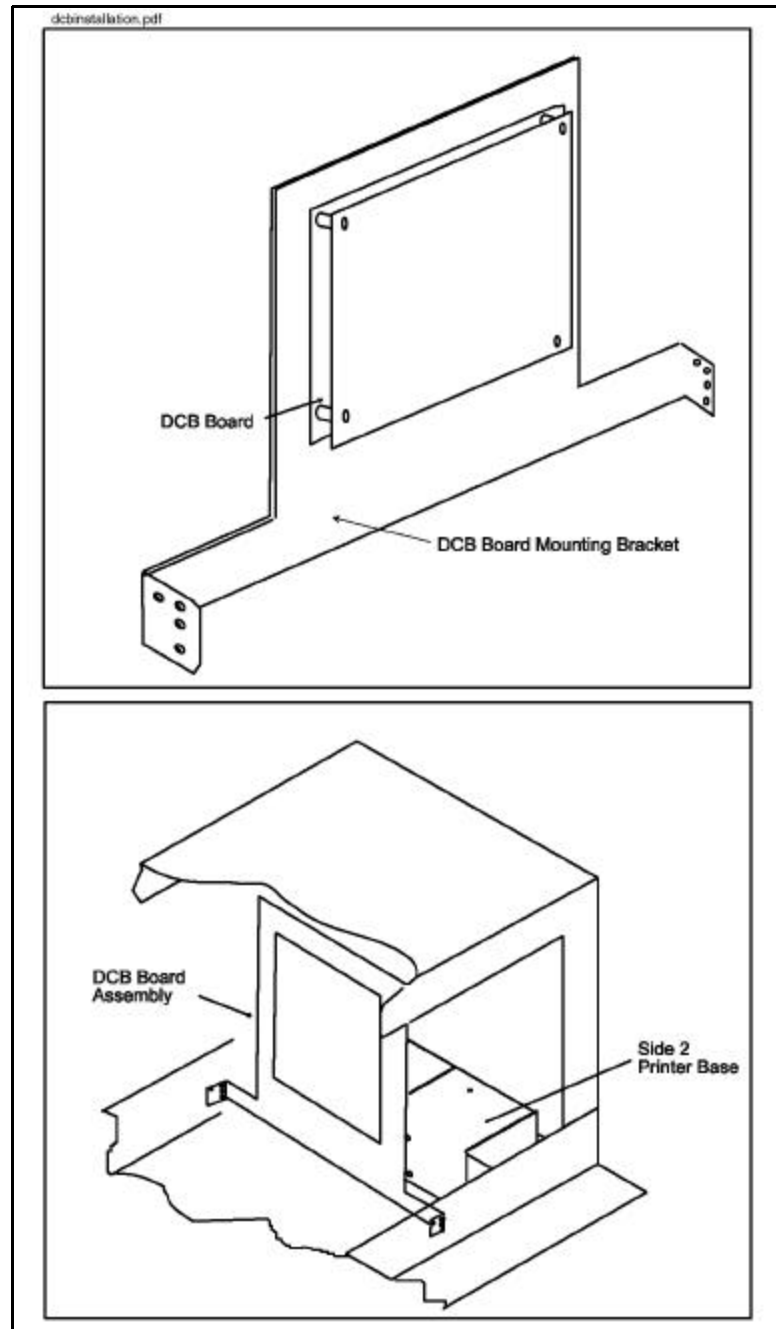


Figure 2-8 EasyPAY Assembly for Use With Old Printer Base PN 883727-001

1. If there are any ground wires attached to the lower DCPT frame, be sure to disconnect them before installing the DCB assembly. Once the DCB is in place, then reconnect.
2. Install the new DCB assembly such that it is facing the heater fan.