





Test Graphs

Freq. Stability NVNT ac20 5180MHz Ant1

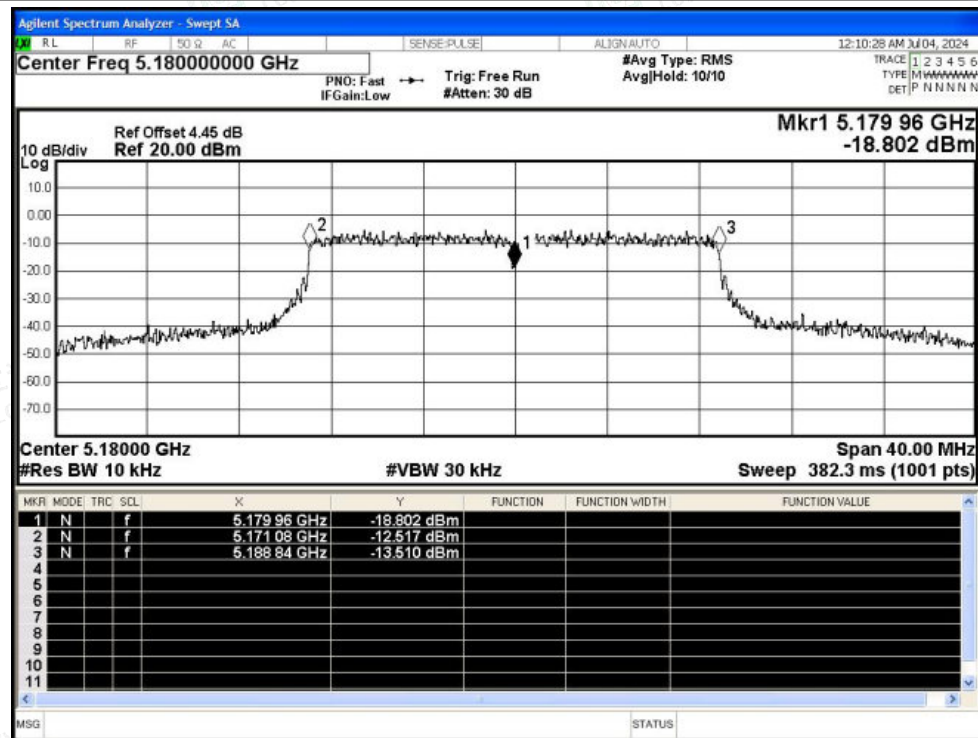


Freq. Stability NVNT ac20 5200MHz Ant1

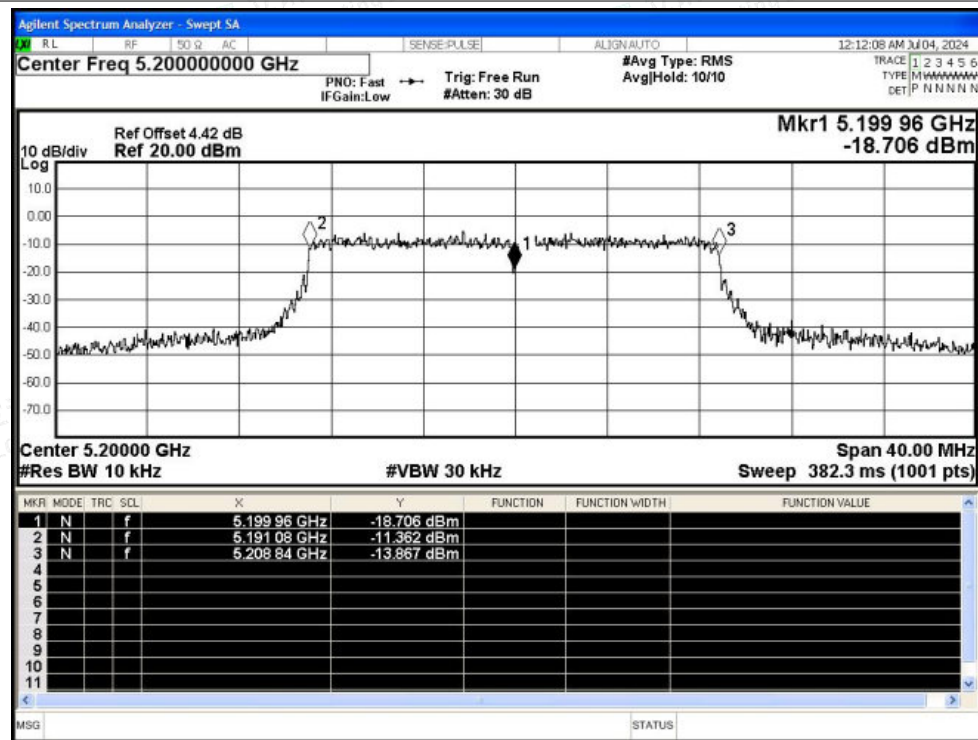




Freq. Stability NVNT ac20 5240MHz Ant1

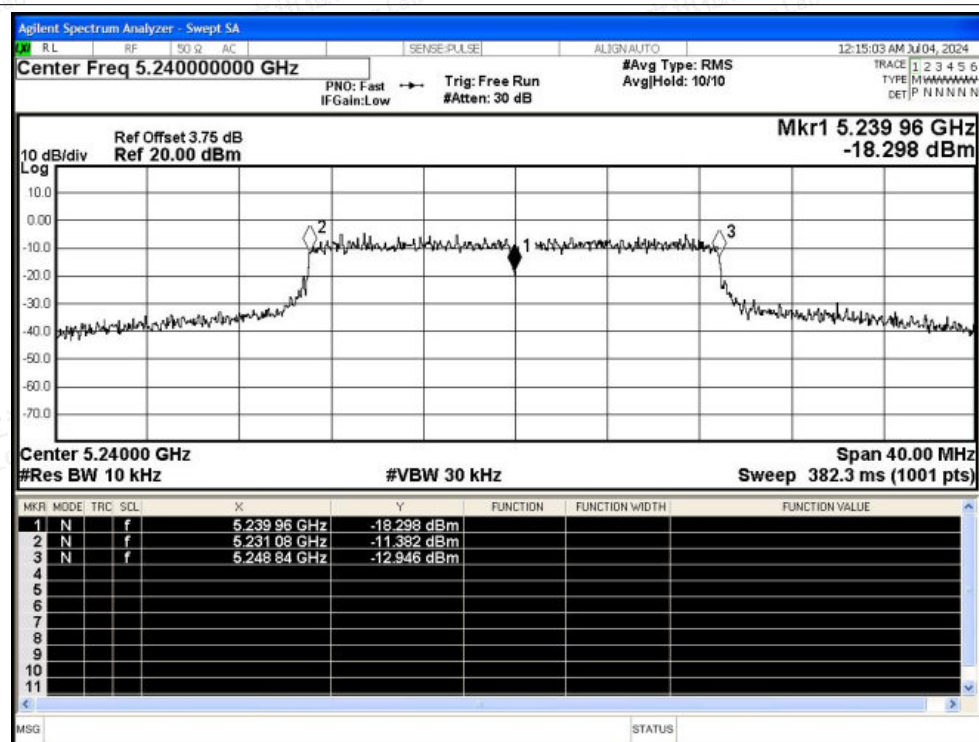


Freq. Stability NVNT ac40 5190MHz Ant1

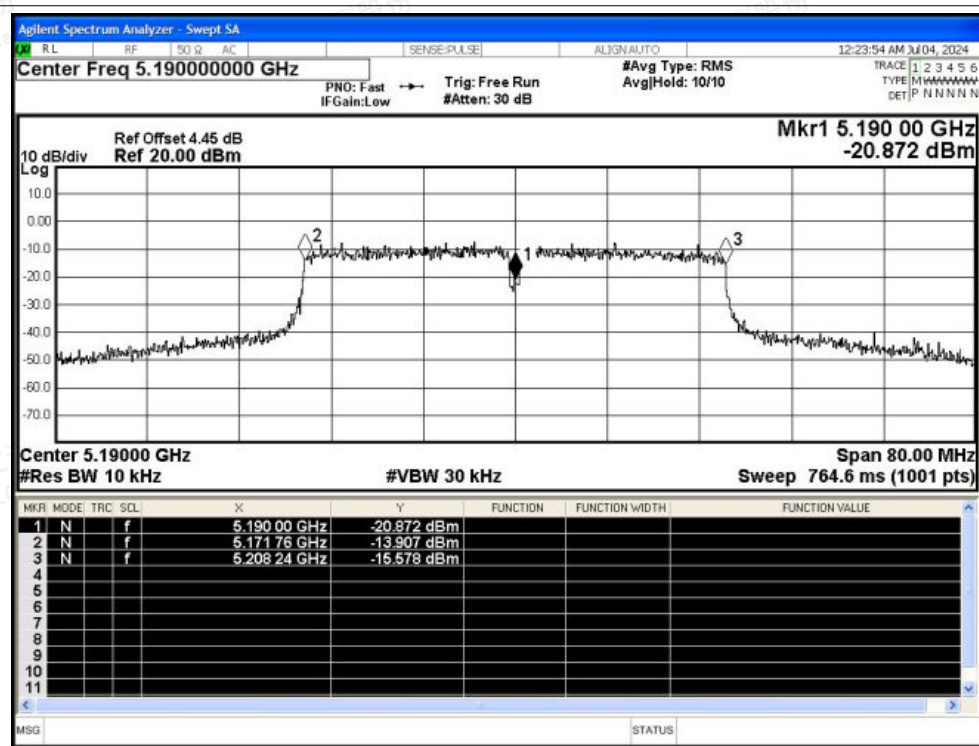




Freq. Stability NVNT ac40 5230MHz Ant1

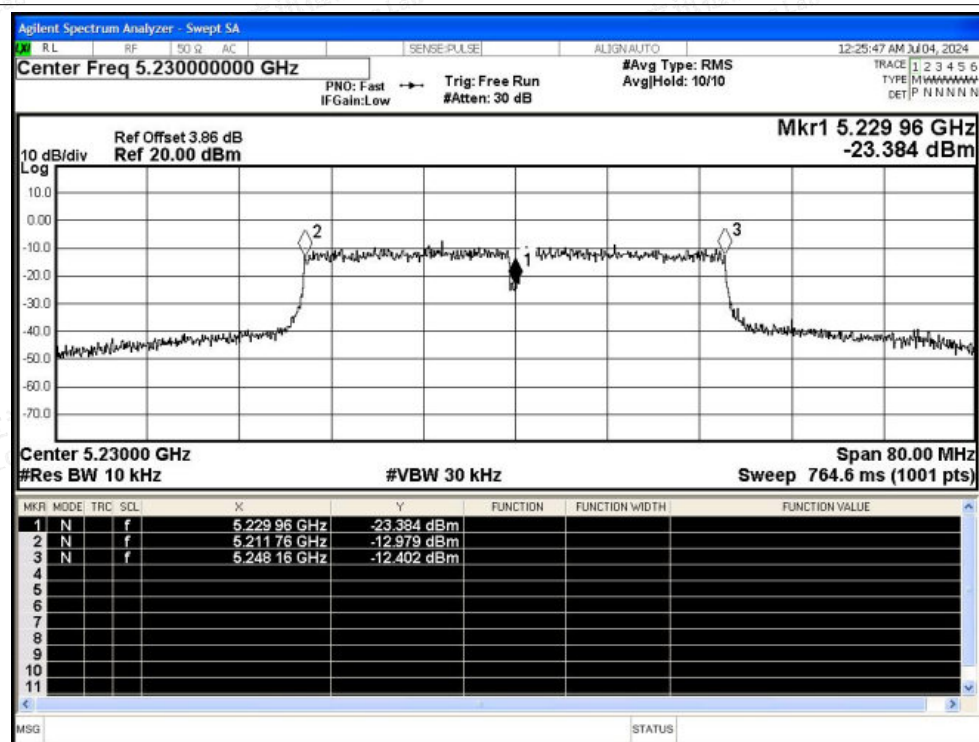

Freq. Stability NVNT ac80 5210MHz Ant1

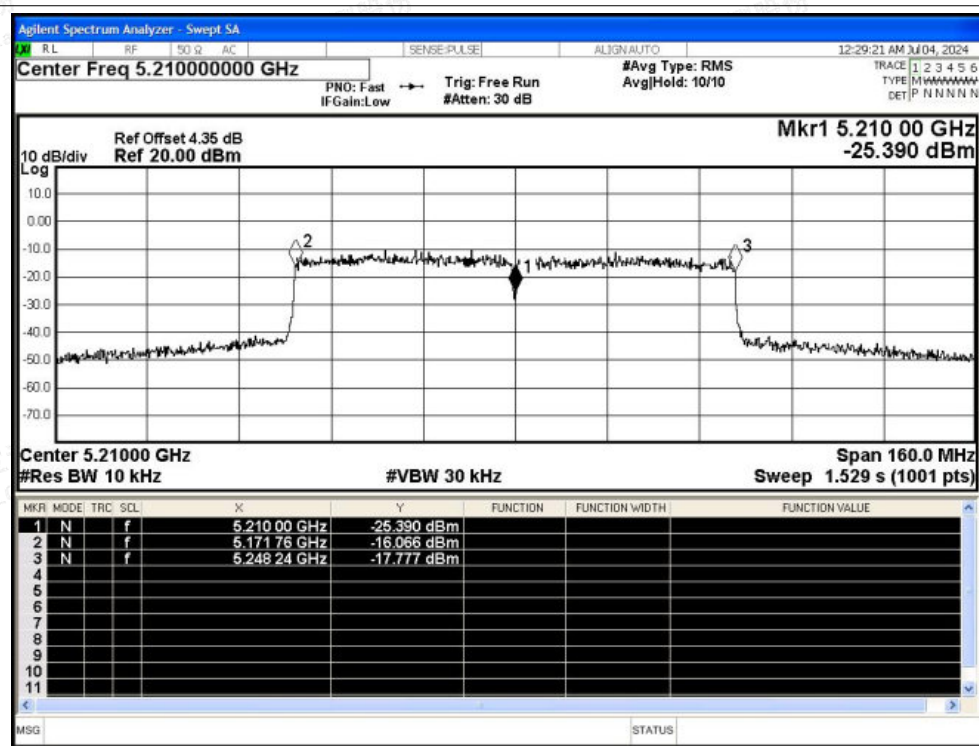



B.6 Duty Cycle


Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant0	87.79	0.57	0.91
NVNT	a	5200	Ant0	87.71	0.57	0.92
NVNT	a	5240	Ant0	87.71	0.57	0.92
NVNT	n20	5180	Ant0	85.81	0.66	1.08
NVNT	n20	5200	Ant0	85.9	0.66	1.08
NVNT	n20	5240	Ant0	85.9	0.66	1.08
NVNT	n40	5190	Ant0	76.2	1.18	1.75
NVNT	n40	5230	Ant0	78.07	1.08	1.75
NVNT	ac20	5180	Ant0	85.99	0.66	1.07
NVNT	ac20	5200	Ant0	85.95	0.66	1.07
NVNT	ac20	5240	Ant0	86.04	0.65	1.07
NVNT	ac40	5190	Ant0	77.36	1.11	1.72
NVNT	ac40	5230	Ant0	67.64	1.7	1.72
NVNT	ac80	5210	Ant0	66.83	1.75	2.41






Test Graphs

Duty Cycle NVNT a 5180MHz Ant0

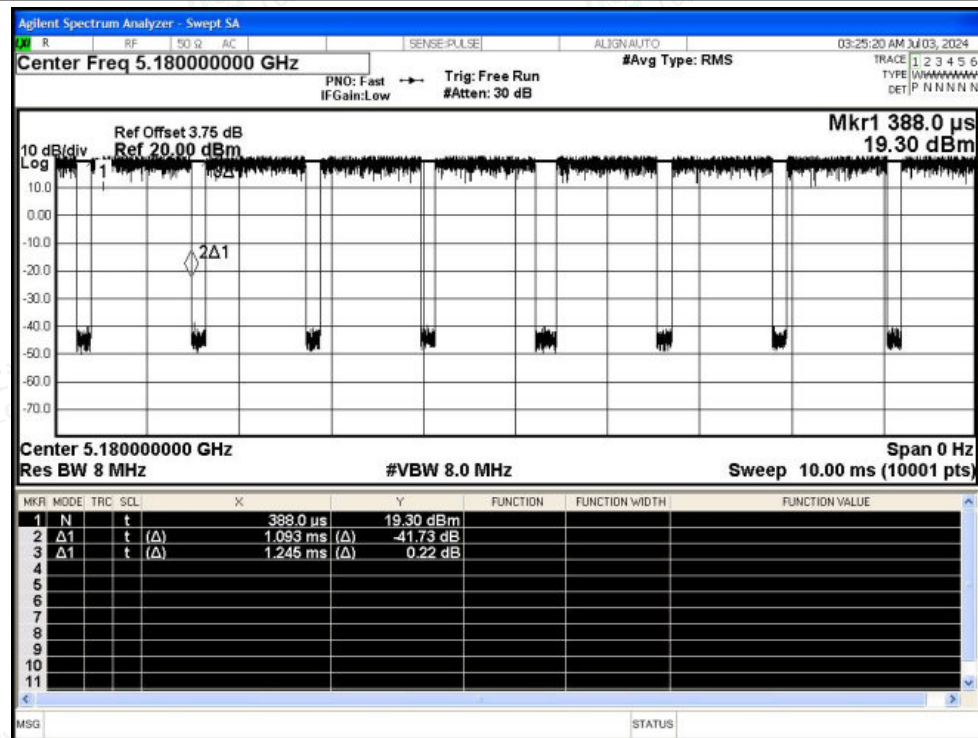

Duty Cycle NVNT a 5200MHz Ant0

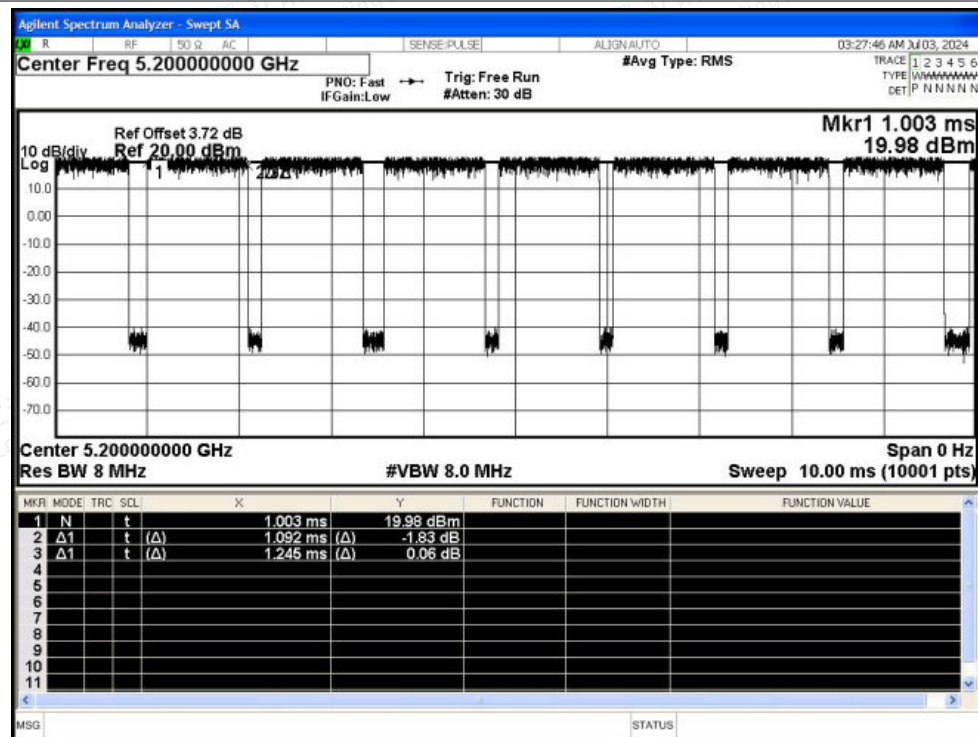

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



Duty Cycle NVNT a 5240MHz Ant0

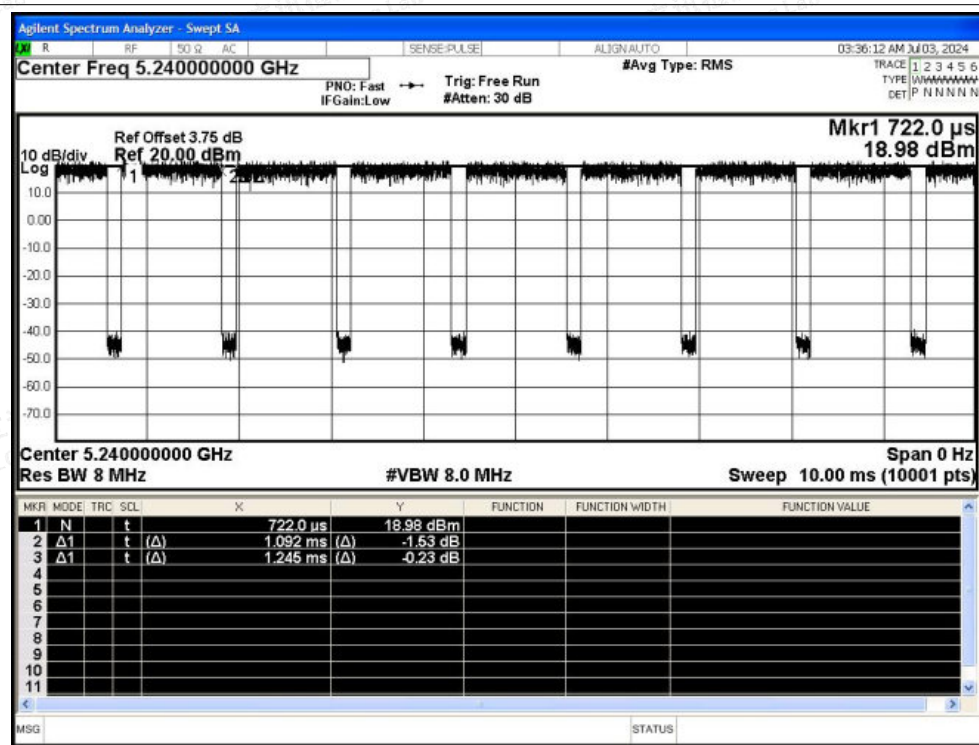


Duty Cycle NVNT n20 5180MHz Ant0

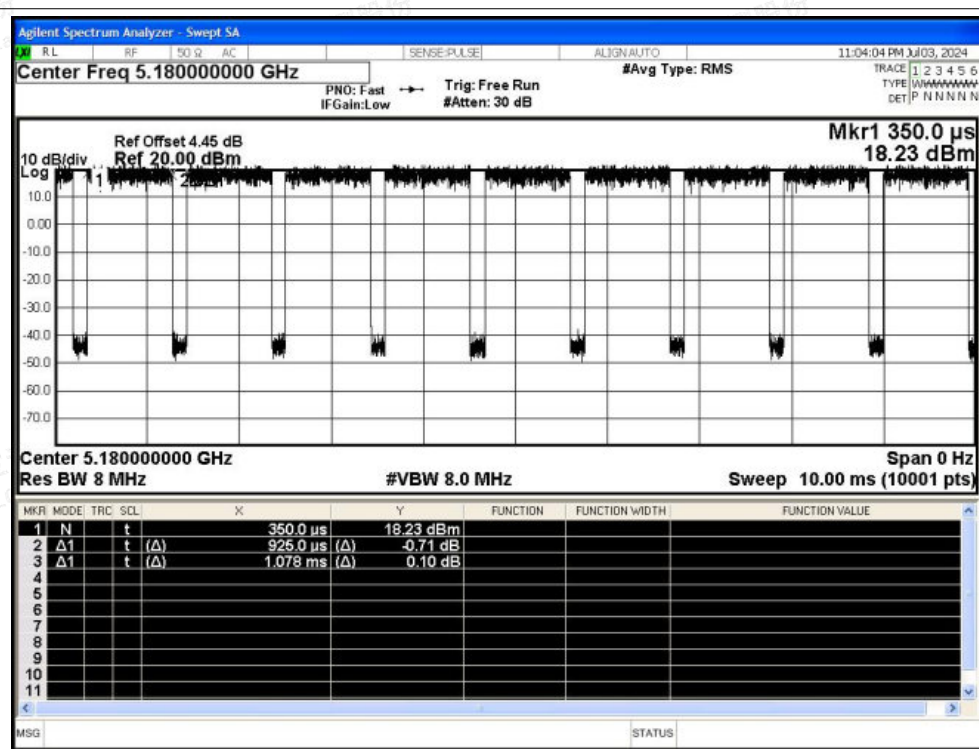




Duty Cycle NVNT n20 5200MHz Ant0

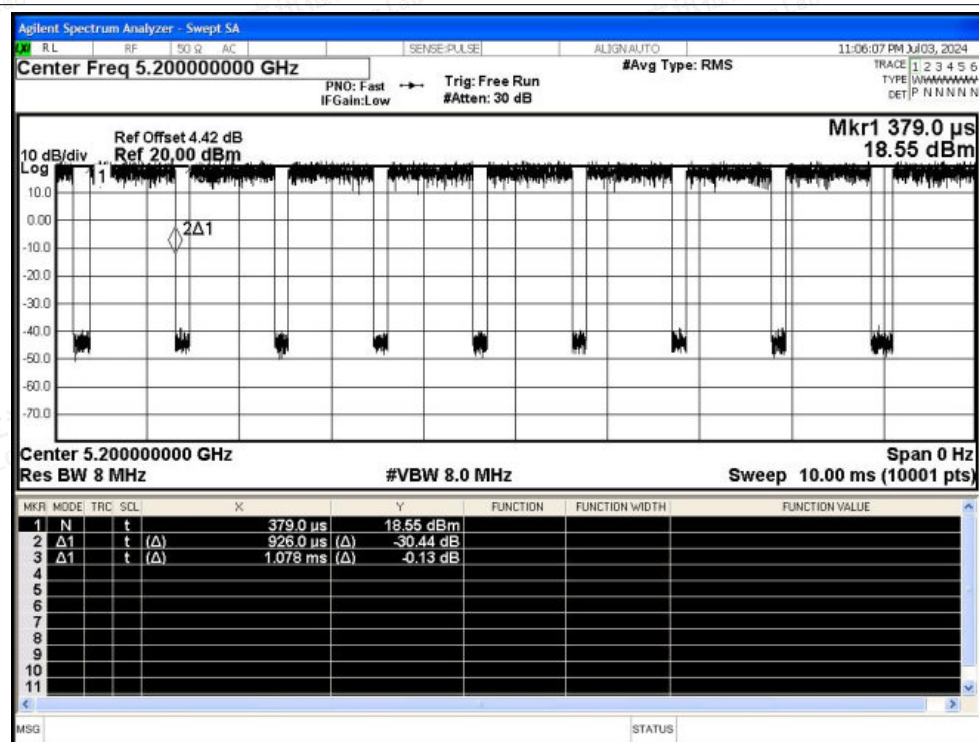


Duty Cycle NVNT n20 5240MHz Ant0

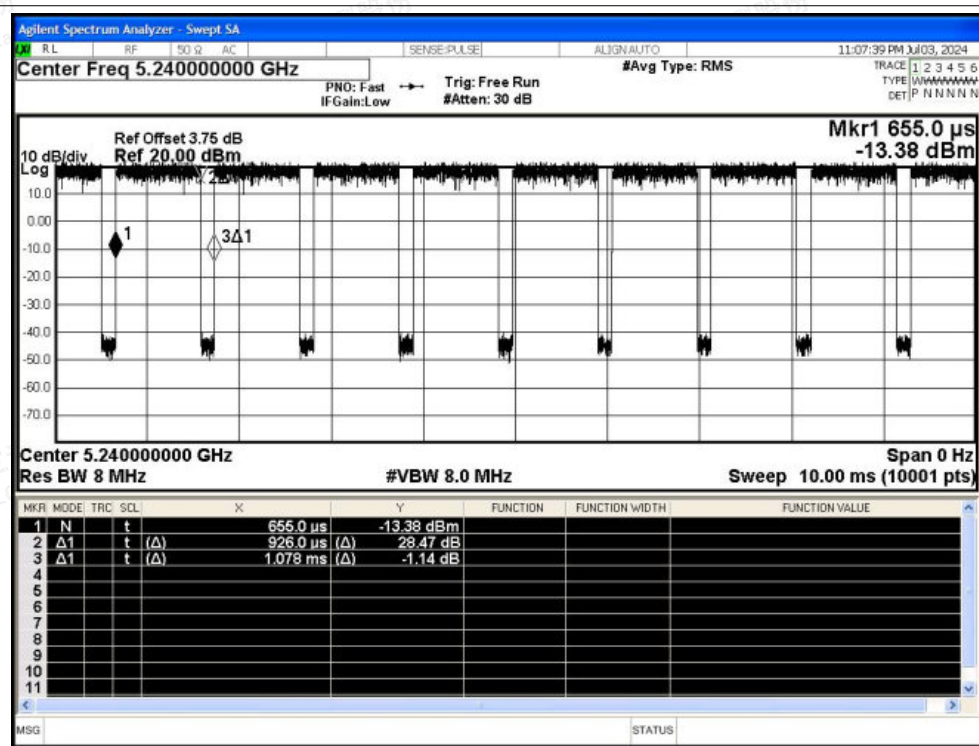




Duty Cycle NVNT n40 5190MHz Ant0

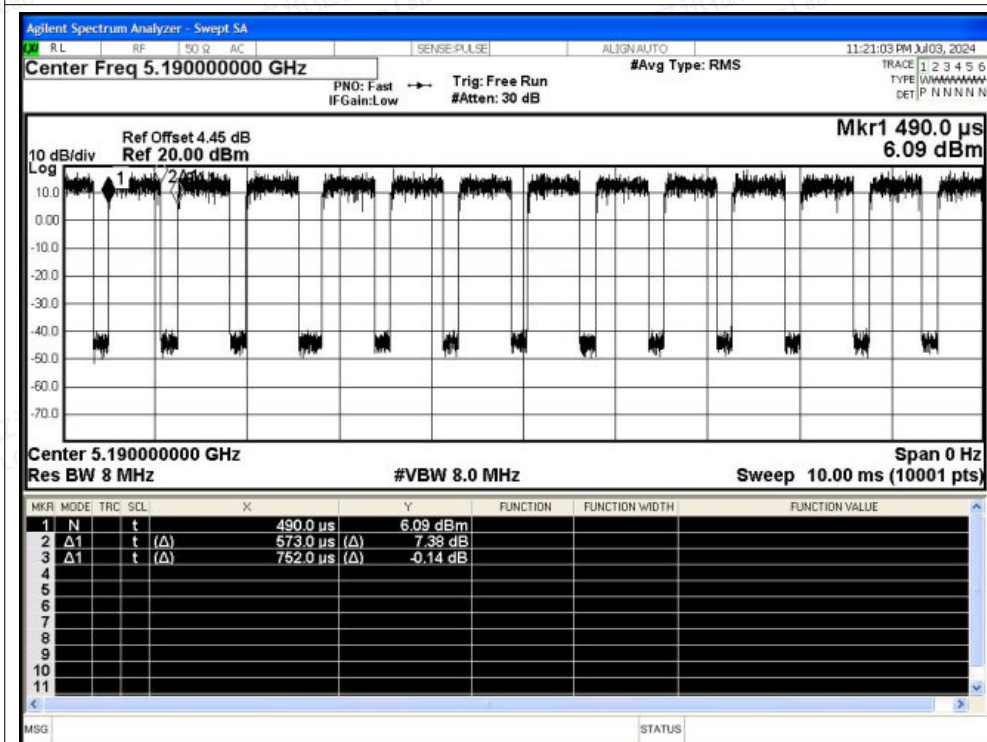


Duty Cycle NVNT n40 5230MHz Ant0

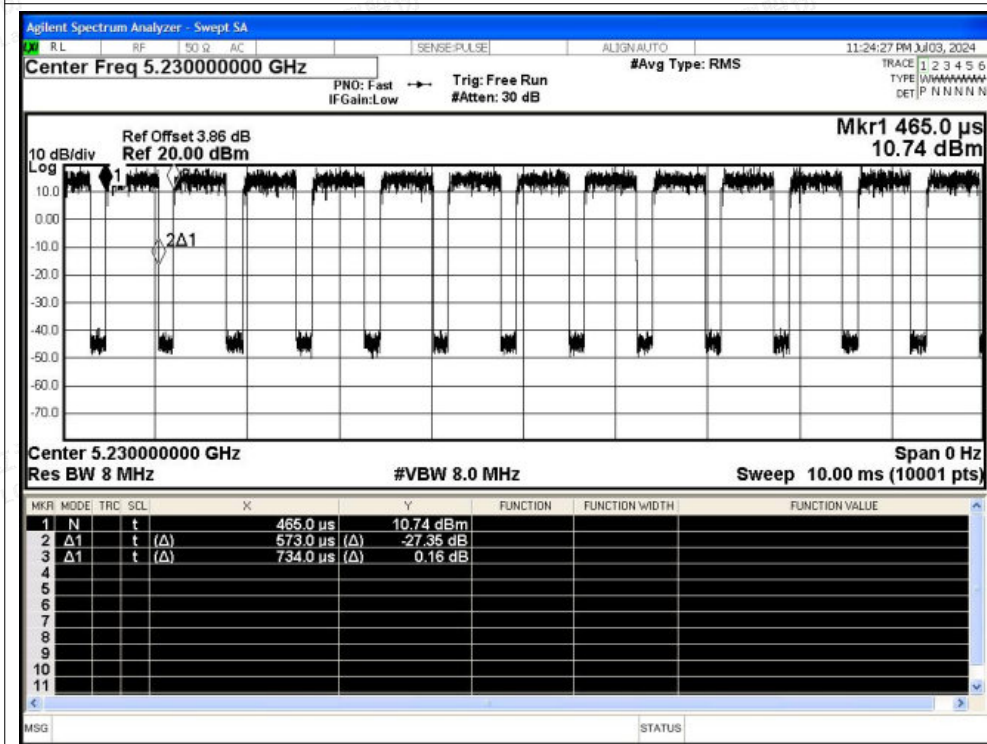




Duty Cycle NVNT ac20 5180MHz Ant0

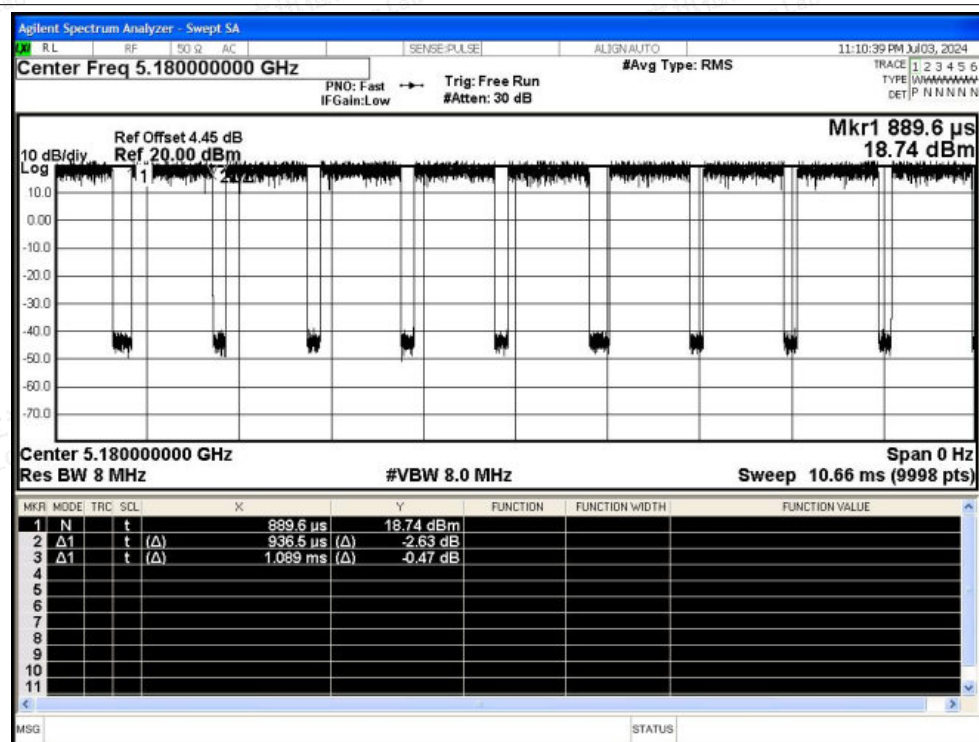


Duty Cycle NVNT ac20 5200MHz Ant0

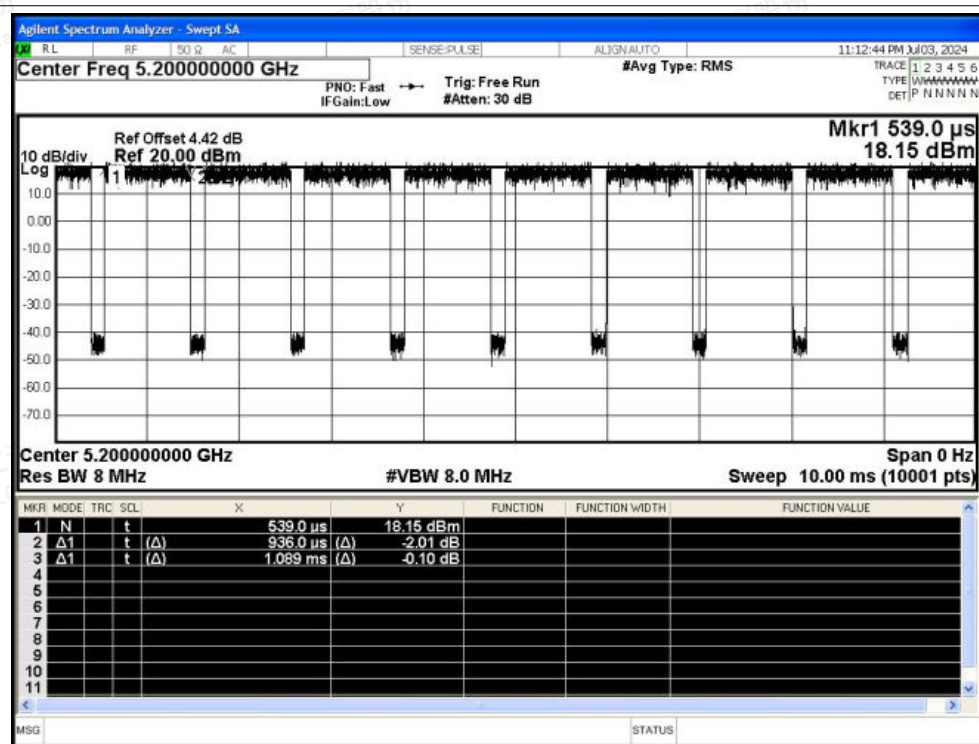




Duty Cycle NVNT ac20 5240MHz Ant0

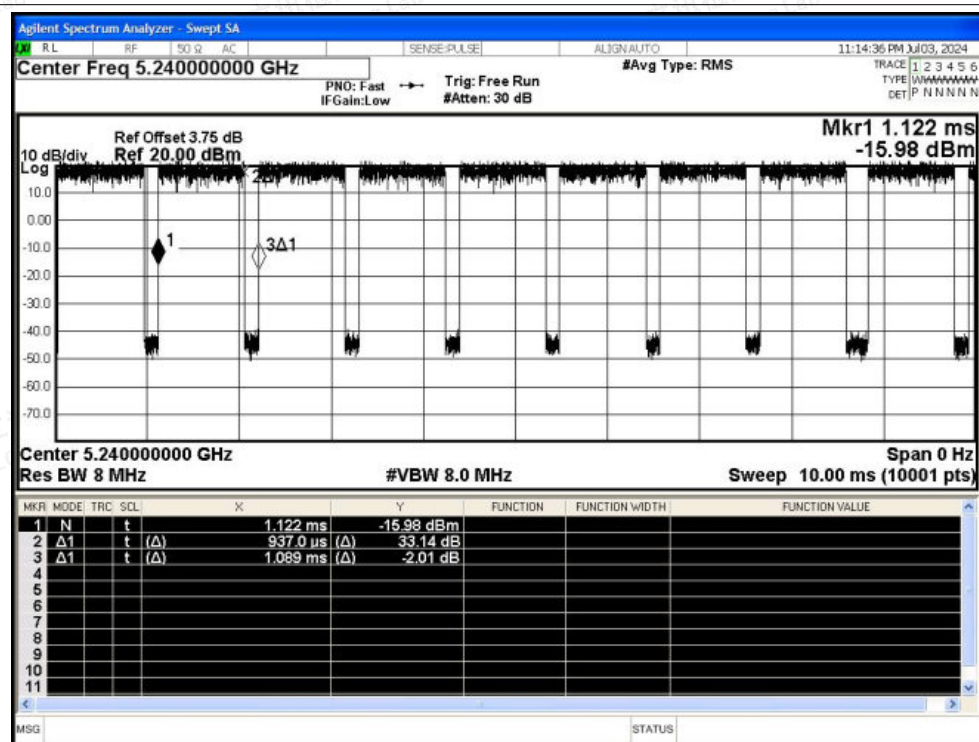


Duty Cycle NVNT ac40 5190MHz Ant0

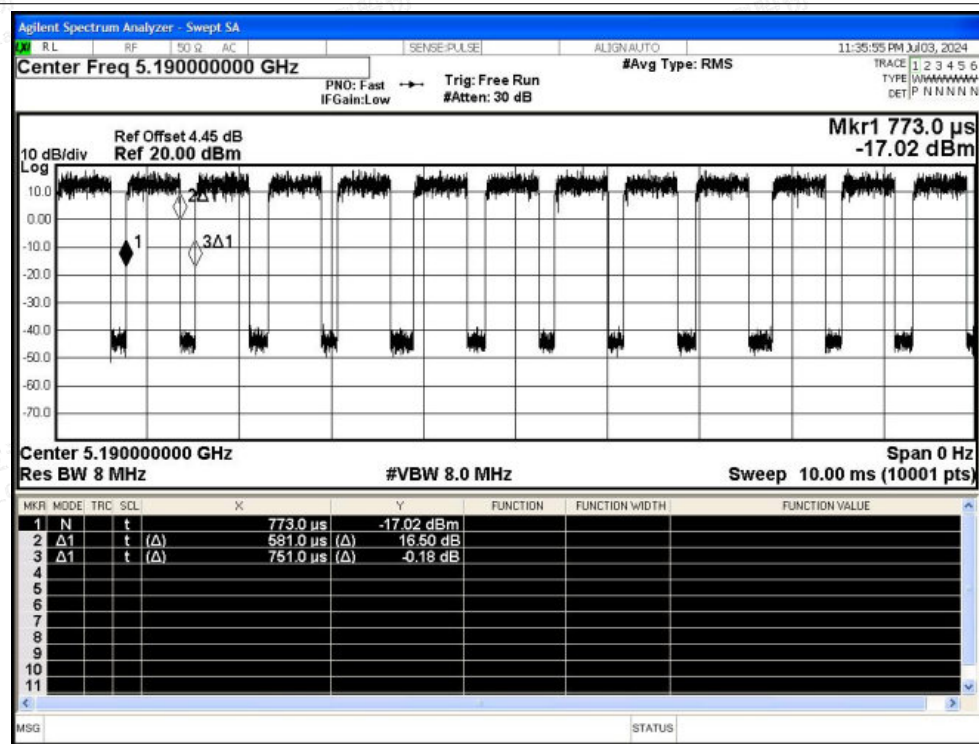




Duty Cycle NVNT ac40 5230MHz Ant0

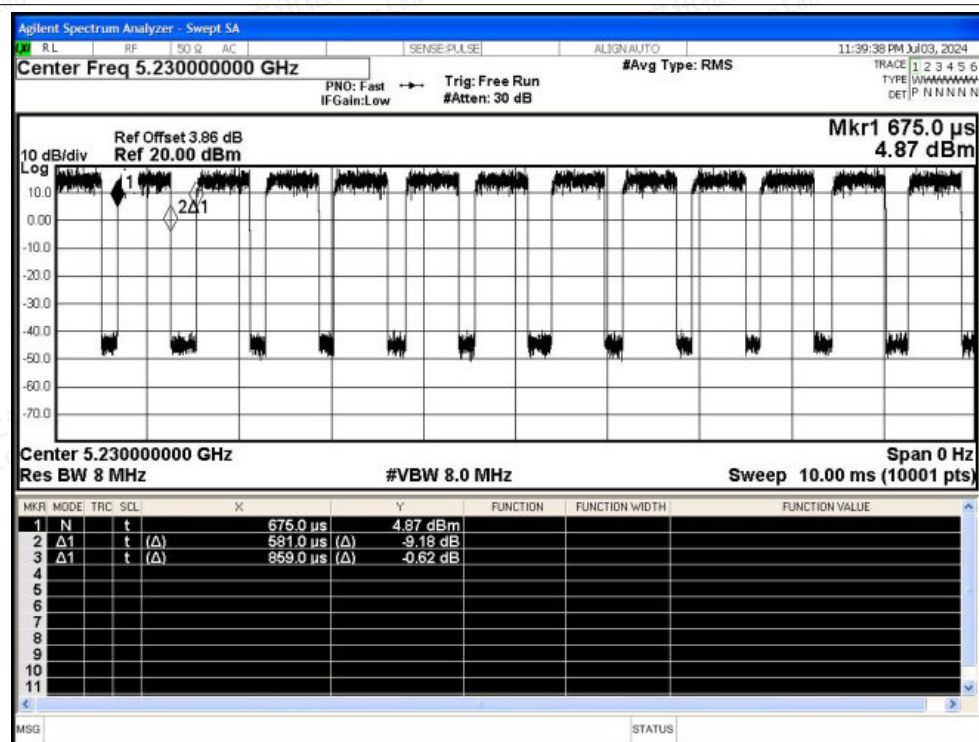

Duty Cycle NVNT ac80 5210MHz Ant0

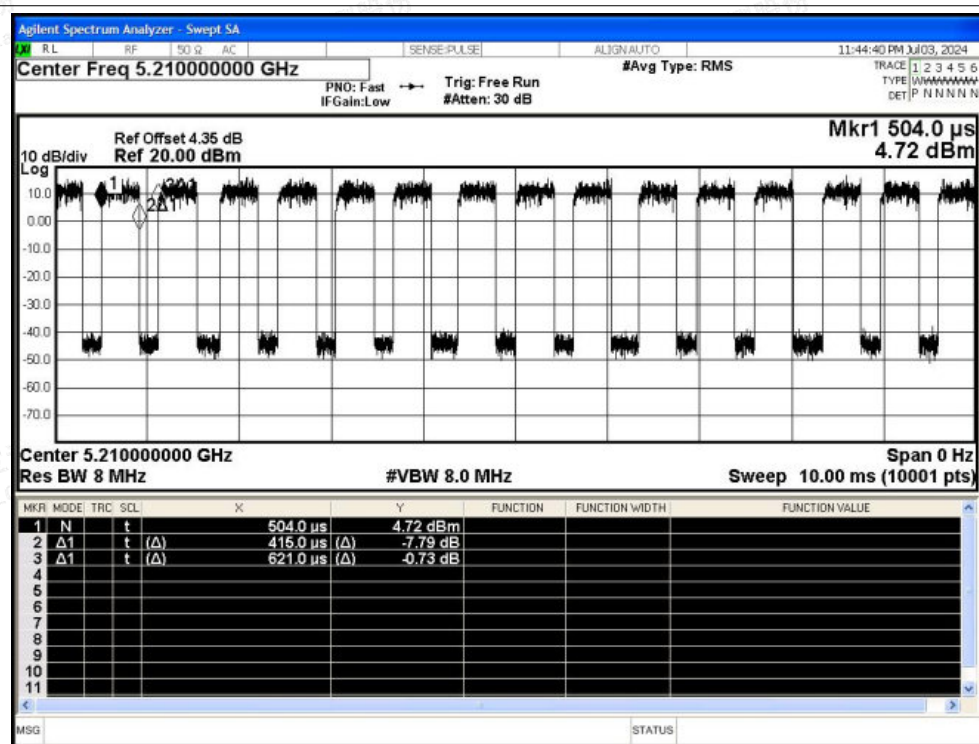




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant1	87.71	0.57	0.92
NVNT	a	5200	Ant1	87.79	0.57	0.91
NVNT	a	5240	Ant1	82.35	0.84	0.92
NVNT	n20	5180	Ant1	85.9	0.66	1.08
NVNT	n20	5200	Ant1	85.9	0.66	1.08
NVNT	n20	5240	Ant1	85.19	0.7	1.08
NVNT	n40	5190	Ant1	77.12	1.13	1.75
NVNT	n40	5230	Ant1	77.12	1.13	1.75
NVNT	ac20	5180	Ant1	80.11	0.96	1.07
NVNT	ac20	5200	Ant1	85.96	0.66	1.07
NVNT	ac20	5240	Ant1	94.65	0.24	1.07
NVNT	ac40	5190	Ant1	77.23	1.12	1.72
NVNT	ac40	5230	Ant1	77.23	1.12	1.72
NVNT	ac80	5210	Ant1	59.12	2.28	2.41






Test Graphs

Duty Cycle NVNT a 5180MHz Ant1

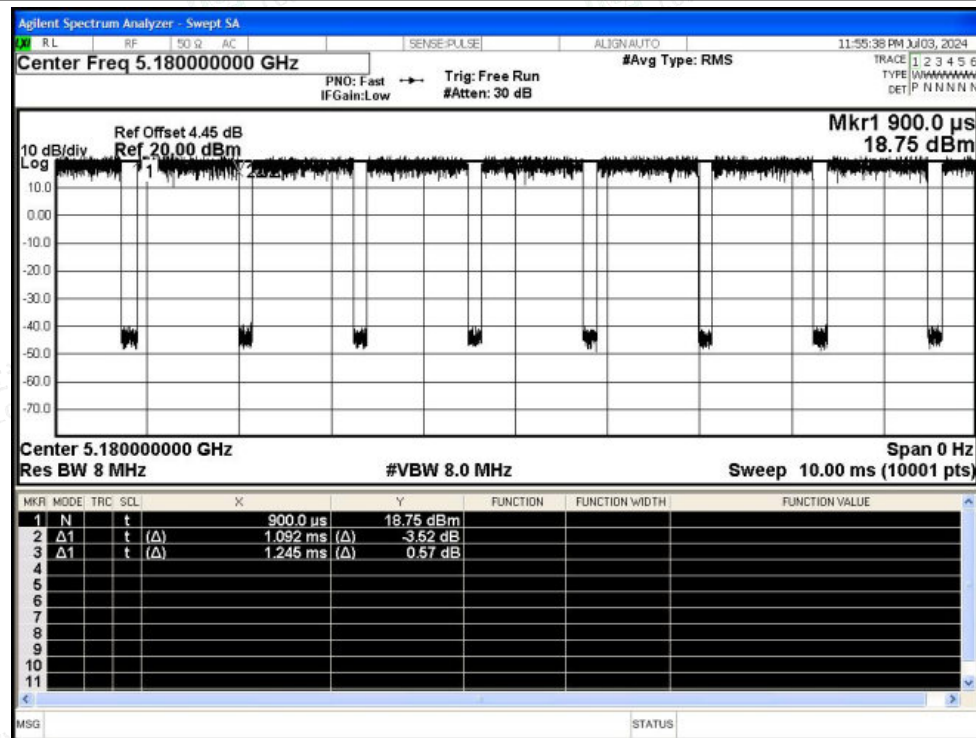

Duty Cycle NVNT a 5200MHz Ant1

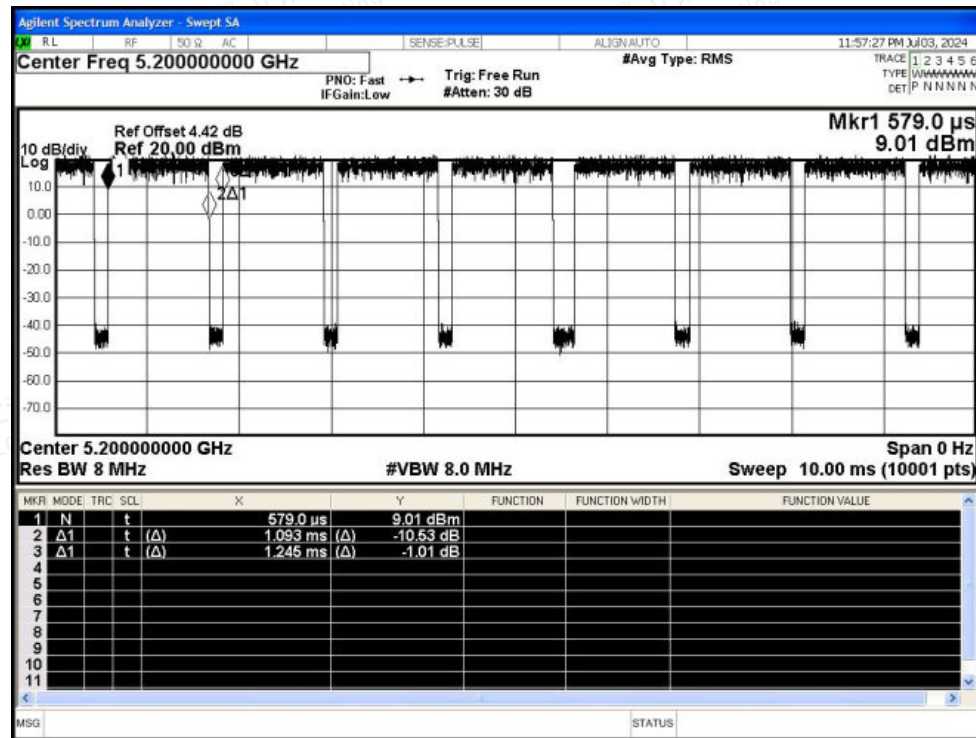

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



Duty Cycle NVNT a 5240MHz Ant1

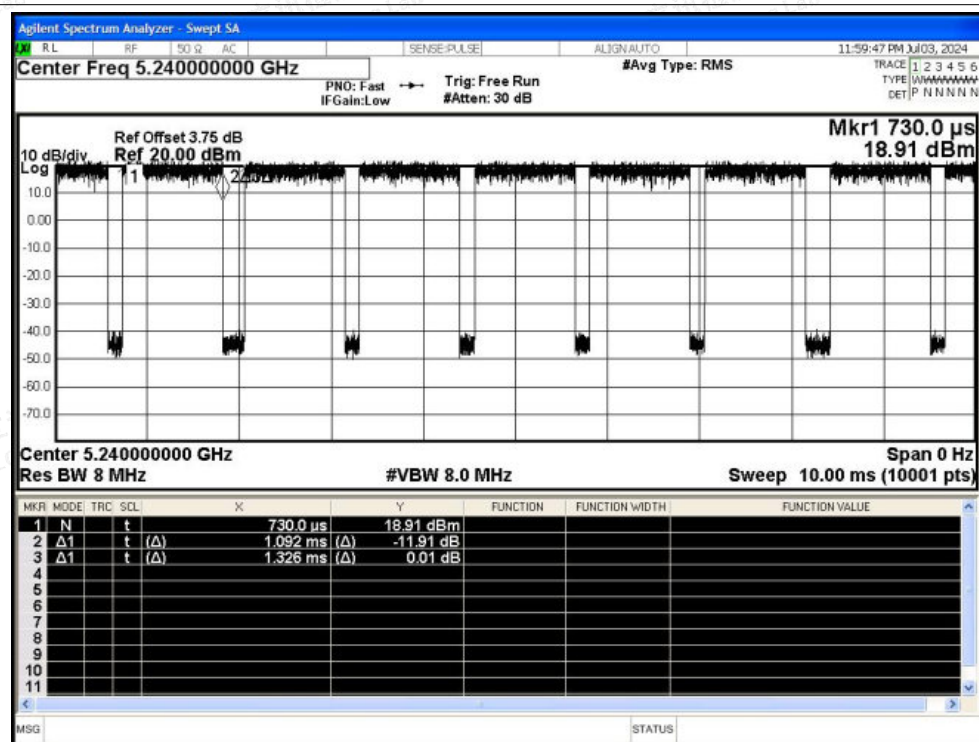


Duty Cycle NVNT n20 5180MHz Ant1

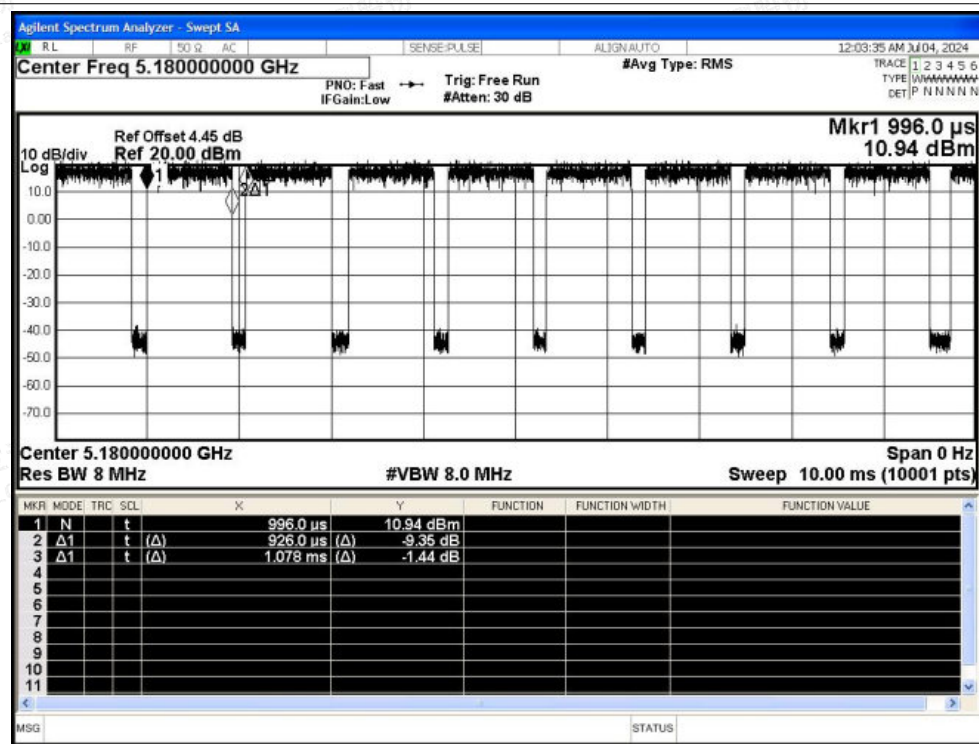




Duty Cycle NVNT n20 5200MHz Ant1

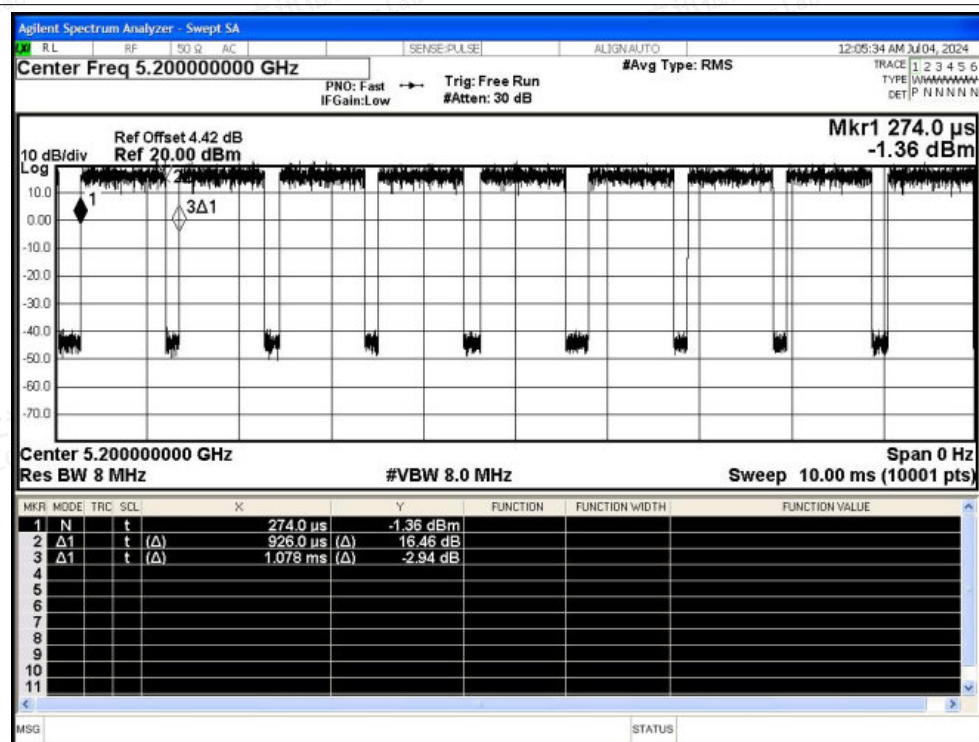


Duty Cycle NVNT n20 5240MHz Ant1

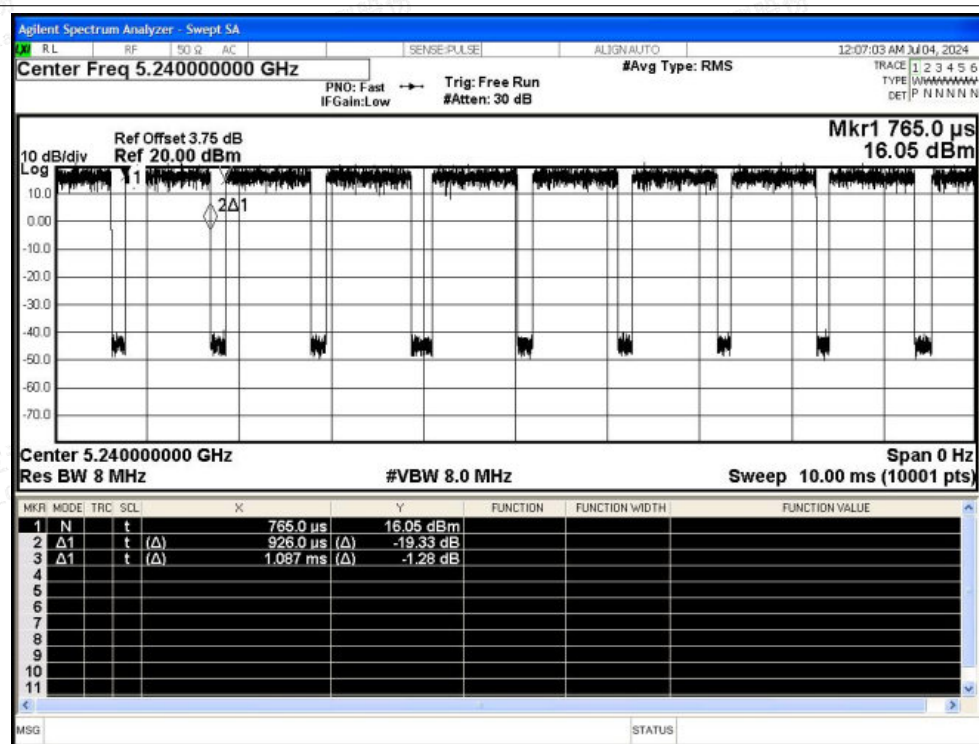




Duty Cycle NVNT n40 5190MHz Ant1

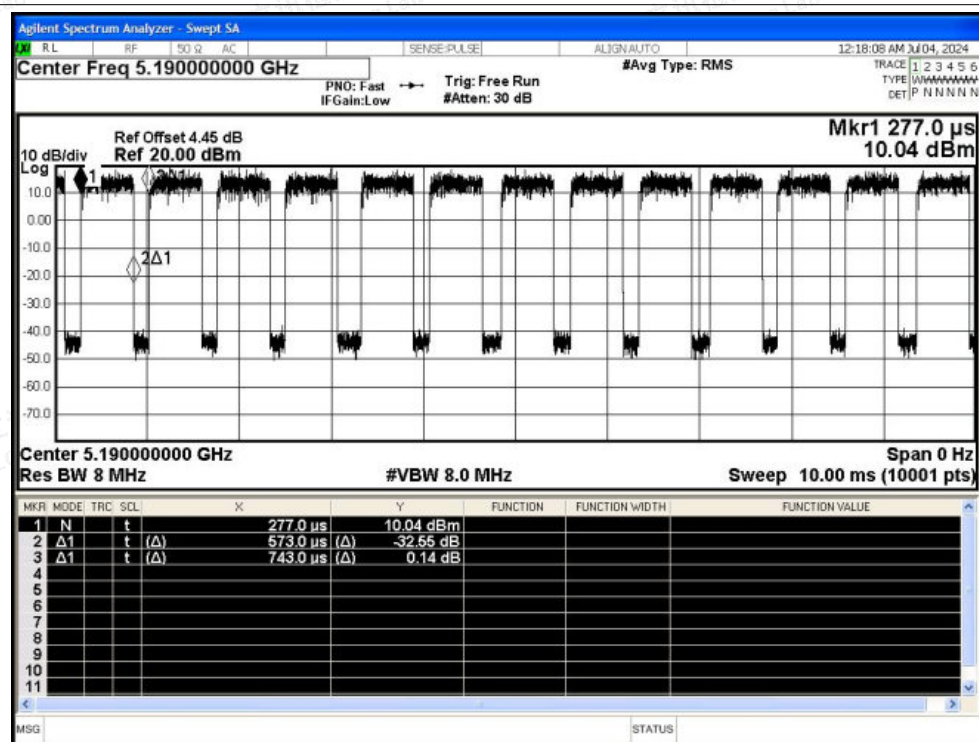


Duty Cycle NVNT n40 5230MHz Ant1

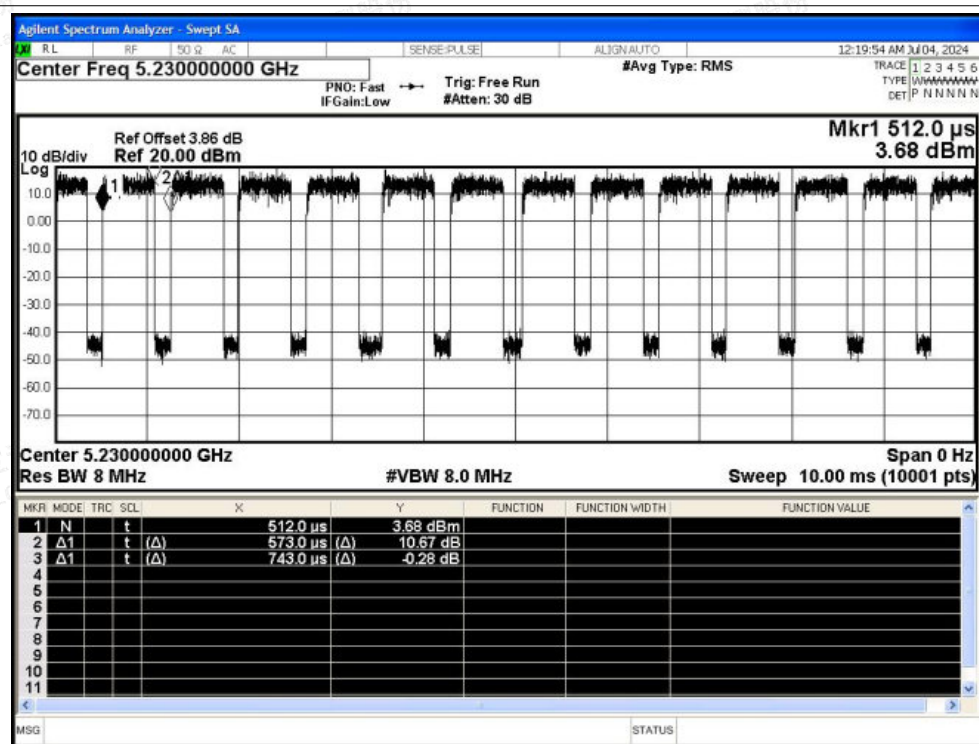




Duty Cycle NVNT ac20 5180MHz Ant1

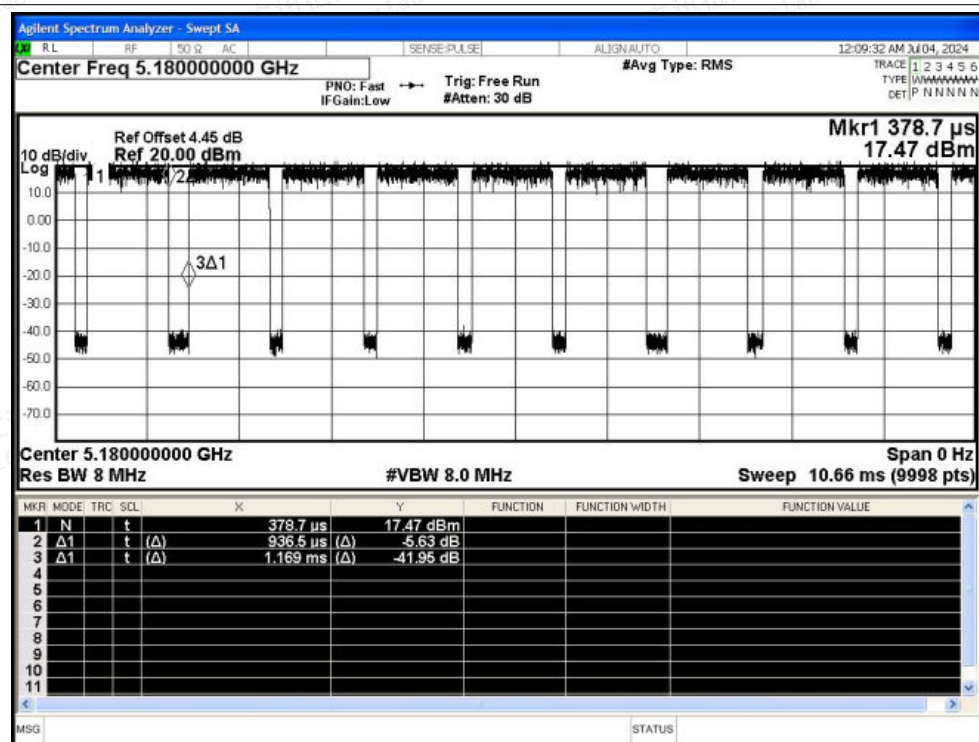


Duty Cycle NVNT ac20 5200MHz Ant1

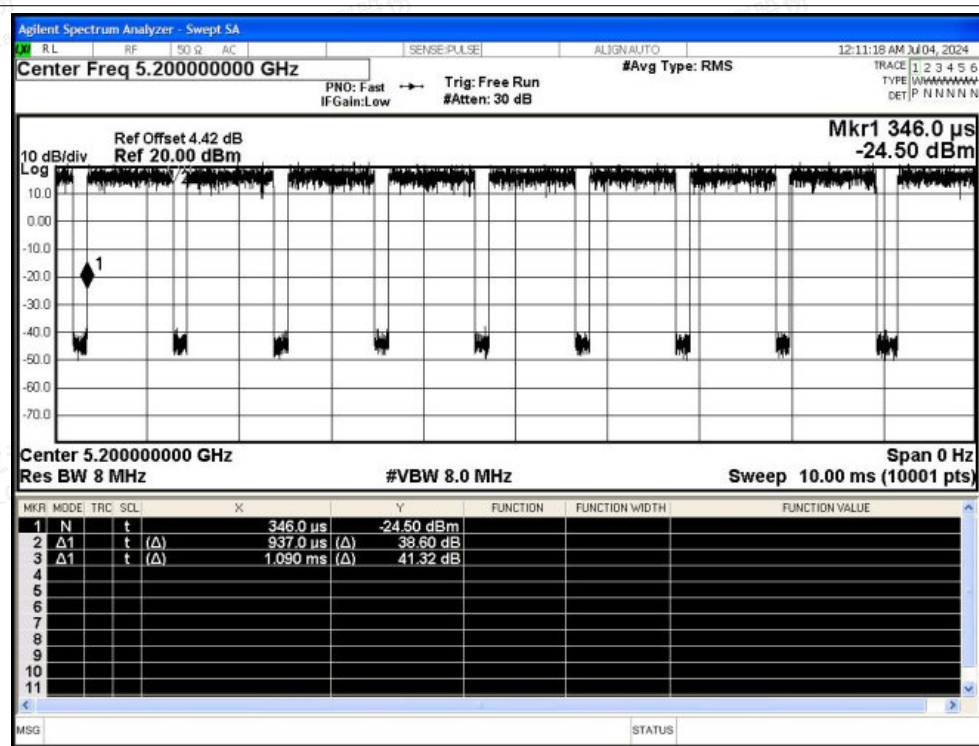




Duty Cycle NVNT ac20 5240MHz Ant1

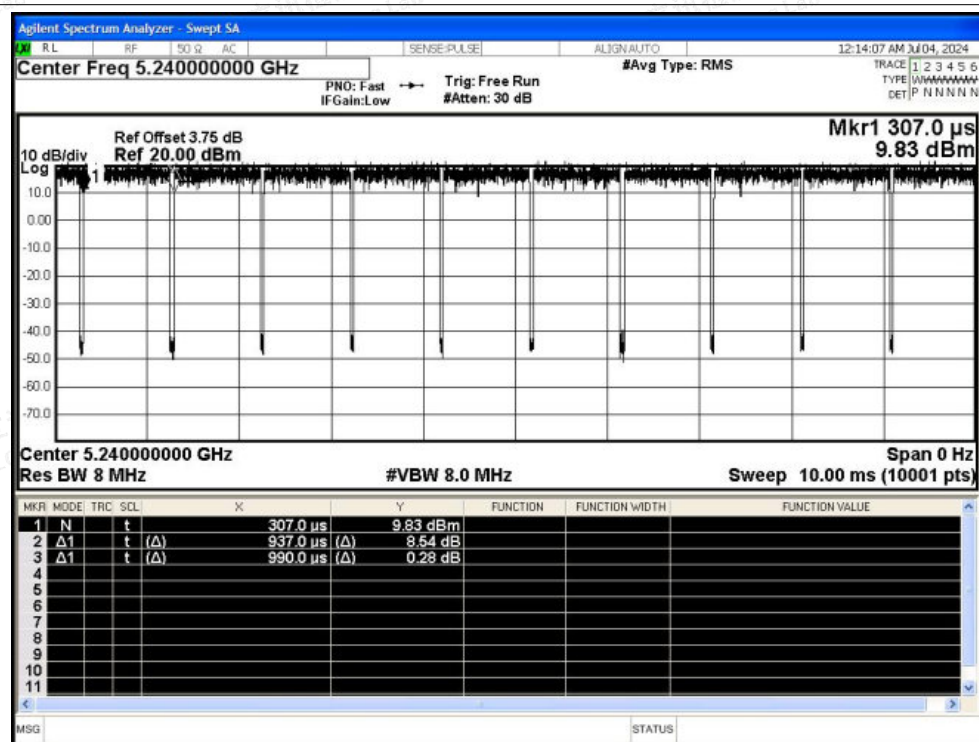


Duty Cycle NVNT ac40 5190MHz Ant1

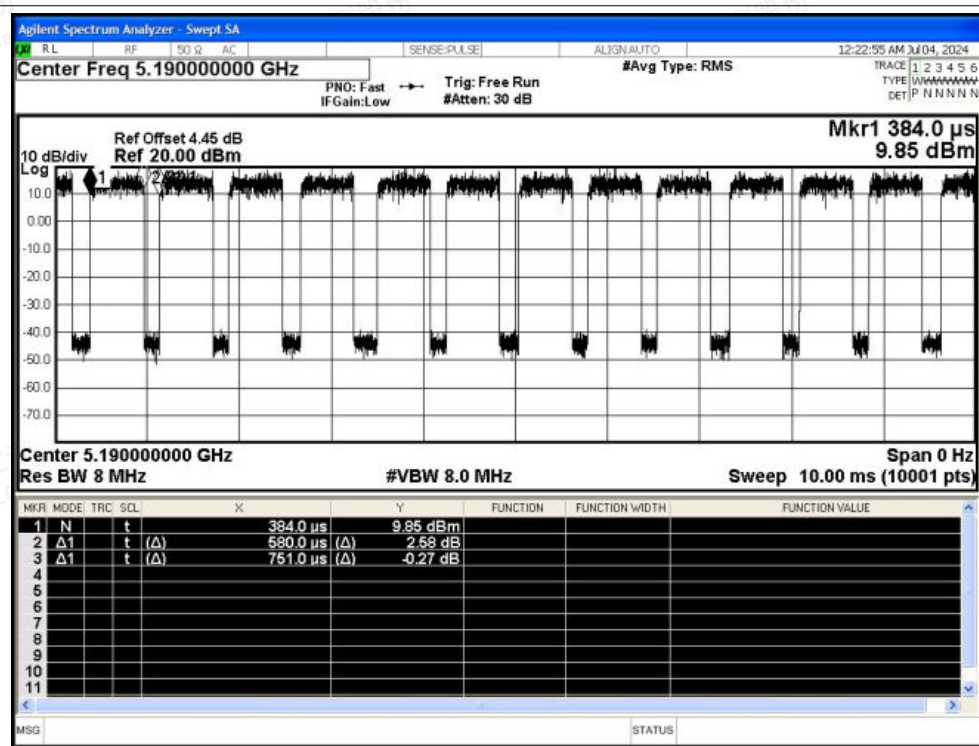



Duty Cycle NVNT ac40 5230MHz Ant1

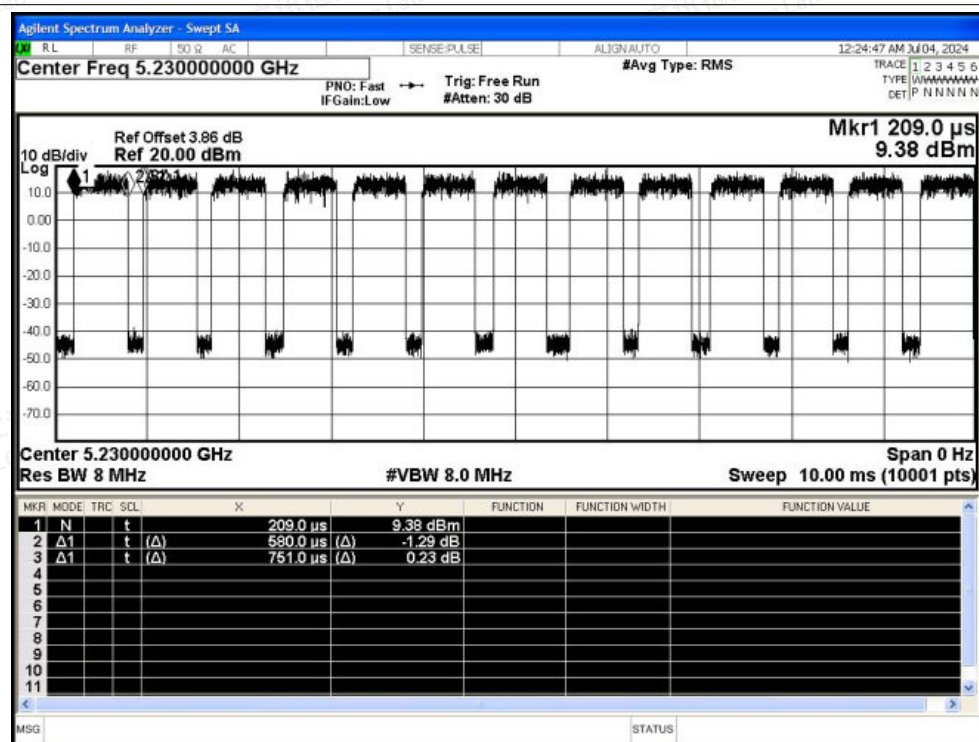

Duty Cycle NVNT ac80 5210MHz Ant1

