




OBW NVNT ac80 5210MHz Ant1

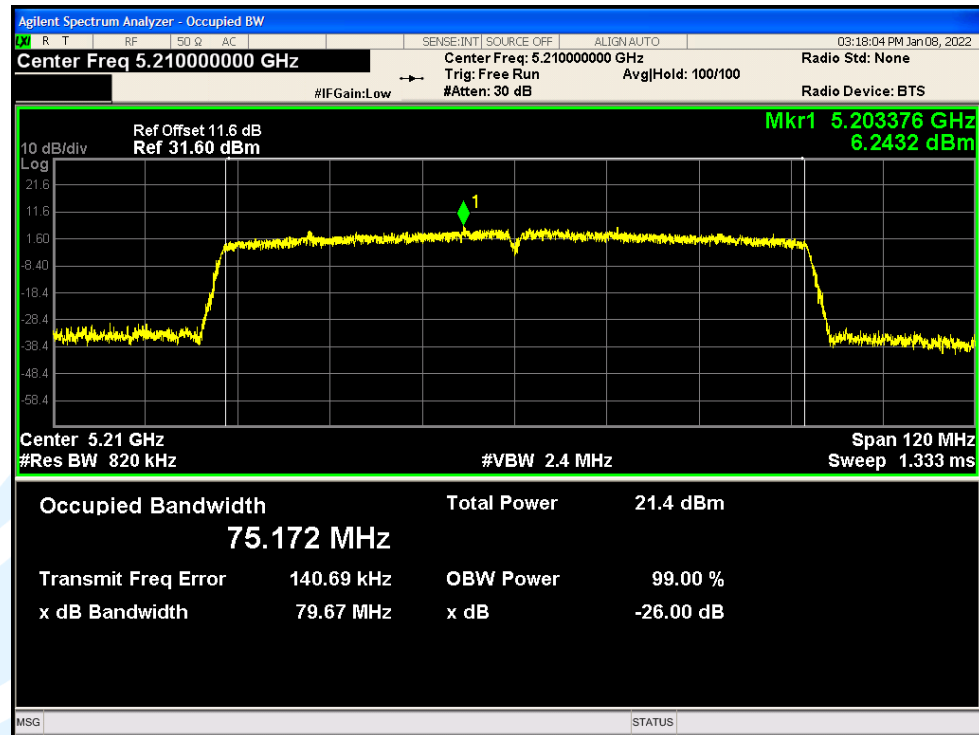


OBW NVNT ac80 5290MHz Ant1

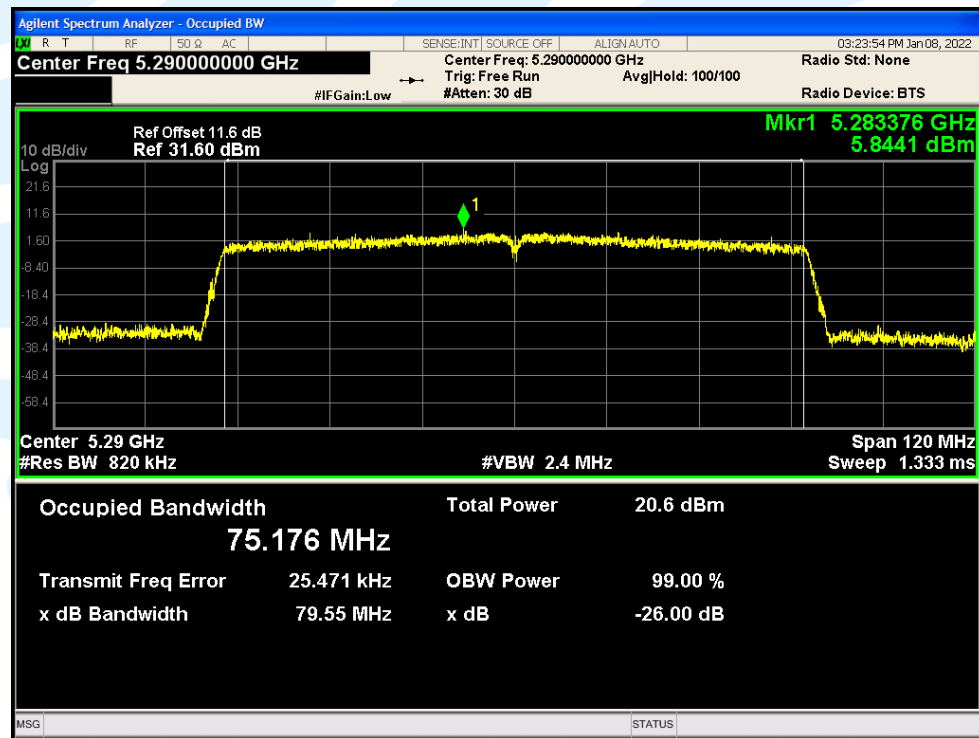


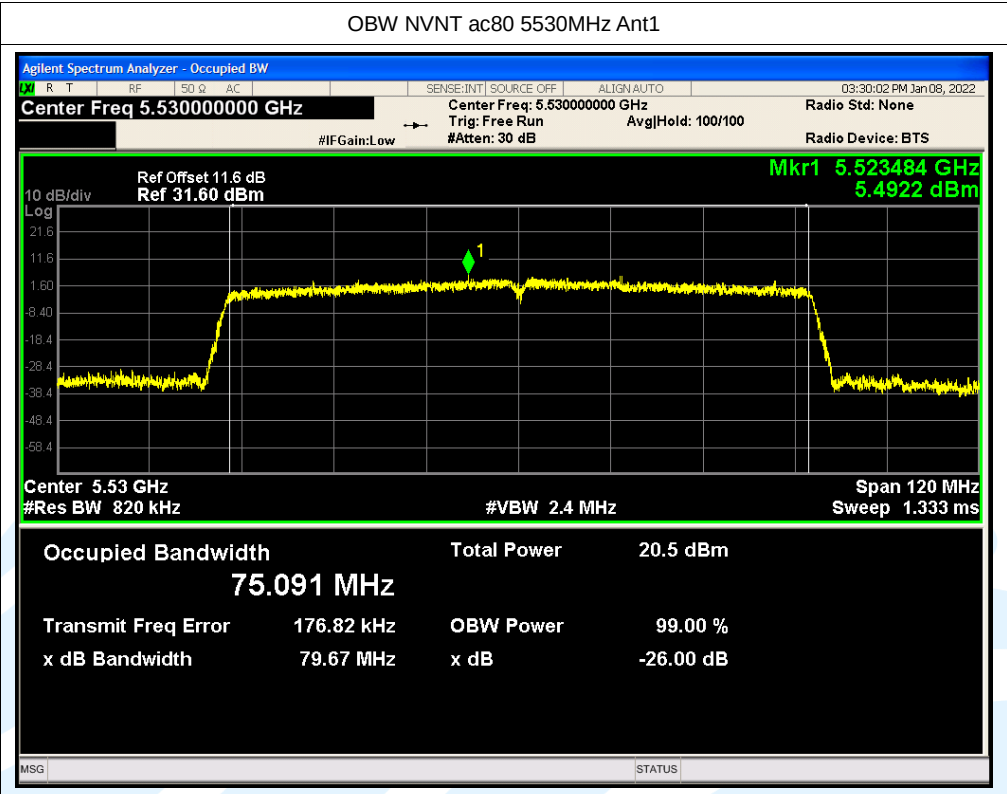


OBW NVNT ac80 5775MHz Ant1

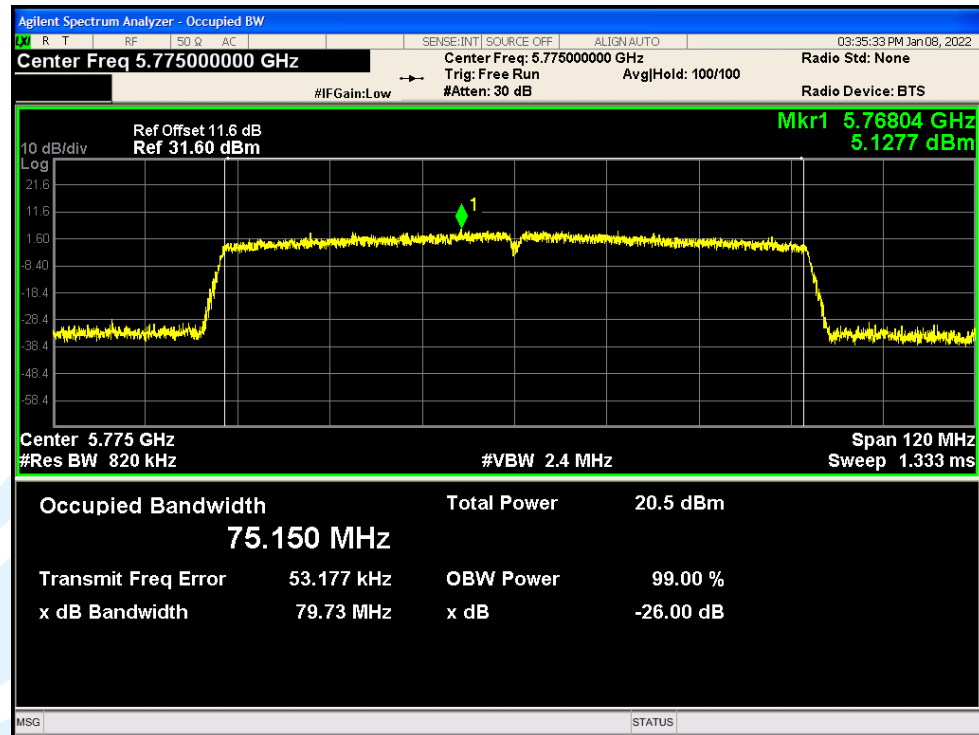


OBW NVNT ac80 5210MHz Ant2

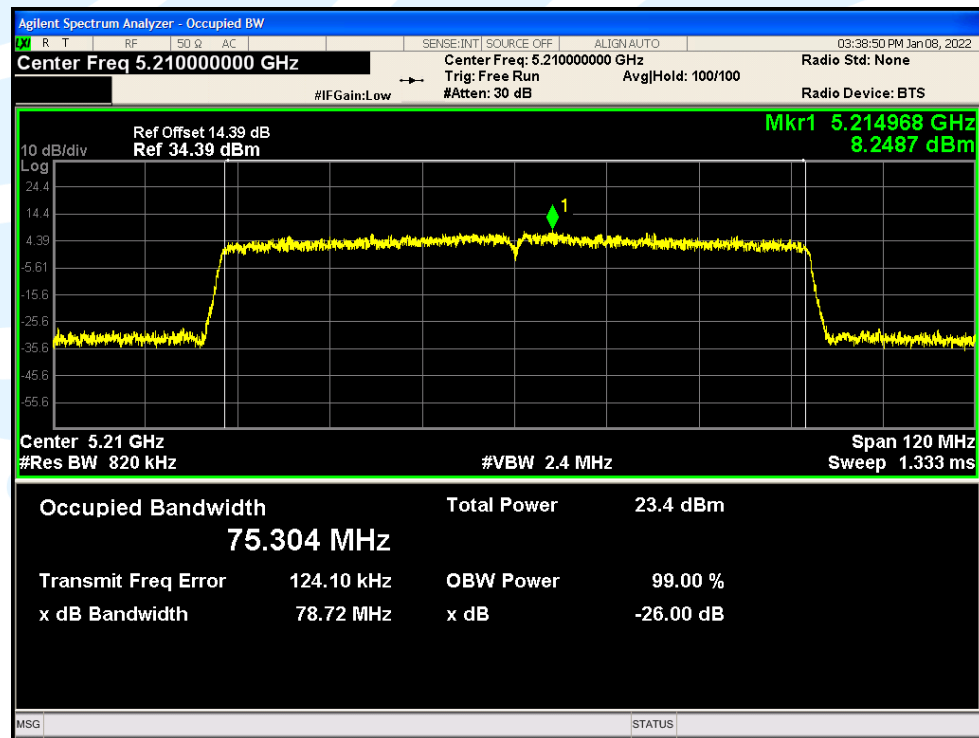


OBW NVNT ac80 5290MHz Ant2

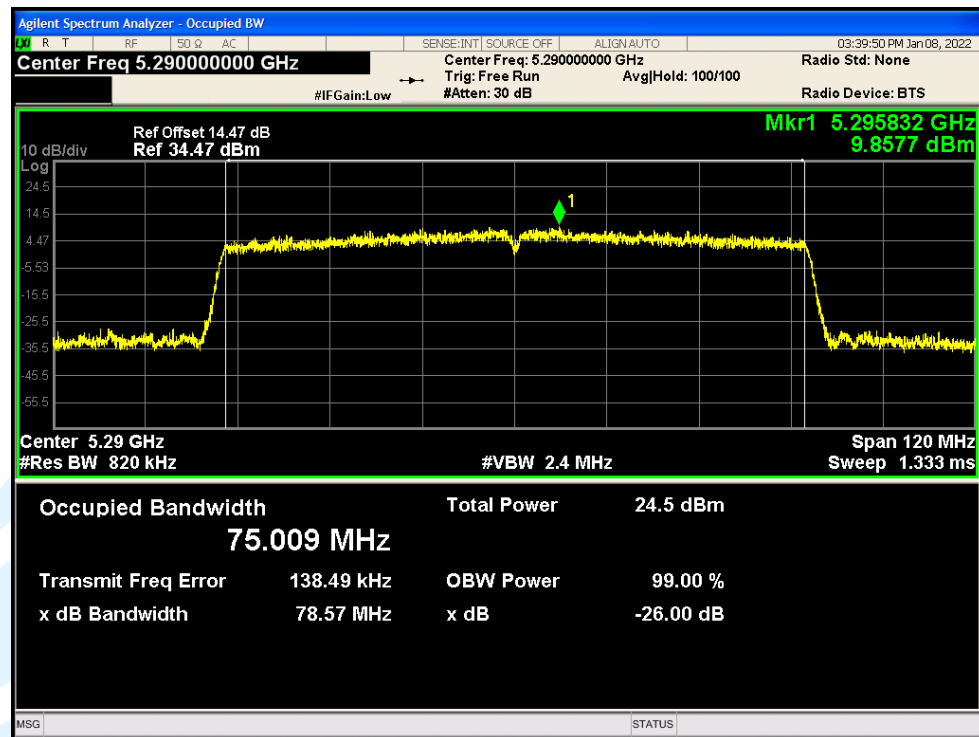


OBW NVNT ac80 5530MHz Ant2

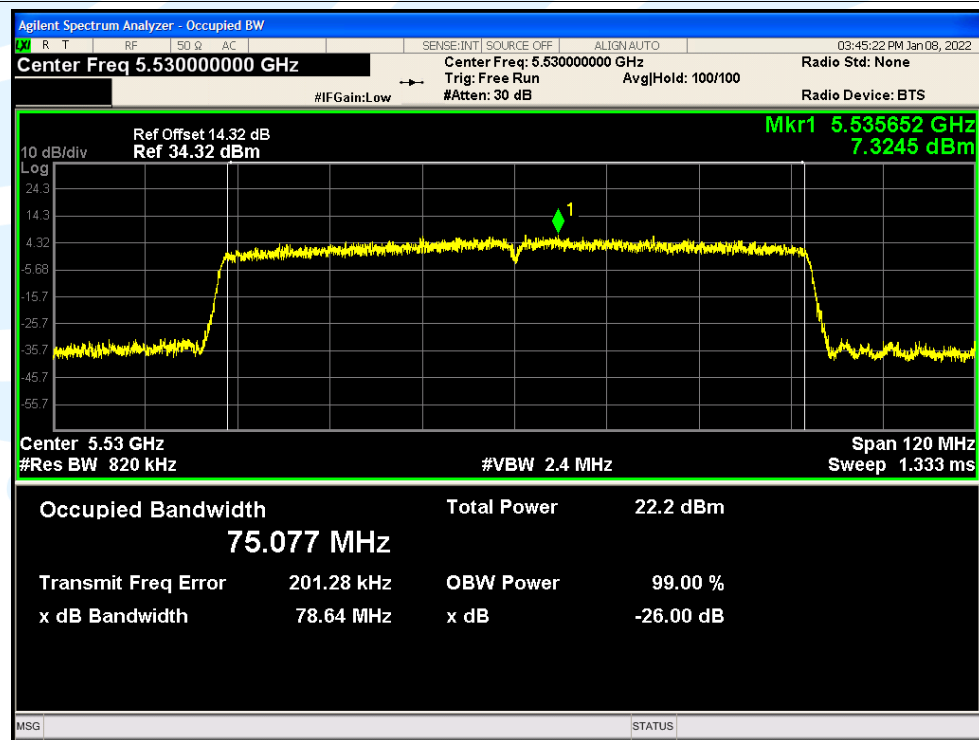


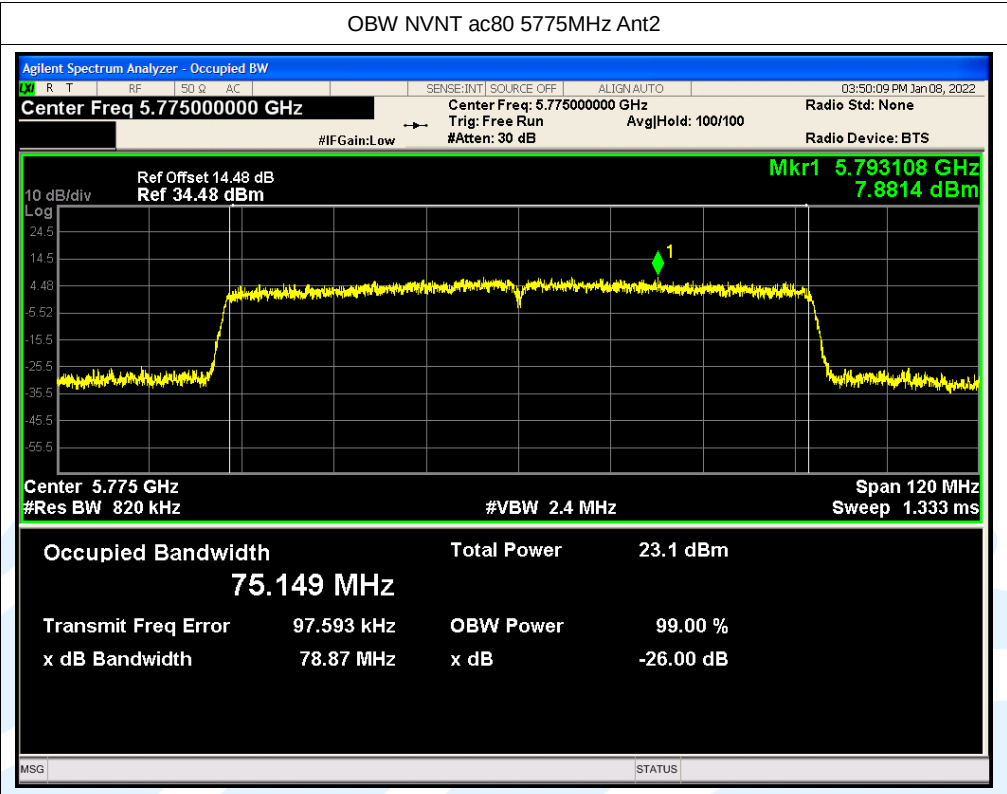


OBW NVNT ax20 5180MHz Ant1

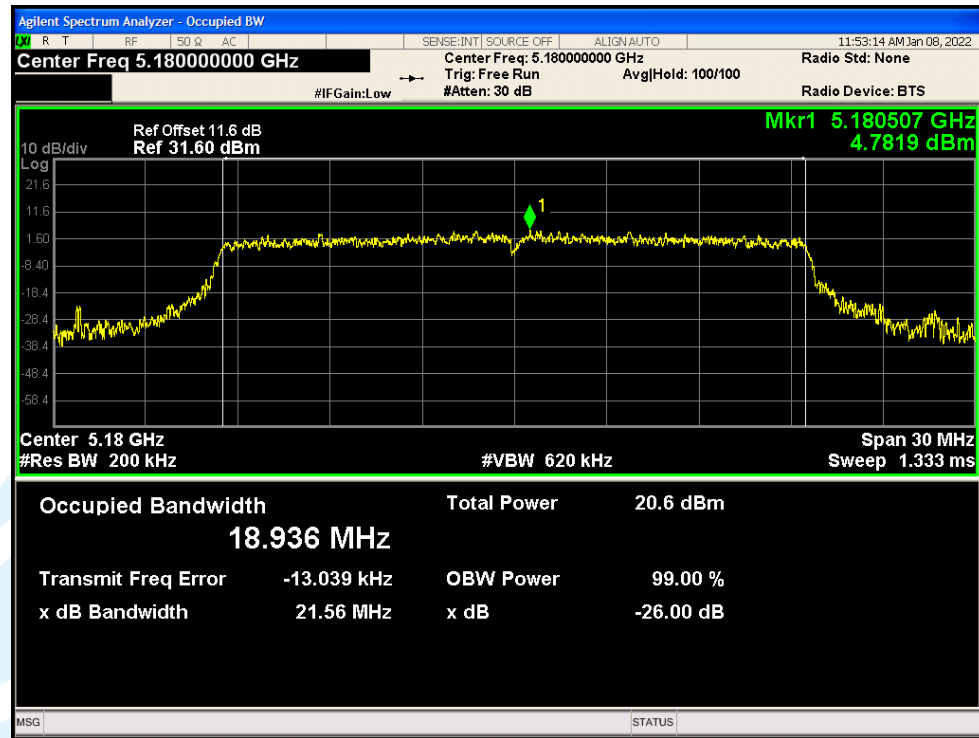


OBW NVNT ax20 5220MHz Ant1

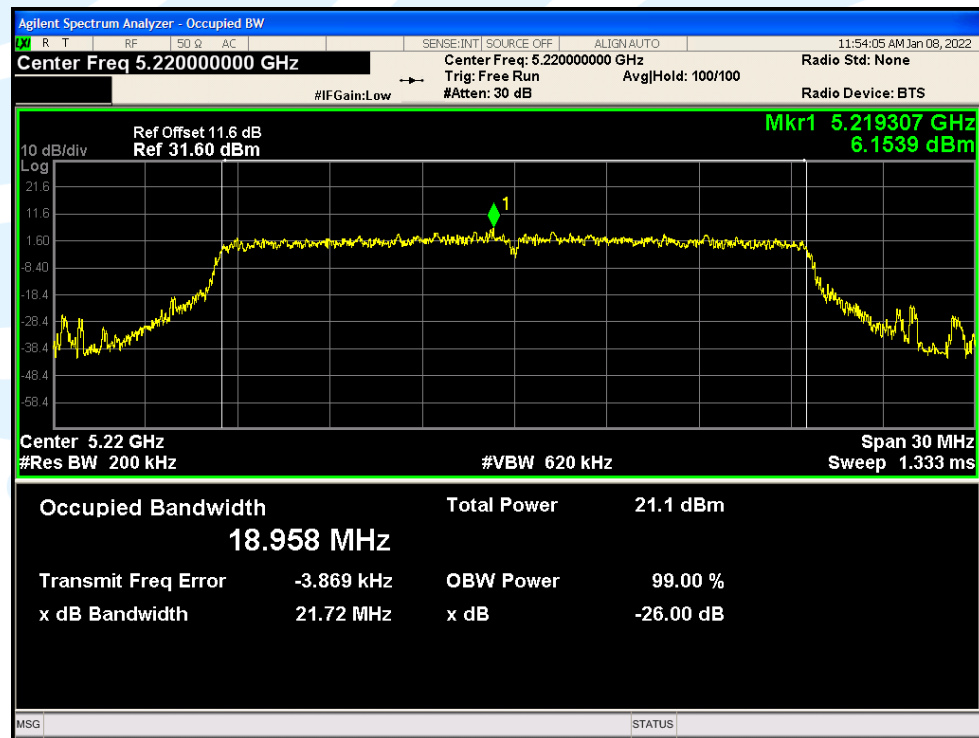


OBW NVNT ax20 5240MHz Ant1

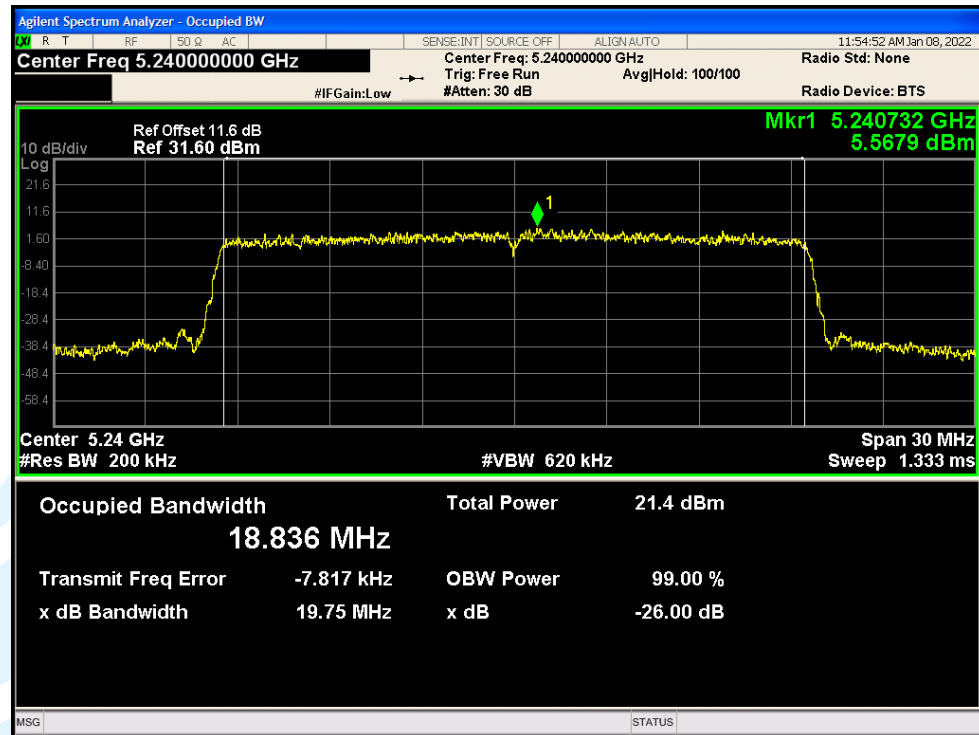


OBW NVNT ax20 5260MHz Ant1

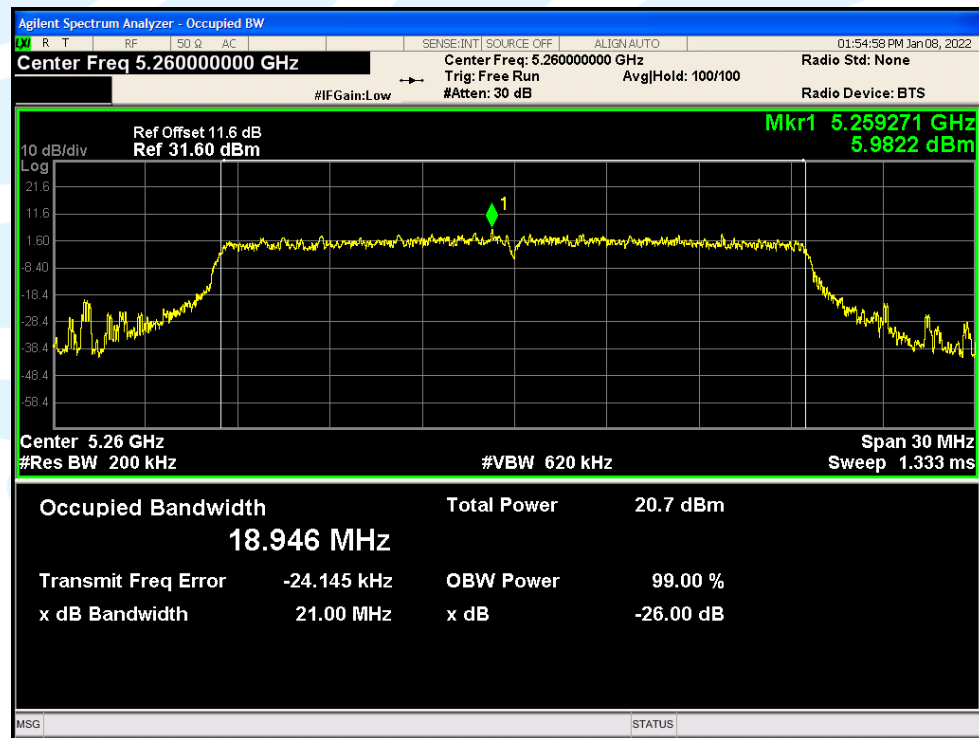


OBW NVNT ax20 5300MHz Ant1

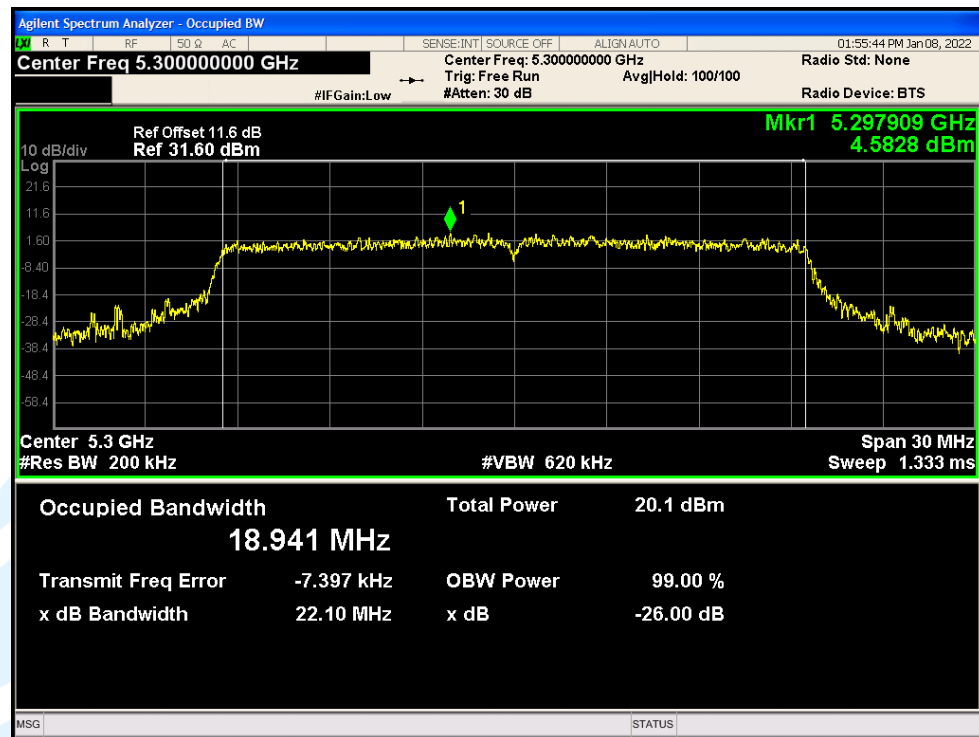


OBW NVNT ax20 5320MHz Ant1

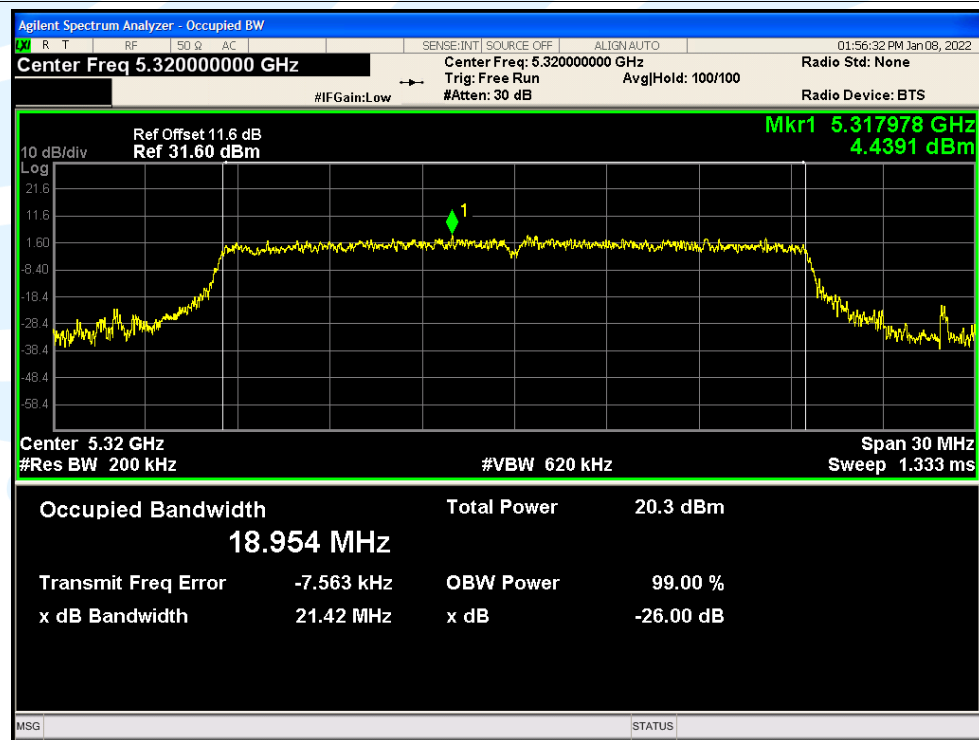


OBW NVNT ax20 5500MHz Ant1

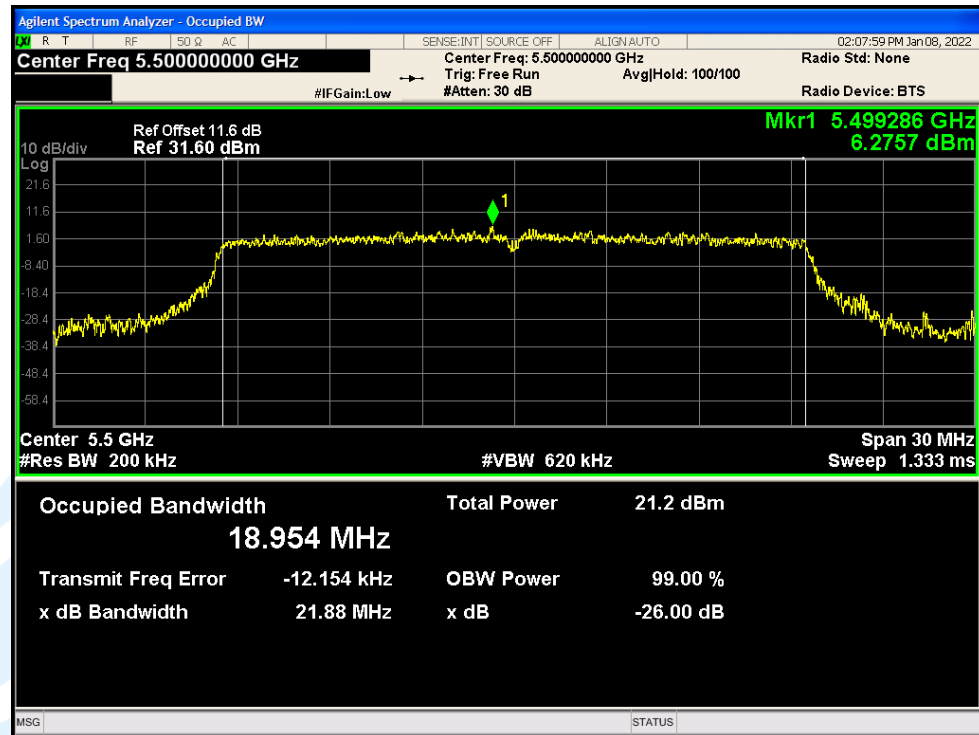


OBW NVNT ax20 5580MHz Ant1

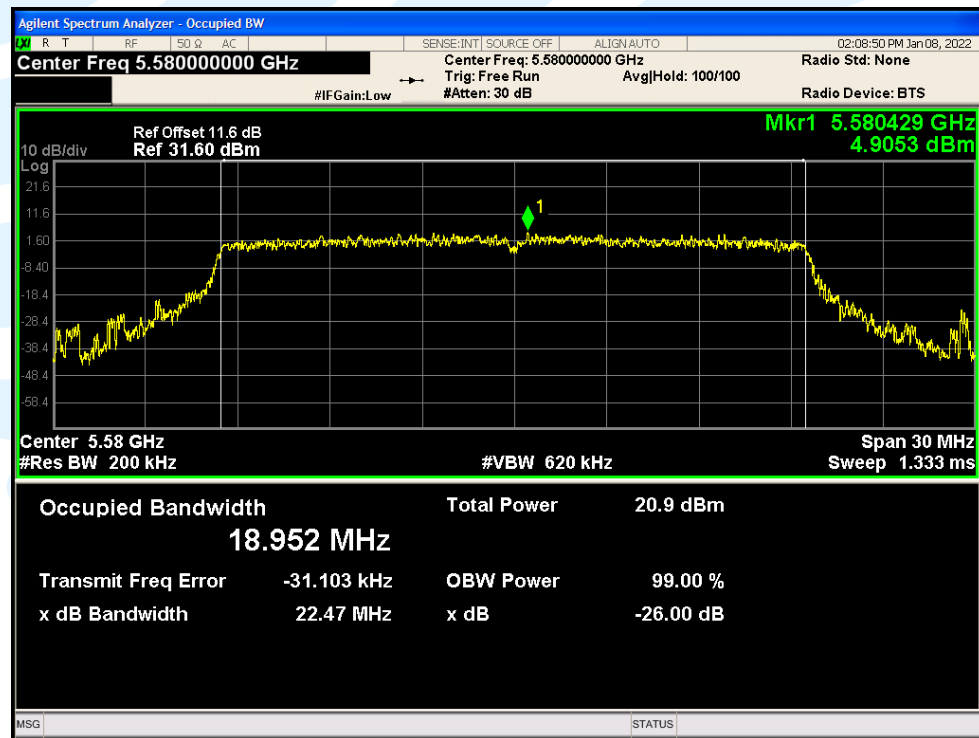


OBW NVNT ax20 5700MHz Ant1

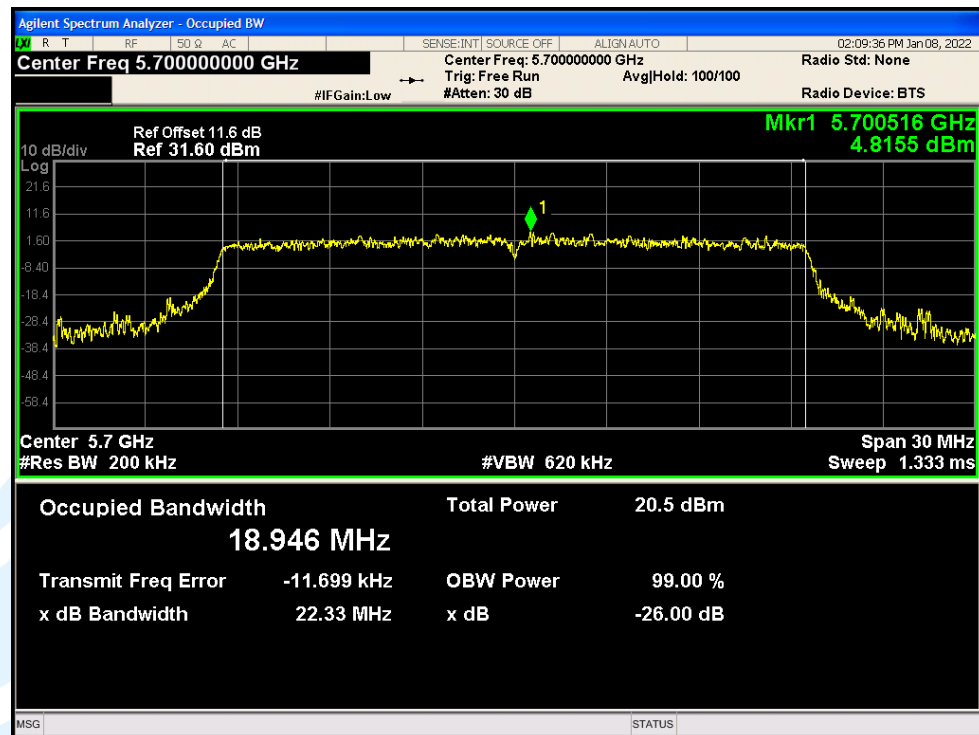


OBW NVNT ax20 5745MHz Ant1

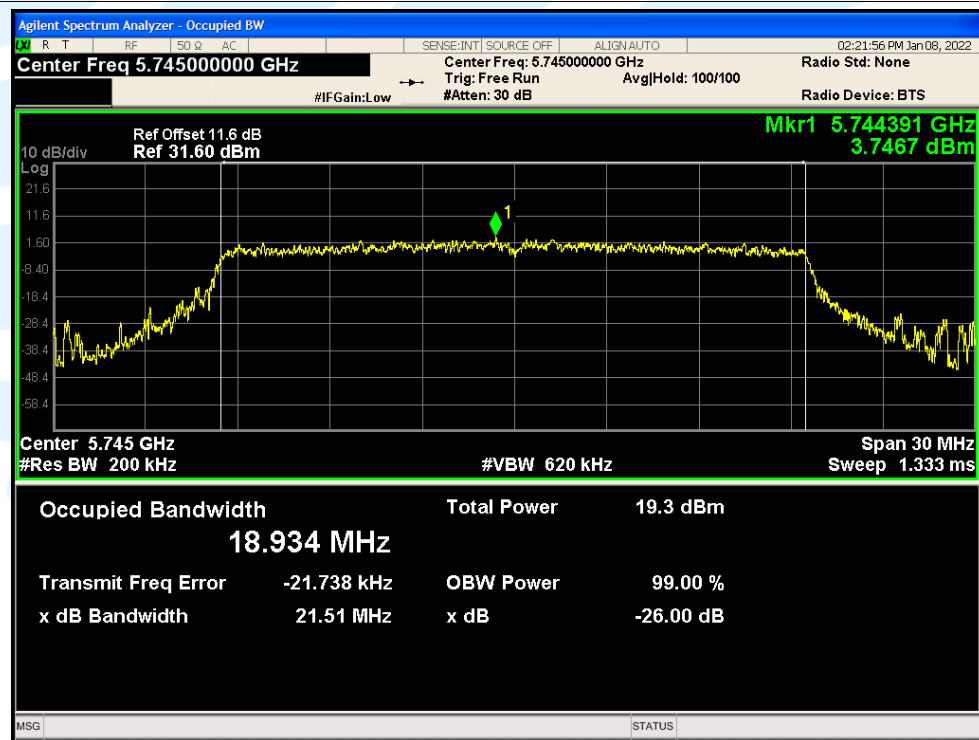


OBW NVNT ax20 5785MHz Ant1

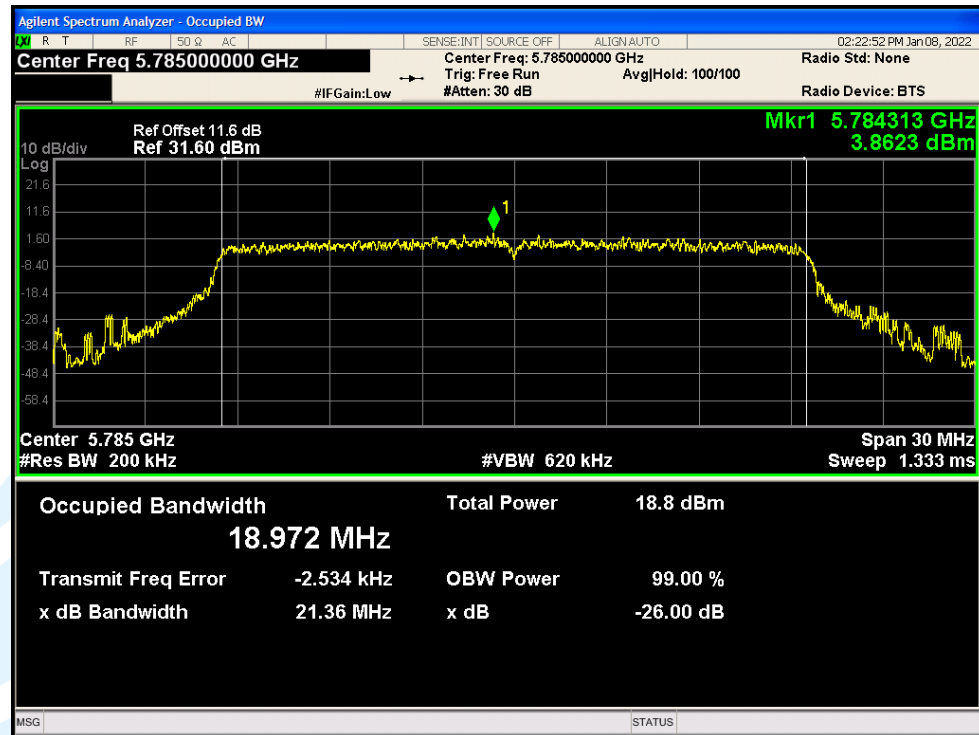


OBW NVNT ax20 5825MHz Ant1

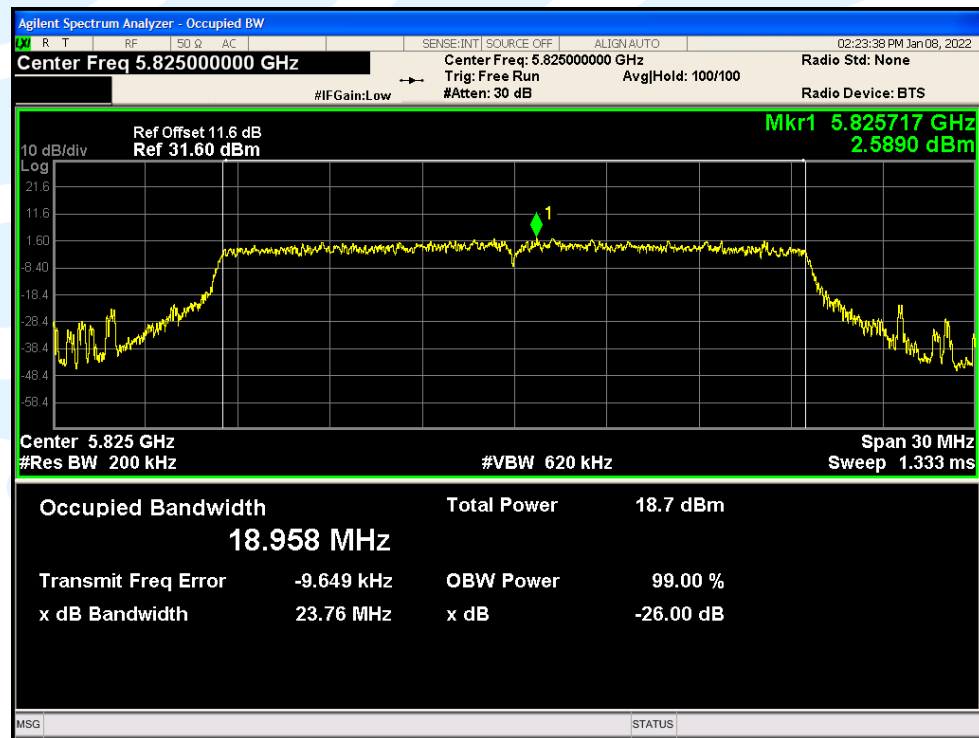


OBW NVNT ax20 5180MHz Ant2

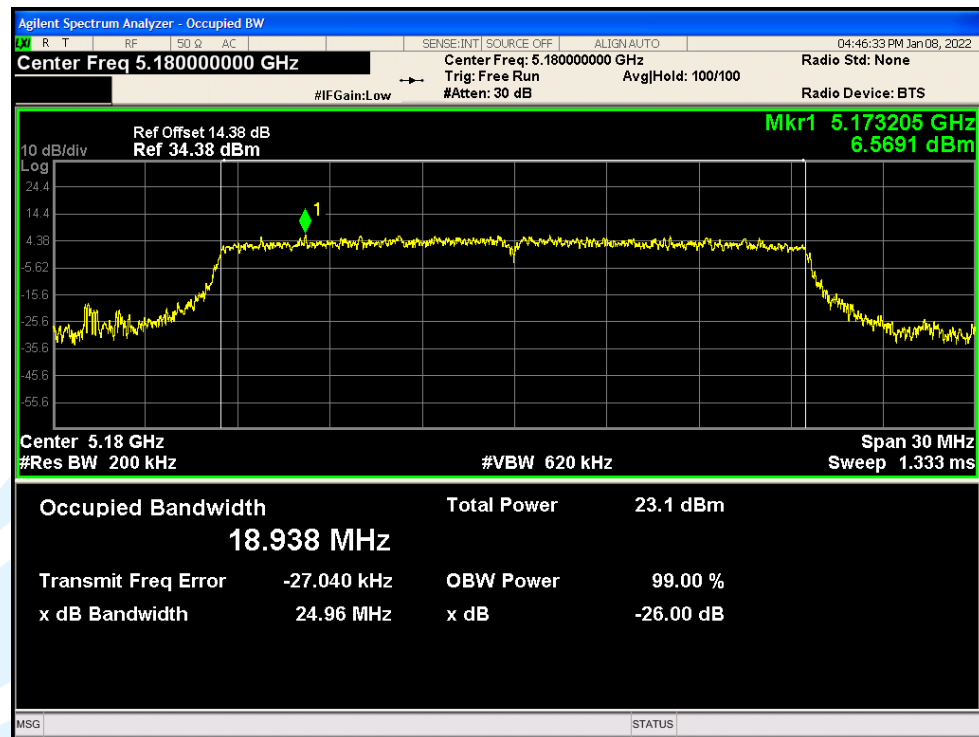


OBW NVNT ax20 5220MHz Ant2

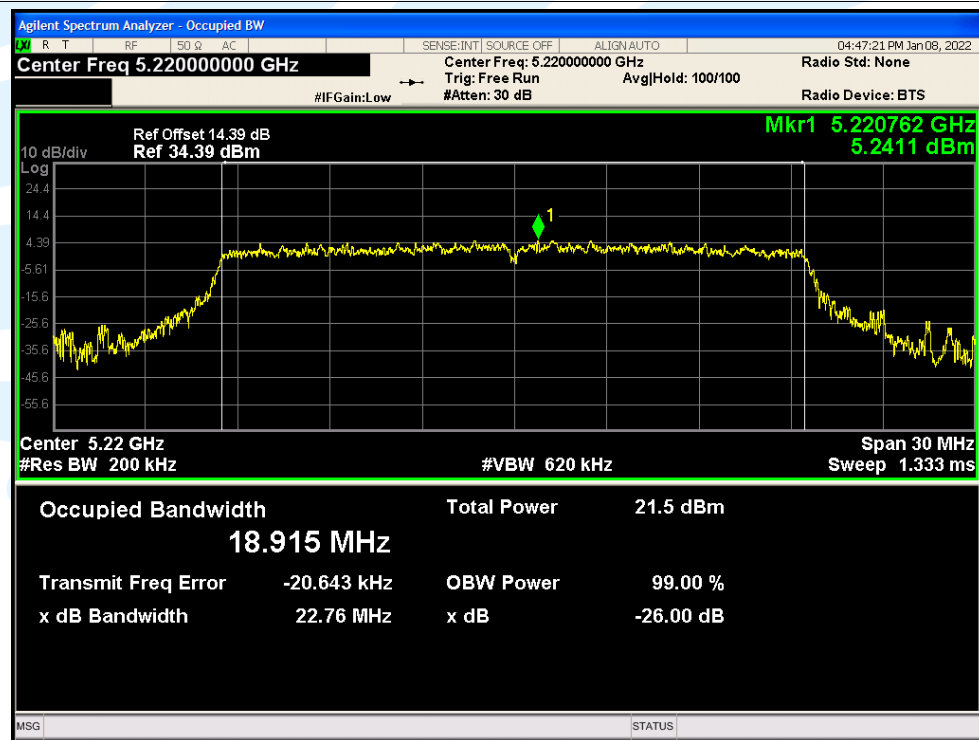


OBW NVNT ax20 5240MHz Ant2

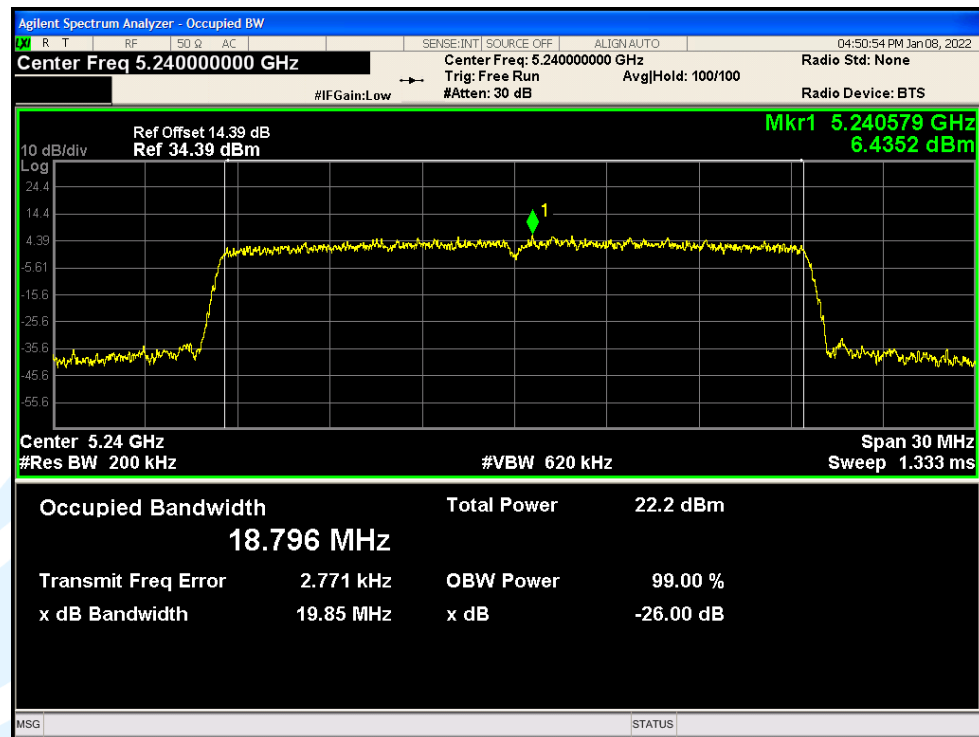


OBW NVNT ax20 5260MHz Ant2

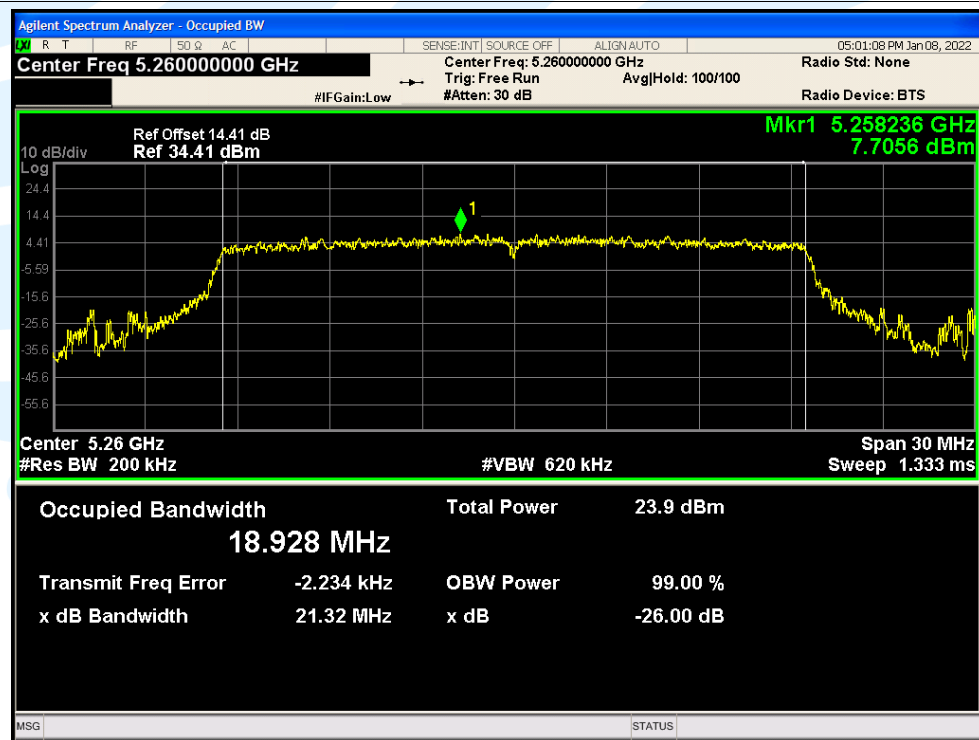


OBW NVNT ax20 5300MHz Ant2

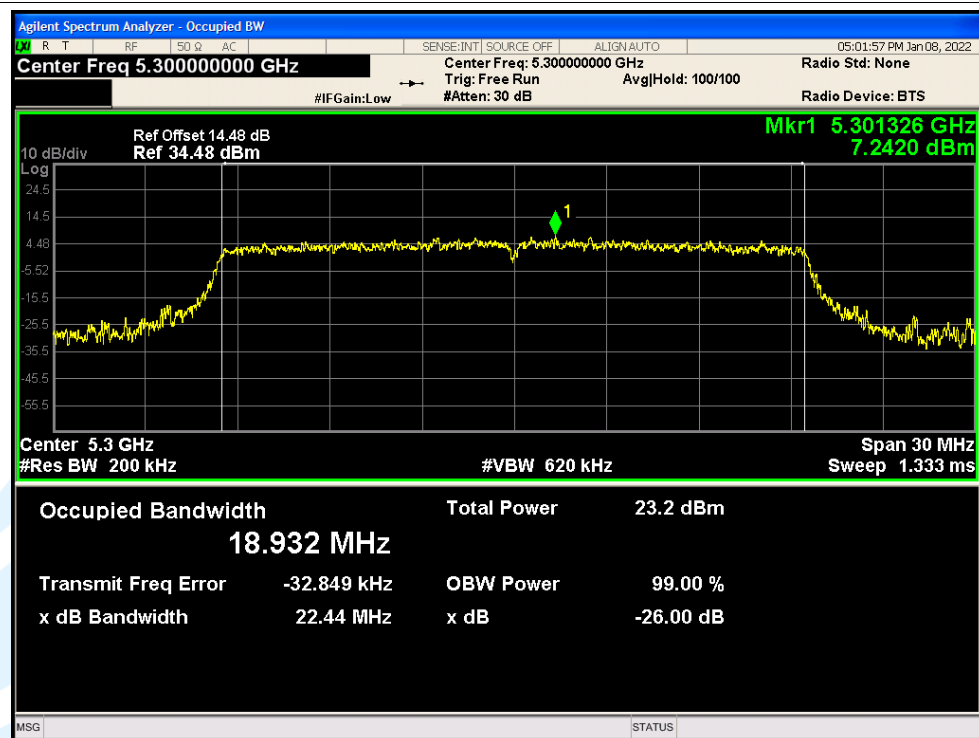


OBW NVNT ax20 5320MHz Ant2

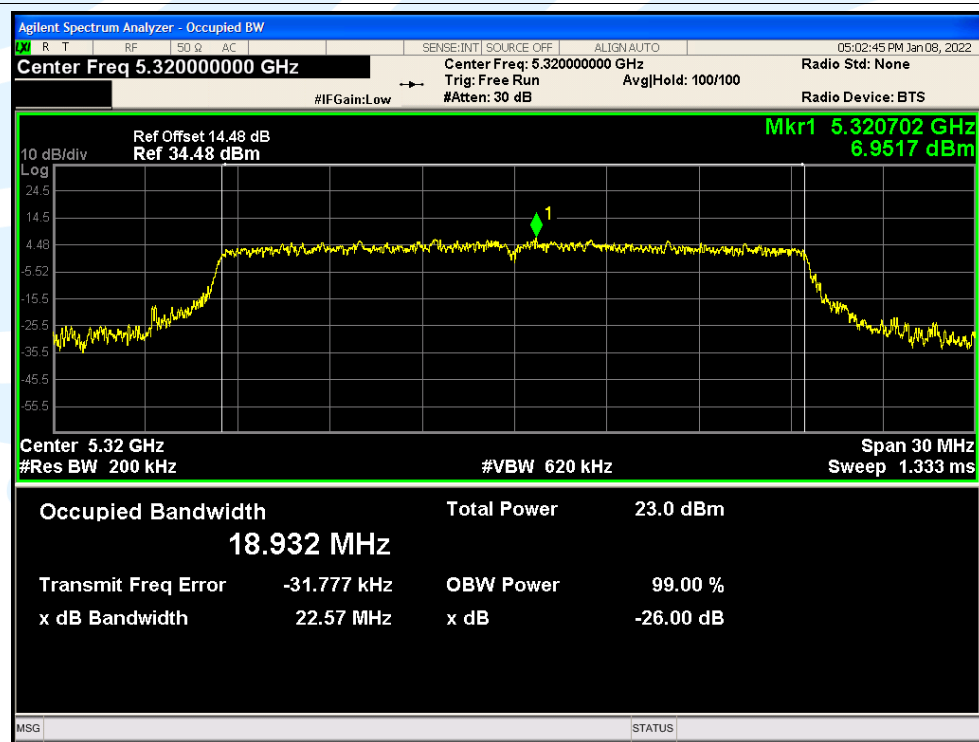


OBW NVNT ax20 5500MHz Ant2

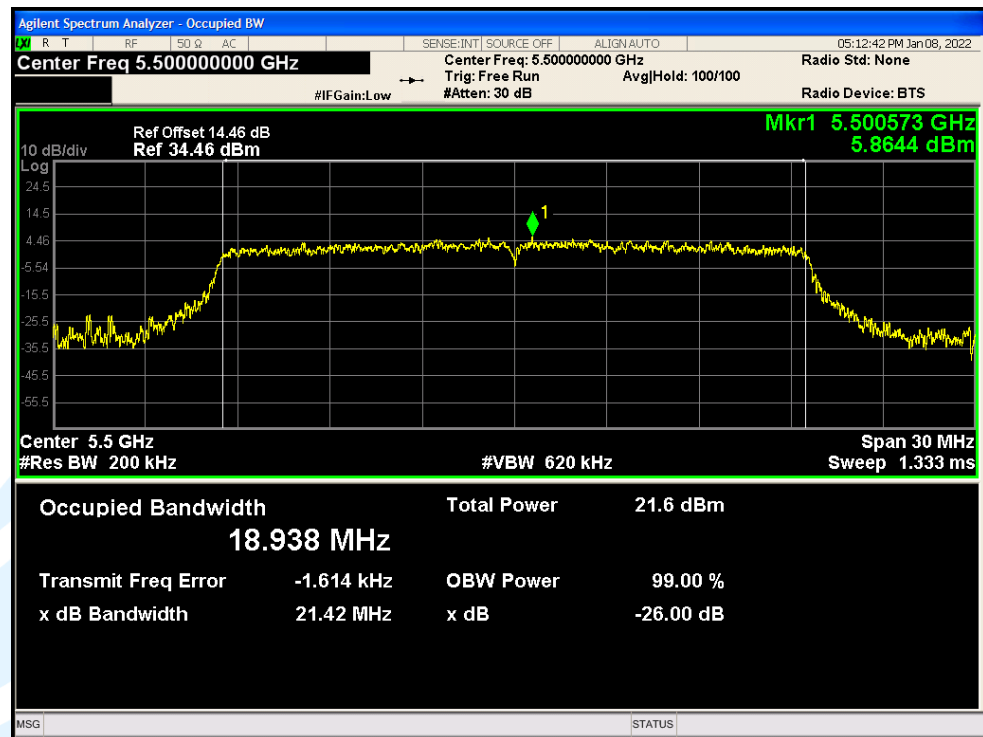


OBW NVNT ax20 5580MHz Ant2

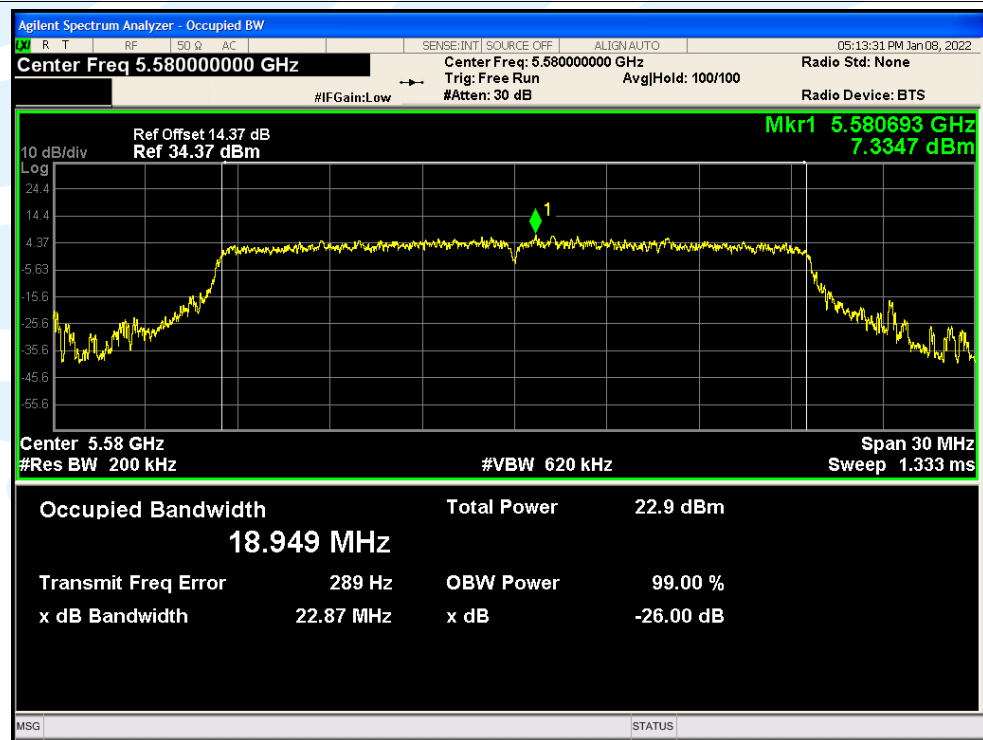


OBW NVNT ax20 5700MHz Ant2

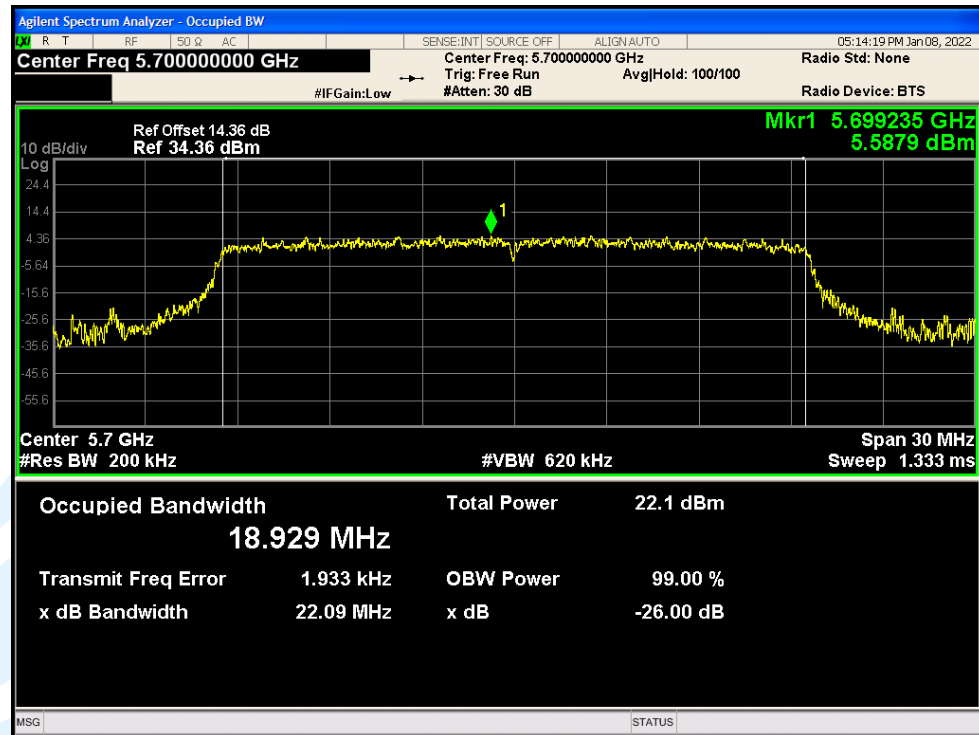


OBW NVNT ax20 5745MHz Ant2

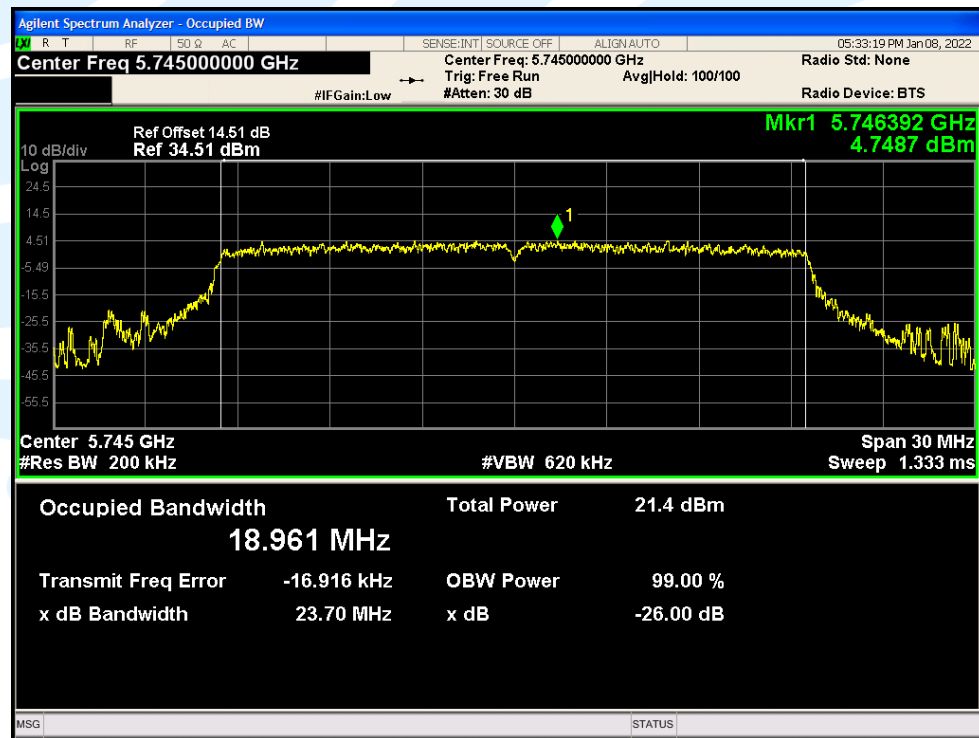


OBW NVNT ax20 5785MHz Ant2

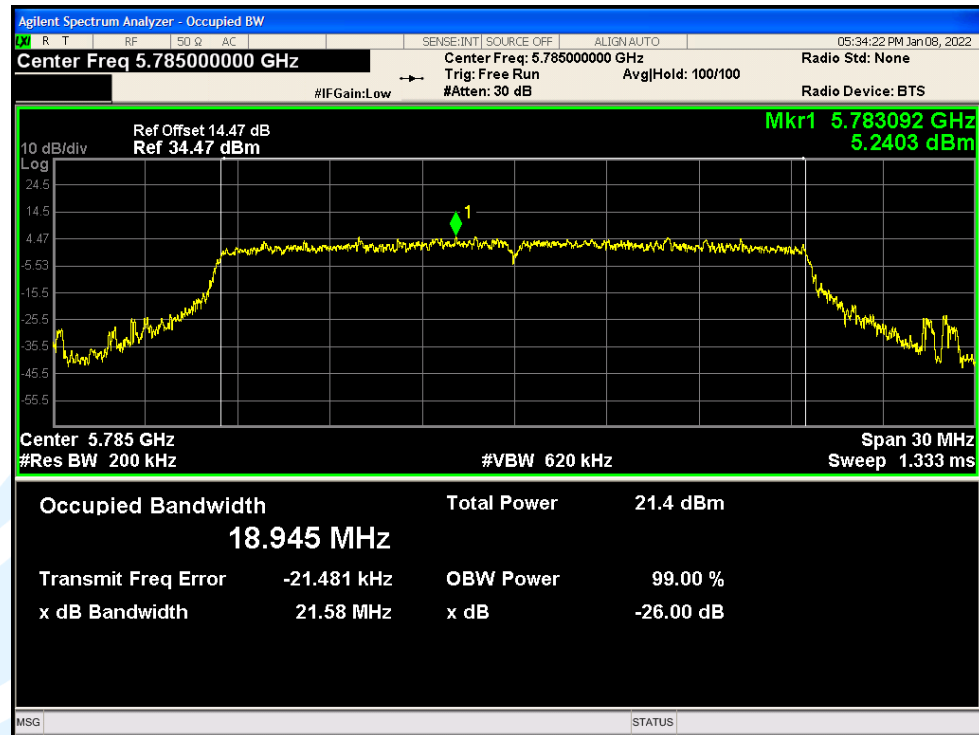


OBW NVNT ax20 5825MHz Ant2

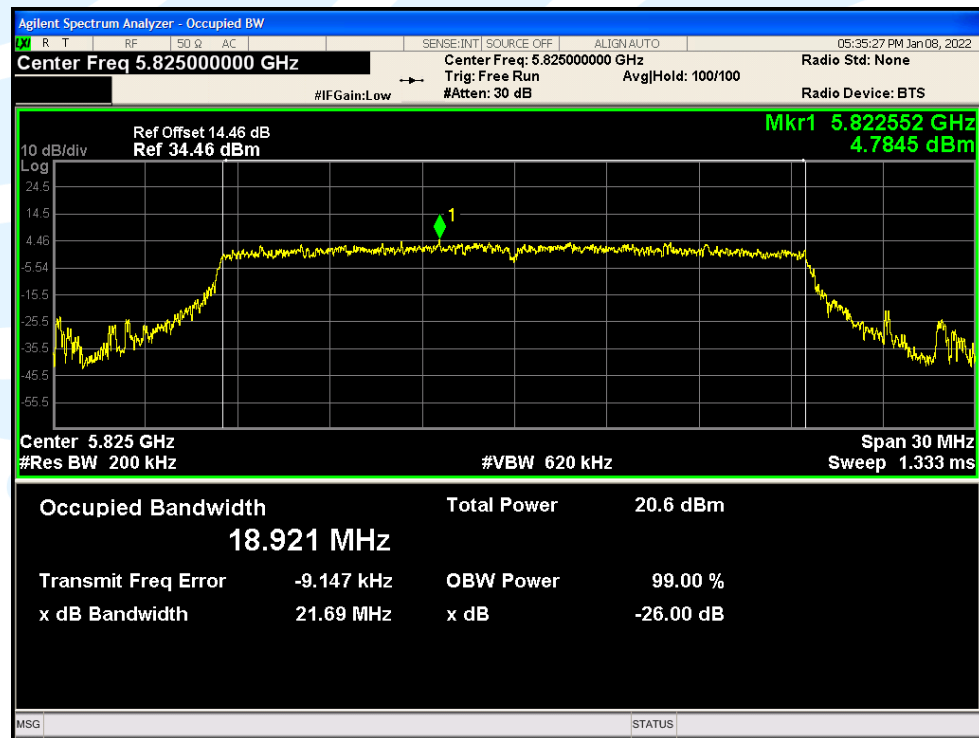


OBW NVNT ax40 5190MHz Ant1

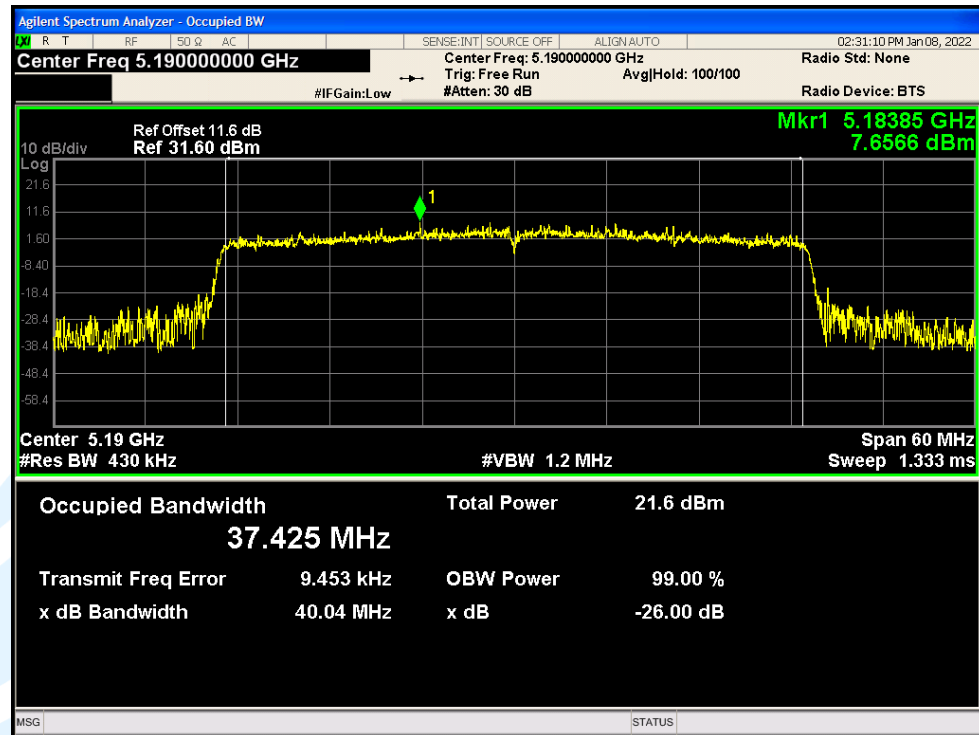


OBW NVNT ax40 5230MHz Ant1

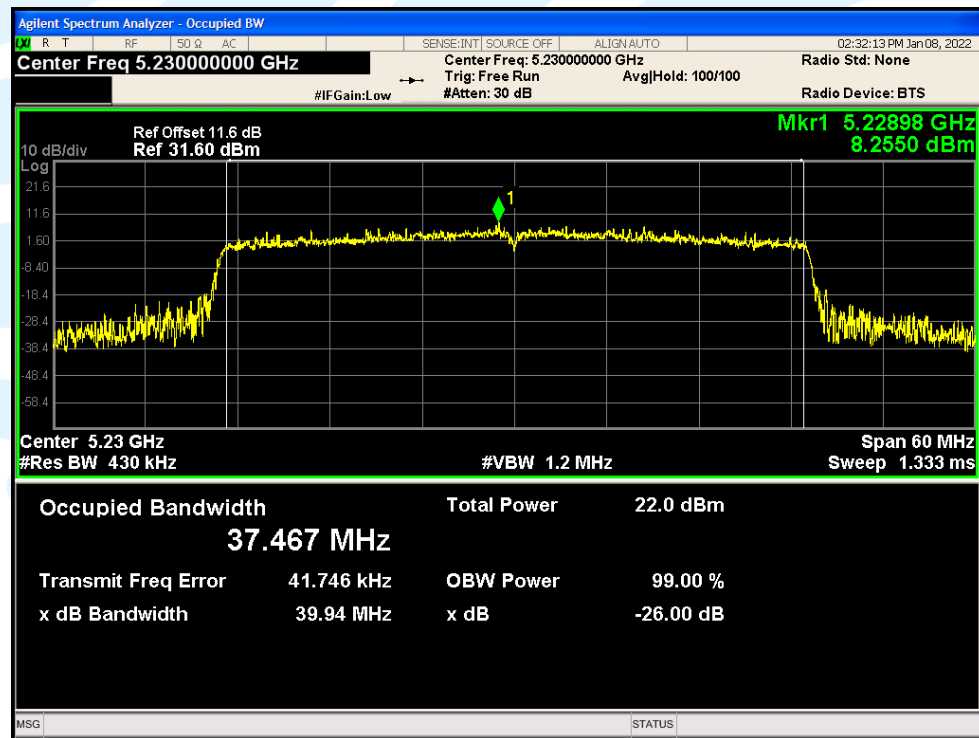


OBW NVNT ax40 5270MHz Ant1

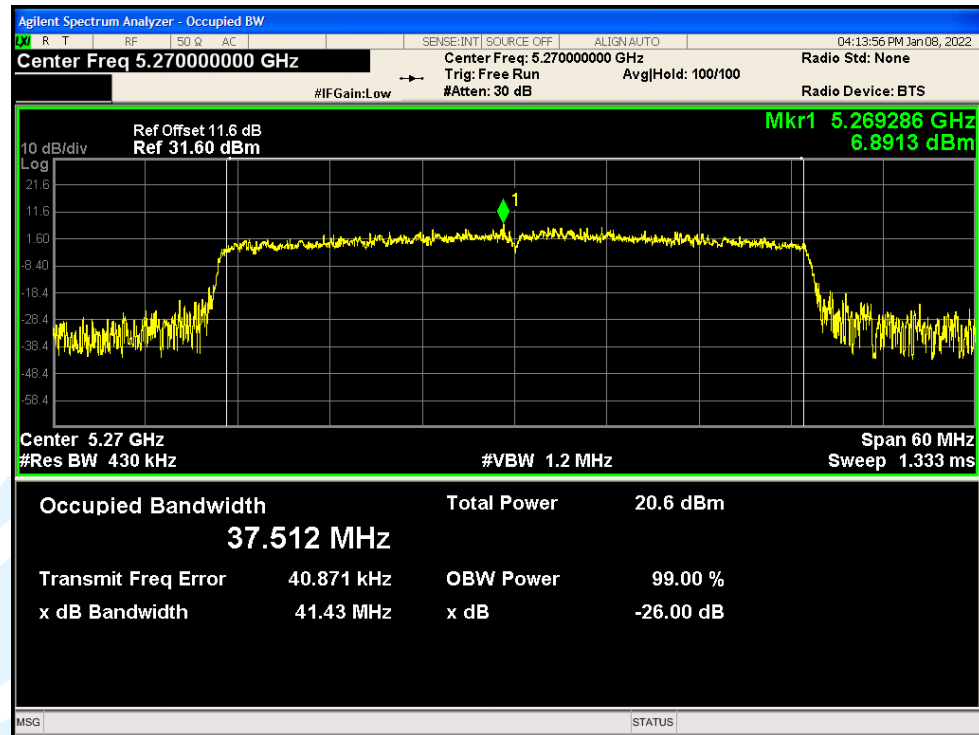


OBW NVNT ax40 5310MHz Ant1

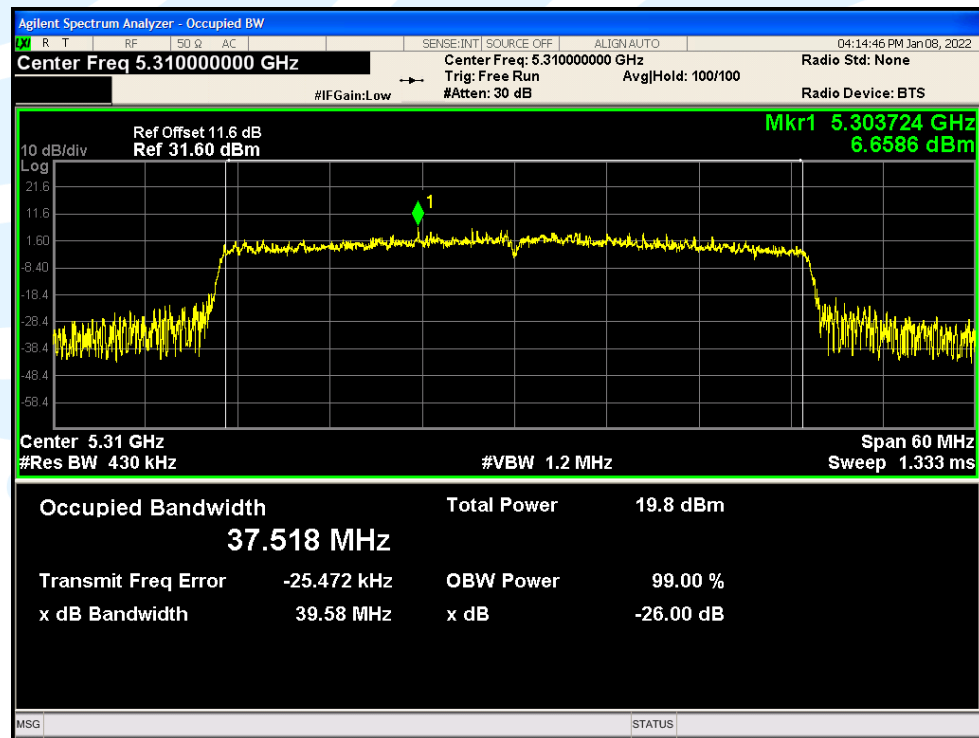


OBW NVNT ax40 5510MHz Ant1

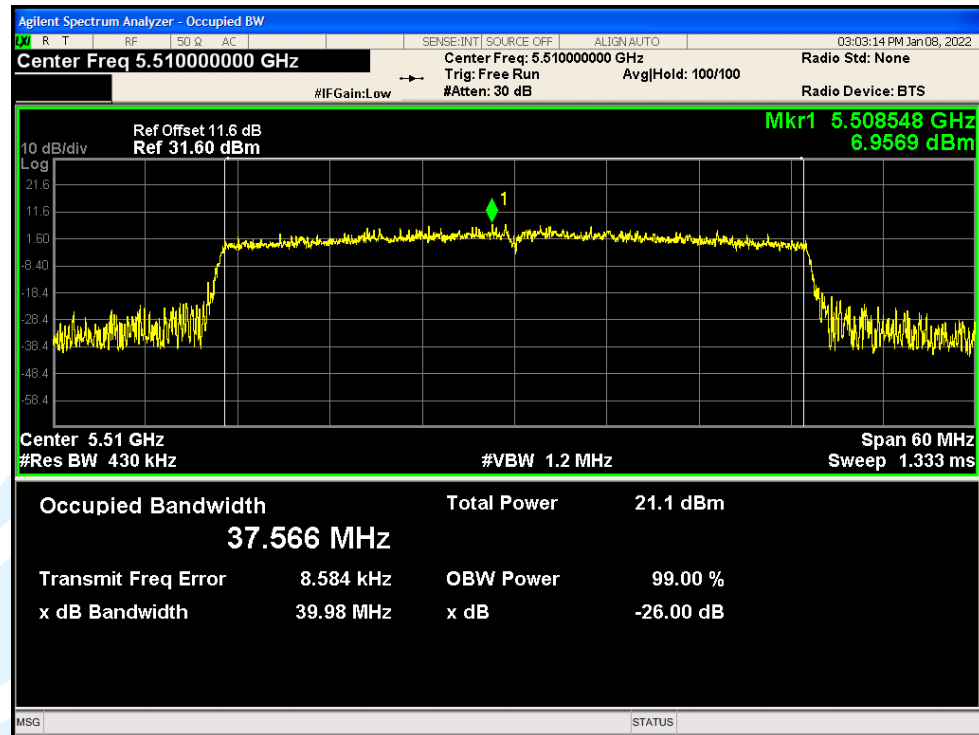


OBW NVNT ax40 5550MHz Ant1

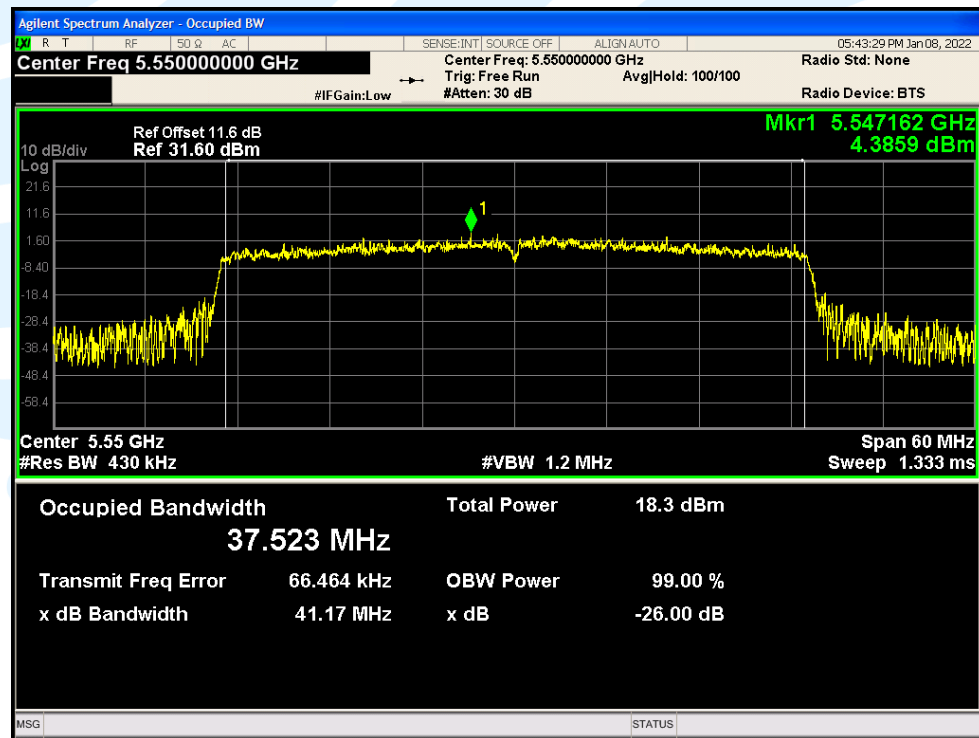


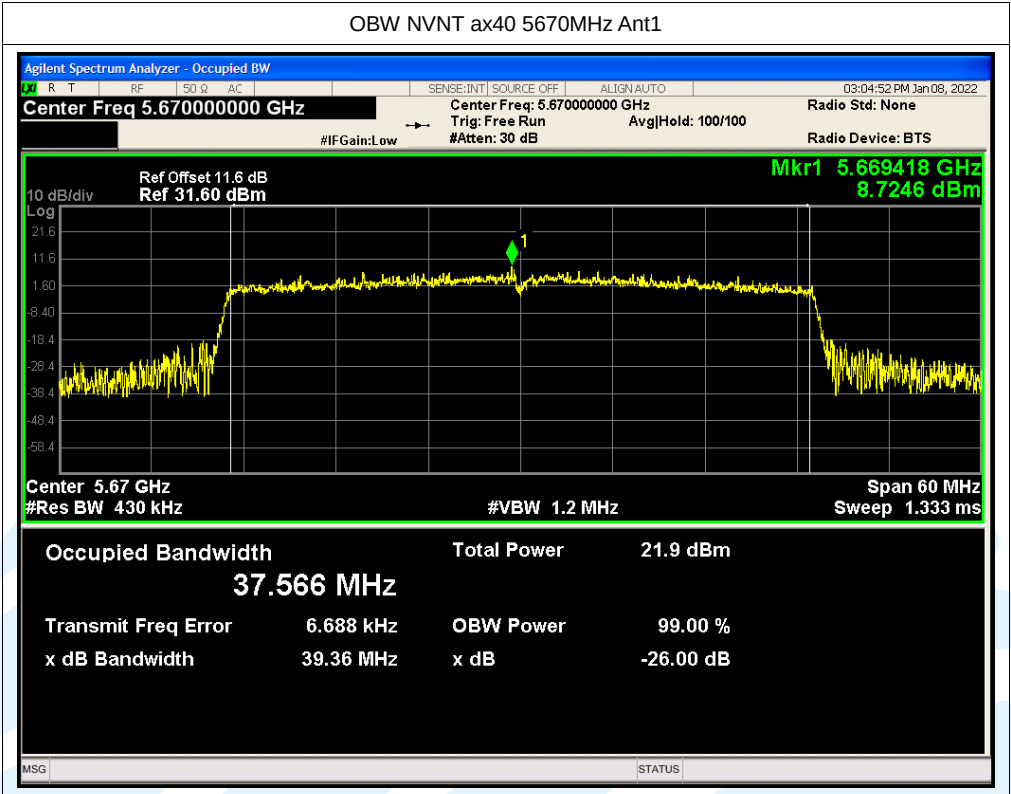


OBW NVNT ax40 5755MHz Ant1

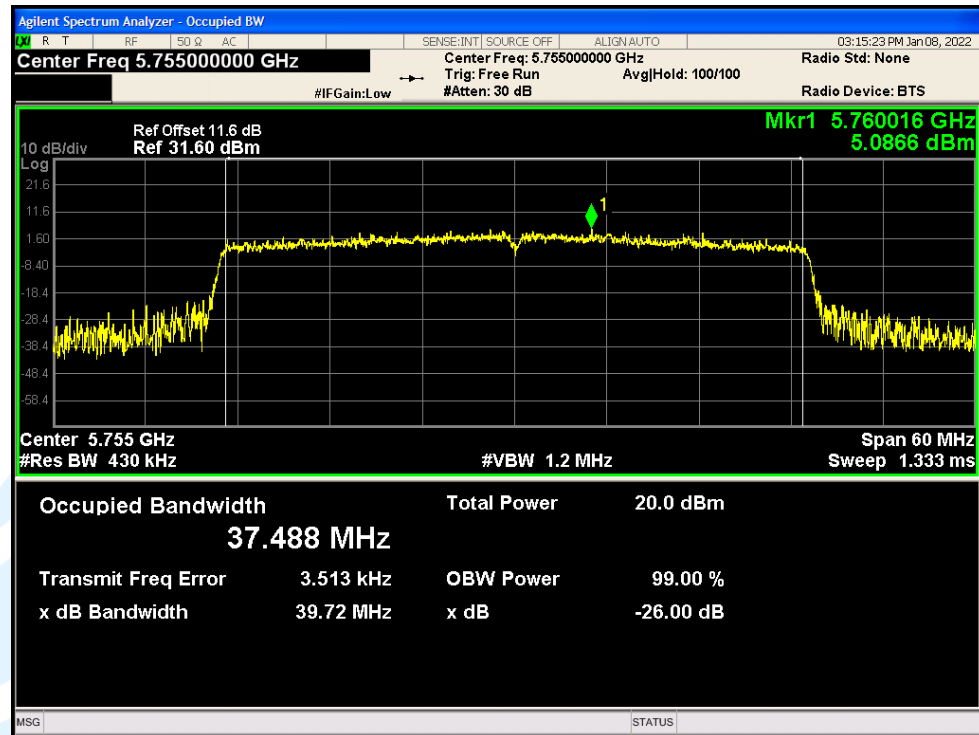


OBW NVNT ax40 5795MHz Ant1

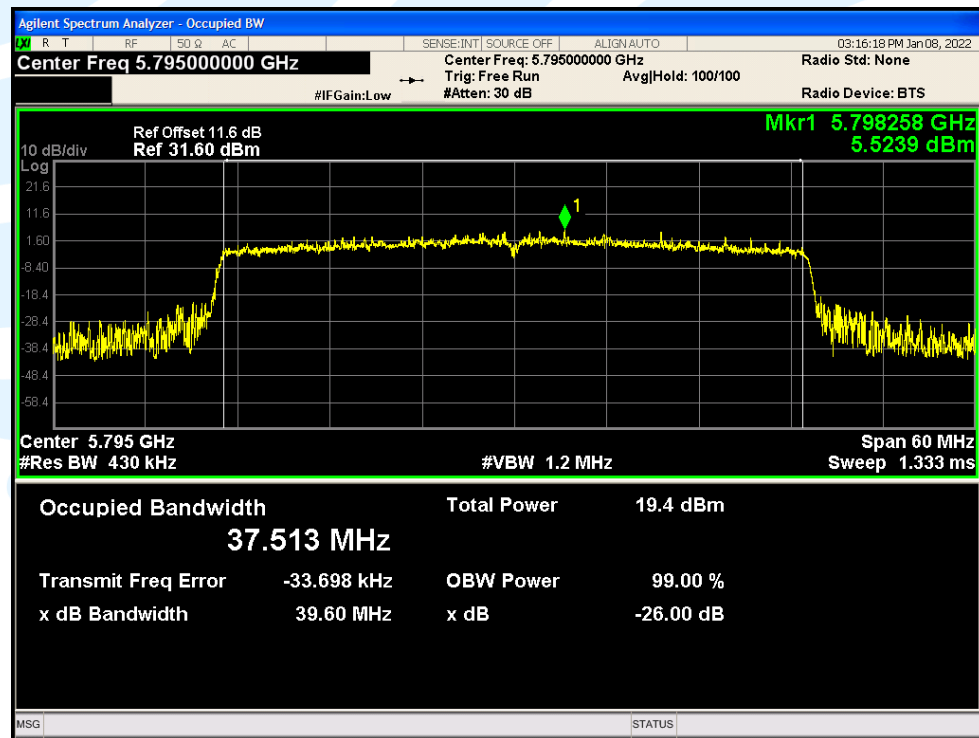


OBW NVNT ax40 5190MHz Ant2

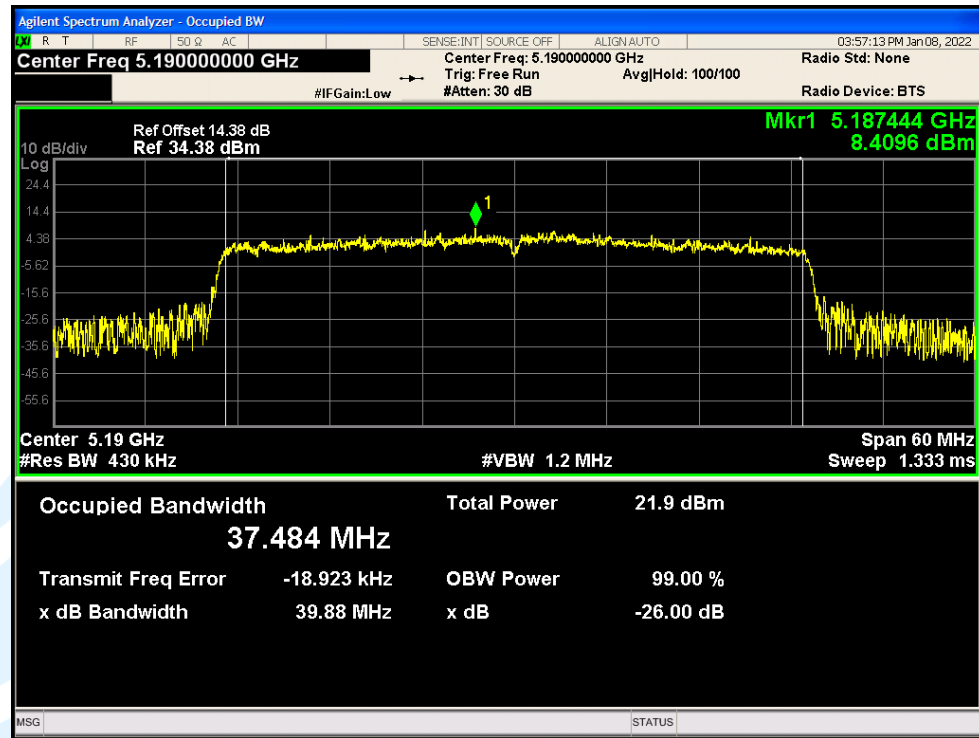


OBW NVNT ax40 5230MHz Ant2

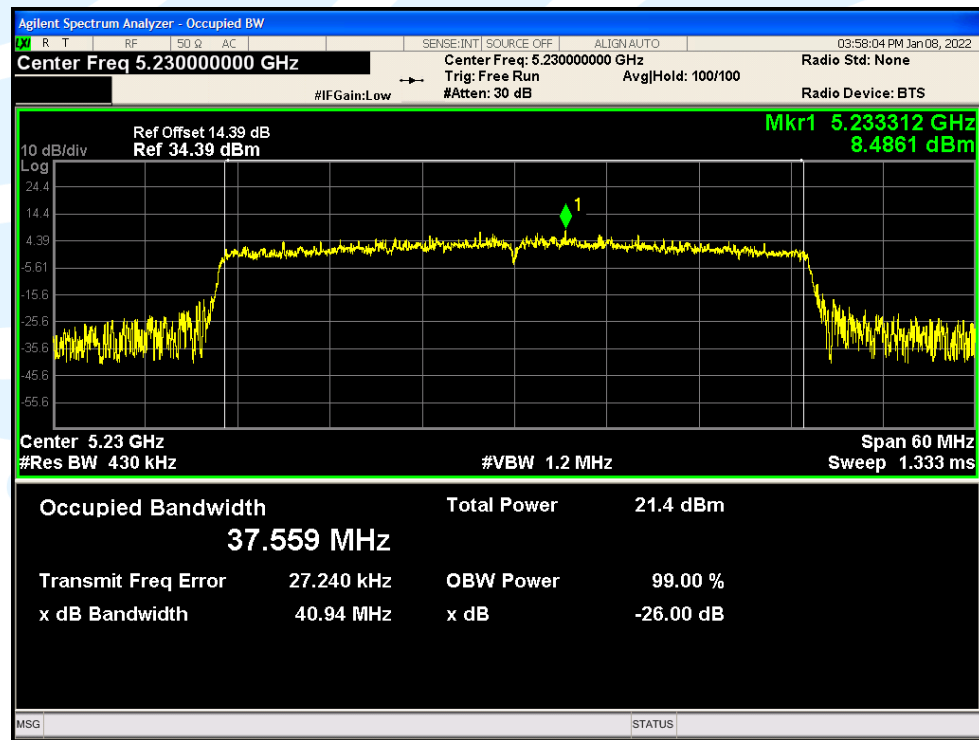


OBW NVNT ax40 5270MHz Ant2

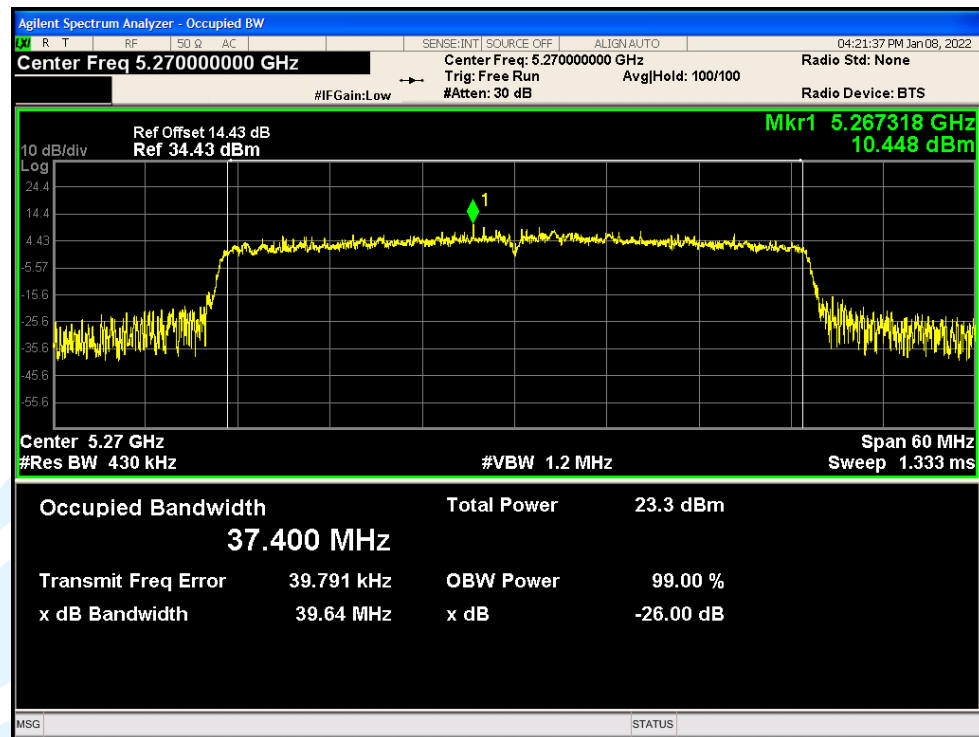


OBW NVNT ax40 5310MHz Ant2

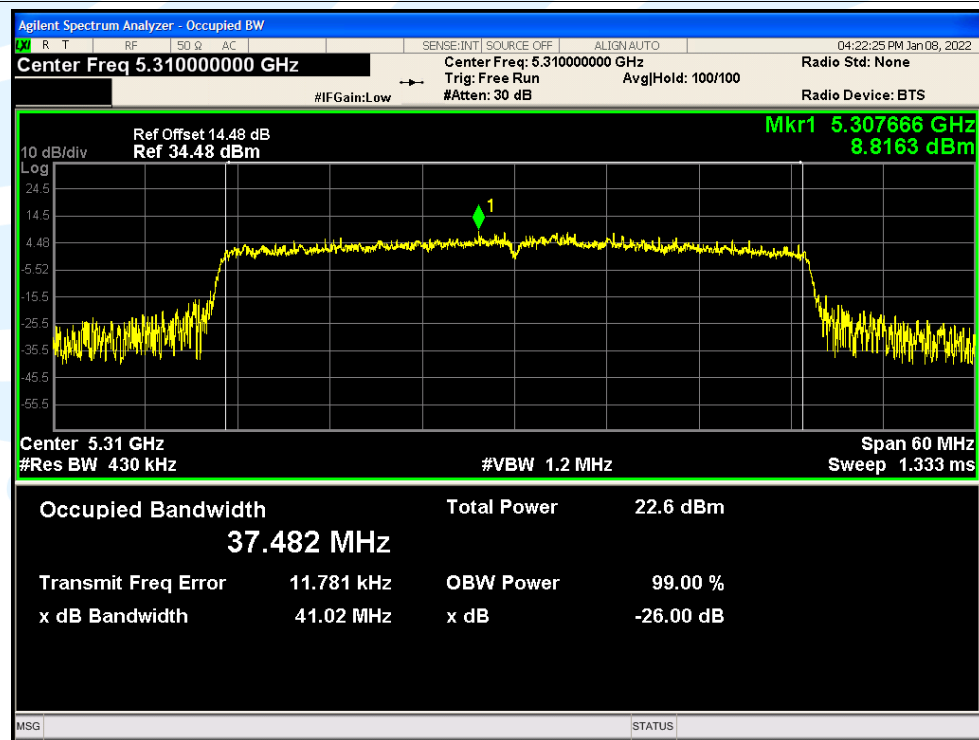


OBW NVNT ax40 5510MHz Ant2

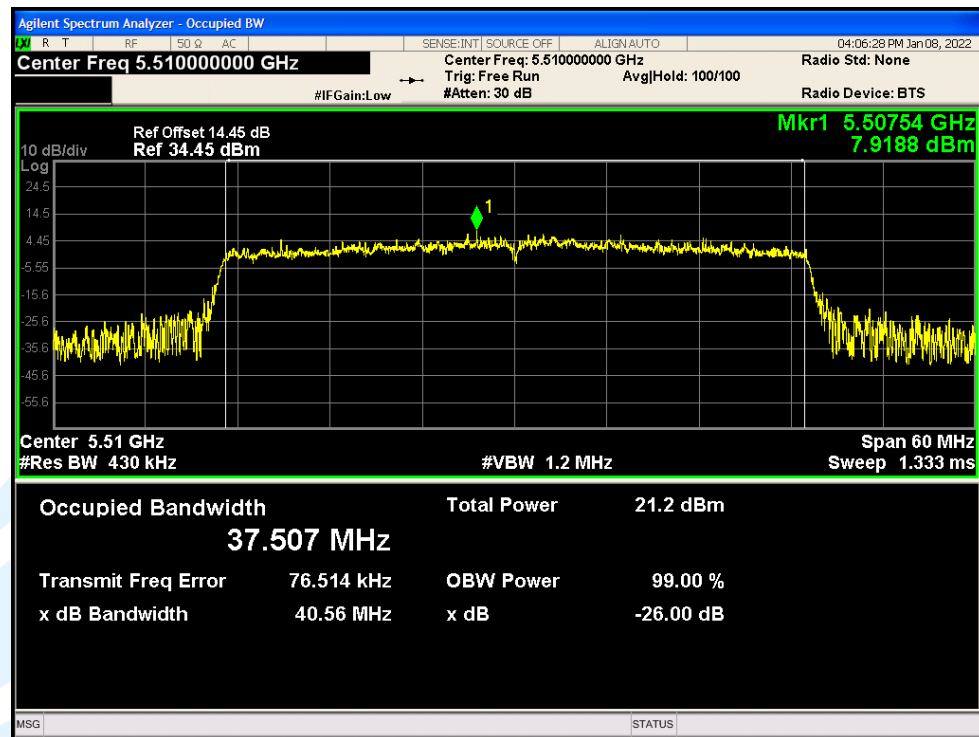


OBW NVNT ax40 5550MHz Ant2

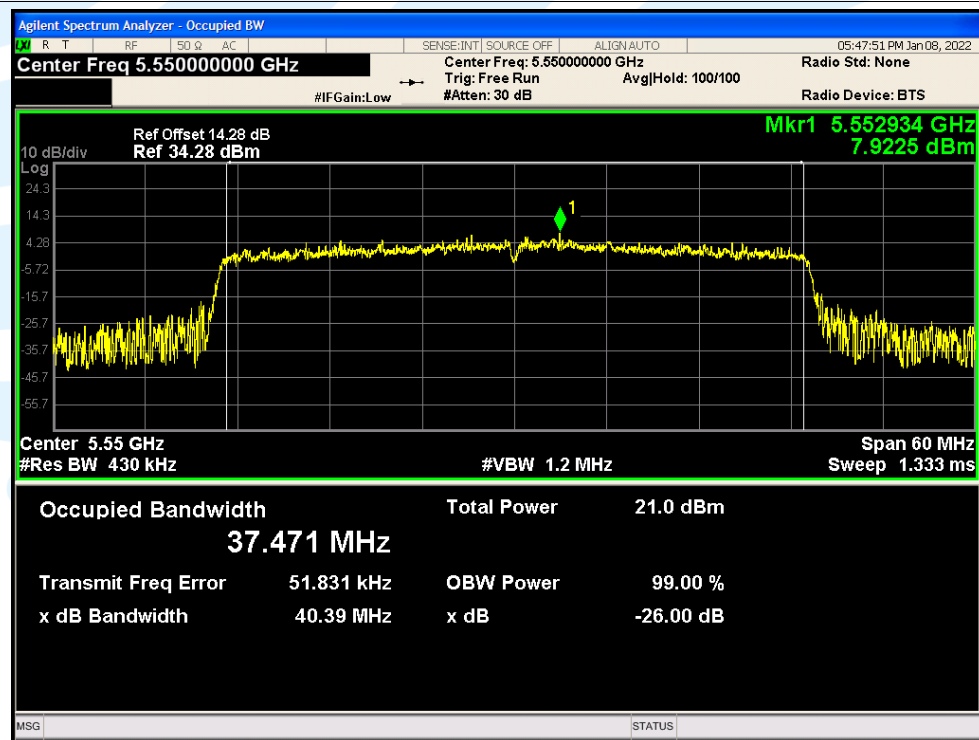


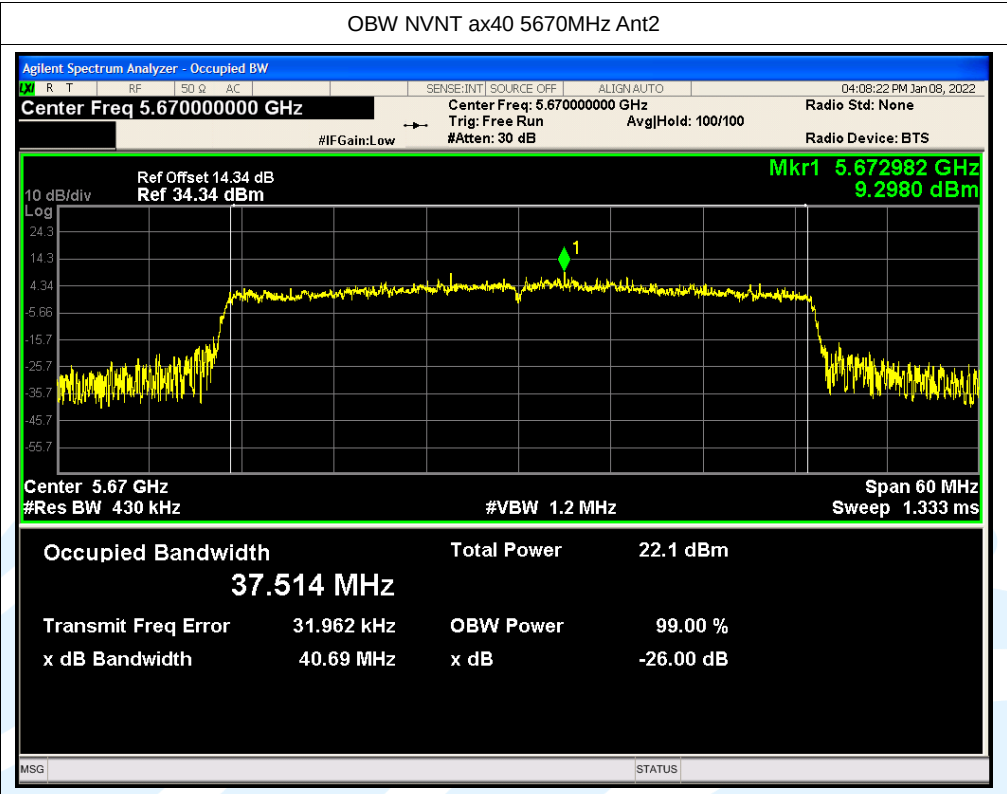


OBW NVNT ax40 5755MHz Ant2

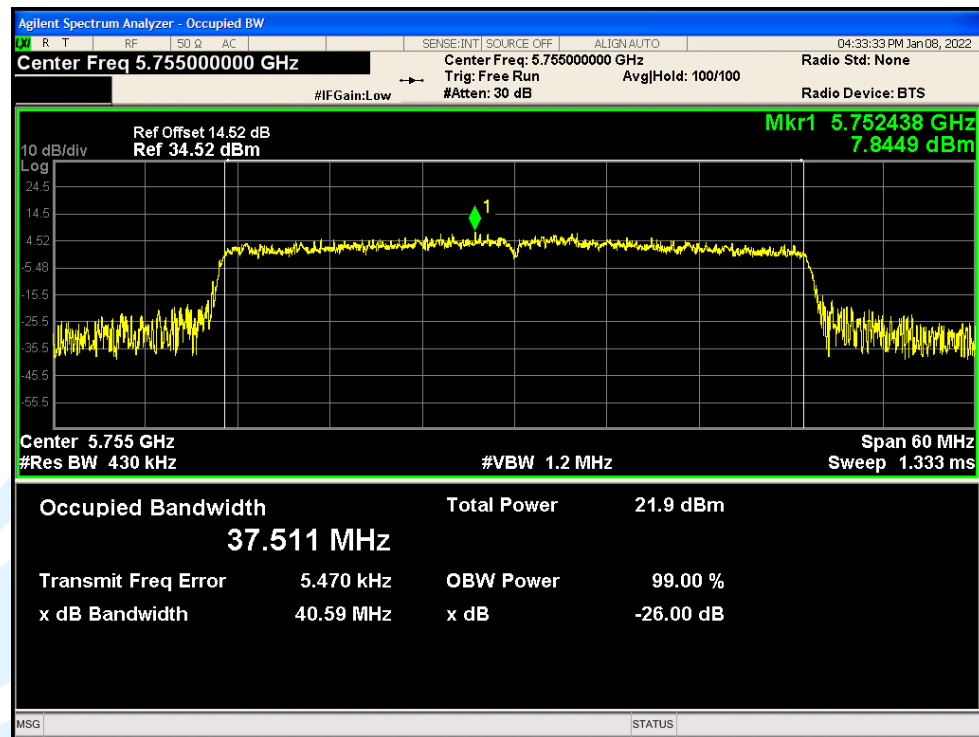


OBW NVNT ax40 5795MHz Ant2

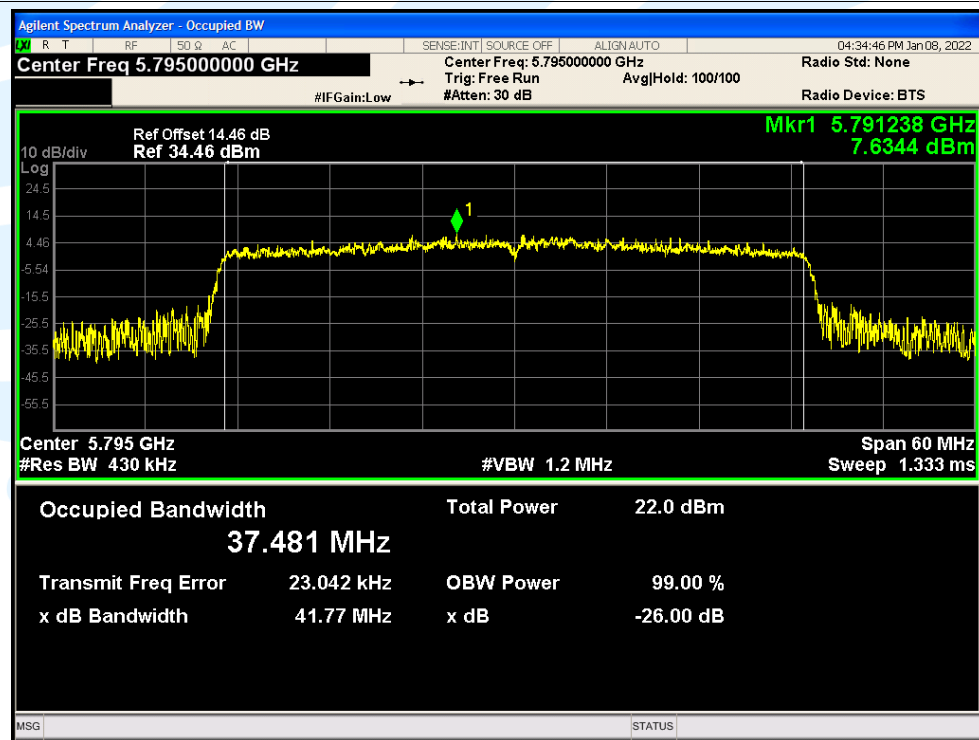


OBW NVNT ax80 5210MHz Ant1

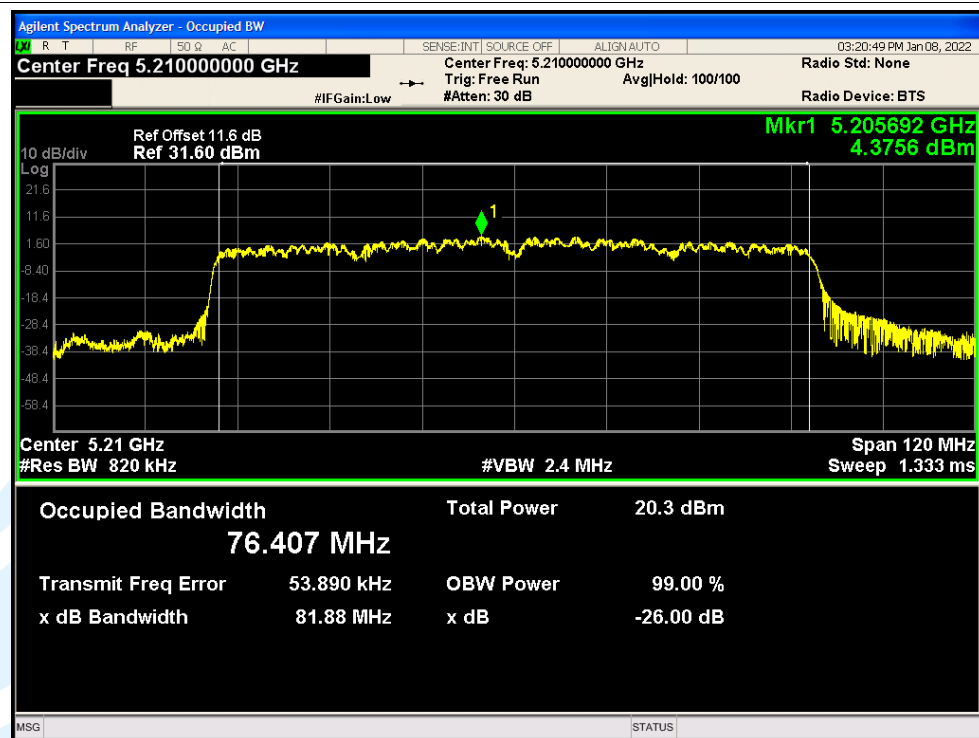


OBW NVNT ax80 5290MHz Ant1

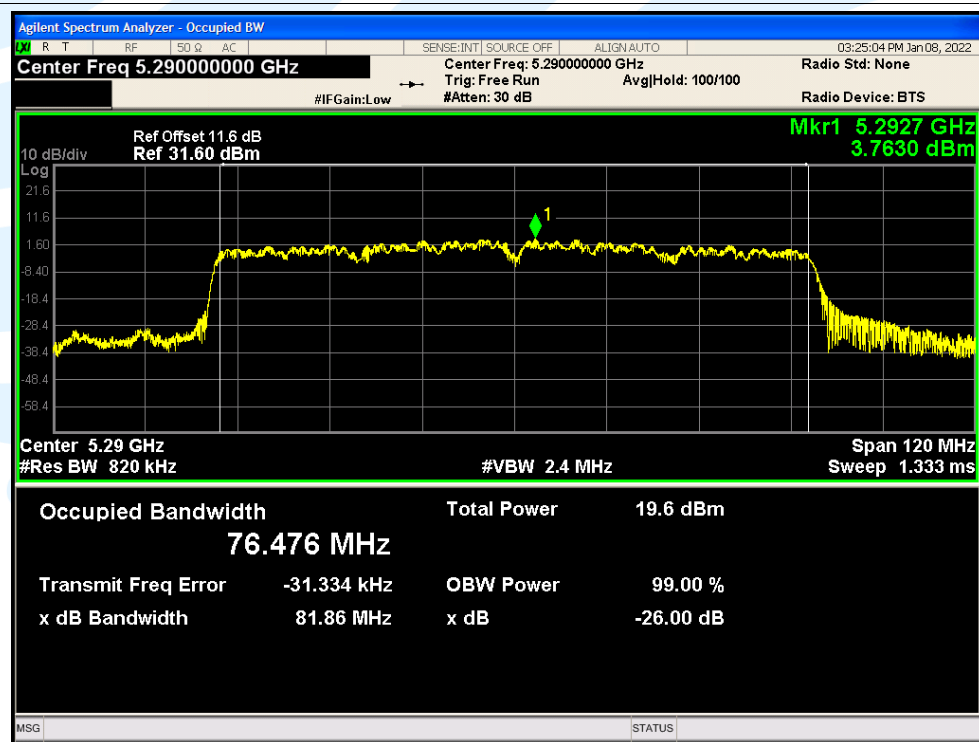


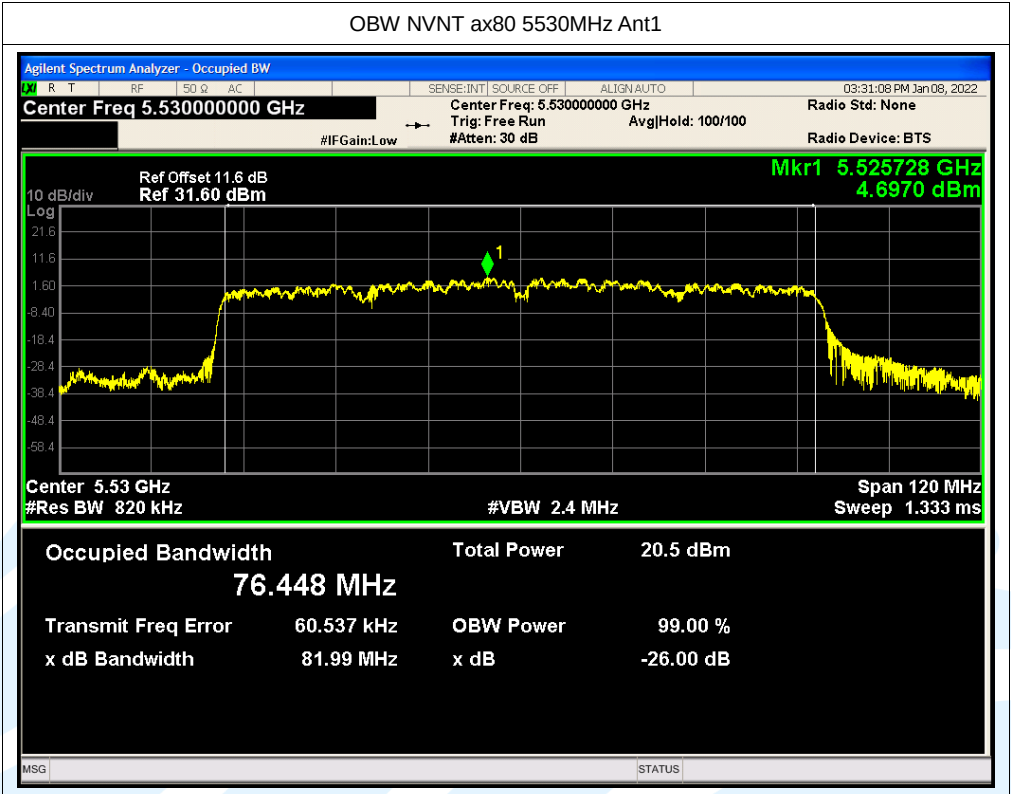


OBW NVNT ax80 5775MHz Ant1

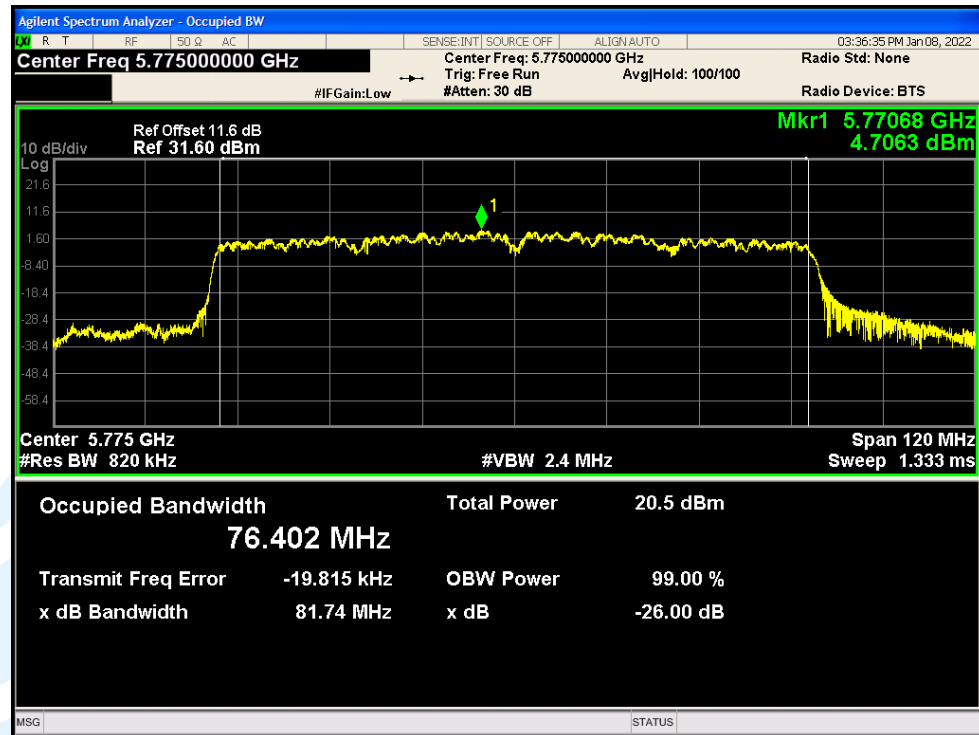


OBW NVNT ax80 5210MHz Ant2

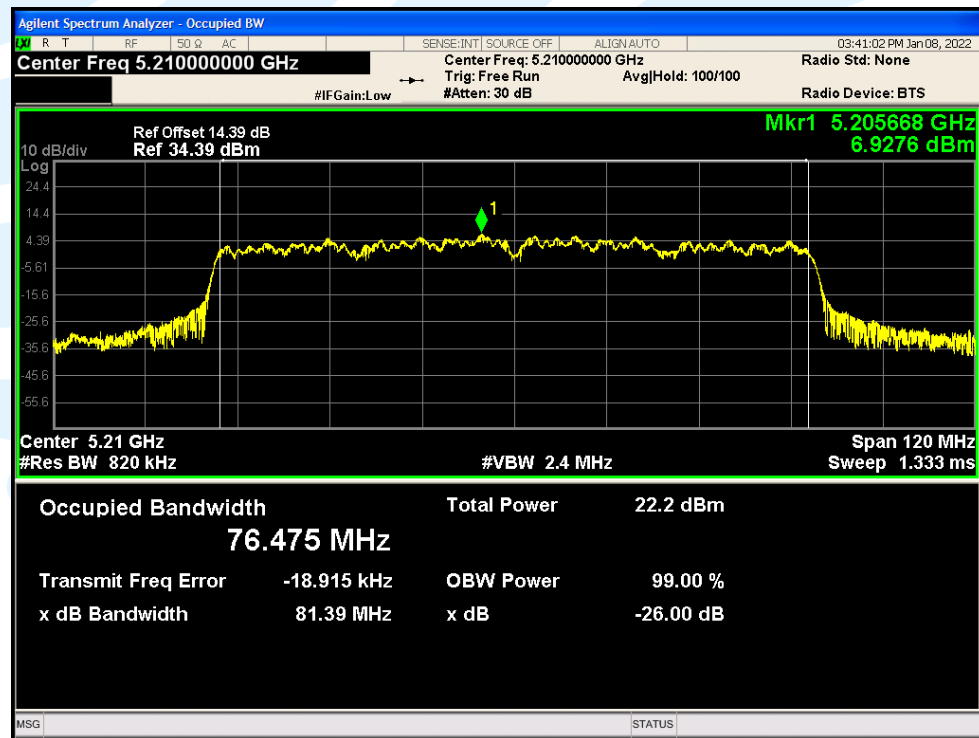


OBW NVNT ax80 5290MHz Ant2

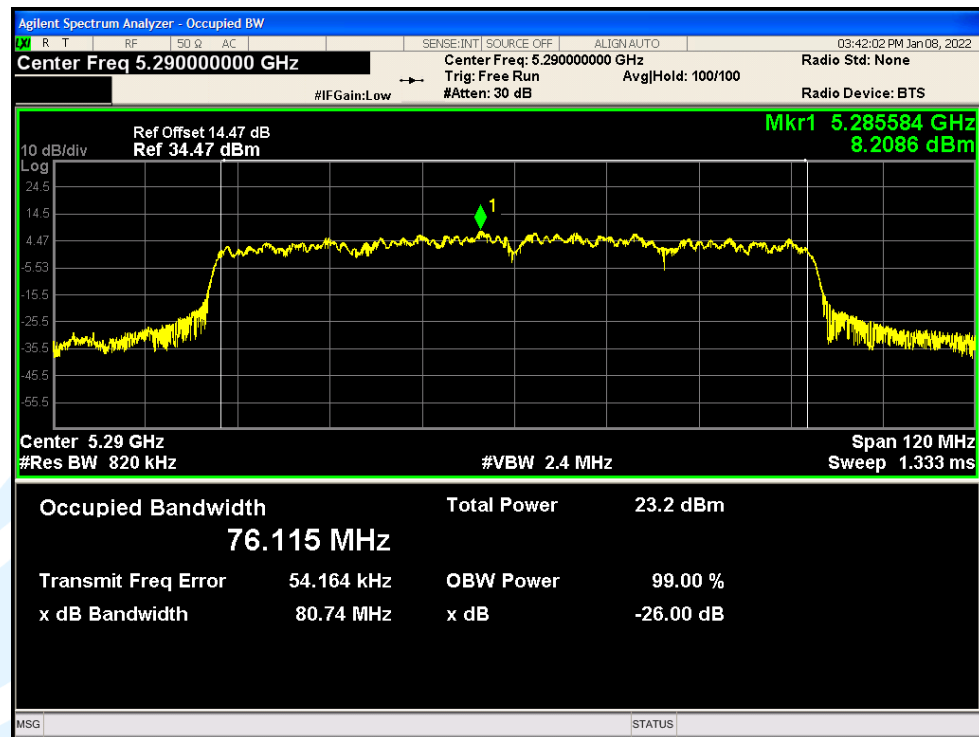

OBW NVNT ax80 5530MHz Ant2

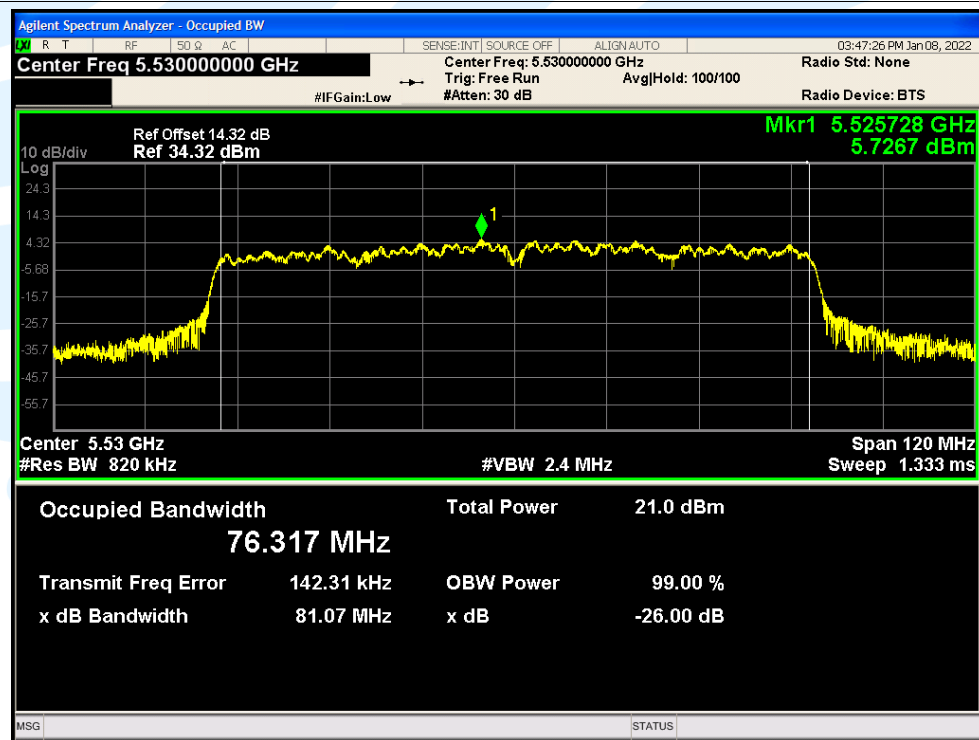

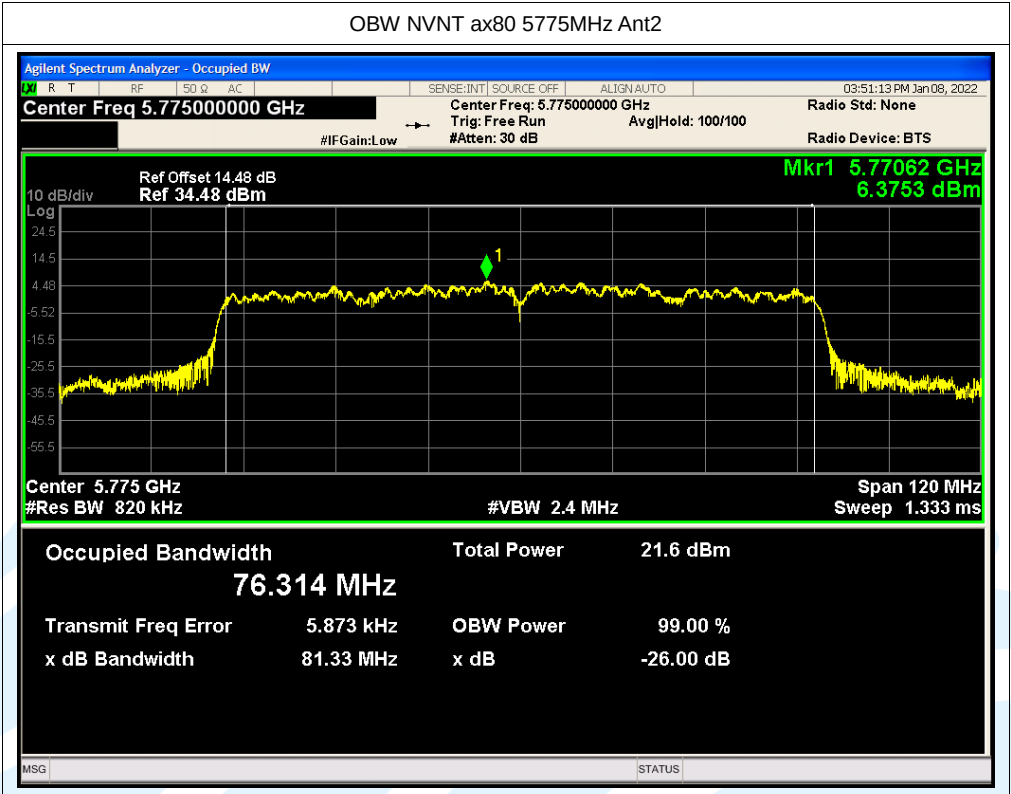

Maximum Power Spectral Density Level

Condition	Mode	Frequency (MHz)	Antenna	Conducted PSD (dBm/MHz or dBm/500kHz)	Duty Factor (dB)	Total PSD (dBm/MHz or dBm/500kHz)	Limit (dBm/MHz or dBm/500kHz)	Verdict
NVNT	a	5180	Ant1	-0.32	0.82	0.50	10	Pass
NVNT	a	5220	Ant1	-0.51	0.82	0.31	10	Pass
NVNT	a	5240	Ant1	-2.13	0.82	-1.31	10	Pass
NVNT	a	5260	Ant1	-2.22	0.82	-1.40	11	Pass
NVNT	a	5300	Ant1	-2.81	0.82	-1.99	11	Pass
NVNT	a	5320	Ant1	-2.67	0.82	-1.85	11	Pass
NVNT	a	5500	Ant1	-3.41	0.82	-2.59	11	Pass
NVNT	a	5580	Ant1	-2.41	0.82	-1.59	11	Pass
NVNT	a	5700	Ant1	-1.22	0.82	-0.40	11	Pass
NVNT	a	5745	Ant1	-5.96	0.82	-5.14	30	Pass
NVNT	a	5785	Ant1	-6.56	0.82	-5.74	30	Pass
NVNT	a	5825	Ant1	-6.05	0.82	-5.23	30	Pass
NVNT	a	5180	Ant2	2.51	0.82	3.33	10	Pass
NVNT	a	5220	Ant2	0.38	0.82	1.20	10	Pass
NVNT	a	5240	Ant2	-0.56	0.82	0.26	10	Pass
NVNT	a	5260	Ant2	2.11	0.82	2.93	11	Pass
NVNT	a	5300	Ant2	1.62	0.82	2.44	11	Pass
NVNT	a	5320	Ant2	0.52	0.82	1.34	11	Pass
NVNT	a	5500	Ant2	-0.65	0.82	0.17	11	Pass
NVNT	a	5580	Ant2	2.35	0.82	3.17	11	Pass
NVNT	a	5700	Ant2	1.51	0.82	2.33	11	Pass
NVNT	a	5745	Ant2	-3.48	0.82	-2.66	30	Pass
NVNT	a	5785	Ant2	-1.87	0.82	-1.05	30	Pass
NVNT	a	5825	Ant2	-4.51	0.82	-3.69	30	Pass
NVNT	n20	5180	Ant1	-8.91	1.54	-7.37	10	Pass
NVNT	n20	5220	Ant1	-6.42	1.54	-4.88	10	Pass
NVNT	n20	5240	Ant1	-7.12	1.54	-5.58	10	Pass
NVNT	n20	5260	Ant1	-4.5	1.54	-2.96	11	Pass
NVNT	n20	5300	Ant1	-7.94	1.54	-6.40	11	Pass
NVNT	n20	5320	Ant1	-6.74	1.54	-5.20	11	Pass
NVNT	n20	5500	Ant1	-6.88	1.54	-5.34	11	Pass
NVNT	n20	5580	Ant1	-7.22	1.54	-5.68	11	Pass
NVNT	n20	5700	Ant1	-9.69	1.54	-8.15	11	Pass
NVNT	n20	5745	Ant1	-11.14	1.54	-9.60	30	Pass
NVNT	n20	5785	Ant1	-13.72	1.54	-12.18	30	Pass
NVNT	n20	5825	Ant1	-13.36	1.54	-11.82	30	Pass
NVNT	n20	5180	Ant2	-7.7	1.54	-6.16	10	Pass
NVNT	n20	5220	Ant2	-4.85	1.54	-3.31	10	Pass

NVNT	n20	5240	Ant2	-4.5	1.54	-2.96	10	Pass
NVNT	n20	5260	Ant2	-5.38	1.54	-3.84	11	Pass
NVNT	n20	5300	Ant2	-4.31	1.54	-2.77	11	Pass
NVNT	n20	5320	Ant2	-4.04	1.54	-2.50	11	Pass
NVNT	n20	5500	Ant2	-7.56	1.54	-6.02	11	Pass
NVNT	n20	5580	Ant2	-6.75	1.54	-5.21	11	Pass
NVNT	n20	5700	Ant2	-8.09	1.54	-6.55	11	Pass
NVNT	n20	5745	Ant2	-10.57	1.54	-9.03	30	Pass
NVNT	n20	5785	Ant2	-10.54	1.54	-9.00	30	Pass
NVNT	n20	5825	Ant2	-12.58	1.54	-11.04	30	Pass
NVNT	n20	5180	Ant1+ Ant2	-	-	4.60	7.69	Pass
NVNT	n20	5220	Ant1+ Ant2	-	-	7.30	7.69	Pass
NVNT	n20	5240	Ant1+ Ant2	-	-	7.24	7.69	Pass
NVNT	n20	5260	Ant1+ Ant2	-	-	-0.37	9.59	Pass
NVNT	n20	5300	Ant1+ Ant2	-	-	-1.21	9.59	Pass
NVNT	n20	5320	Ant1+ Ant2	-	-	-0.63	9.59	Pass
NVNT	n20	5500	Ant1+ Ant2	-	-	-2.66	10.99	Pass
NVNT	n20	5580	Ant1+ Ant2	-	-	-2.43	10.99	Pass
NVNT	n20	5700	Ant1+ Ant2	-	-	-4.27	10.99	Pass
NVNT	n20	5745	Ant1+ Ant2	-	-	-6.30	29.79	Pass
NVNT	n20	5785	Ant1+ Ant2	-	-	-7.29	29.79	Pass
NVNT	n20	5825	Ant1+ Ant2	-	-	-8.40	29.79	Pass
NVNT	n40	5190	Ant1	-15.26	2.63	-12.63	10	Pass
NVNT	n40	5230	Ant1	-16.88	2.63	-14.25	10	Pass
NVNT	n40	5270	Ant1	-16.94	2.63	-14.31	11	Pass
NVNT	n40	5310	Ant1	-19.04	2.63	-16.41	11	Pass
NVNT	n40	5510	Ant1	-15.42	2.63	-12.79	11	Pass
NVNT	n40	5550	Ant1	-18.84	2.63	-16.21	11	Pass
NVNT	n40	5670	Ant1	-14.42	2.63	-11.79	11	Pass
NVNT	n40	5755	Ant1	-5.94	2.63	-3.31	30	Pass
NVNT	n40	5795	Ant1	-21.14	2.63	-18.51	30	Pass
NVNT	n40	5190	Ant2	-15.37	2.63	-12.74	10	Pass
NVNT	n40	5230	Ant2	-15.53	2.63	-12.90	10	Pass
NVNT	n40	5270	Ant2	-12.26	2.63	-9.63	11	Pass
NVNT	n40	5310	Ant2	-15.7	2.63	-13.07	11	Pass
NVNT	n40	5510	Ant2	-15.89	2.63	-13.26	11	Pass
NVNT	n40	5550	Ant2	-15.58	2.63	-12.95	11	Pass
NVNT	n40	5670	Ant2	-14.74	2.63	-12.11	11	Pass
NVNT	n40	5755	Ant2	-17.98	2.63	-15.35	30	Pass
NVNT	n40	5795	Ant2	-19.27	2.63	-16.64	30	Pass
NVNT	n40	5190	Ant1+ Ant2	-	-	-1.36	7.69	Pass
NVNT	n40	5230	Ant1+ Ant2	-	-	-2.20	7.69	Pass
NVNT	n40	5270	Ant1+ Ant2	-	-	-8.36	9.59	Pass
NVNT	n40	5310	Ant1+ Ant2	-	-	-11.42	9.59	Pass


NVNT	n40	5510	Ant1+ Ant2	-	-	-10.01	10.99	Pass
NVNT	n40	5550	Ant1+ Ant2	-	-	-11.27	10.99	Pass
NVNT	n40	5670	Ant1+ Ant2	-	-	-8.94	10.99	Pass
NVNT	n40	5755	Ant1+ Ant2	-	-	-3.05	29.79	Pass
NVNT	n40	5795	Ant1+ Ant2	-	-	-14.46	29.79	Pass
NVNT	ac20	5180	Ant1	-5.25	0.91	-4.34	10	Pass
NVNT	ac20	5220	Ant1	-4.47	0.91	-3.56	10	Pass
NVNT	ac20	5240	Ant1	-5.05	0.91	-4.14	10	Pass
NVNT	ac20	5260	Ant1	-4.02	0.91	-3.11	11	Pass
NVNT	ac20	5300	Ant1	-4.29	0.91	-3.38	11	Pass
NVNT	ac20	5320	Ant1	-3.01	0.91	-2.10	11	Pass
NVNT	ac20	5500	Ant1	-2.92	0.91	-2.01	11	Pass
NVNT	ac20	5580	Ant1	-2.14	0.91	-1.23	11	Pass
NVNT	ac20	5700	Ant1	-2.07	0.91	-1.16	11	Pass
NVNT	ac20	5745	Ant1	-7.44	0.91	-6.53	30	Pass
NVNT	ac20	5785	Ant1	-9.81	0.91	-8.90	30	Pass
NVNT	ac20	5825	Ant1	-9.37	0.91	-8.46	30	Pass
NVNT	ac20	5180	Ant2	-4.33	0.91	-3.42	10	Pass
NVNT	ac20	5220	Ant2	-5.01	0.91	-4.10	10	Pass
NVNT	ac20	5240	Ant2	-5.68	0.91	-4.77	10	Pass
NVNT	ac20	5260	Ant2	-0.83	0.91	0.08	11	Pass
NVNT	ac20	5300	Ant2	1.31	0.91	2.22	11	Pass
NVNT	ac20	5320	Ant2	-1.54	0.91	-0.63	11	Pass
NVNT	ac20	5500	Ant2	-3.26	0.91	-2.35	11	Pass
NVNT	ac20	5580	Ant2	-1.82	0.91	-0.91	11	Pass
NVNT	ac20	5700	Ant2	-1.85	0.91	-0.94	11	Pass
NVNT	ac20	5745	Ant2	-4.4	0.91	-3.49	30	Pass
NVNT	ac20	5785	Ant2	-3.67	0.91	-2.76	30	Pass
NVNT	ac20	5825	Ant2	-3.96	0.91	-3.05	30	Pass
NVNT	ac20	5180	Ant1+ Ant2	-	-	7.47	7.69	Pass
NVNT	ac20	5220	Ant1+ Ant2	-	-	7.50	7.69	Pass
NVNT	ac20	5240	Ant1+ Ant2	-	-	6.87	7.69	Pass
NVNT	ac20	5260	Ant1+ Ant2	-	-	1.78	9.59	Pass
NVNT	ac20	5300	Ant1+ Ant2	-	-	3.28	9.59	Pass
NVNT	ac20	5320	Ant1+ Ant2	-	-	1.71	9.59	Pass
NVNT	ac20	5500	Ant1+ Ant2	-	-	0.83	10.99	Pass
NVNT	ac20	5580	Ant1+ Ant2	-	-	1.94	10.99	Pass
NVNT	ac20	5700	Ant1+ Ant2	-	-	1.96	10.99	Pass
NVNT	ac20	5745	Ant1+ Ant2	-	-	-1.74	29.79	Pass
NVNT	ac20	5785	Ant1+ Ant2	-	-	-1.81	29.79	Pass
NVNT	ac20	5825	Ant1+ Ant2	-	-	-1.95	29.79	Pass

NVNT	ac40	5190	Ant1	-12.7	1.59	-11.11	10	Pass
NVNT	ac40	5230	Ant1	-10.7	1.59	-9.11	10	Pass
NVNT	ac40	5270	Ant1	-12.71	1.59	-11.12	11	Pass
NVNT	ac40	5310	Ant1	-11.48	1.59	-9.89	11	Pass
NVNT	ac40	5510	Ant1	-10.17	1.59	-8.58	11	Pass
NVNT	ac40	5550	Ant1	-14.35	1.59	-12.76	11	Pass
NVNT	ac40	5670	Ant1	-8.98	1.59	-7.39	11	Pass
NVNT	ac40	5755	Ant1	-12.81	1.59	-11.22	30	Pass
NVNT	ac40	5795	Ant1	-16	1.59	-14.41	30	Pass
NVNT	ac40	5190	Ant2	-9.17	1.59	-7.58	10	Pass
NVNT	ac40	5230	Ant2	-10.58	1.59	-8.99	10	Pass
NVNT	ac40	5270	Ant2	-8.72	1.59	-7.13	11	Pass
NVNT	ac40	5310	Ant2	-9.23	1.59	-7.64	11	Pass
NVNT	ac40	5510	Ant2	-9.63	1.59	-8.04	11	Pass
NVNT	ac40	5550	Ant2	-11.36	1.59	-9.77	11	Pass
NVNT	ac40	5670	Ant2	-7.05	1.59	-5.46	11	Pass
NVNT	ac40	5755	Ant2	-11.51	1.59	-9.92	30	Pass
NVNT	ac40	5795	Ant2	-11.96	1.59	-10.37	30	Pass
NVNT	ac40	5190	Ant1+ Ant2	-	-	2.32	7.69	Pass
NVNT	ac40	5230	Ant1+ Ant2	-	-	2.27	7.69	Pass
NVNT	ac40	5270	Ant1+ Ant2	-	-	-5.67	9.59	Pass
NVNT	ac40	5310	Ant1+ Ant2	-	-	-5.61	9.59	Pass
NVNT	ac40	5510	Ant1+ Ant2	-	-	-5.29	10.99	Pass
NVNT	ac40	5550	Ant1+ Ant2	-	-	-8.00	10.99	Pass
NVNT	ac40	5670	Ant1+ Ant2	-	-	-3.31	10.99	Pass
NVNT	ac40	5755	Ant1+ Ant2	-	-	-7.51	29.79	Pass
NVNT	ac40	5795	Ant1+ Ant2	-	-	-8.93	29.79	Pass
NVNT	ac80	5210	Ant1	-22.02	2.78	-19.24	10	Pass
NVNT	ac80	5290	Ant1	-22.94	2.78	-20.16	11	Pass
NVNT	ac80	5530	Ant1	-21.22	2.78	-18.44	11	Pass
NVNT	ac80	5775	Ant1	-23.97	2.78	-21.19	30	Pass
NVNT	ac80	5210	Ant2	-19.86	2.78	-17.08	10	Pass
NVNT	ac80	5290	Ant2	-18.1	2.78	-15.32	11	Pass
NVNT	ac80	5530	Ant2	-20.5	2.78	-17.72	11	Pass
NVNT	ac80	5775	Ant2	-18.81	2.78	-16.03	30	Pass
NVNT	ac80	5210	Ant1+ Ant2	-	-	-6.71	7.69	Pass
NVNT	ac80	5290	Ant1+ Ant2	-	-	-14.09	9.59	Pass
NVNT	ac80	5530	Ant1+ Ant2	-	-	-15.05	10.99	Pass
NVNT	ac80	5775	Ant1+ Ant2	-	-	-14.87	29.79	Pass
NVNT	ax20	5180	Ant1	-8.27	1.10	-7.17	10	Pass
NVNT	ax20	5220	Ant1	-6.43	1.10	-5.33	10	Pass
NVNT	ax20	5240	Ant1	-6.72	1.10	-5.62	10	Pass
NVNT	ax20	5260	Ant1	-7.22	1.10	-6.12	11	Pass


NVNT	ax20	5300	Ant1	-7.28	1.10	-6.18	11	Pass
NVNT	ax20	5320	Ant1	-7.8	1.10	-6.70	11	Pass
NVNT	ax20	5500	Ant1	-6.05	1.10	-4.95	11	Pass
NVNT	ax20	5580	Ant1	-5.78	1.10	-4.68	11	Pass
NVNT	ax20	5700	Ant1	-6.17	1.10	-5.07	11	Pass
NVNT	ax20	5745	Ant1	-10.61	1.10	-9.51	30	Pass
NVNT	ax20	5785	Ant1	-11.67	1.10	-10.57	30	Pass
NVNT	ax20	5825	Ant1	-9.65	1.10	-8.55	30	Pass
NVNT	ax20	5180	Ant2	-5.22	1.10	-4.12	10	Pass
NVNT	ax20	5220	Ant2	-5.61	1.10	-4.51	10	Pass
NVNT	ax20	5240	Ant2	-5.98	1.10	-4.88	10	Pass
NVNT	ax20	5260	Ant2	4.12	1.10	5.22	11	Pass
NVNT	ax20	5300	Ant2	-4.64	1.10	-3.54	11	Pass
NVNT	ax20	5320	Ant2	-4.36	1.10	-3.26	11	Pass
NVNT	ax20	5500	Ant2	-4.95	1.10	-3.85	11	Pass
NVNT	ax20	5580	Ant2	-5.81	1.10	-4.71	11	Pass
NVNT	ax20	5700	Ant2	-5.22	1.10	-4.12	11	Pass
NVNT	ax20	5745	Ant2	-9.47	1.10	-8.37	30	Pass
NVNT	ax20	5785	Ant2	-9.22	1.10	-8.12	30	Pass
NVNT	ax20	5825	Ant2	-8.34	1.10	-7.24	30	Pass
NVNT	ax20	5180	Ant1+ Ant2	-	-	5.94	7.69	Pass
NVNT	ax20	5220	Ant1+ Ant2	-	-	6.42	7.69	Pass
NVNT	ax20	5240	Ant1+ Ant2	-	-	6.09	7.69	Pass
NVNT	ax20	5260	Ant1+ Ant2	-	-	5.53	9.59	Pass
NVNT	ax20	5300	Ant1+ Ant2	-	-	-1.65	9.59	Pass
NVNT	ax20	5320	Ant1+ Ant2	-	-	-1.64	9.59	Pass
NVNT	ax20	5500	Ant1+ Ant2	-	-	-1.35	10.99	Pass
NVNT	ax20	5580	Ant1+ Ant2	-	-	-1.68	10.99	Pass
NVNT	ax20	5700	Ant1+ Ant2	-	-	-1.56	10.99	Pass
NVNT	ax20	5745	Ant1+ Ant2	-	-	-5.89	29.79	Pass
NVNT	ax20	5785	Ant1+ Ant2	-	-	-6.16	29.79	Pass
NVNT	ax20	5825	Ant1+ Ant2	-	-	-4.84	29.79	Pass
NVNT	ax40	5190	Ant1	-7.46	1.15	-6.31	10	Pass
NVNT	ax40	5230	Ant1	-5.72	1.15	-4.57	10	Pass
NVNT	ax40	5270	Ant1	-6.93	1.15	-5.78	11	Pass
NVNT	ax40	5310	Ant1	-8.92	1.15	-7.77	11	Pass
NVNT	ax40	5510	Ant1	-6.68	1.15	-5.53	11	Pass
NVNT	ax40	5550	Ant1	-8.48	1.15	-7.33	11	Pass
NVNT	ax40	5670	Ant1	-3.49	1.15	-2.34	11	Pass
NVNT	ax40	5755	Ant1	-10.35	1.15	-9.20	30	Pass
NVNT	ax40	5795	Ant1	-10.64	1.15	-9.49	30	Pass
NVNT	ax40	5190	Ant2	-6.92	1.15	-5.77	10	Pass
NVNT	ax40	5230	Ant2	-5.83	1.15	-4.68	10	Pass
NVNT	ax40	5270	Ant2	-4.33	1.15	-3.18	11	Pass

NVNT	ax40	5310	Ant2	-6.52	1.15	-5.37	11	Pass
NVNT	ax40	5510	Ant2	-6.55	1.15	-5.40	11	Pass
NVNT	ax40	5550	Ant2	-6.05	1.15	-4.90	11	Pass
NVNT	ax40	5670	Ant2	-5.89	1.15	-4.74	11	Pass
NVNT	ax40	5755	Ant2	-9.69	1.15	-8.54	30	Pass
NVNT	ax40	5795	Ant2	-8.04	1.15	-6.89	30	Pass
NVNT	ax40	5190	Ant1+ Ant2	-	-	5.29	7.69	Pass
NVNT	ax40	5230	Ant1+ Ant2	-	-	6.70	7.69	Pass
NVNT	ax40	5270	Ant1+ Ant2	-	-	-1.28	9.59	Pass
NVNT	ax40	5310	Ant1+ Ant2	-	-	-3.40	9.59	Pass
NVNT	ax40	5510	Ant1+ Ant2	-	-	-2.45	10.99	Pass
NVNT	ax40	5550	Ant1+ Ant2	-	-	-2.94	10.99	Pass
NVNT	ax40	5670	Ant1+ Ant2	-	-	-0.37	10.99	Pass
NVNT	ax40	5755	Ant1+ Ant2	-	-	-5.85	29.79	Pass
NVNT	ax40	5795	Ant1+ Ant2	-	-	-4.99	29.79	Pass
NVNT	ax80	5210	Ant1	-12.61	1.77	-10.84	10	Pass
NVNT	ax80	5290	Ant1	-12.98	1.77	-11.21	11	Pass
NVNT	ax80	5530	Ant1	-12.89	1.77	-11.12	11	Pass
NVNT	ax80	5775	Ant1	-14.65	1.77	-12.88	30	Pass
NVNT	ax80	5210	Ant2	-9.53	1.77	-7.76	10	Pass
NVNT	ax80	5290	Ant2	-10.44	1.77	-8.67	11	Pass
NVNT	ax80	5530	Ant2	-11.99	1.77	-10.22	11	Pass
NVNT	ax80	5775	Ant2	-14.73	1.77	-12.96	30	Pass
NVNT	ax80	5210	Ant1+ Ant2	-	-	2.29	7.69	Pass
NVNT	ax80	5290	Ant1+ Ant2	-	-	-6.75	9.59	Pass
NVNT	ax80	5530	Ant1+ Ant2	-	-	-7.64	10.99	Pass
NVNT	ax80	5775	Ant1+ Ant2	-	-	-9.91	29.79	Pass


PSD NVNT a 5180MHz Ant1

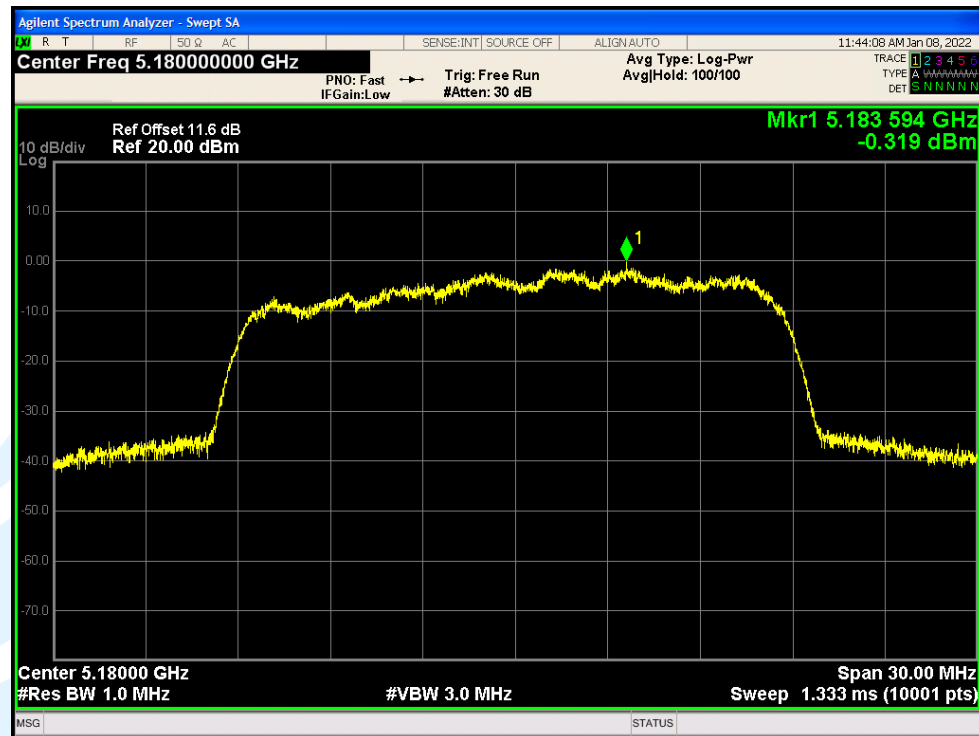


PSD NVNT a 5220MHz Ant1

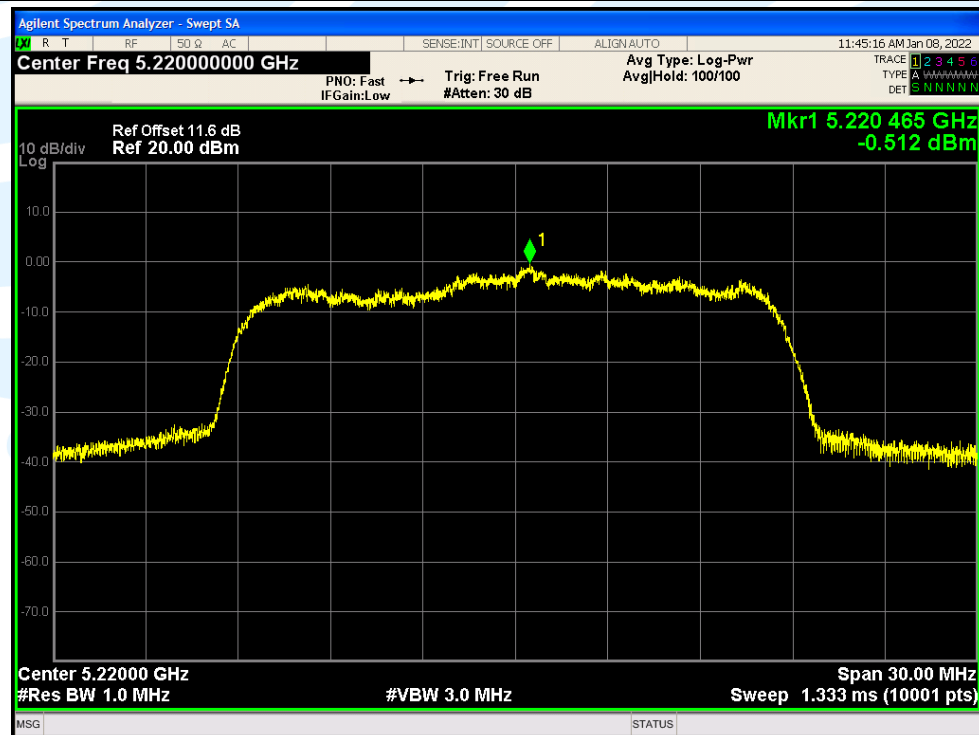


PSD NVNT a 5240MHz Ant1

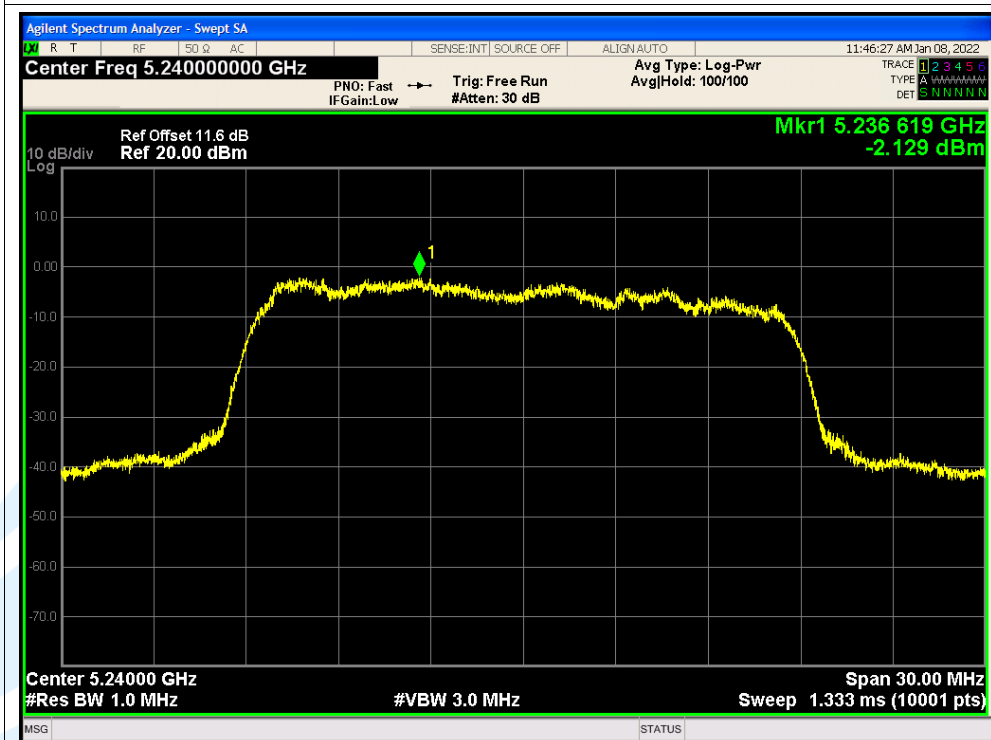


PSD NVNT a 5260MHz Ant1

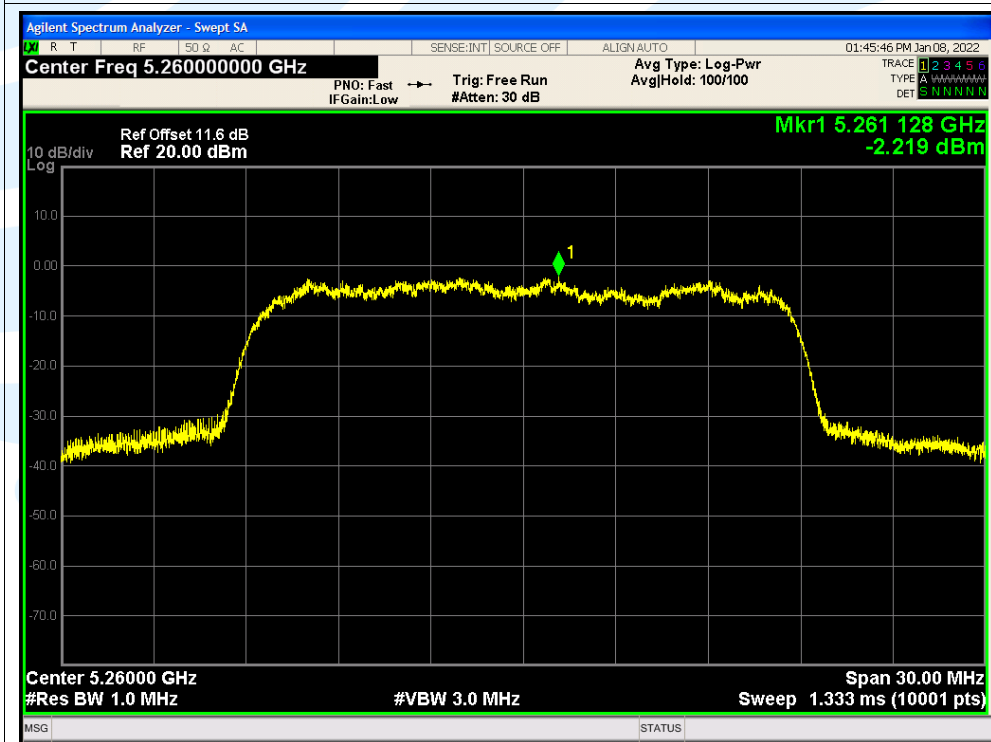


PSD NVNT a 5300MHz Ant1

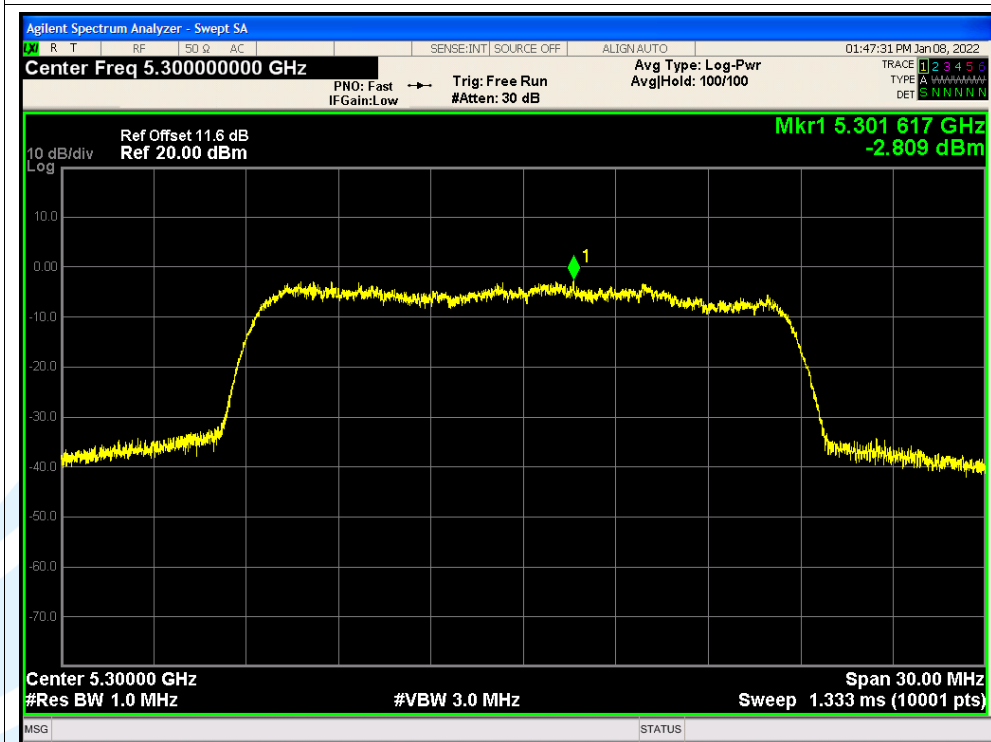


PSD NVNT a 5320MHz Ant1

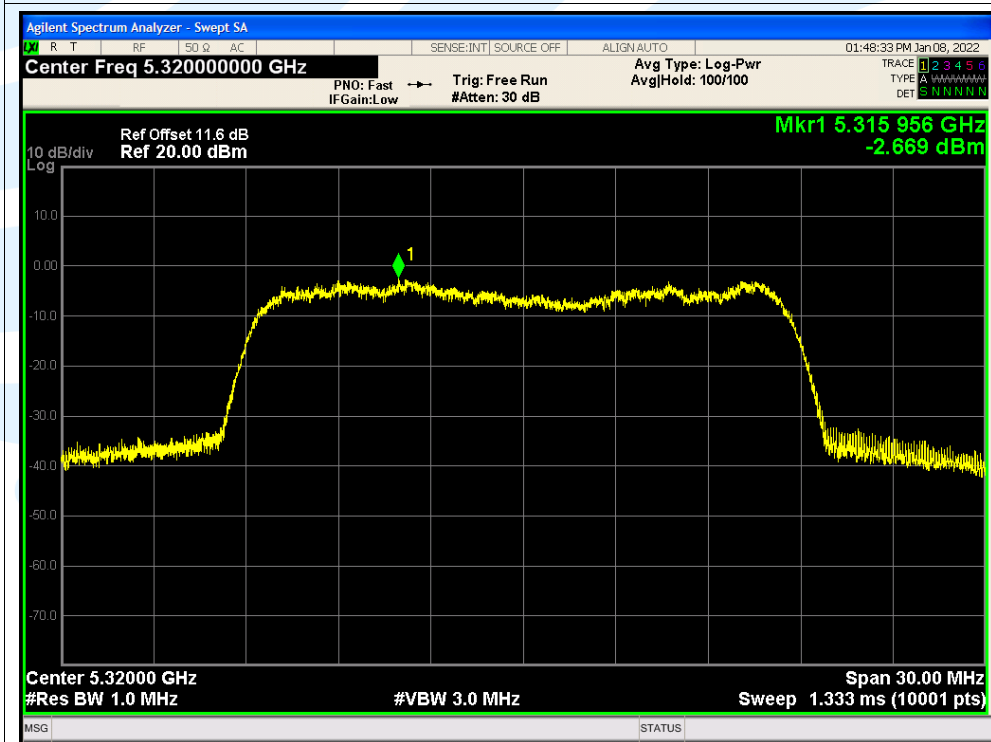


PSD NVNT a 5500MHz Ant1

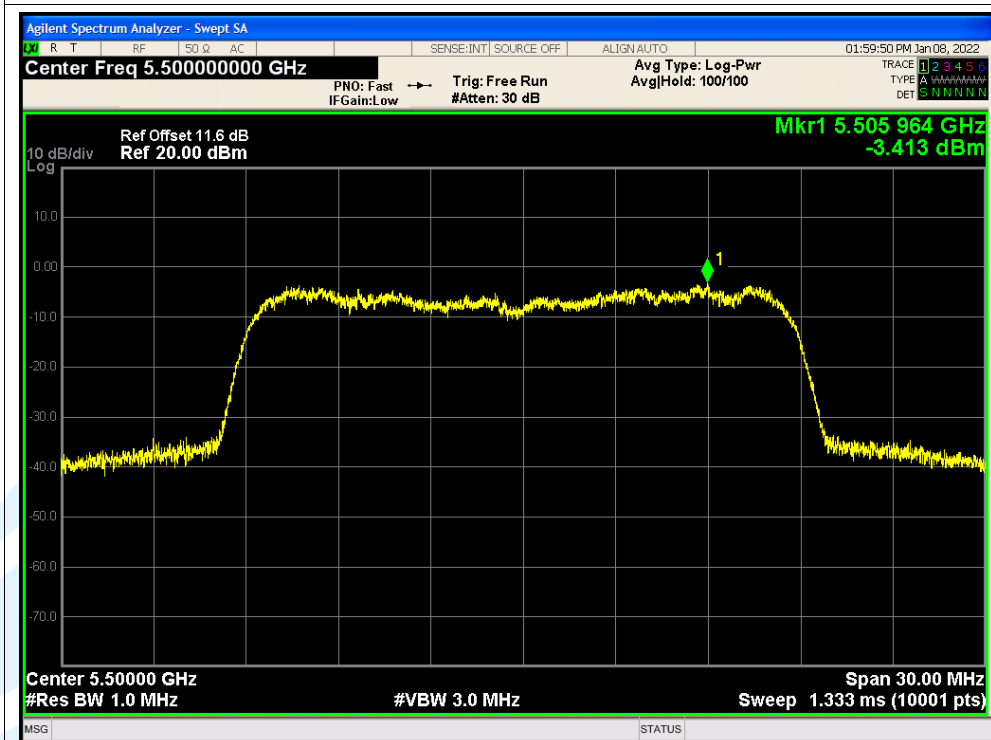


PSD NVNT a 5580MHz Ant1

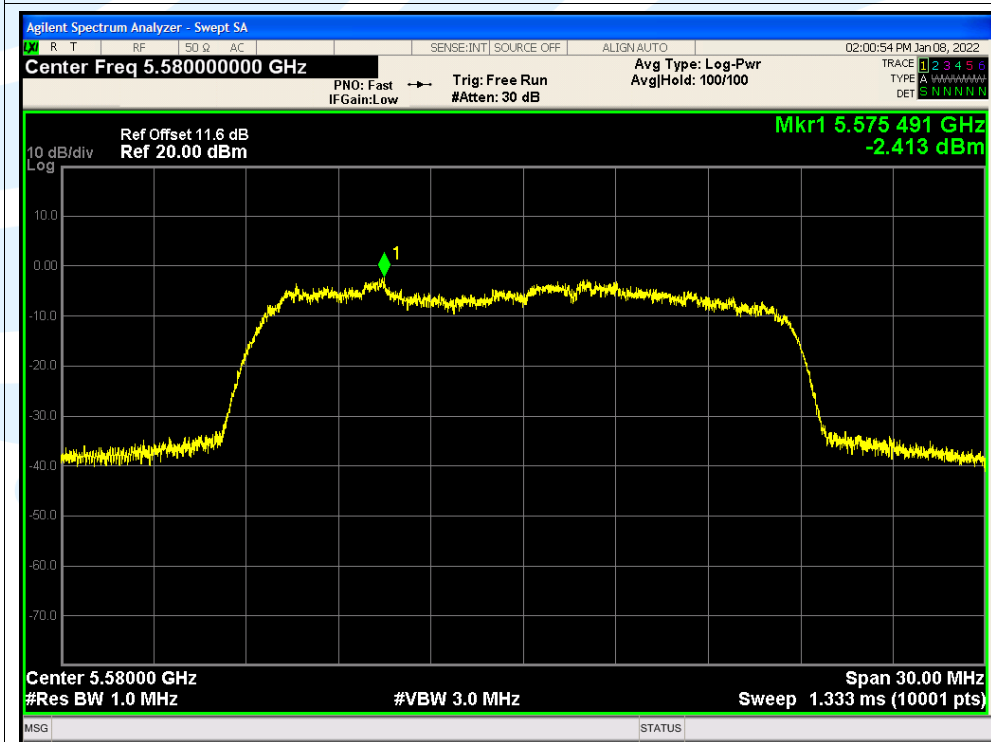


PSD NVNT a 5700MHz Ant1

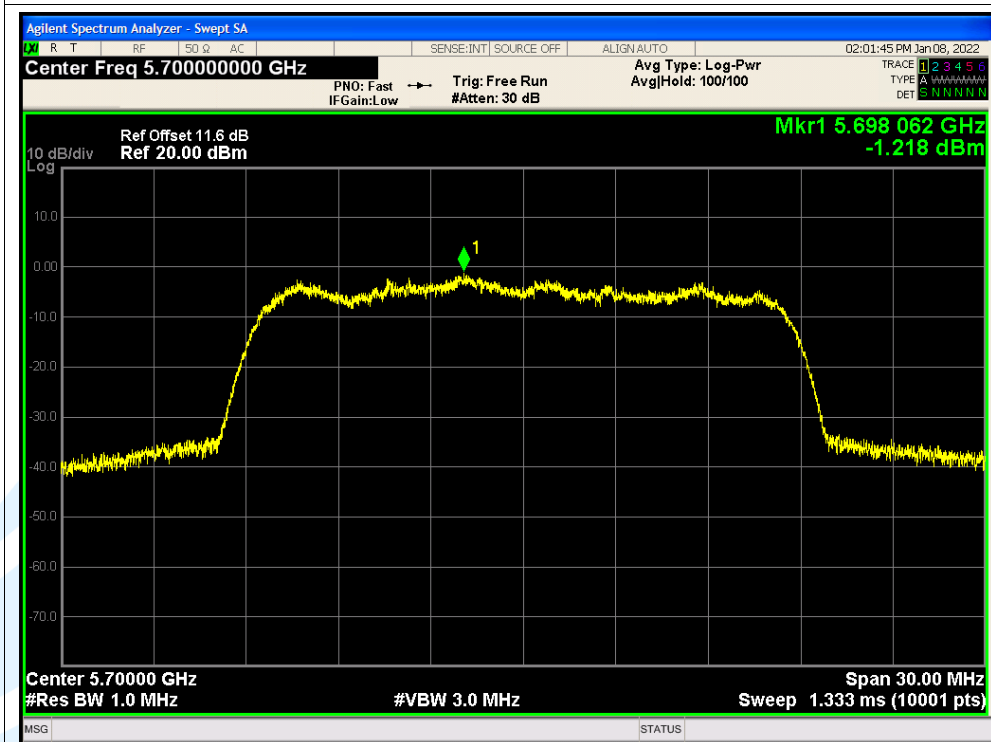


PSD NVNT a 5745MHz Ant1

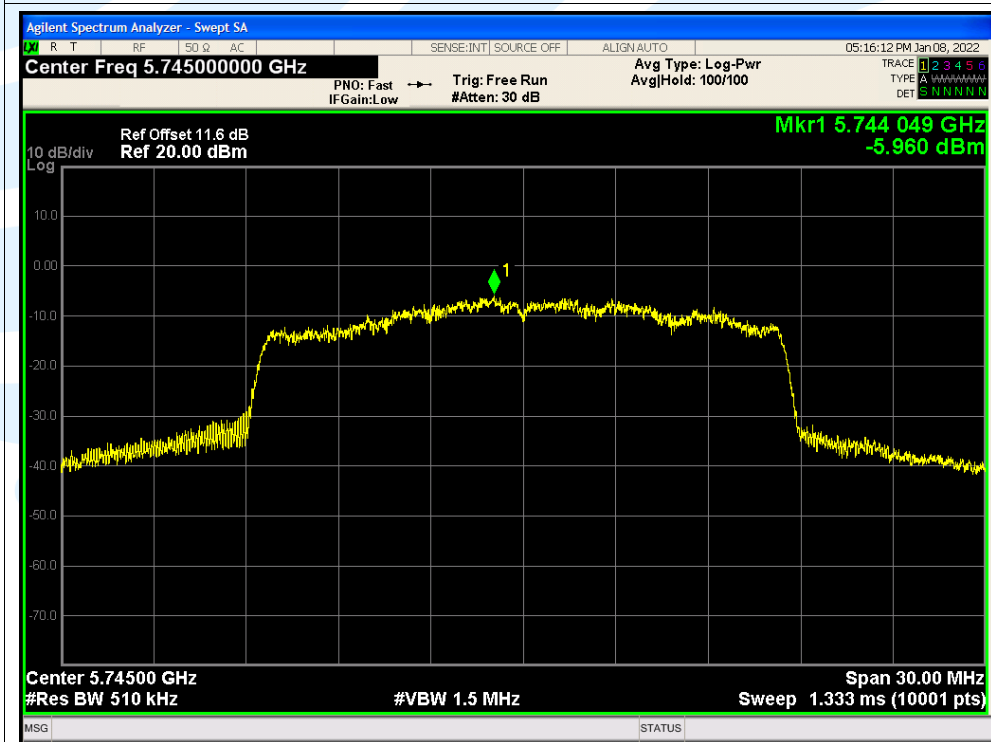


PSD NVNT a 5785MHz Ant1

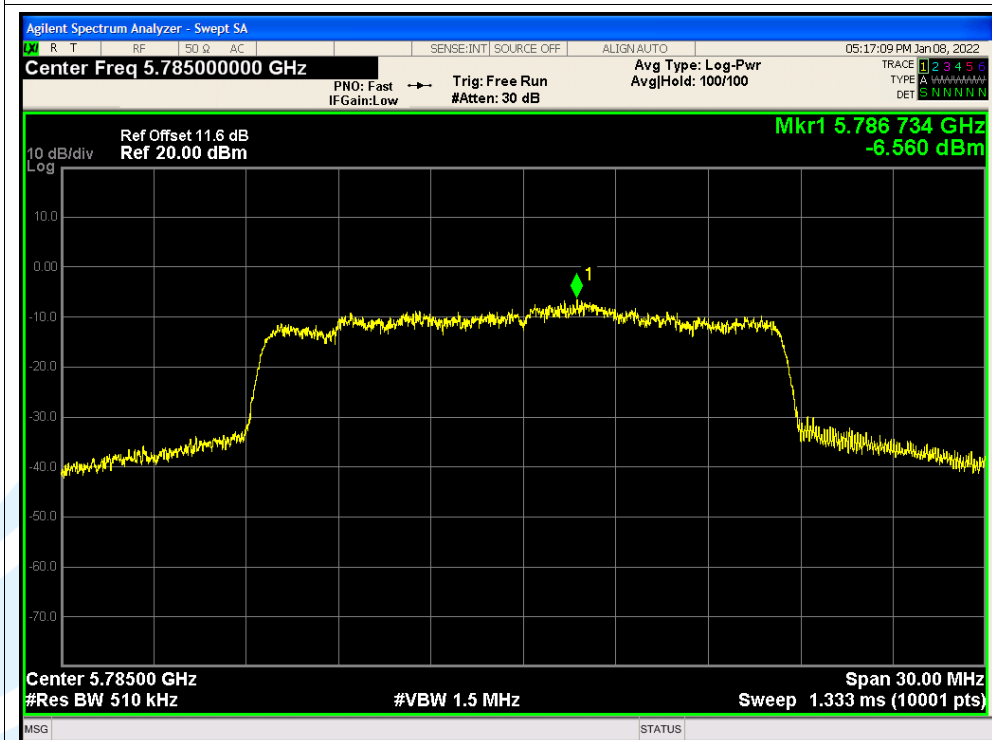


PSD NVNT a 5825MHz Ant1

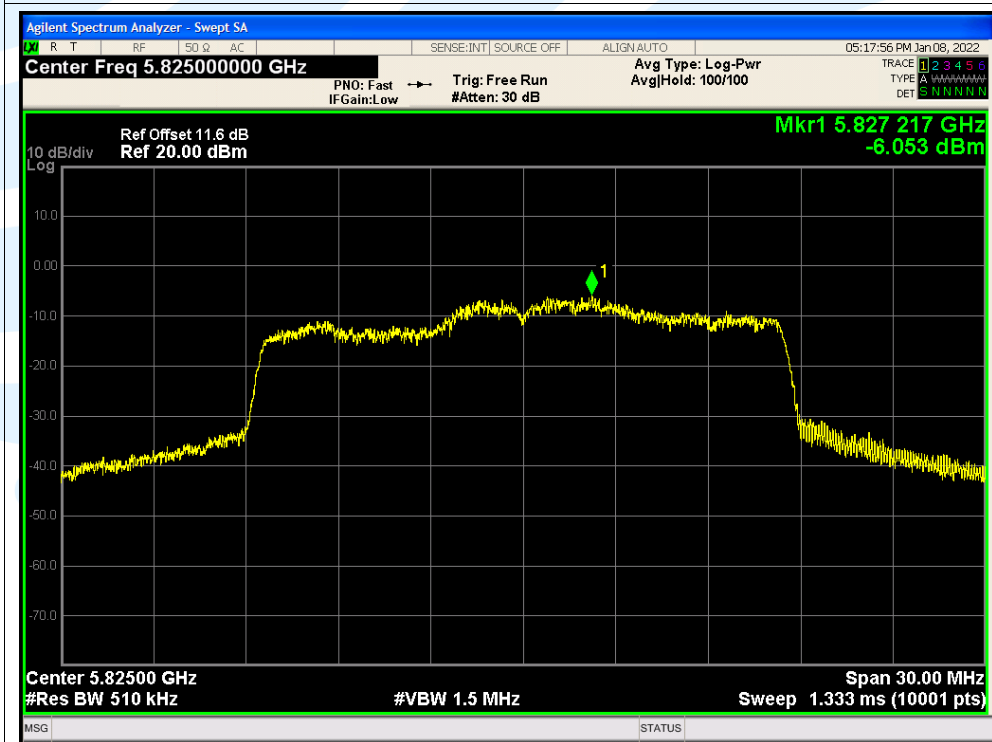


PSD NVNT a 5180MHz Ant2

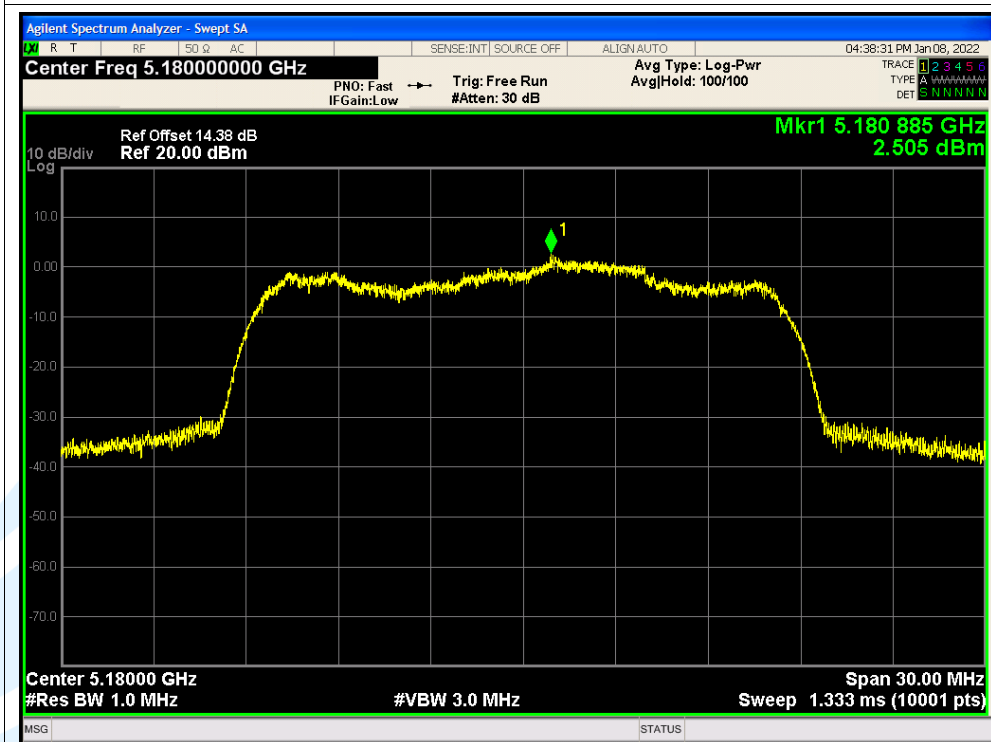


PSD NVNT a 5220MHz Ant2

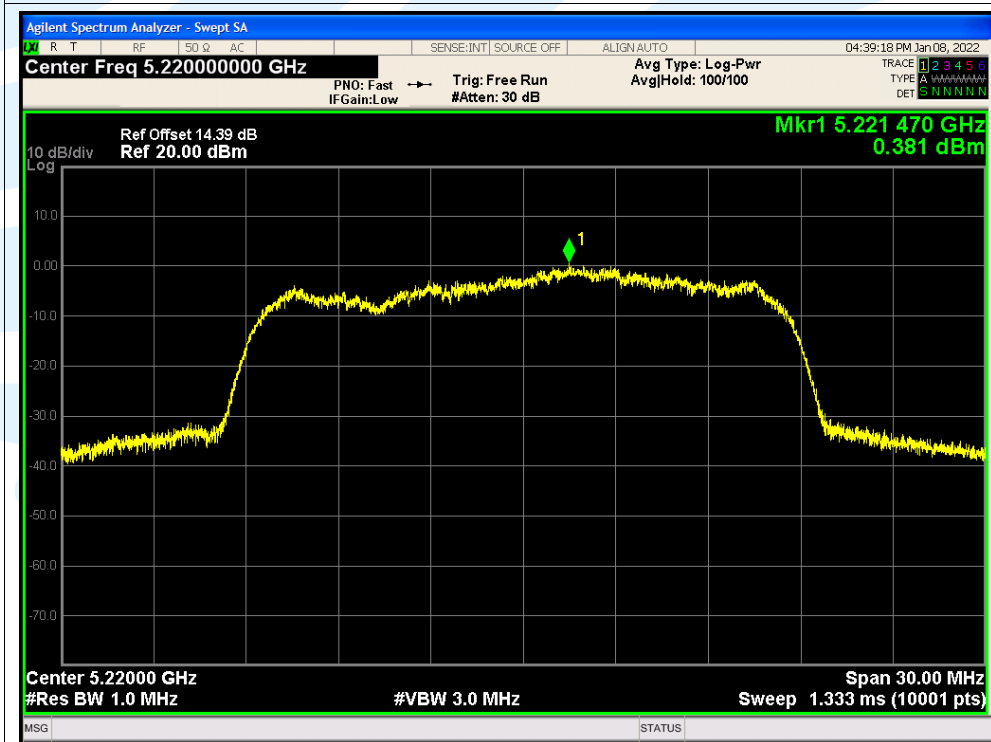


PSD NVNT a 5240MHz Ant2

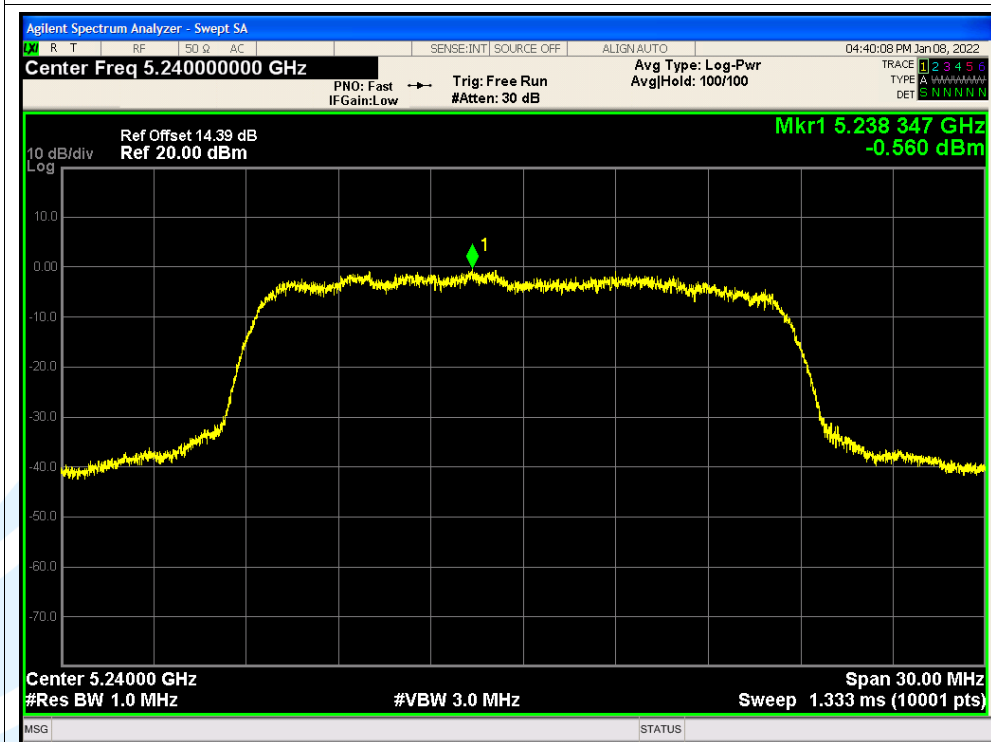


PSD NVNT a 5260MHz Ant2

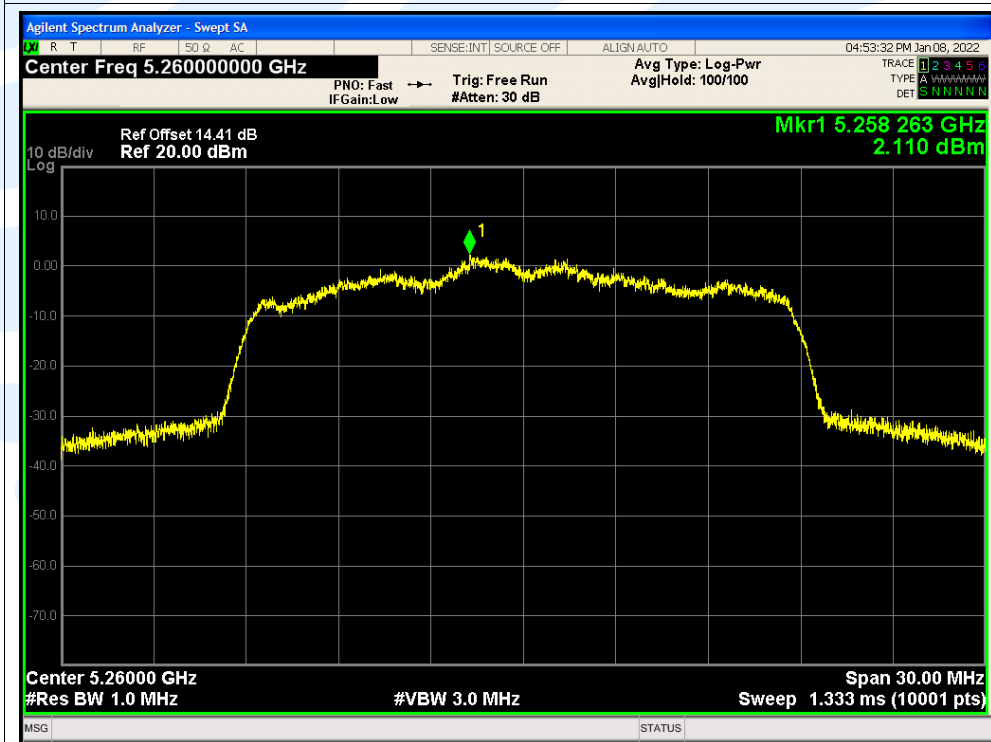


PSD NVNT a 5300MHz Ant2

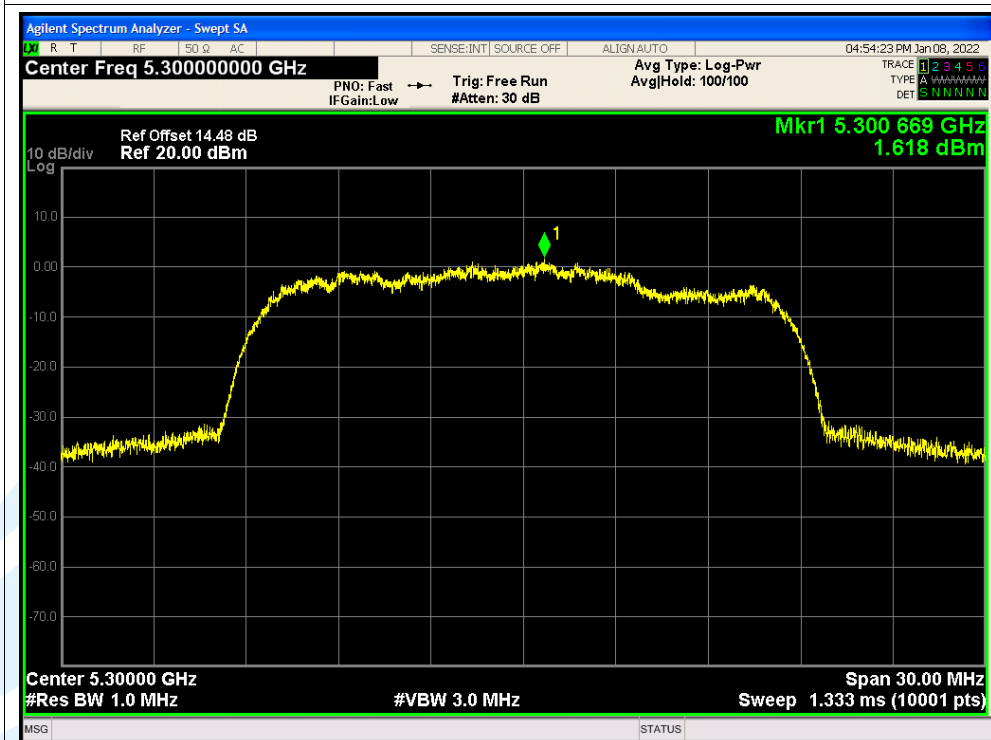


PSD NVNT a 5320MHz Ant2


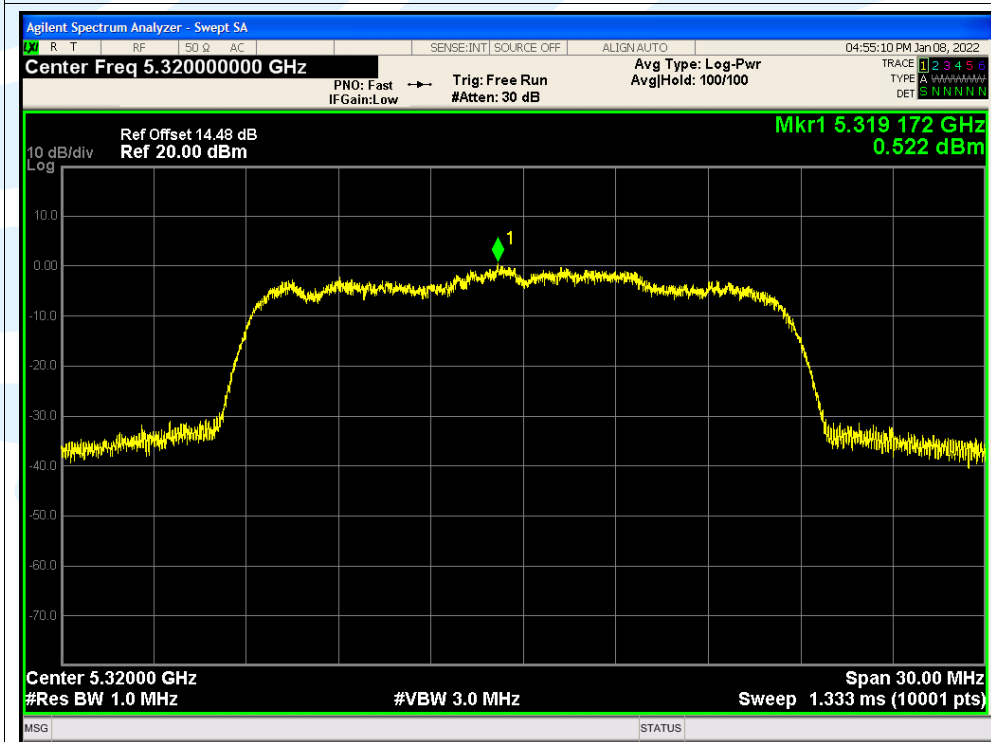


PSD NVNT a 5500MHz Ant2

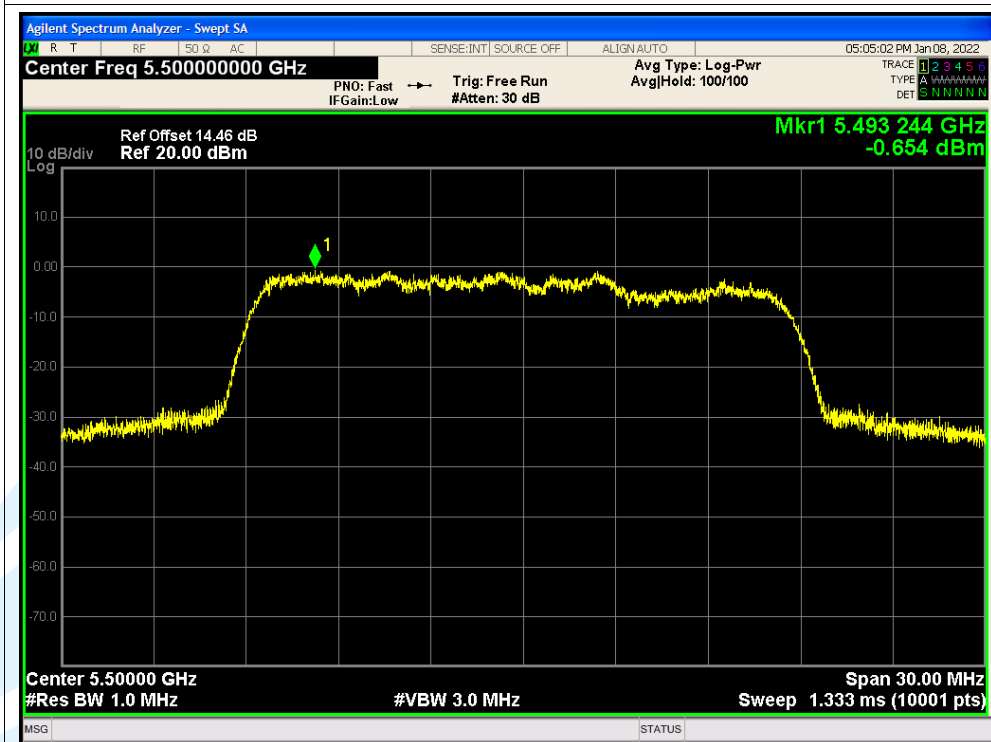


PSD NVNT a 5580MHz Ant2

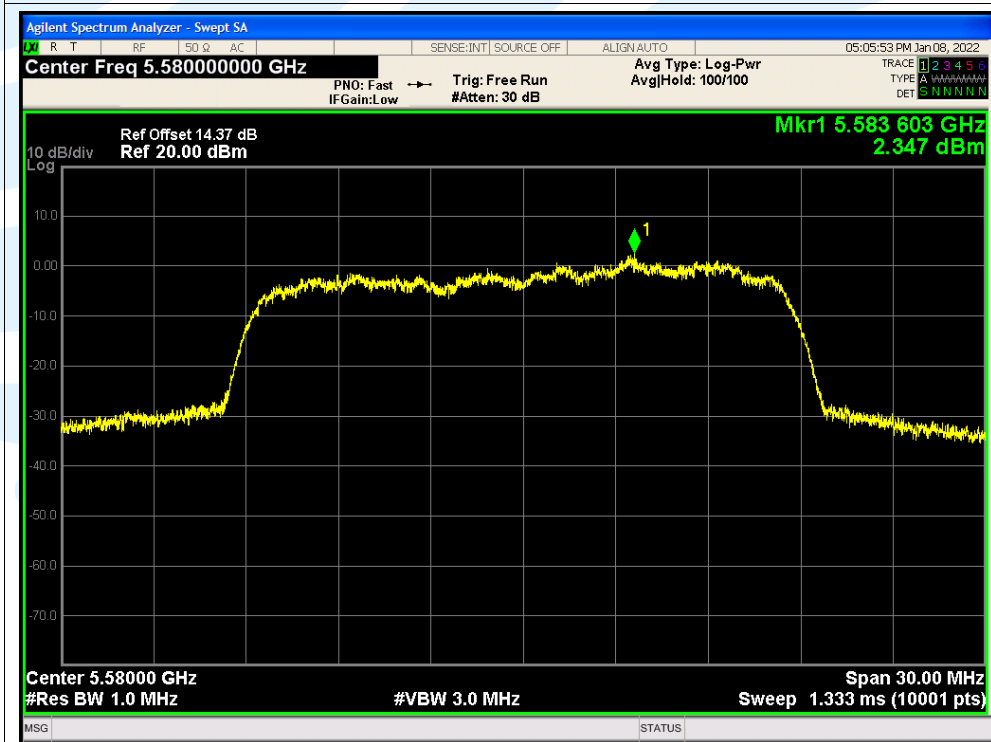


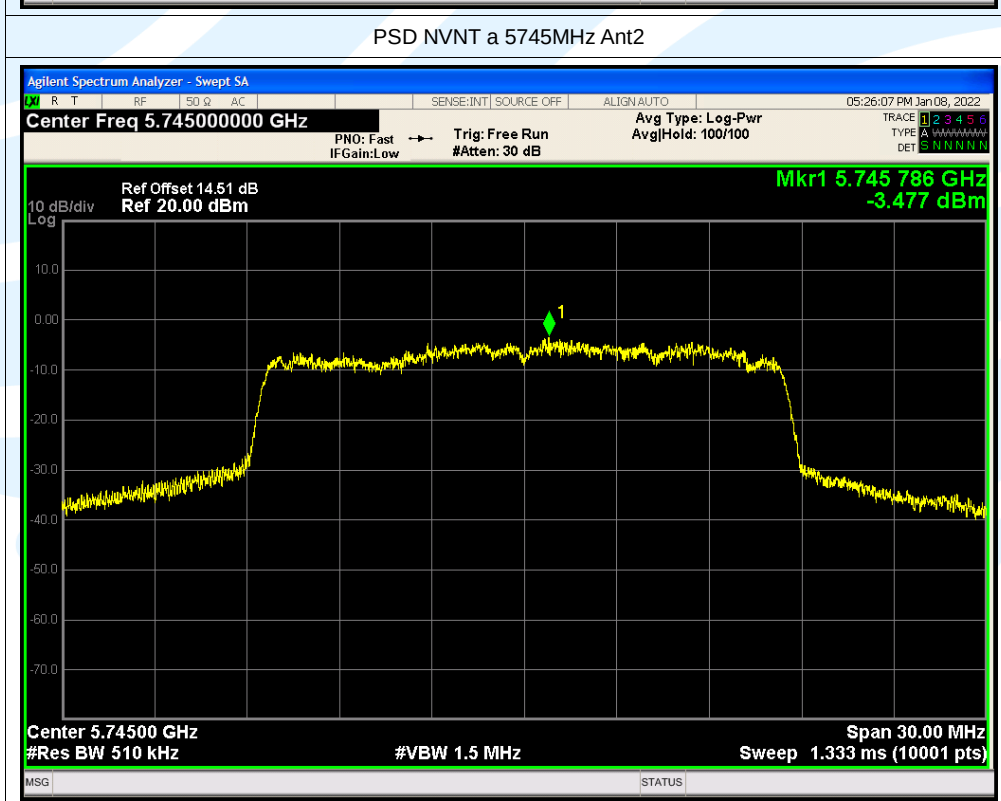
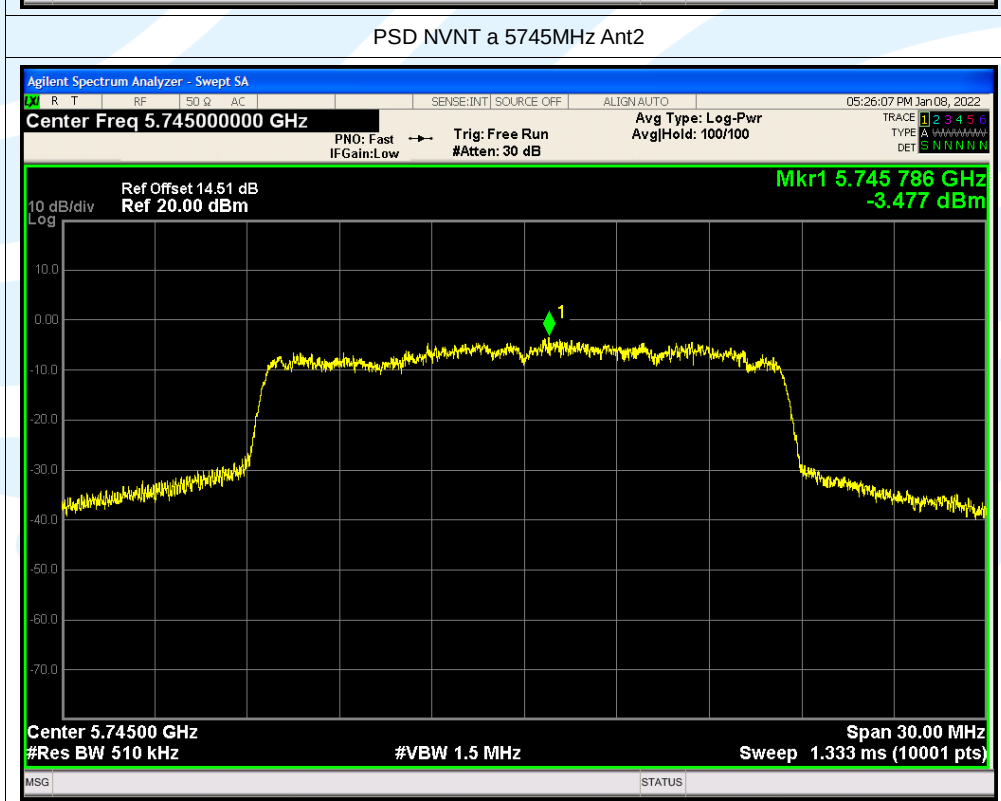



PSD NVNT a 5785MHz Ant2

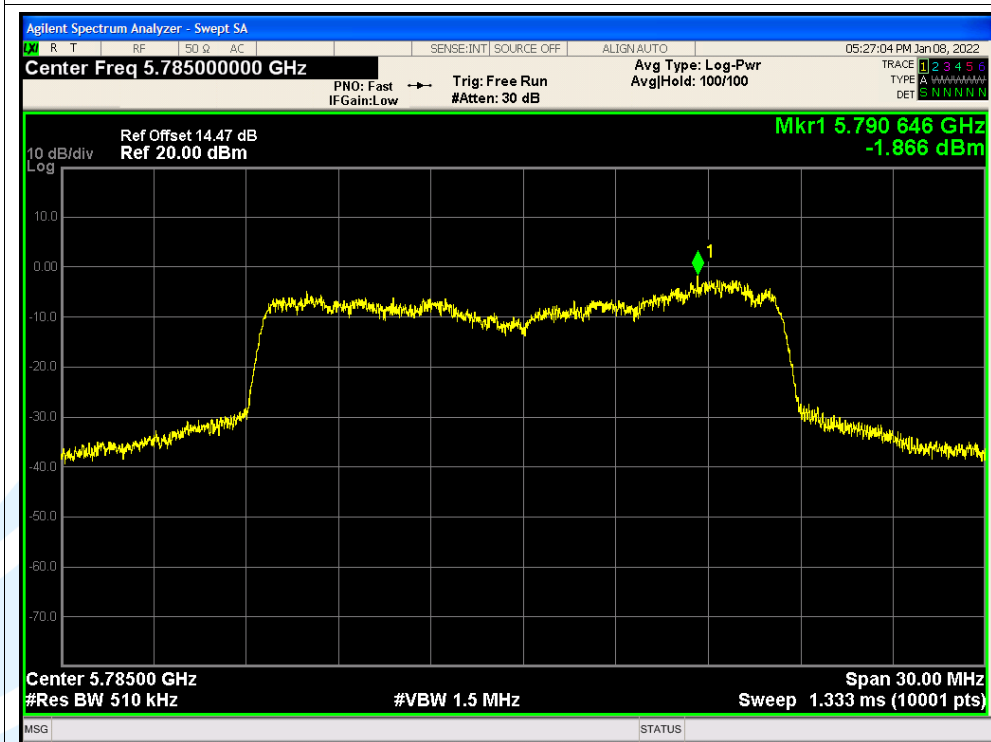


PSD NVNT a 5825MHz Ant2

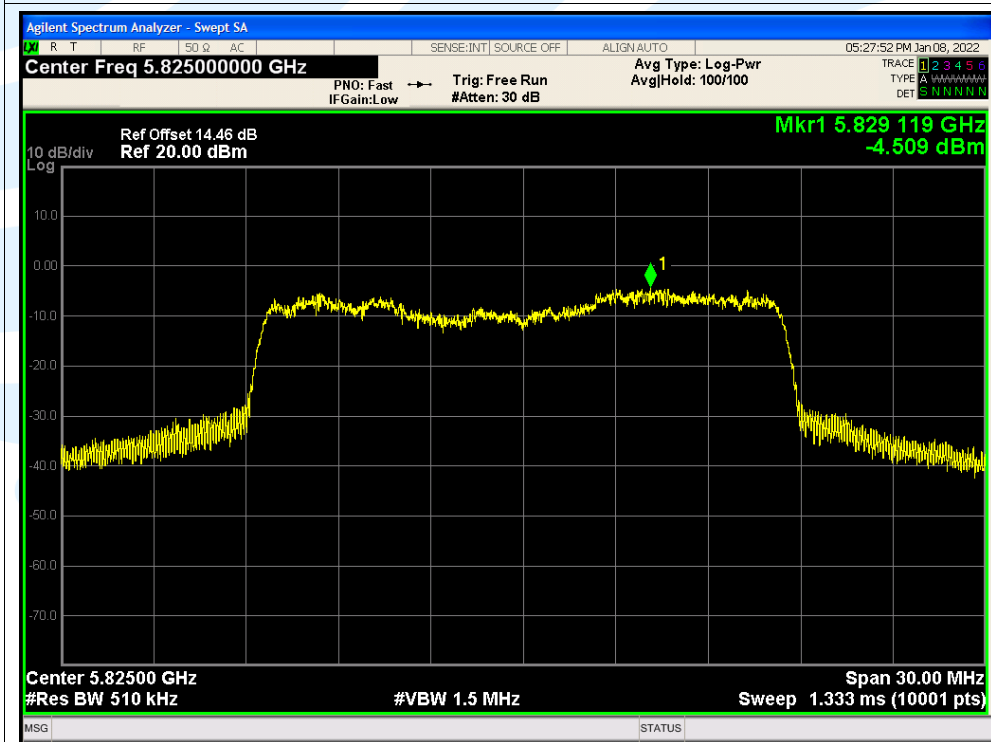

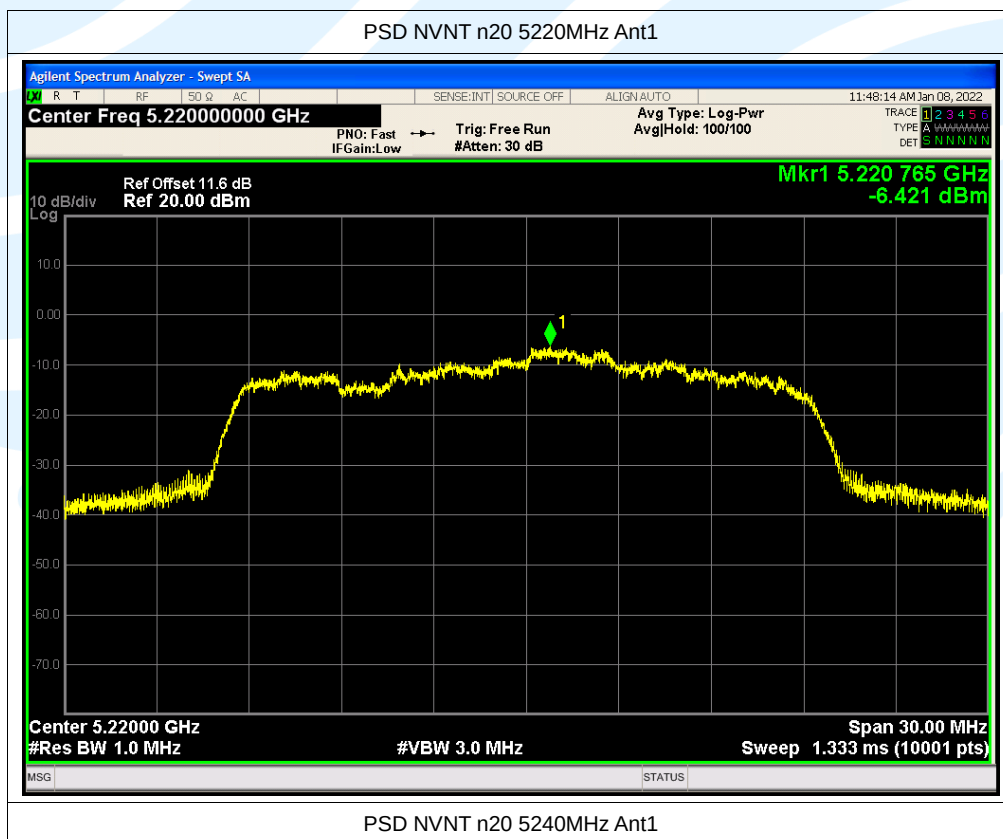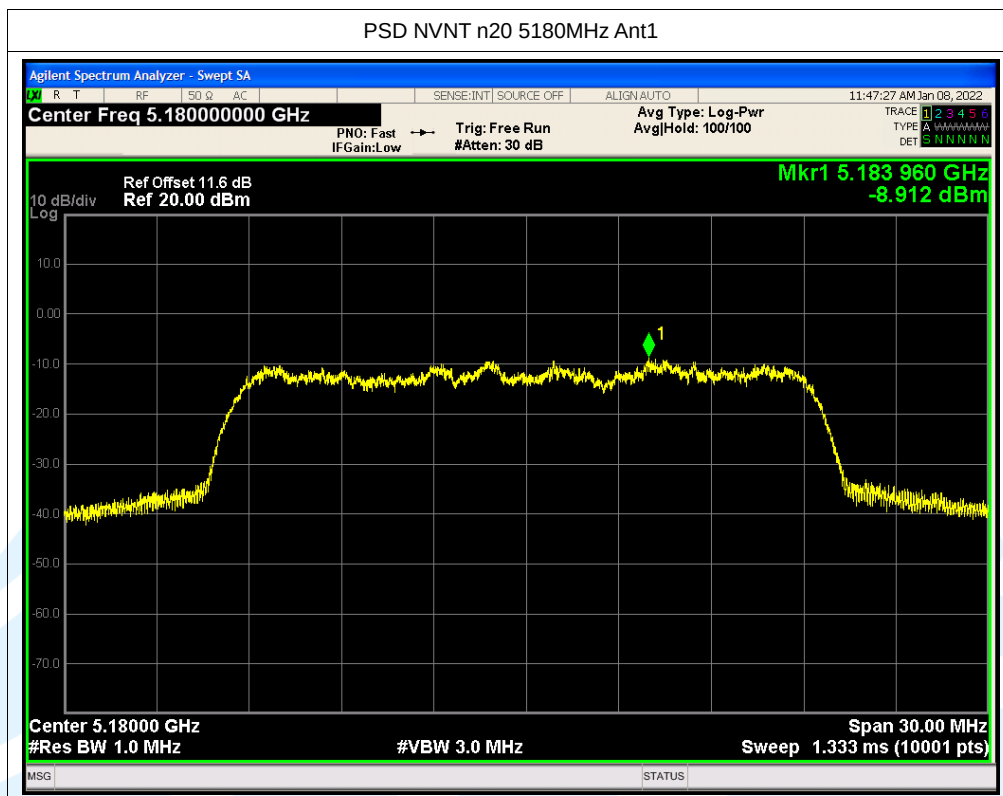


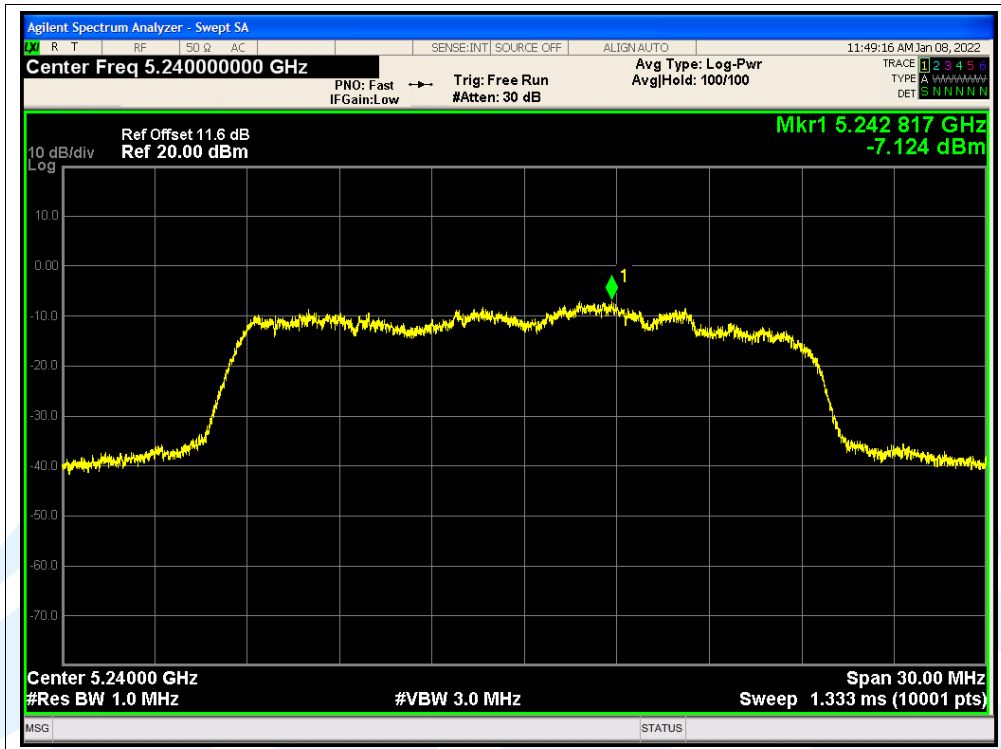



PSD NVNT n20 5260MHz Ant1

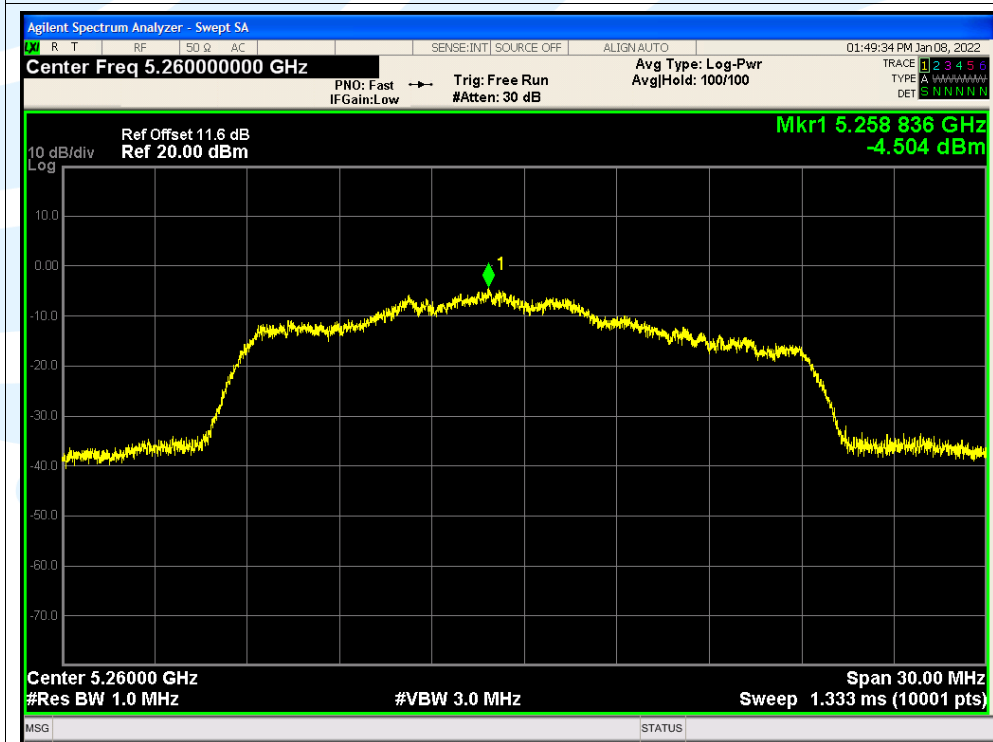



PSD NVNT n20 5300MHz Ant1

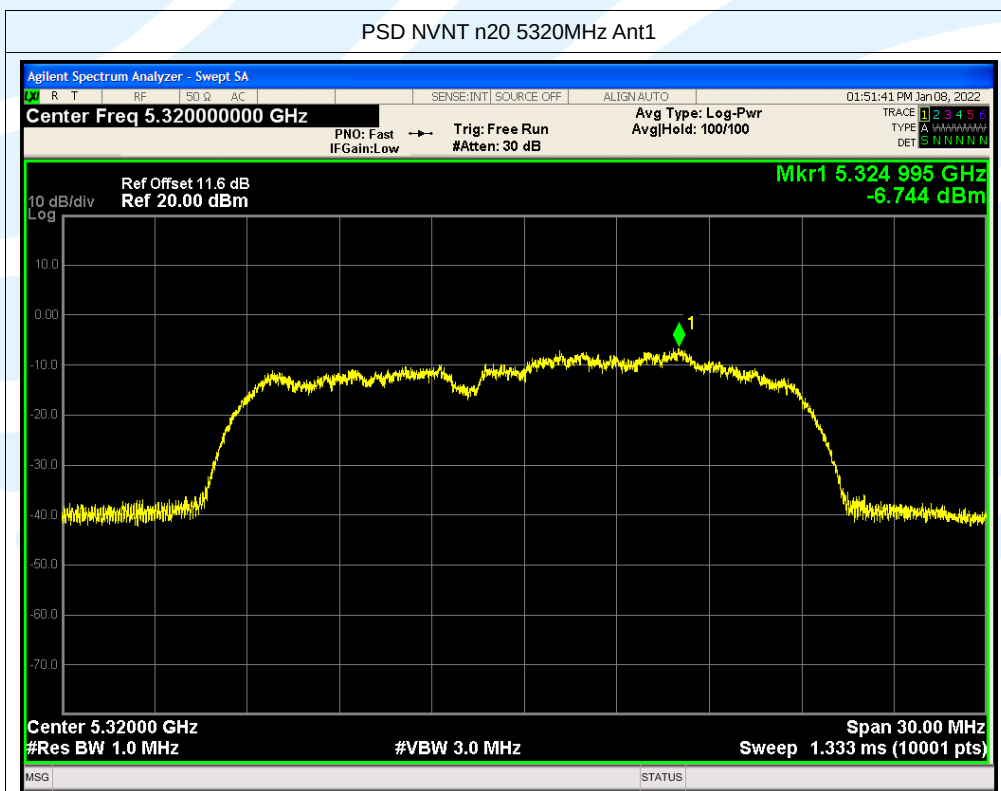

PSD NVNT n20 5500MHz Ant1

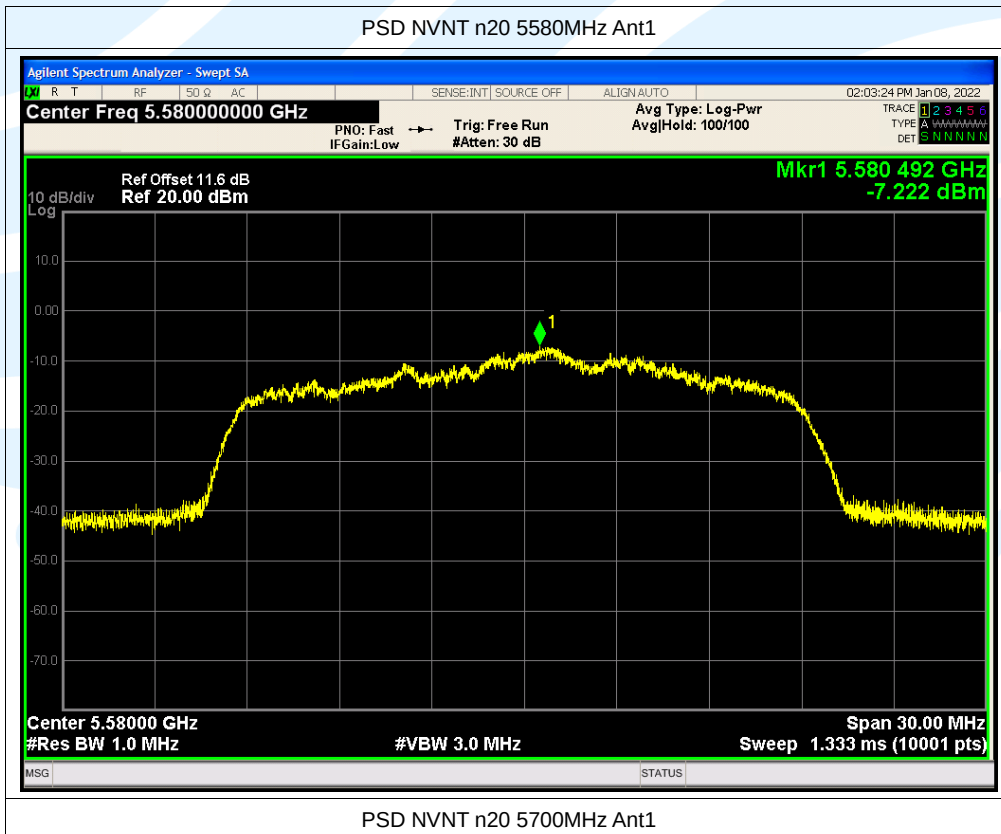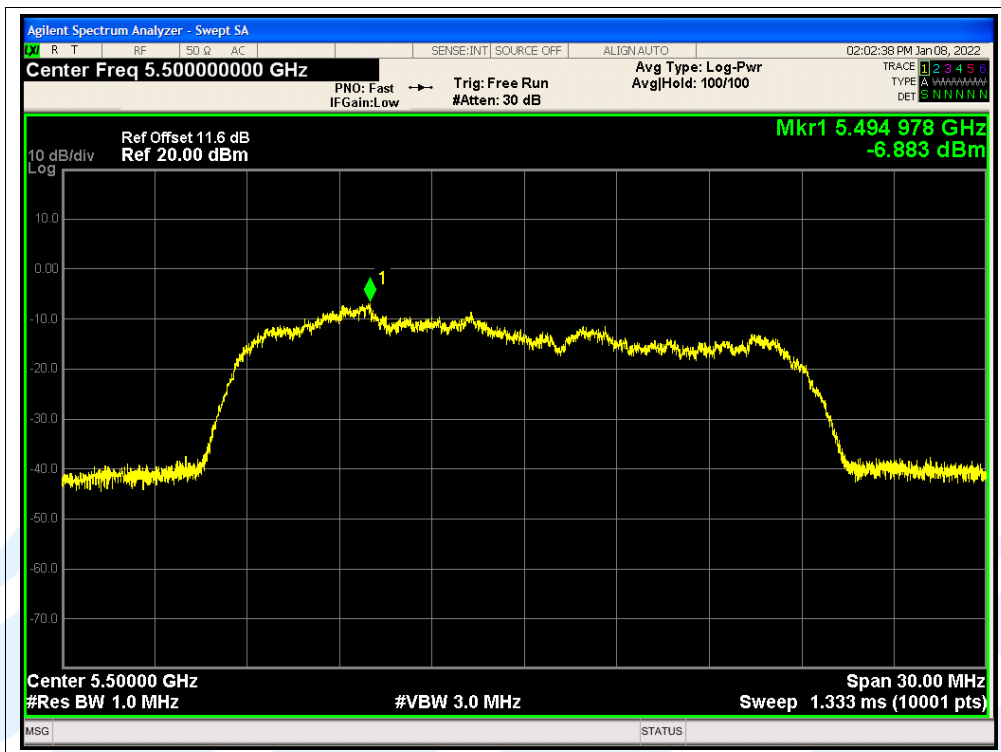


PSD NVNT n20 5700MHz Ant1

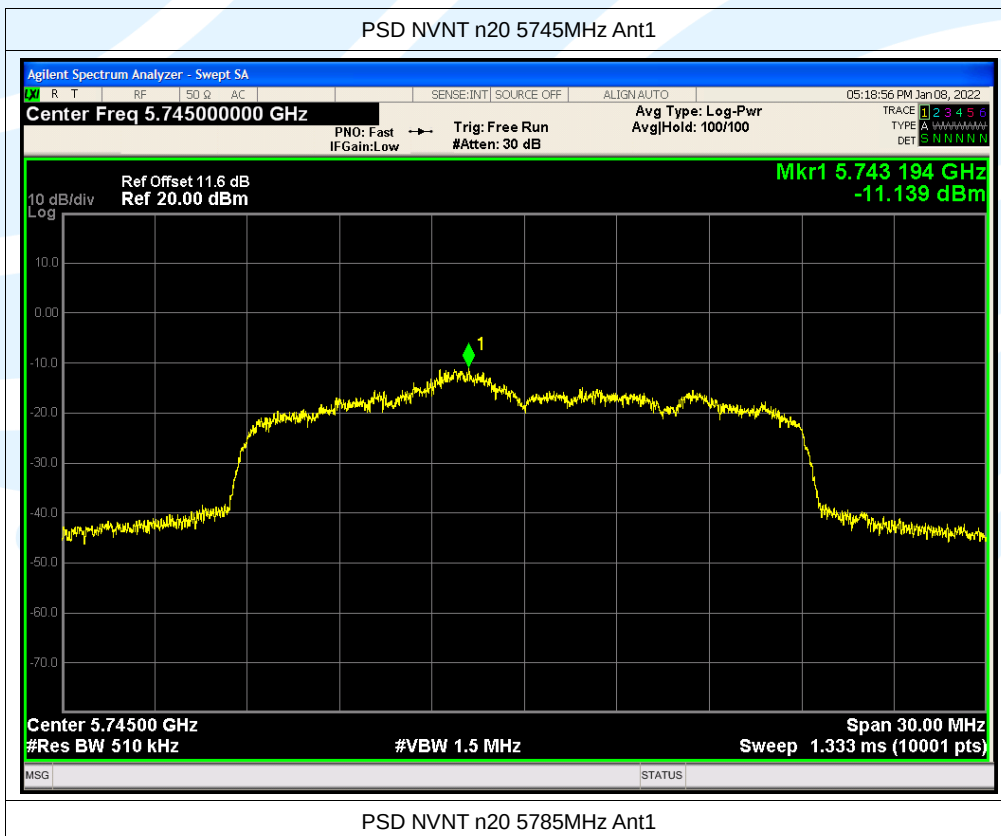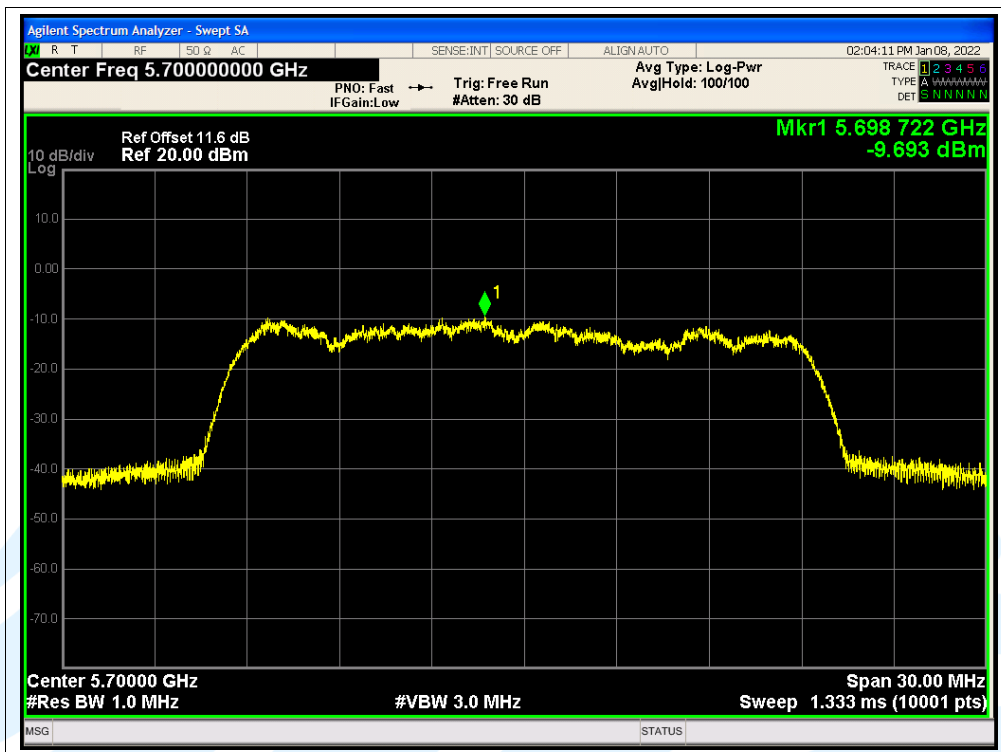

PSD NVNT n20 5785MHz Ant1



PSD NVNT n20 5825MHz Ant1

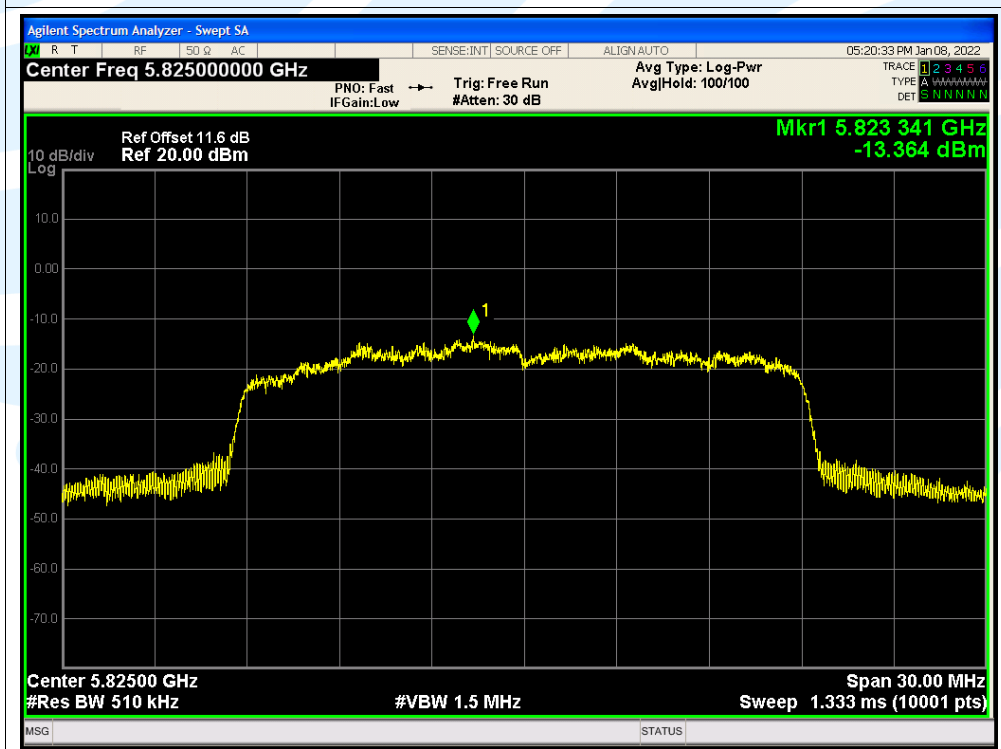















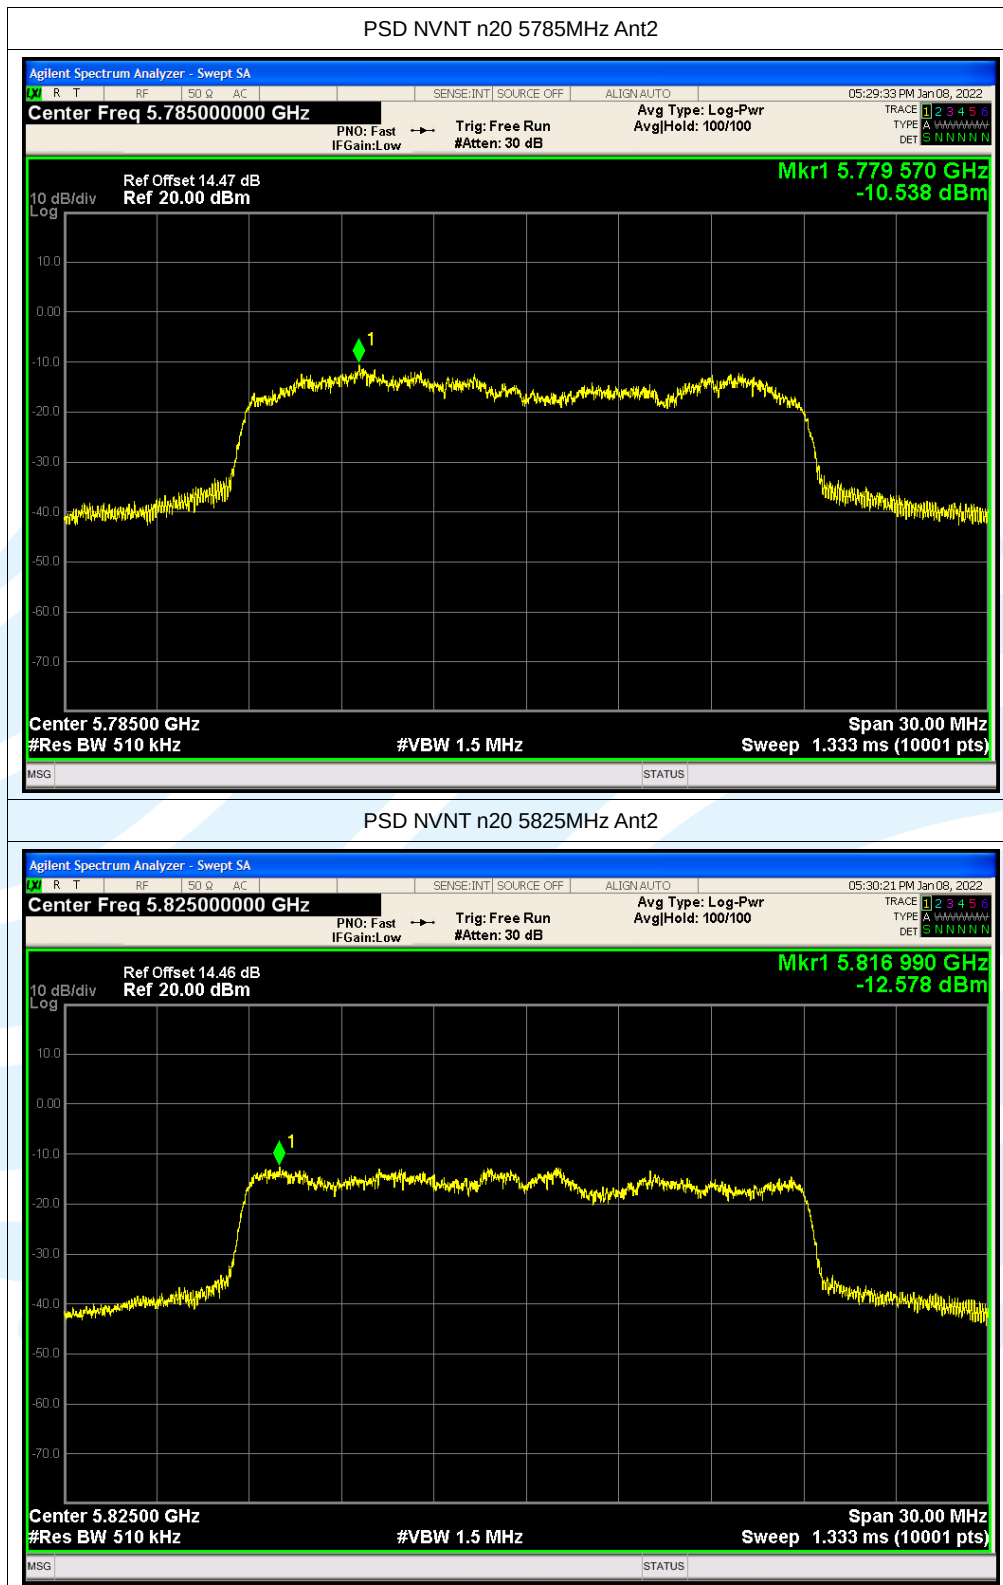


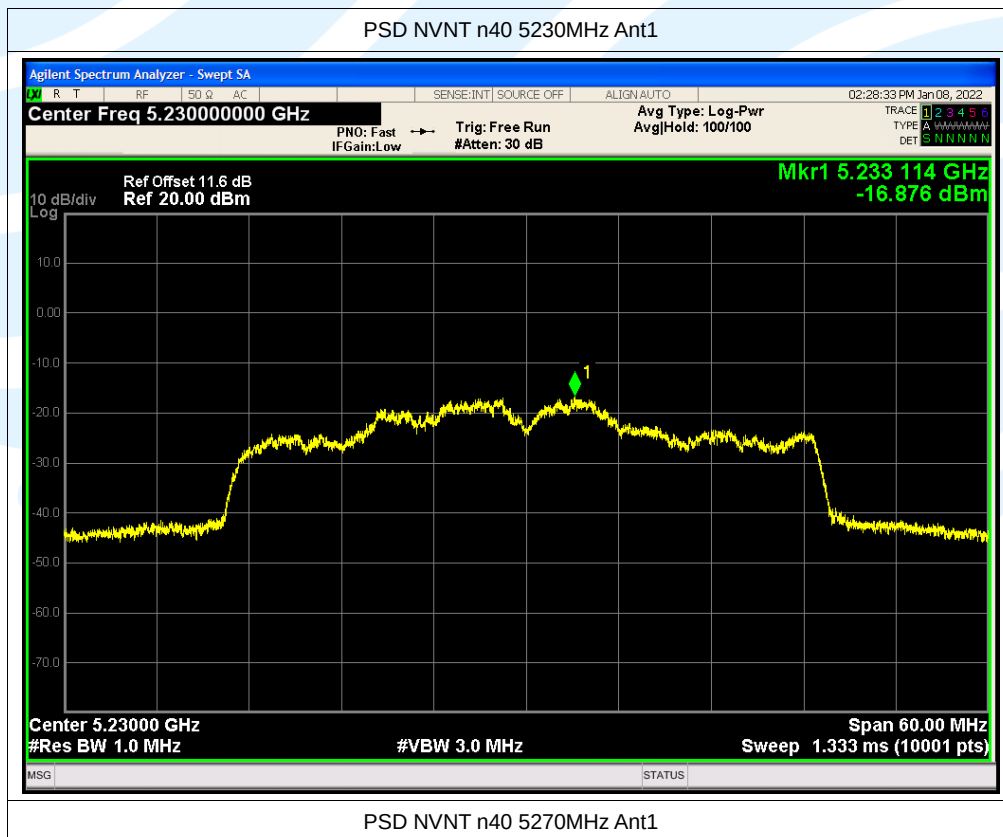
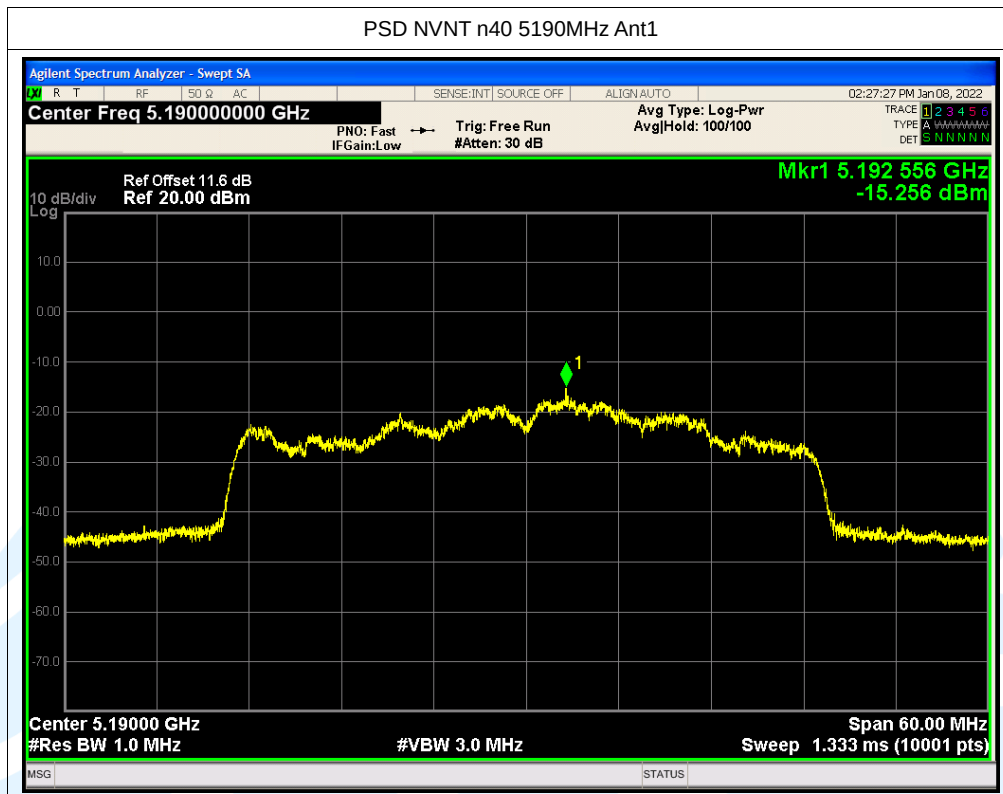


PSD NVNT n40 5270MHz Ant1

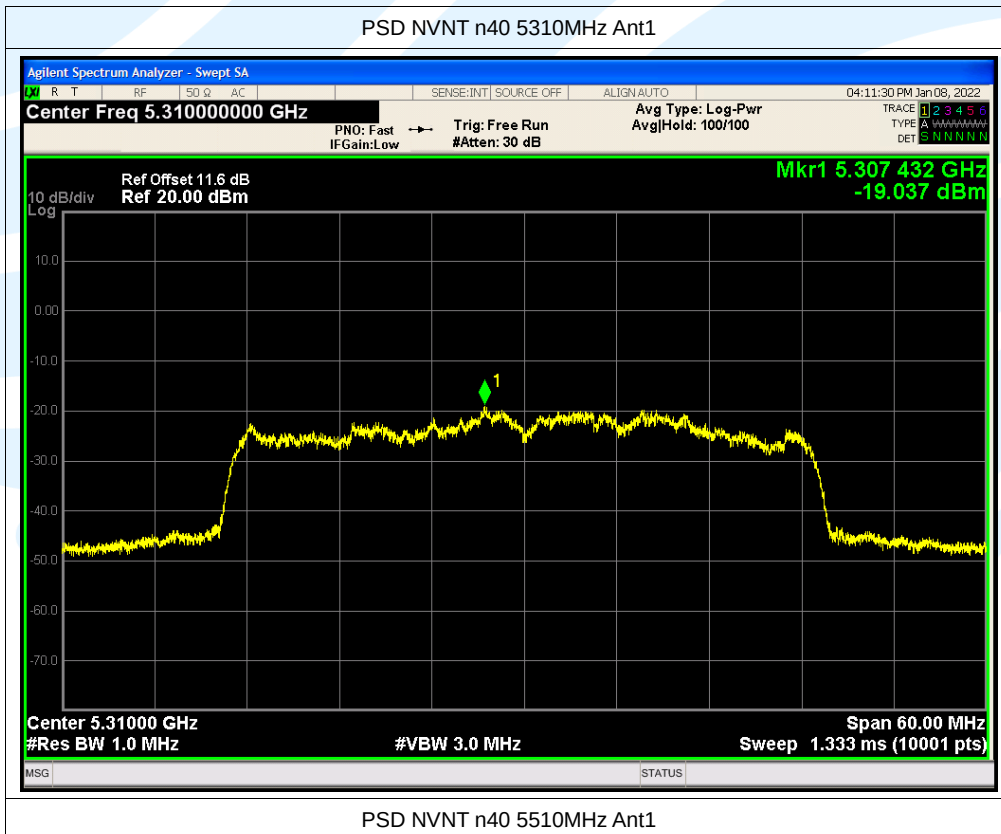

PSD NVNT n40 5510MHz Ant1

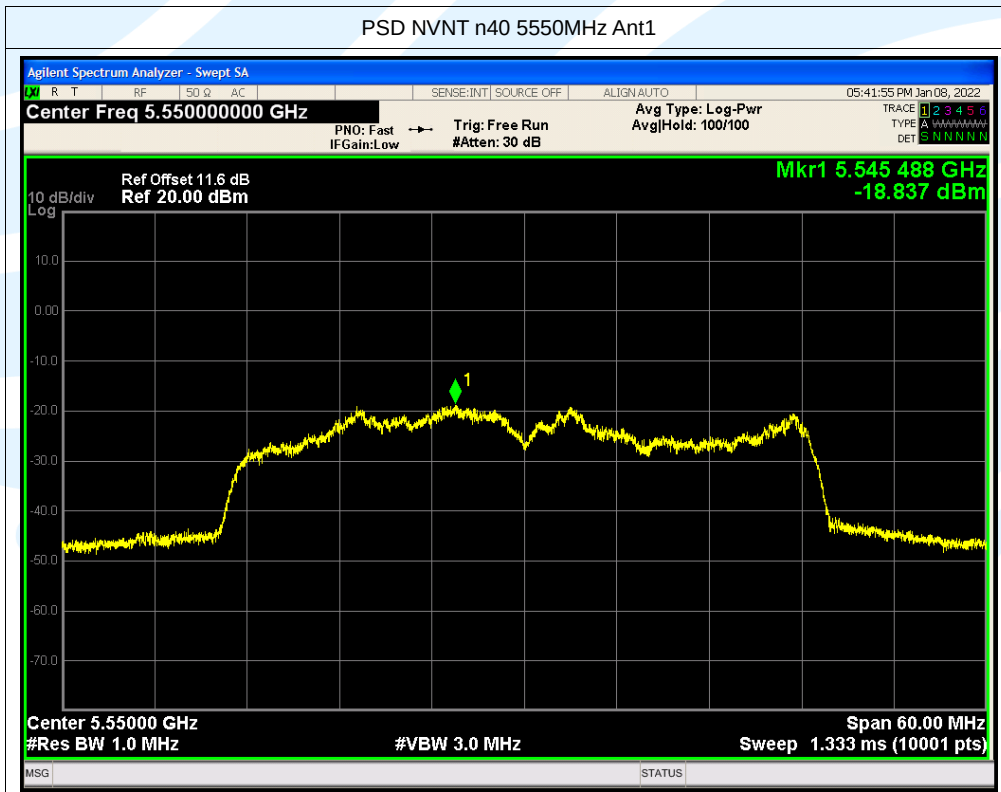

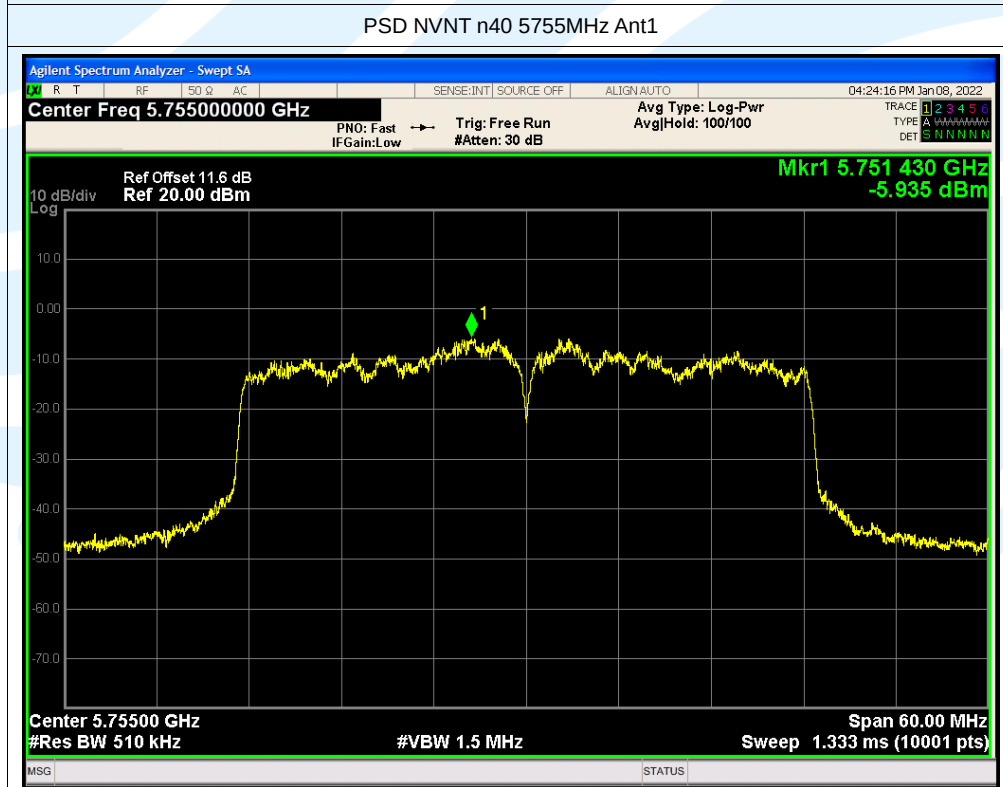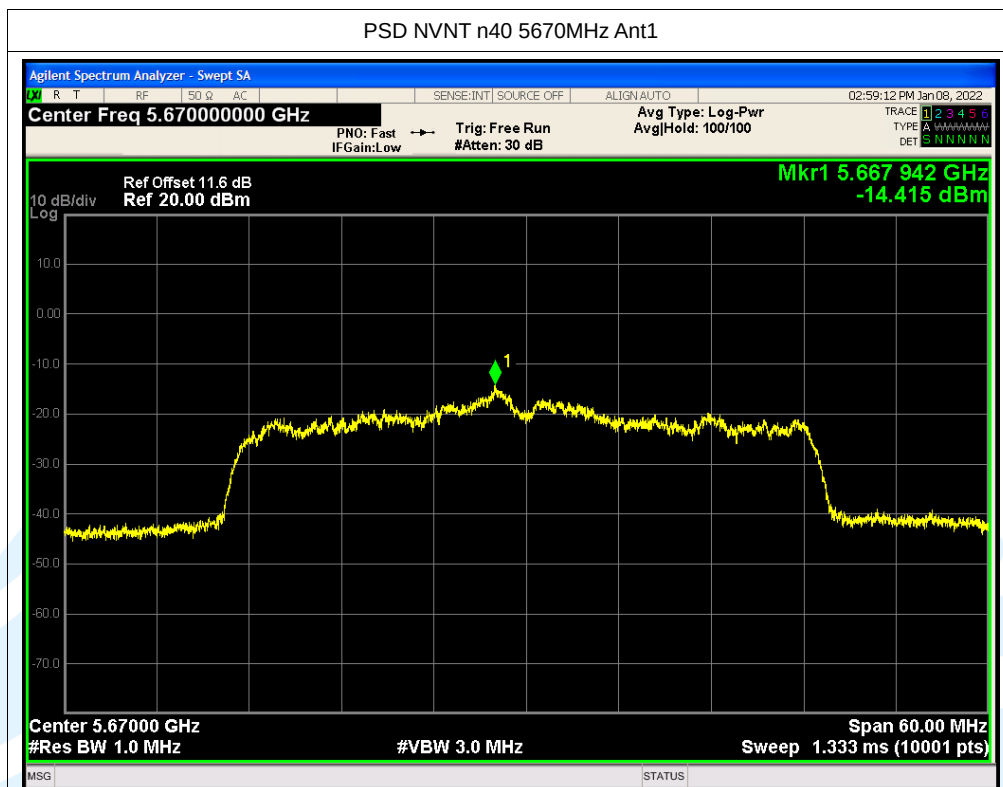


PSD NVNT n40 5795MHz Ant1








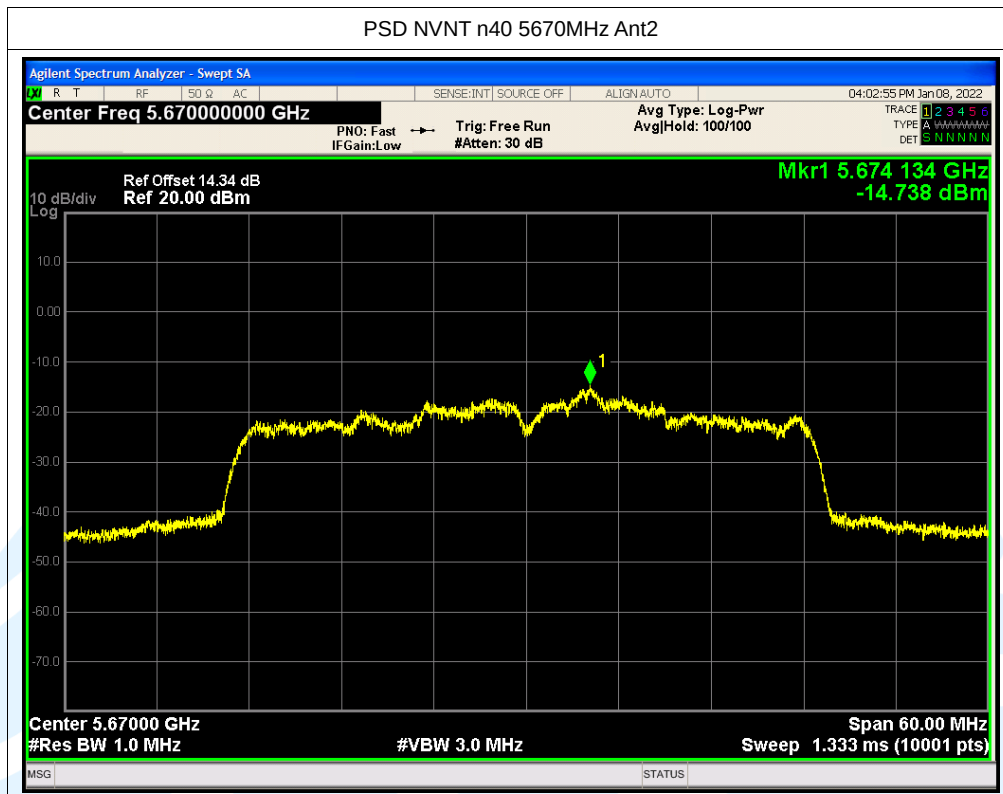





PSD NVNT ac20 5180MHz Ant1

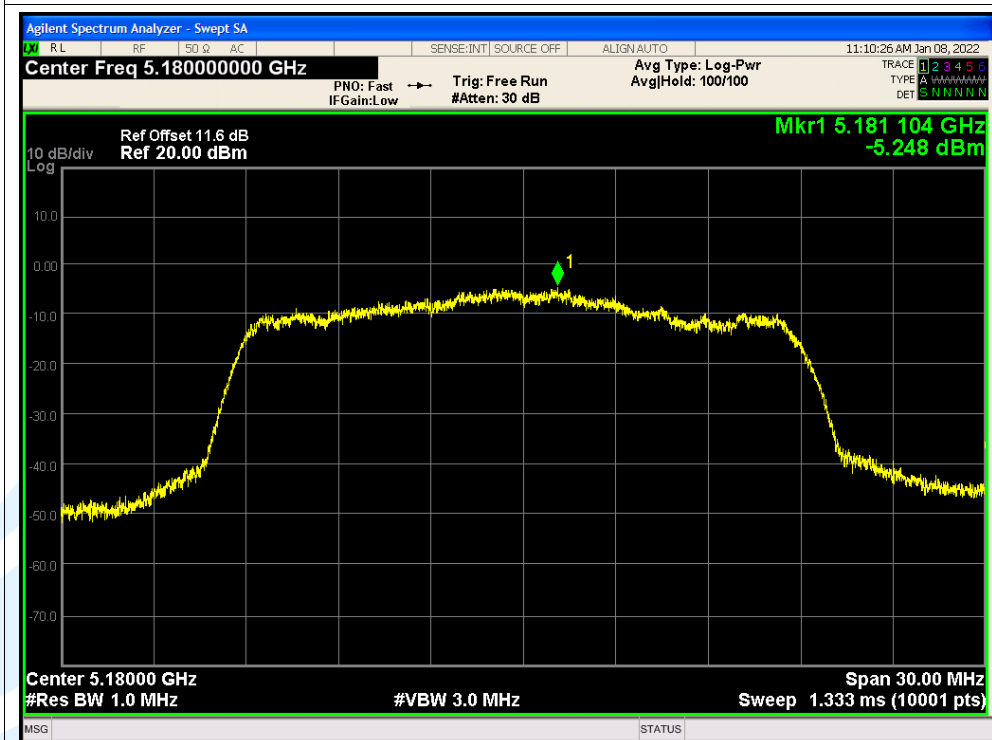


PSD NVNT ac20 5220MHz Ant1

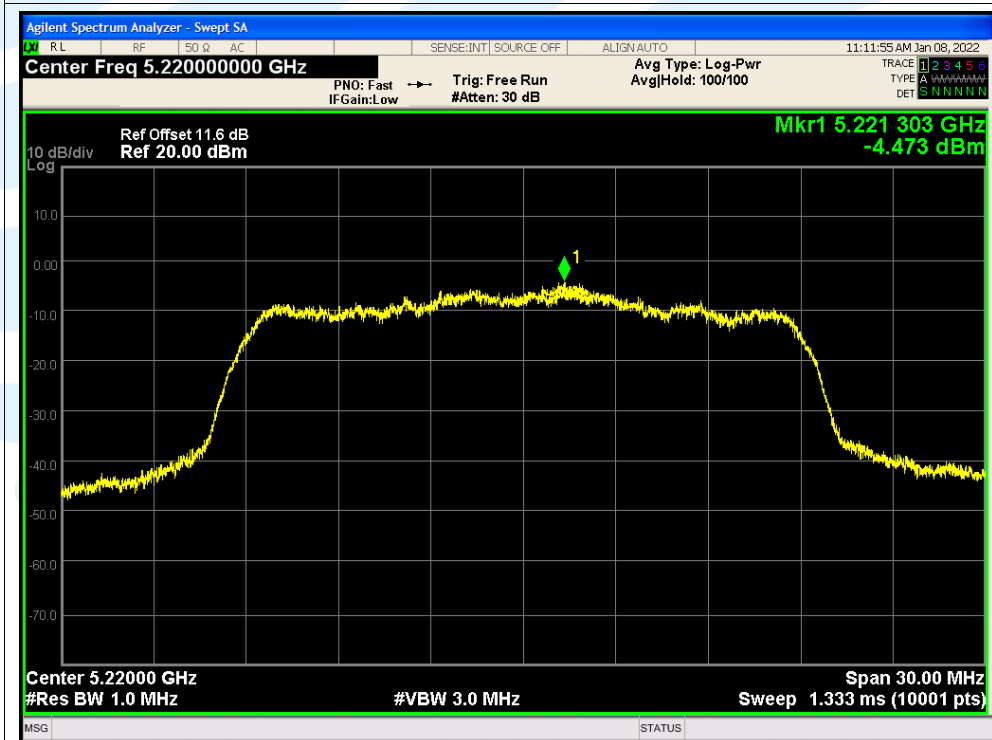


PSD NVNT ac20 5240MHz Ant1

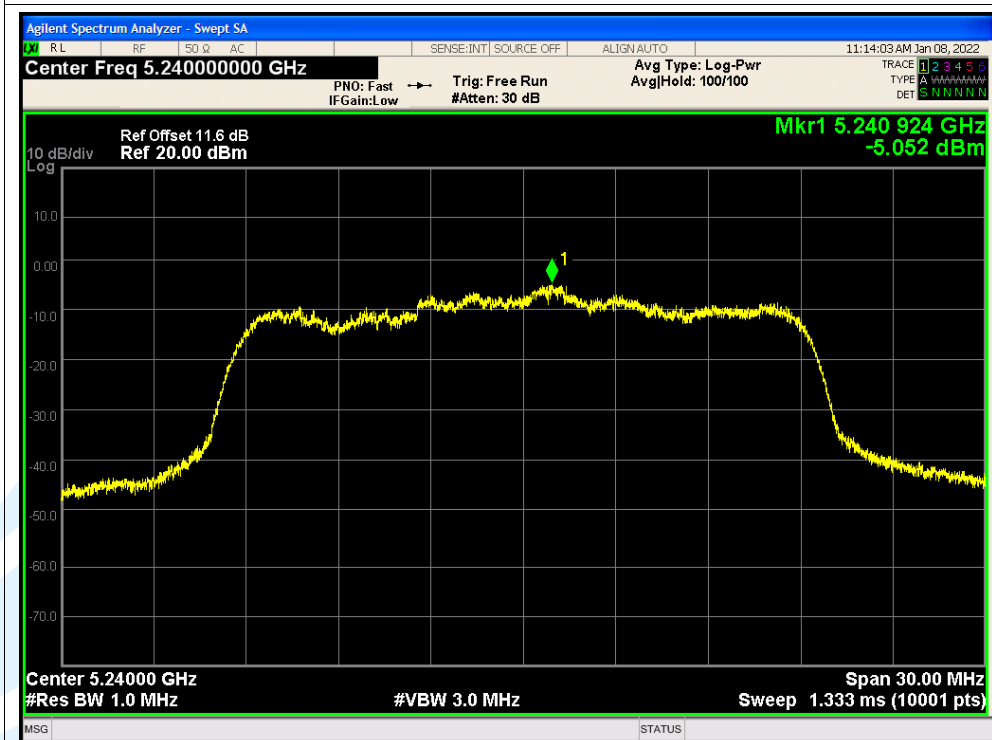


PSD NVNT ac20 5260MHz Ant1

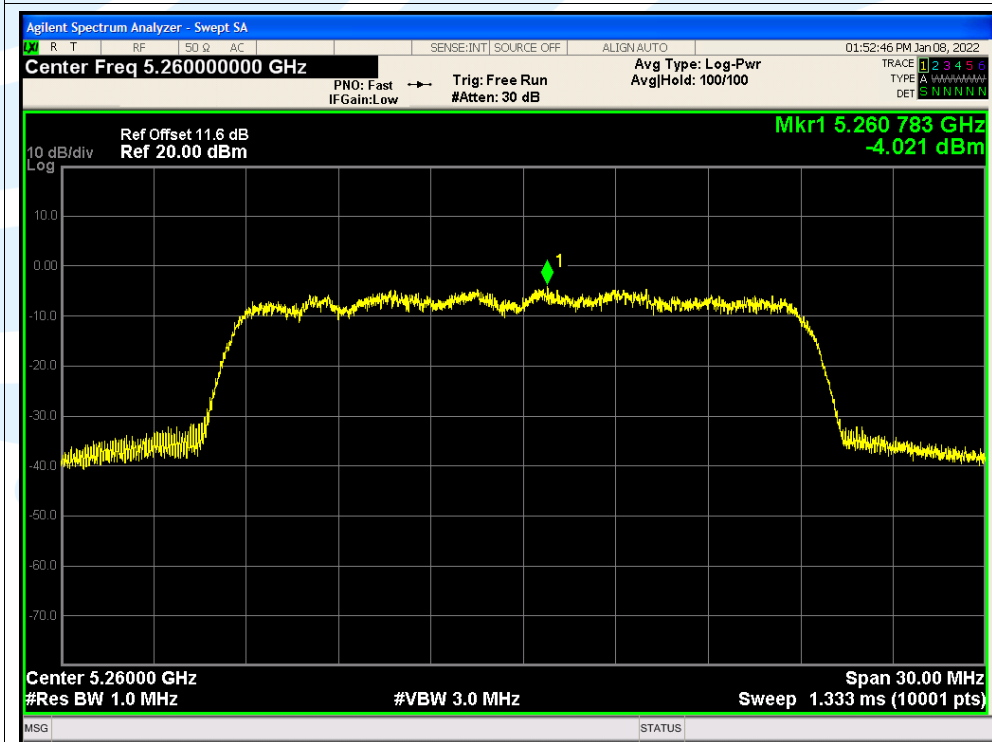


PSD NVNT ac20 5300MHz Ant1

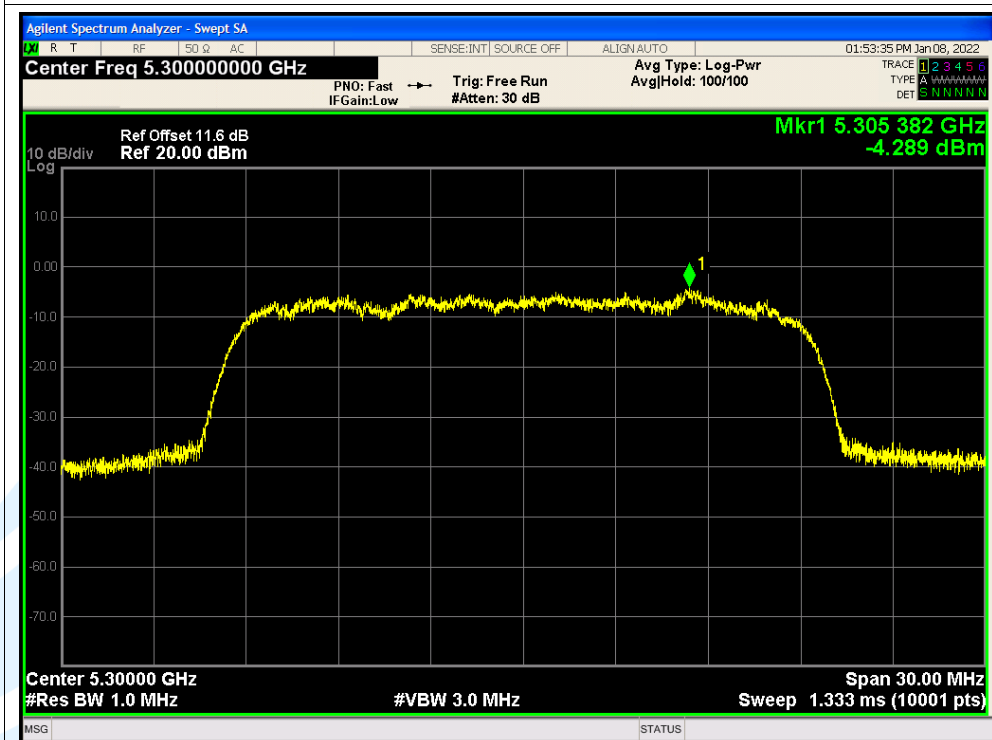


PSD NVNT ac20 5320MHz Ant1

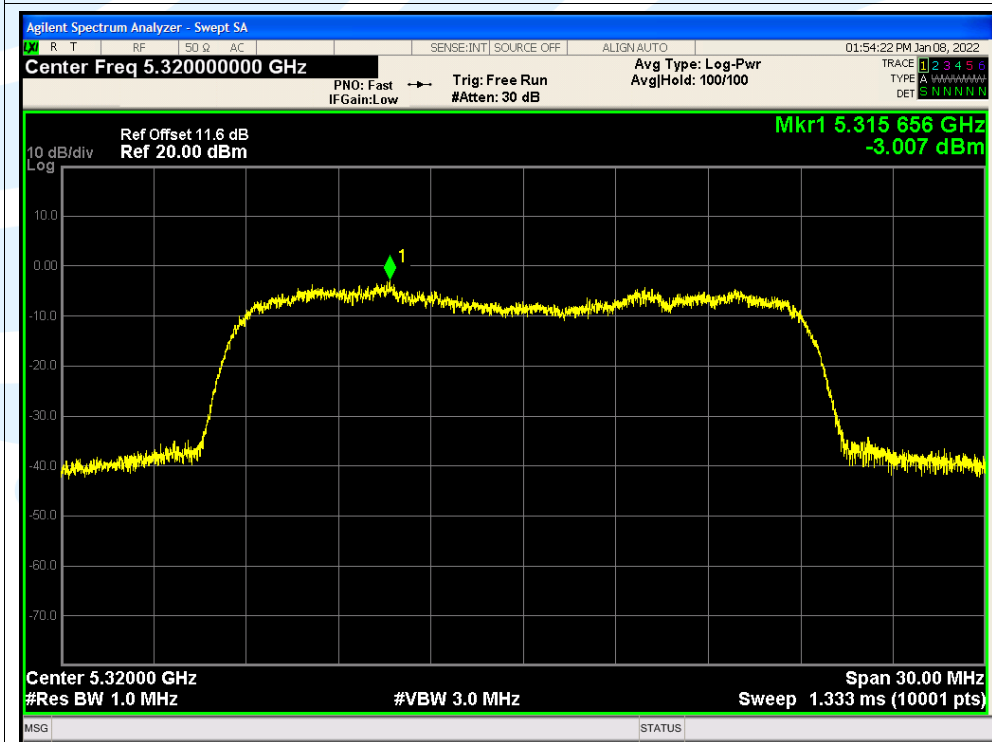


PSD NVNT ac20 5500MHz Ant1

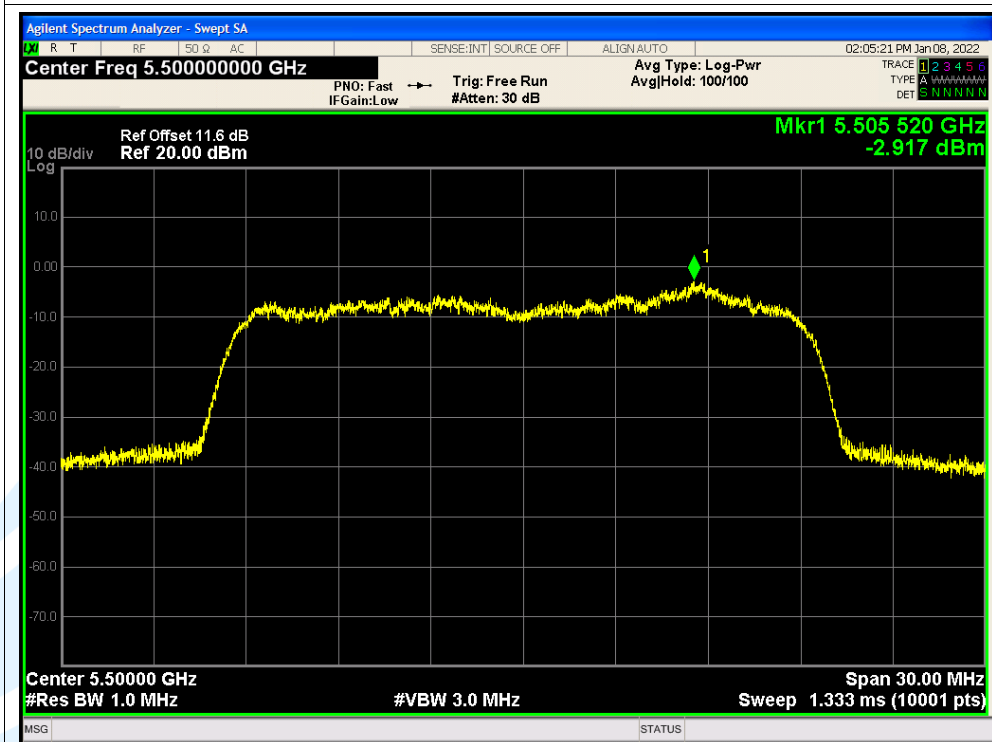


PSD NVNT ac20 5580MHz Ant1

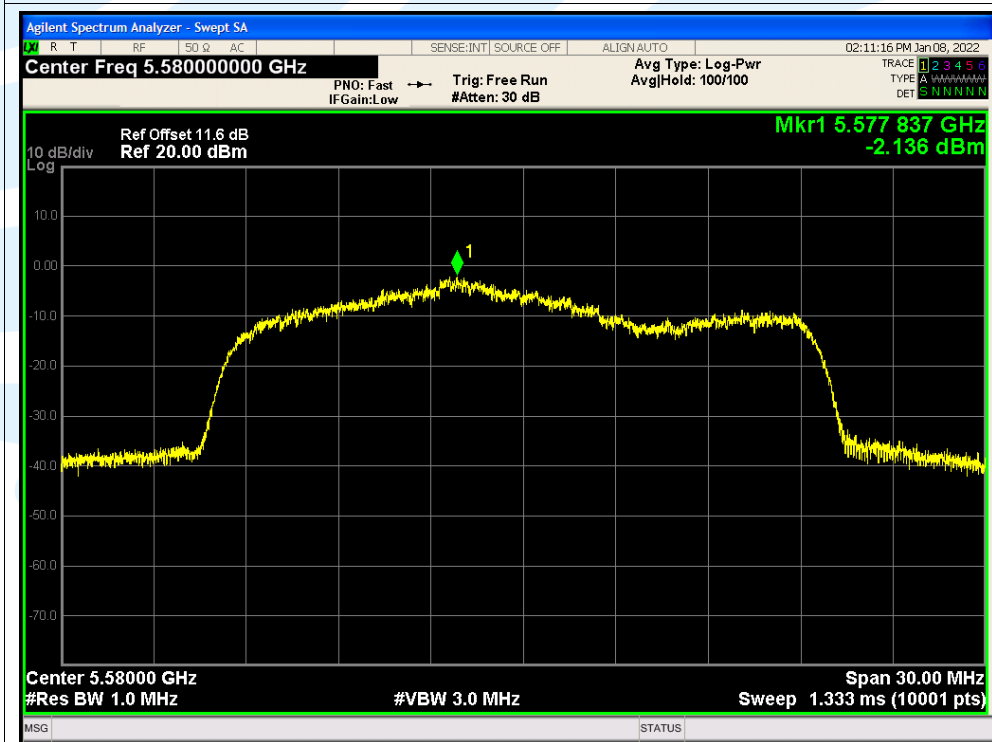


PSD NVNT ac20 5700MHz Ant1

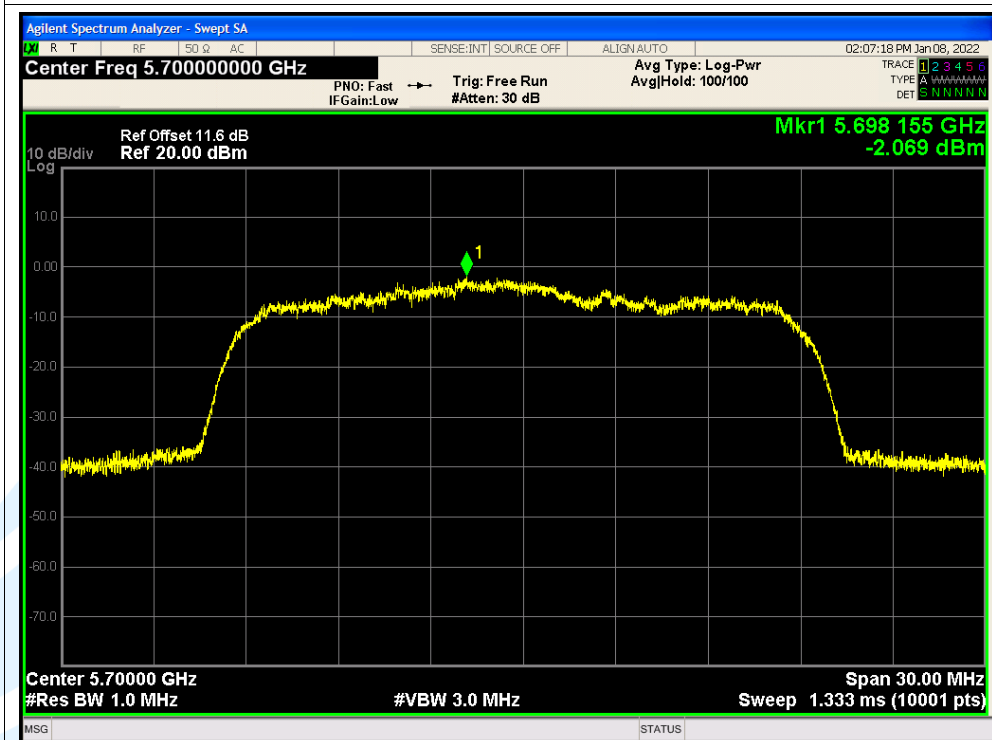


PSD NVNT ac20 5745MHz Ant1

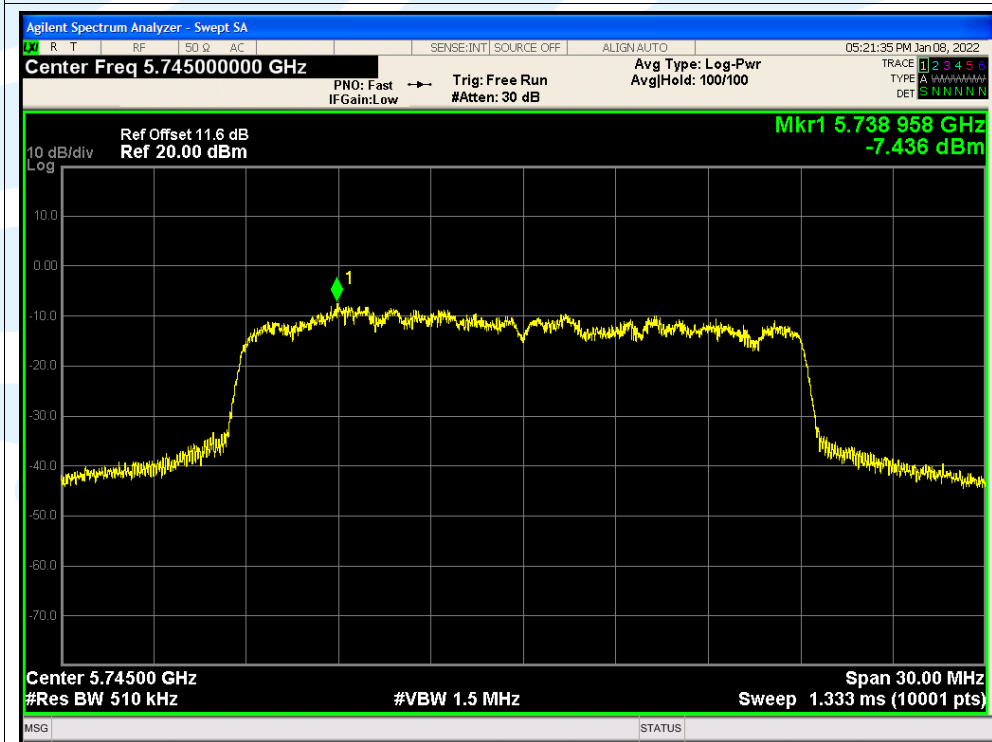


PSD NVNT ac20 5785MHz Ant1

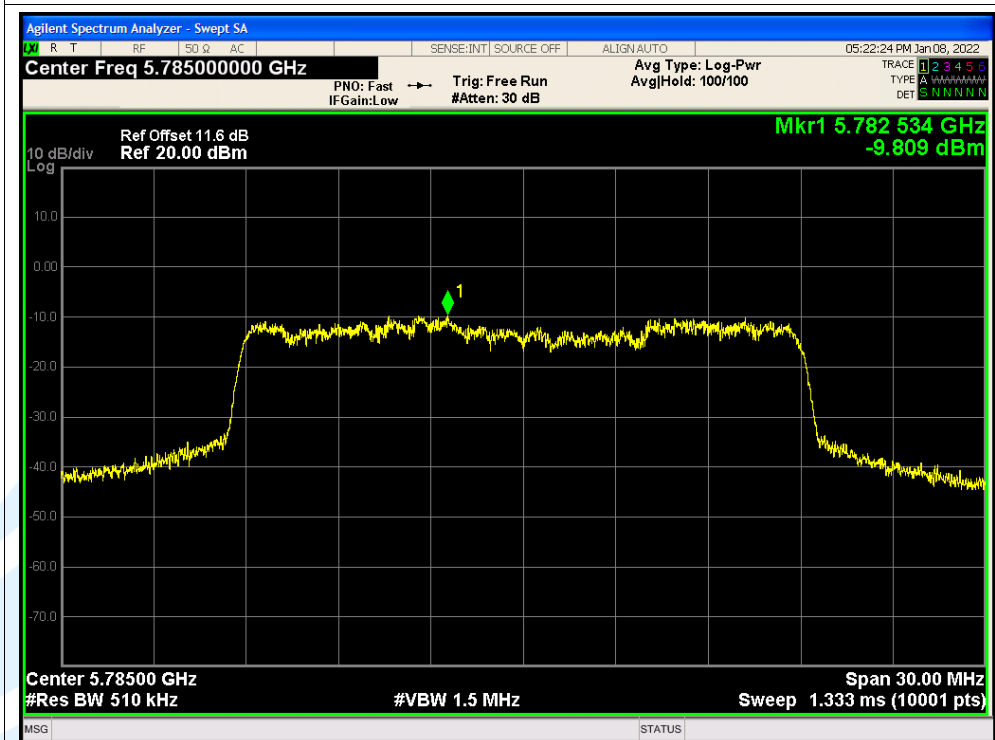


PSD NVNT ac20 5825MHz Ant1

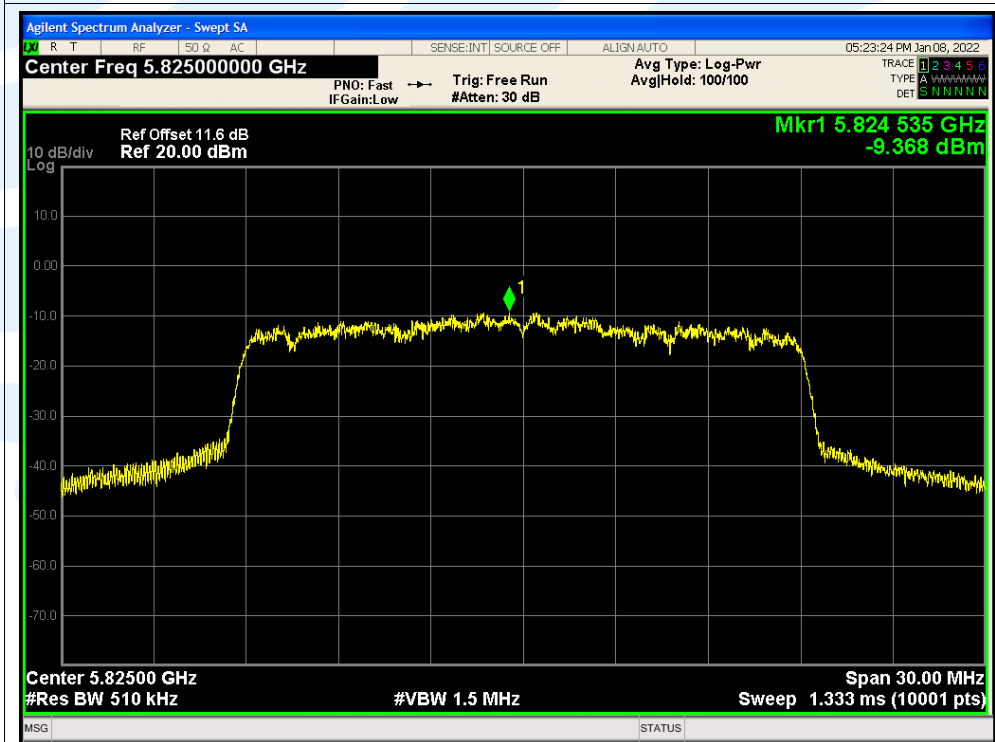


PSD NVNT ac20 5180MHz Ant2

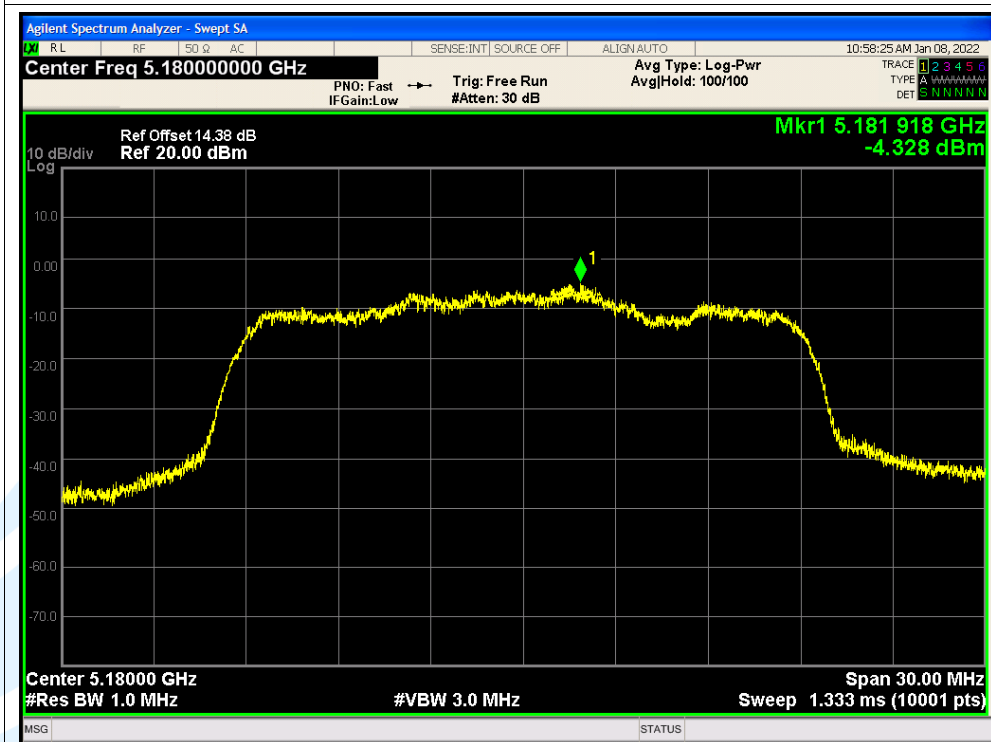


PSD NVNT ac20 5220MHz Ant2

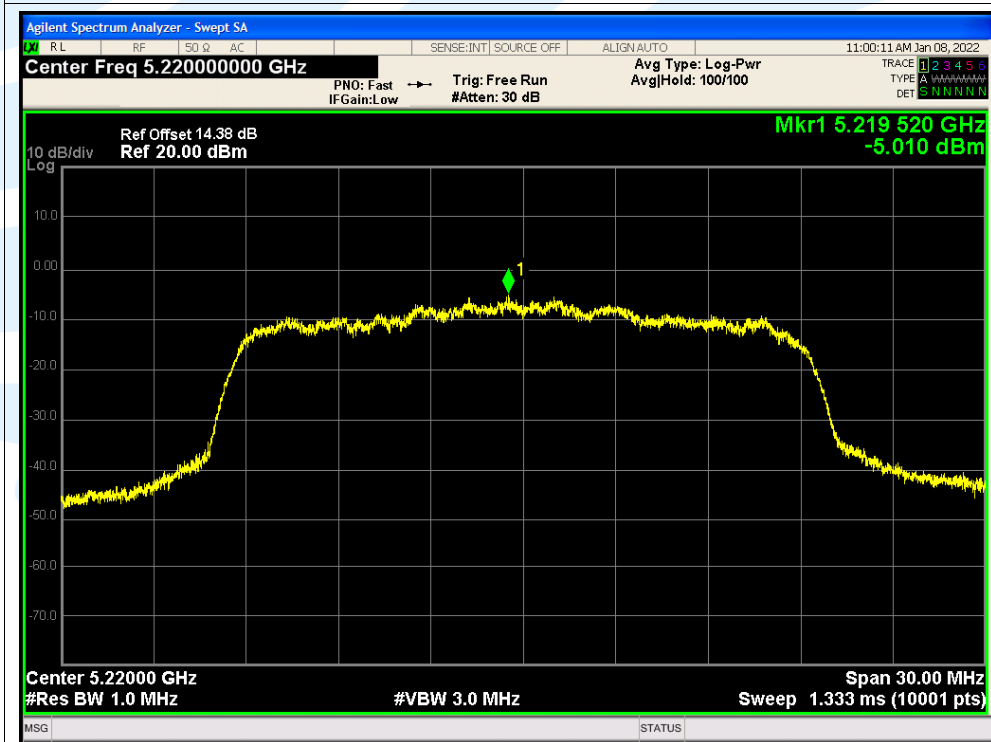


PSD NVNT ac20 5240MHz Ant2

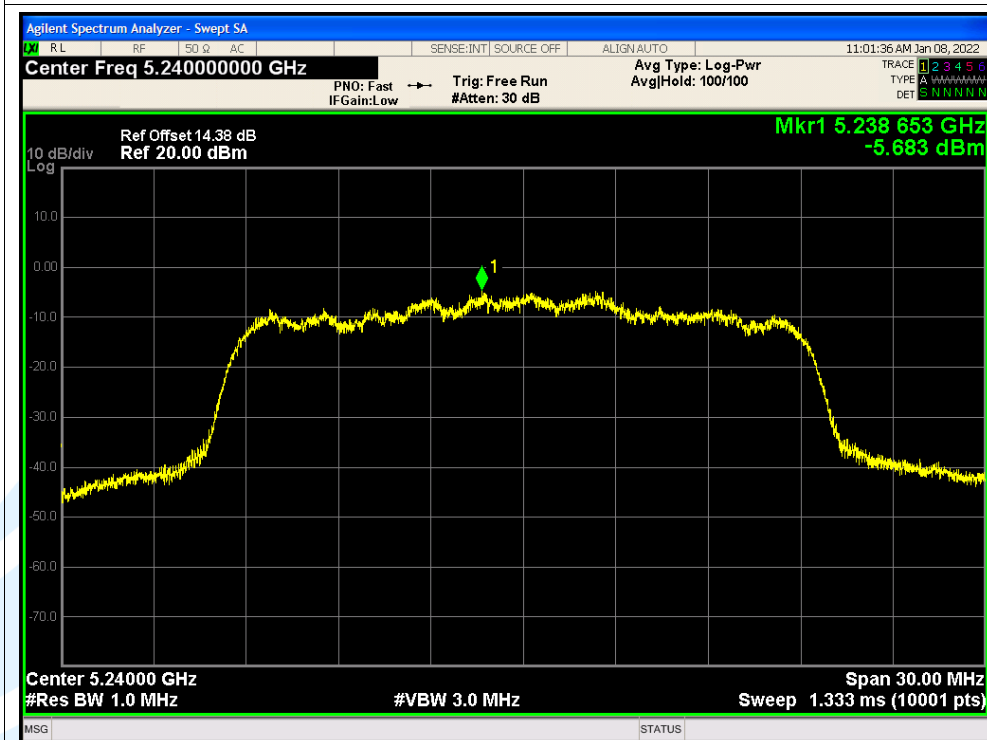


PSD NVNT ac20 5260MHz Ant2

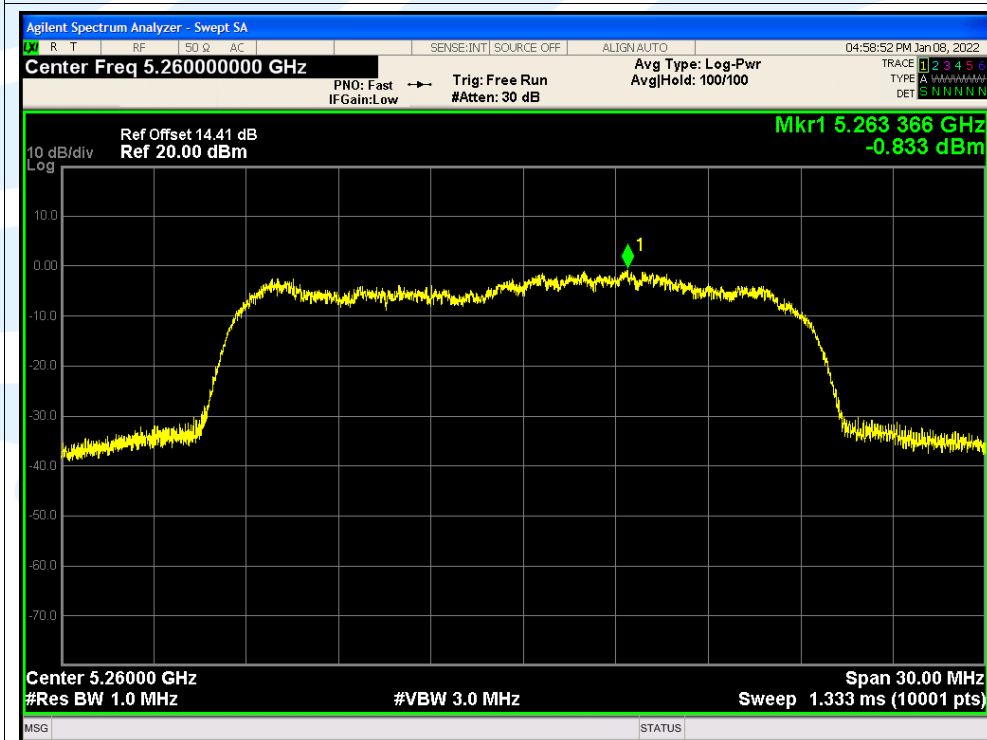


PSD NVNT ac20 5300MHz Ant2

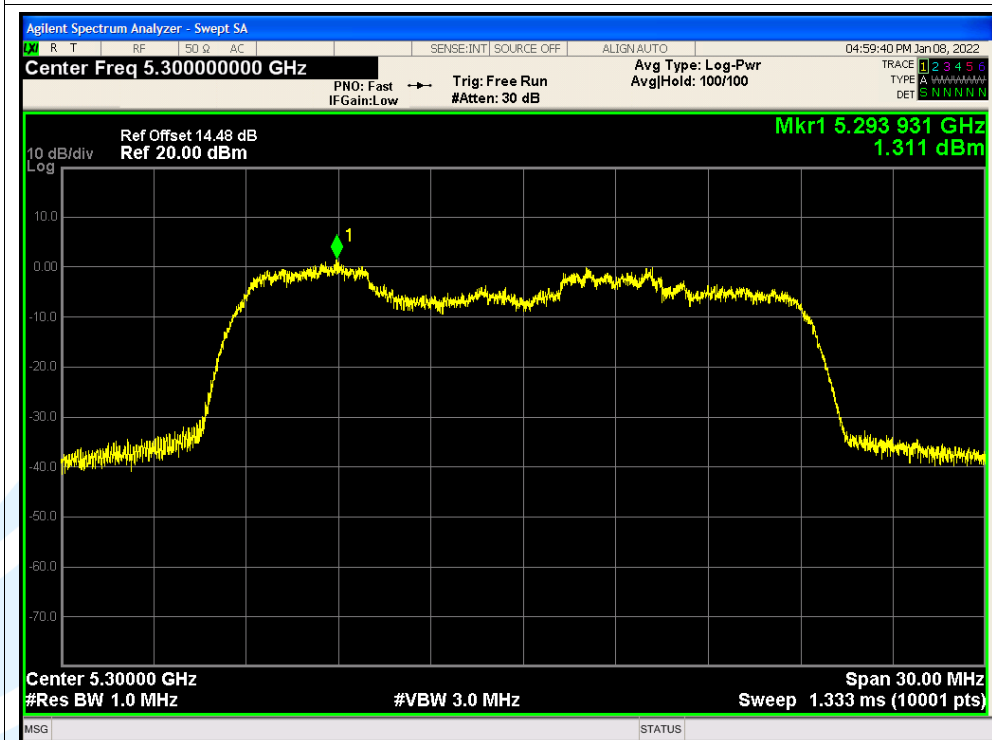

PSD NVNT ac20 5320MHz Ant2

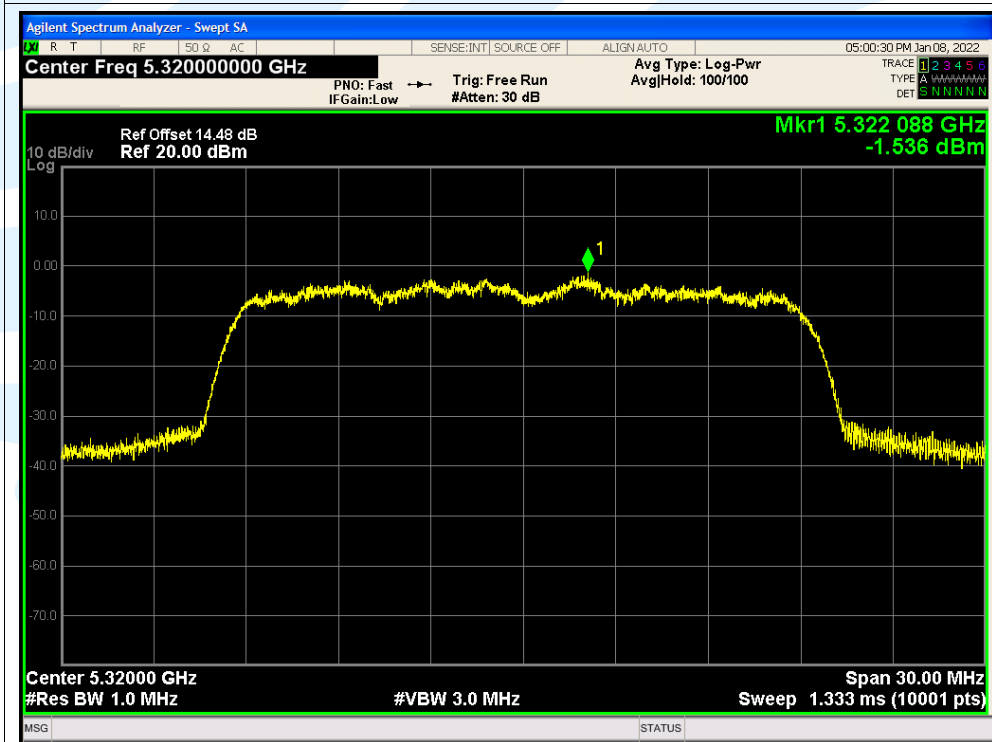

PSD NVNT ac20 5500MHz Ant2

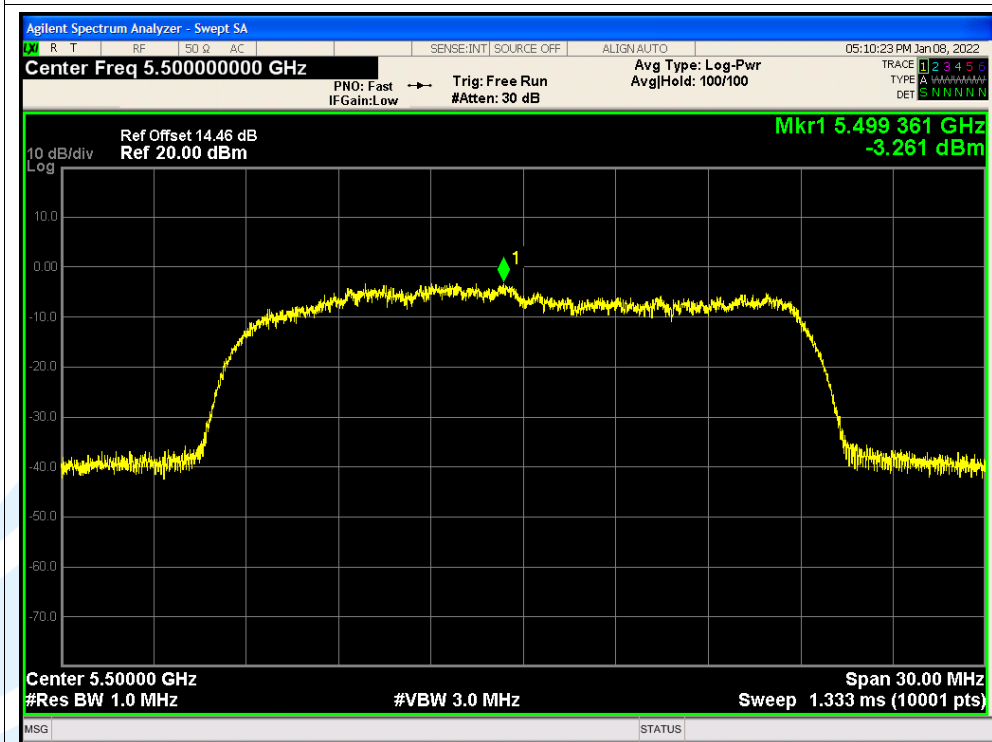

PSD NVNT ac20 5580MHz Ant2

