




USB Interface

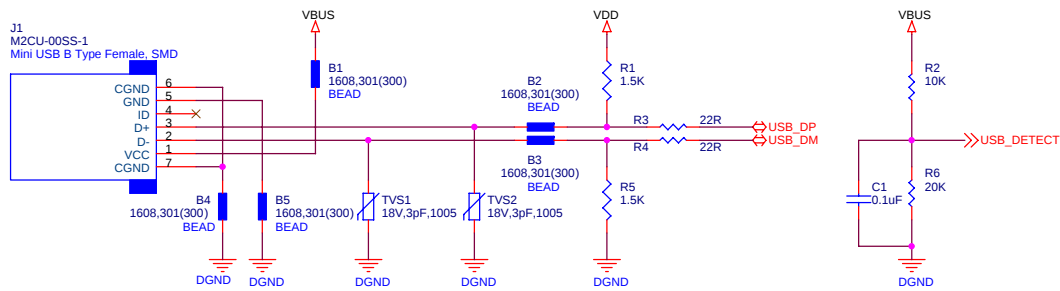

LCD(Top Veiw)



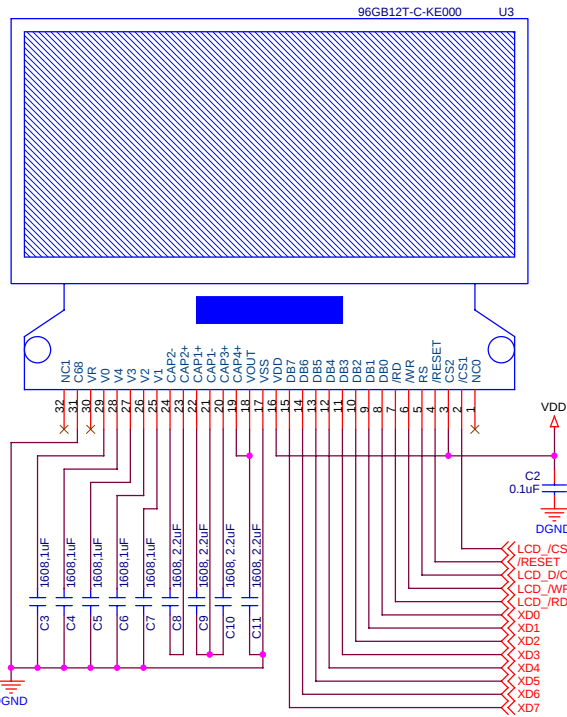


LCD Backlight

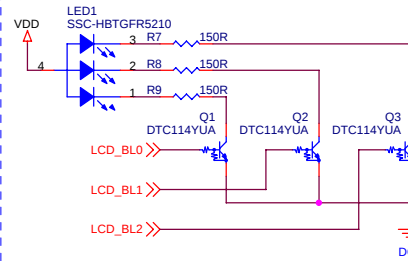


BLO(R)	BL1(G)	BL2(B)	Color
0	0	0	OFF
0	0	1	BLUE
0	1	0	GREEN
0	1	1	Indigo
1	0	0	RED
1	0	1	Violet
1	1	0	YELLOW
1	1	1	BLACK

Main Power(LDO) Circuit

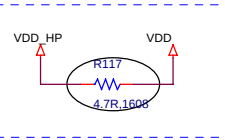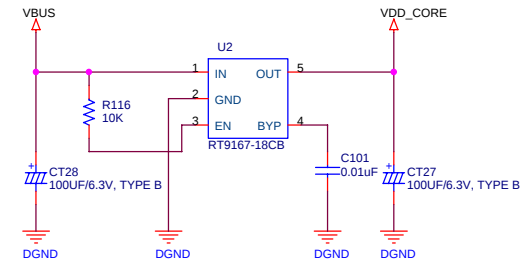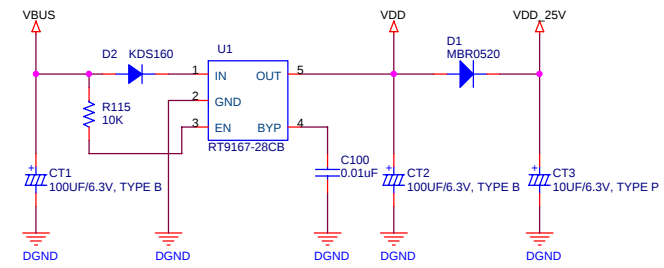


TR Top View

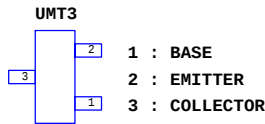


LED Top View




MBR0520 Top View

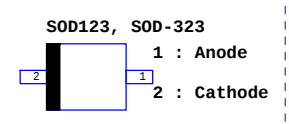





Mini USB-B Top View

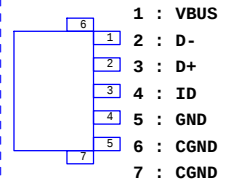






RT9167 Top View

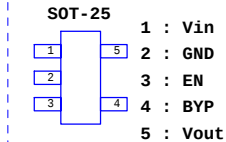








By-pass Capacitors Design Note.

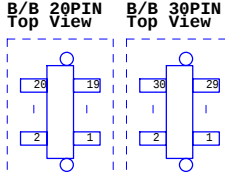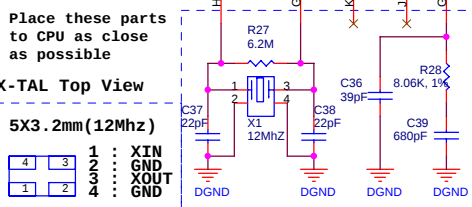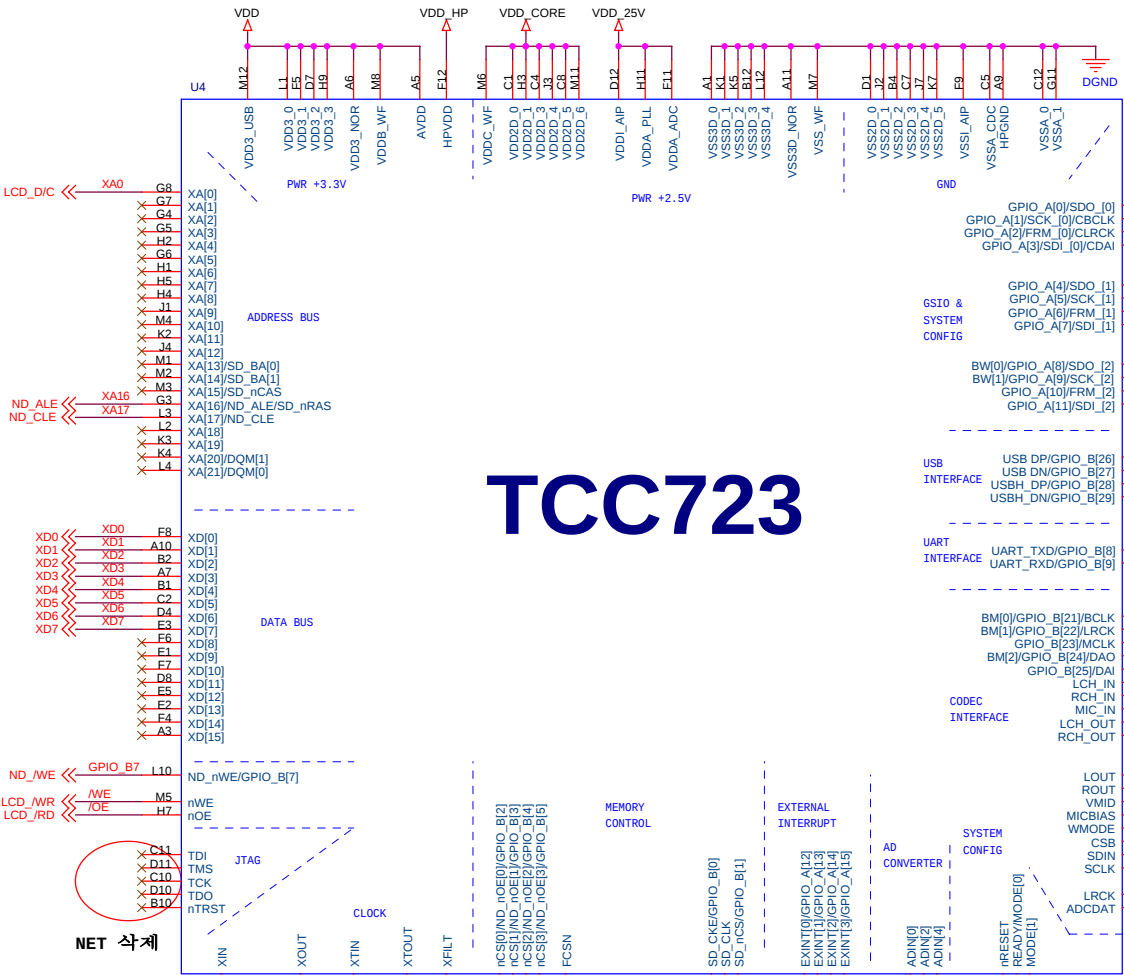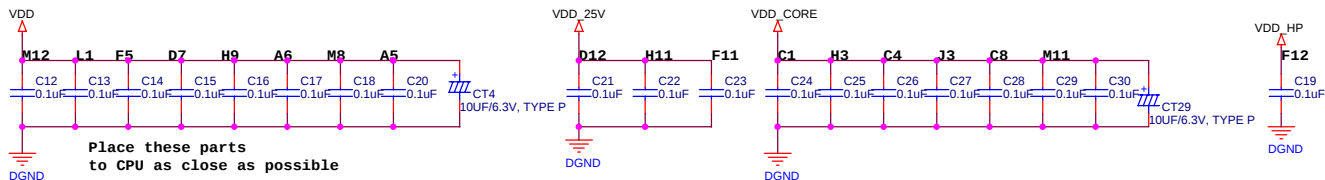


CONFIG(PULL-UP, PULL-DN)

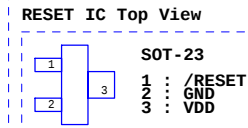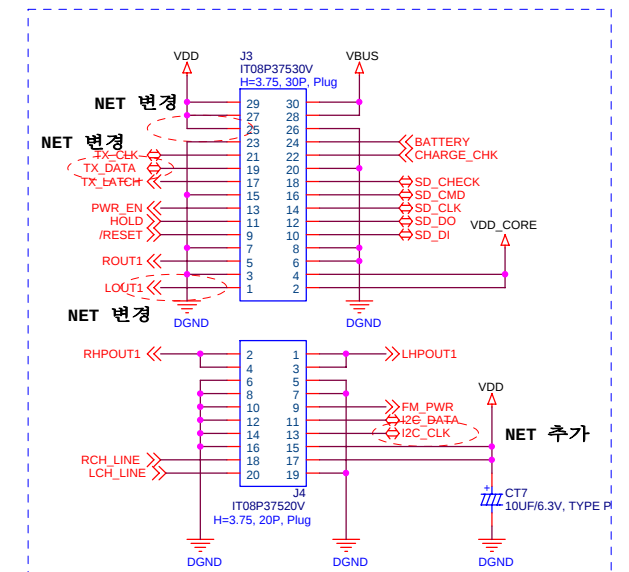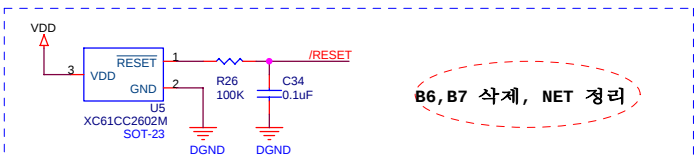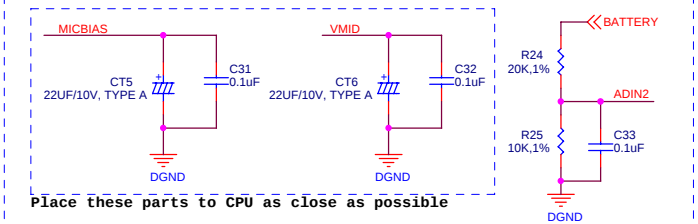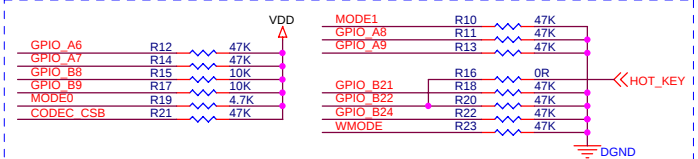


LDP-600 MAIN_Lexar				
Title				
03. Main Chip, Connector				
Size	Document Number	Edited By		Rev
A3	2004. 09. 05	Seung-Ryong, Ha		0.5
Date:	Saturday, September 11, 2004	Sheet	3	of 7

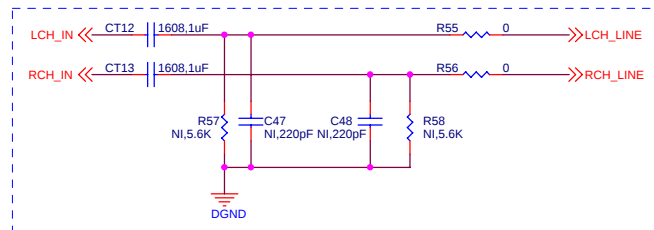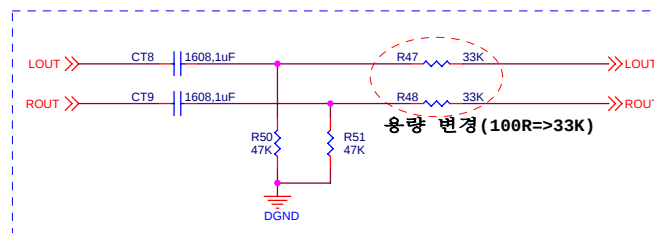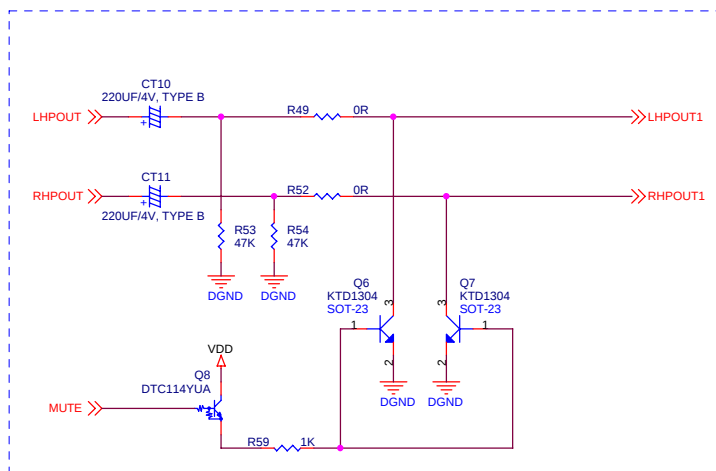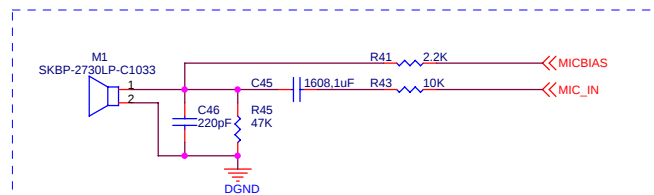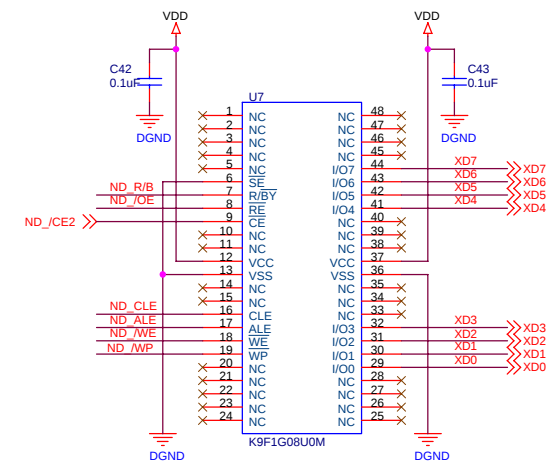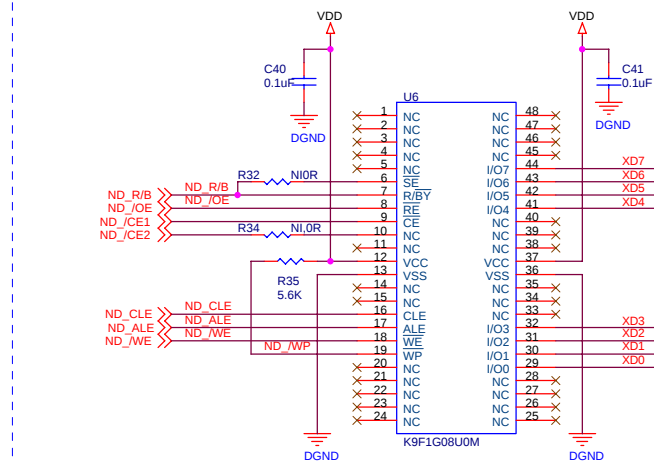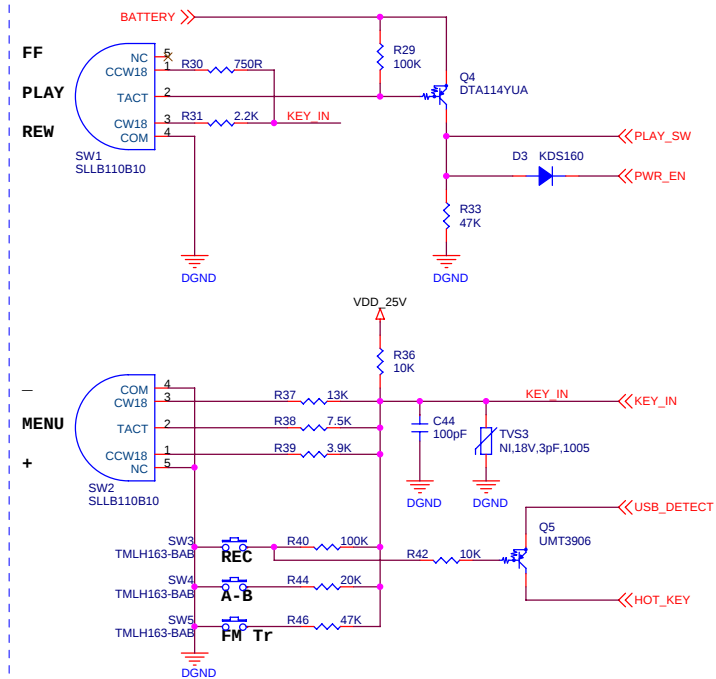


MIC Top View

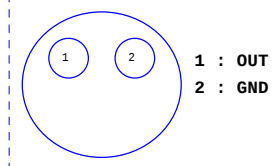


Jog Top View

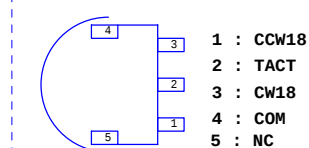


TR Top View




Charge Circuit

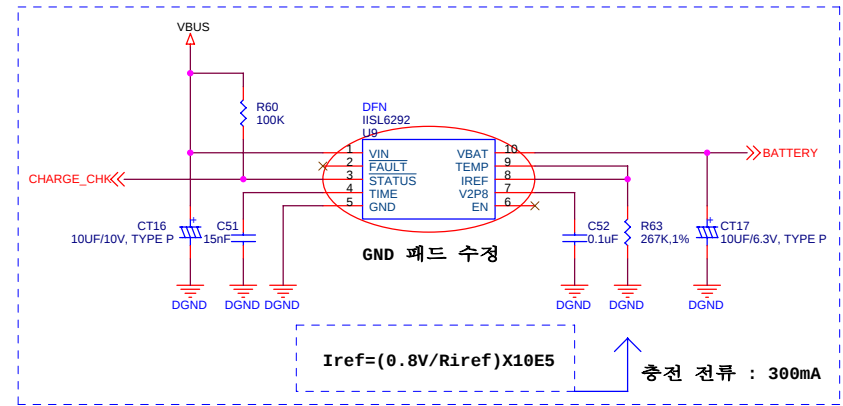


SD Card Interface

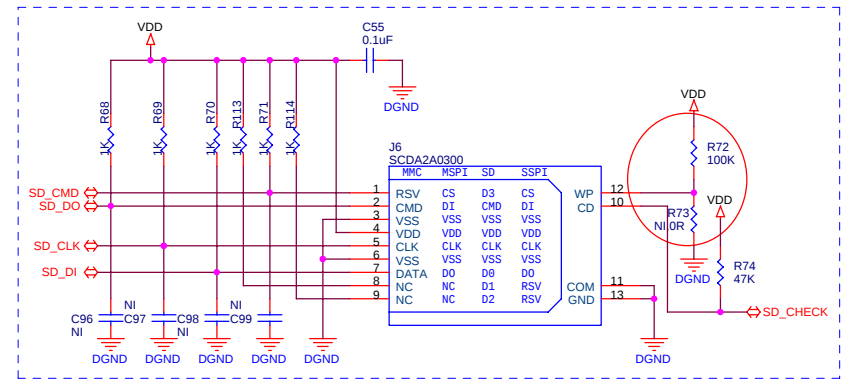


Earphone, Line-In Interface

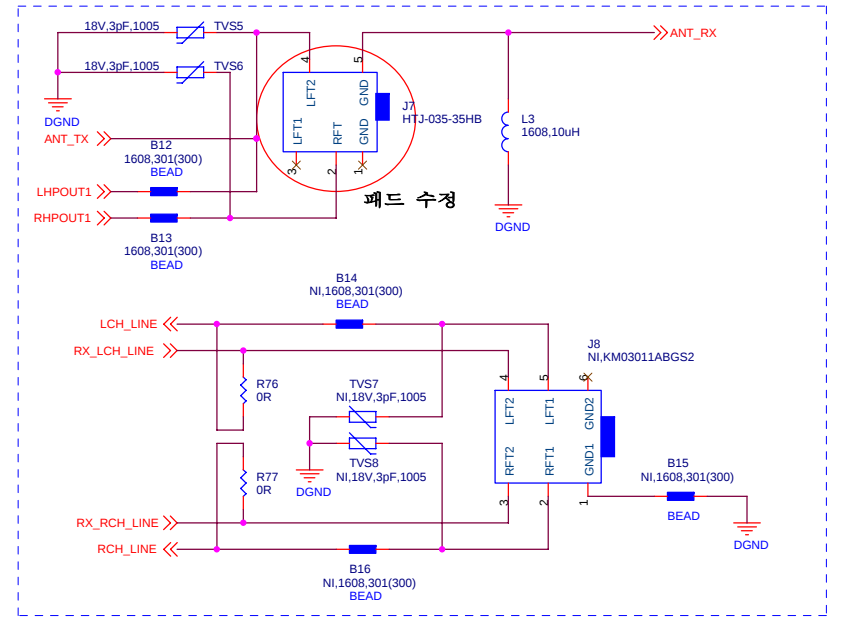


Main Power(DC/DC Step-Down) Circuit

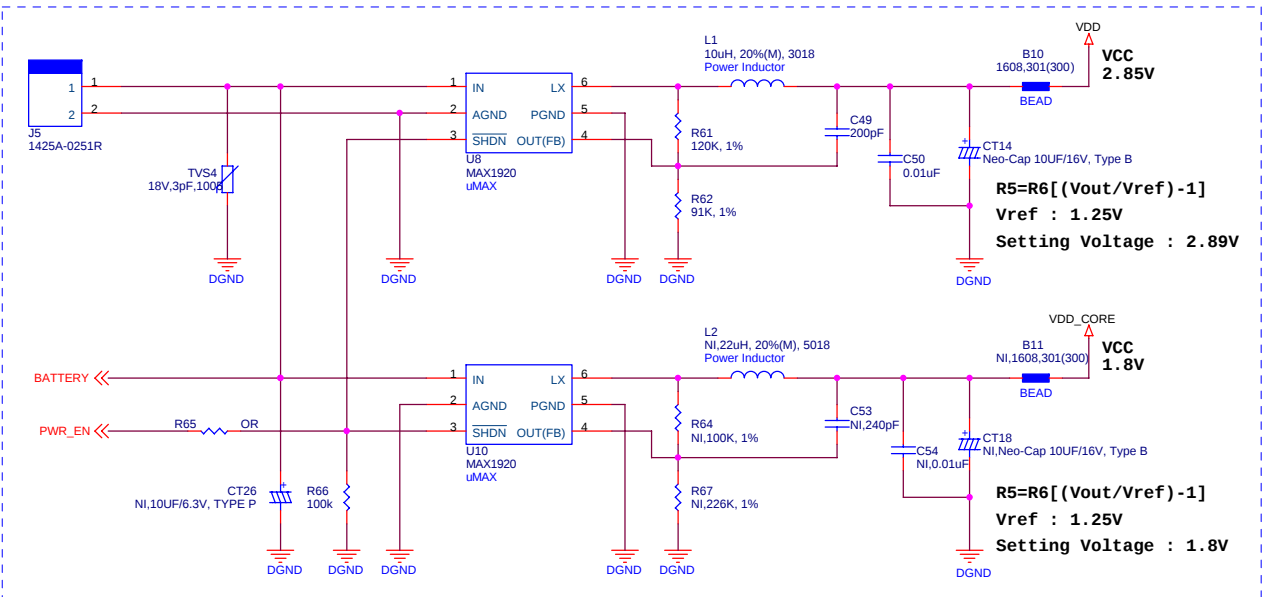


HOLD, RESET

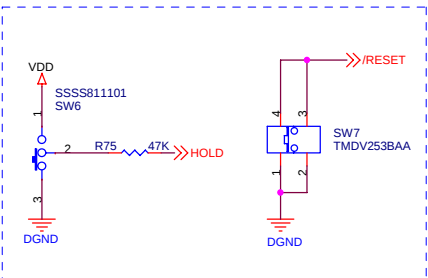


MAX1920 Top View

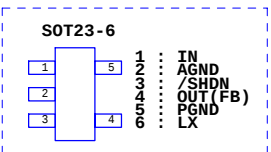


Slide SW Top View

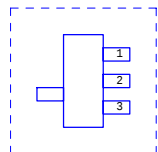


SD Slot Top View

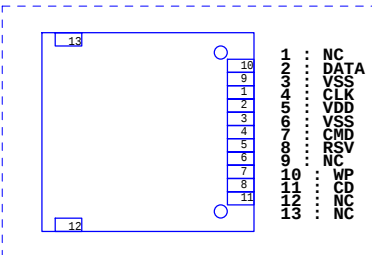


TACT SW

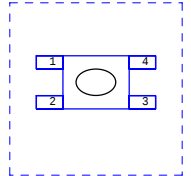


EAR JACK

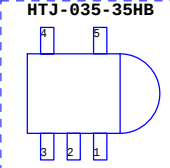


LINE JACK

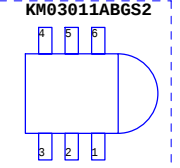


FM Transmitter Circuit

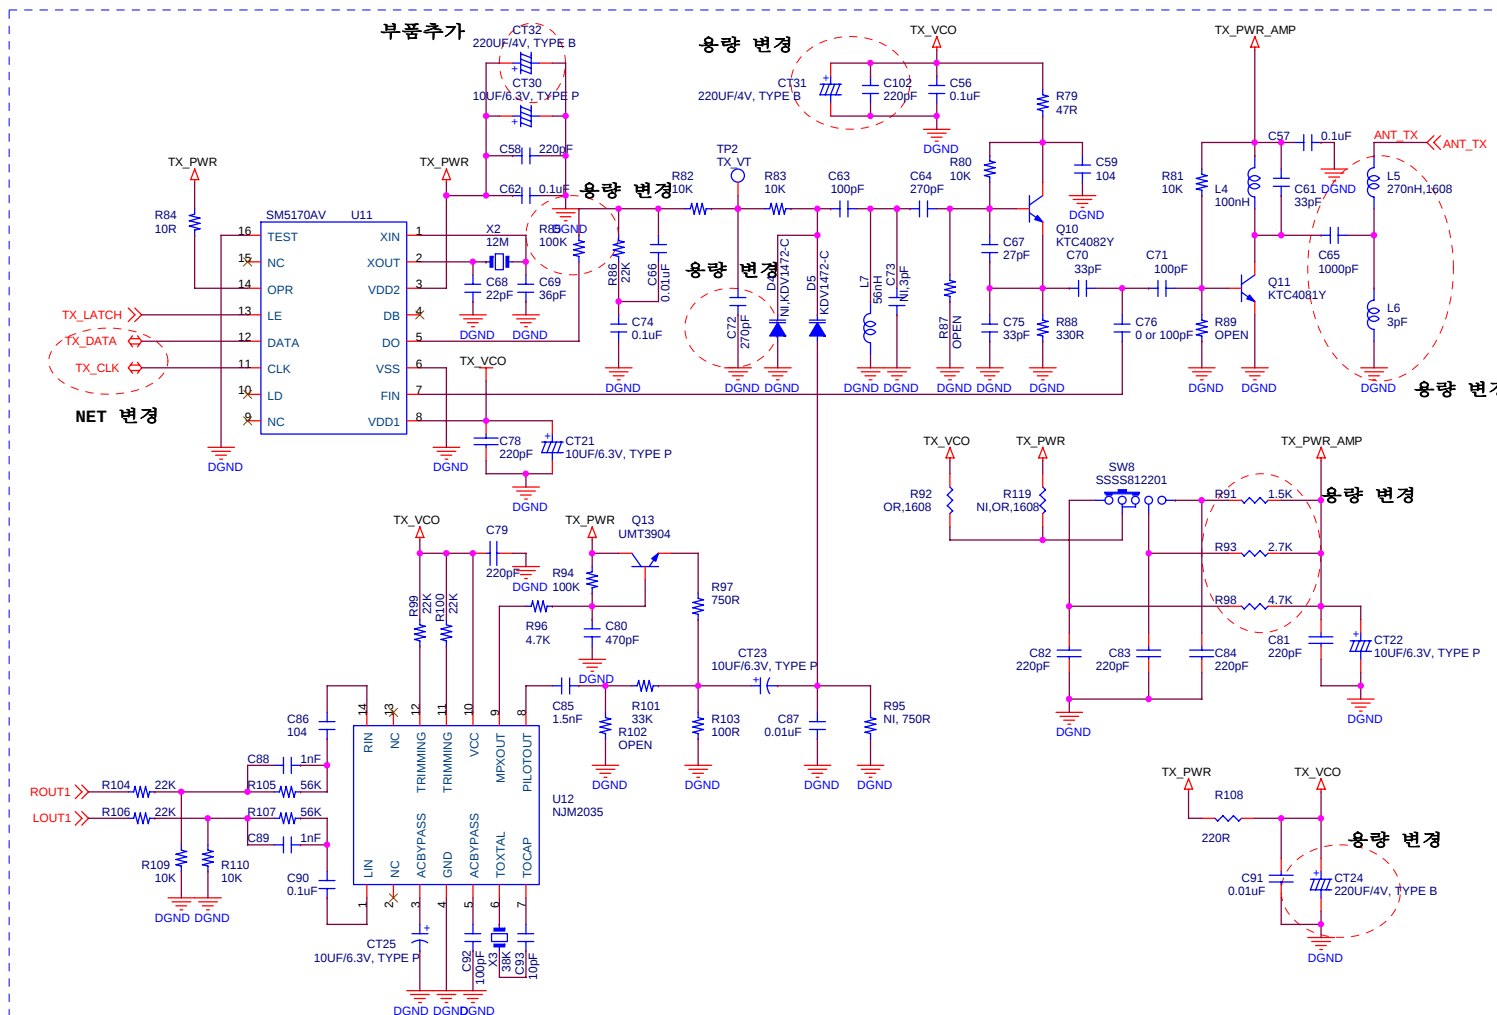


FM RX/TX Power Circuit

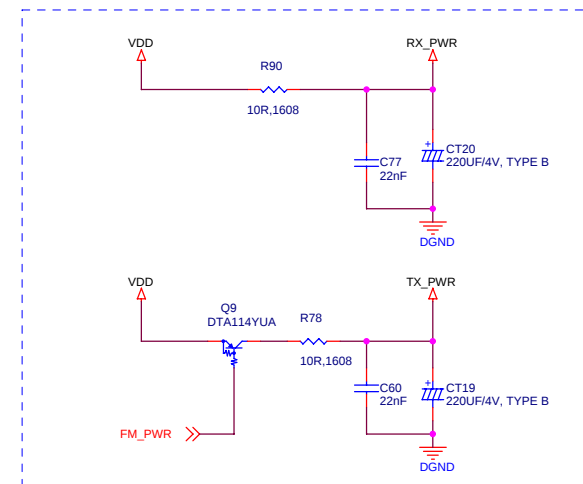


DA-302 Top View

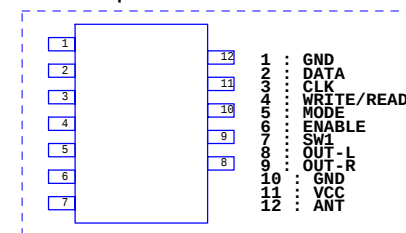


Slide SW Top View

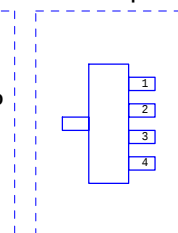


TR Top View

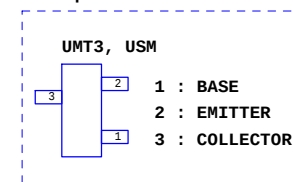


KDV1472-C Top View

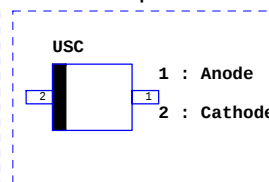

B/B Connector

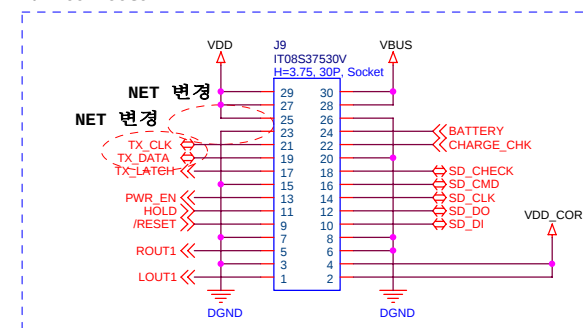

FM Radio Circuit

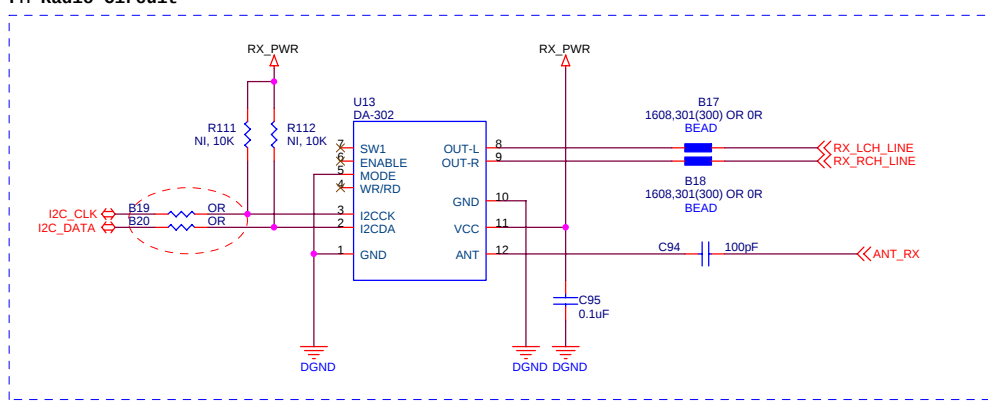

B/B Connector

