

FCC Radio Test Report


FCC ID: RWO-RZ090310


This report concerns: ☒ Class II Change

Project No. : 1906C174
Equipment : Notebook
Test Model : RZ09-031
Series Model : RZ09-0310
Integrated : Brand Name: Intel
Module : Model Name: AX201NGW
Applicant : Razer Inc.
Address : 201 3rd Street, Suite 900, San Francisco, CA 94103,
USA

Date of Receipt : Jun. 28, 2019
Date of Test : Jul. 01, 2019 ~ Aug. 05, 2019
Issued Date : Aug. 08, 2019
Tested by : BTL Inc.

Testing Engineer : 
(Welly Zhou)

Technical Manager : 
(Steven Lu)

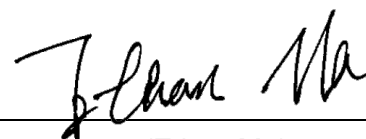Authorized Signatory : 
(Ethan Ma)

B T L I N C .

No.3, Jinshagang 1st Road, Shixia, Dalang Town, Dongguan,
Guangdong, China.

TEL: +86-769-8318-3000 FAX: +86-769-8319-6000



Certificate #5123.02

Declaration

BTL represents to the client that testing is done in accordance with standard procedures as applicable and that test instruments used has been calibrated with standards traceable to international standard(s) and/or national standard(s).

BTL's reports apply only to the specific samples tested under conditions. It is manufacture's responsibility to ensure that additional production units of this model are manufactured with the identical electrical and mechanical components. **BTL** shall have no liability for any declarations, inferences or generalizations drawn by the client or others from **BTL** issued reports.

The report must not be used by the client to claim product certification, approval, or endorsement by NIST, A2LA, or any agency of the U.S. Government.

This report is the confidential property of the client. As a mutual protection to the clients, the public and ourselves, the test report shall not be reproduced, except in full, without our written approval.

BTL's laboratory quality assurance procedures are in compliance with the **ISO/IEC 17025** requirements, and accredited by the conformity assessment authorities listed in this test report.

BTL is not responsible for the sampling stage, so the results only apply to the sample as received.

The information, data and test plan are provided by manufacturer which may affect the validity of results, so it is manufacturer's responsibility to ensure that the apparatus meets the essential requirements of applied standards and in all the possible configurations as representative of its intended use.

Limitation

For the use of the authority's logo is limited unless the Test Standard(s)/Scope(s)/Item(s) mentioned in this test report is (are) included in the conformity assessment authorities acceptance respective.

Please note that the measurement uncertainty is provided for informational purpose only and are not use in determining the Pass/Fail results.

Table of Contents	Page
REPORT ISSUED HISTORY	4
1 . GENERAL SUMMARY	5
2 . SUMMARY OF TEST RESULTS	6
2.1 TEST FACILITY	7
2.2 MEASUREMENT UNCERTAINTY	7
3 . GENERAL INFORMATION	8
3.1 GENERAL DESCRIPTION OF EUT	8
3.2 TEST MODES	11
3.3 BLOCK DIAGRAM SHOWING THE CONFIGURATION OF SYSTEM TESTED	13
3.4 SUPPORT UNITS	13
4 . RADIATED EMISSIONS TEST	14
4.1 LIMIT	14
4.2 TEST PROCEDURE	15
4.3 DEVIATION FROM TEST STANDARD	15
4.4 TEST SETUP	15
4.5 EUT OPERATION CONDITIONS	16
4.6 EUT TEST CONDITIONS	16
4.7 TEST RESULTS - 30 MHz TO 1000 MHz	16
4.8 TEST RESULTS - ABOVE 1000 MHz	16
5 . MEASUREMENT INSTRUMENTS LIST	17
6 . EUT TEST PHOTOS	18
APPENDIX A - RADIATED EMISSION - 30 MHZ TO 1 GHZ	20
APPENDIX B - RADIATED EMISSION - ABOVE 1000 MHZ	23

REPORT ISSUED HISTORY

Report Version	Description	Issued Date
R00	Original Issue.	Aug. 06, 2019
R01	Add the antenna description	Aug. 08, 2019

1. GENERAL SUMMARY

Equipment : Notebook
Brand Name : RAZER
Test Model : RZ09-031
Series Model : RZ09-0310
Applicant : Razer Inc.
Manufacturer : Razer Inc.
Address : 201 3rd Street, Suite 900, San Francisco, CA 94103,USA
Date of Test : Jul. 01, 2019 ~ Aug. 05, 2019
Test Sample : Engineering Sample No.: DG190627152
Standard(s) : FCC Part15, Subpart E(15.407)
ANSI C63.10-2013

The above equipment has been tested and found compliance with the requirement of the relative standards by BTL Inc..

The test data, data evaluation, and equipment configuration contained in our test report (Ref No. BTL-FCCP-1-1906C174) were obtained utilizing the test procedures, test instruments, test sites that has been accredited by the Authority of A2LA according to the ISO/IEC 17025 quality assessment standard and technical standard(s).

Test results included in this report are only for the UNII-1 and UNII-2A part.

2. SUMMARY OF TEST RESULTS

Test procedures according to the technical standard(s):

FCC Part15, Subpart E(15.407)				
Standard(s) Section	Test Item	Test Result	Judgement	Remark
15.207 15.407(b)	AC Power Line Conducted Emissions	-----	PASS	-----
15.407(b) 15.205(a) 15.209(a)	Radiated Emissions	Appendix A Appendix B	PASS	-----
15.407(a) 15.407(e)	Spectrum Bandwidth	-----	PASS	-----
15.407(a)	Maximum Output Power	-----	PASS	-----
15.407(a)	Power Spectral Density	-----	PASS	-----
15.407(g)	Frequency Stability	-----	PASS	-----
15.203	Antenna Requirements	-----	PASS	-----
15.407(c)	Automatically Discontinue Transmission	-----	PASS	Note(2)

Note:

- (1) "N/A" denotes test is not applicable in this test report.
- (2) During no any information transmission, the EUT can automatically discontinue transmission and become standby mode for power saving. the EUT can detect the controlling signal of ACK message transmitting from remote device and verify whether it shall resend or discontinue transmission.
- (3) For UNII-1 this device was functioned as a
☐ Access point device ☒ Client device
- (4) In this report only the radiated spurious emissions were evaluated and recorded. For the test results of all other test items please refer to module test report.

2.1 TEST FACILITY

The test facilities used to collect the test data in this report is at the location of No.3,Jinshagang 1st Road, Shixia, Dalang Town, Dongguan, Guangdong, China.

BTL's Test Firm Registration Number for FCC: 357015

BTL's Designation Number for FCC: CN1240

2.2 MEASUREMENT UNCERTAINTY

ISO/IEC 17025 requires that an estimate of the measurement uncertainties associated with the emissions test results be included in the report. The measurement uncertainties given below are based on a 95% confidence level (based on a coverage factor (k=2))

The BTL measurement uncertainty as below table:

A. Radiated emissions test:

Test Site	Method	Measurement Frequency Range	Ant. H / V	U, (dB)
DG-CB03	CISPR	30MHz ~ 200MHz	V	4.88
		30MHz ~ 200MHz	H	4.14
		200MHz ~ 1,000MHz	V	4.62
		200MHz ~ 1,000MHz	H	4.80
		1GHz ~ 6GHz	-	4.58
		6GHz ~ 18GHz	-	5.18
		18 ~ 26.5 GHz	-	3.80
		26.5 ~ 40 GHz	-	4.30

Note: Unless specifically mentioned, the uncertainty of measurement has not been taken into account to declare the compliance or non-compliance to the specification.

3. GENERAL INFORMATION

3.1 GENERAL DESCRIPTION OF EUT

Equipment	Notebook
Brand Name	RAZER
Test Model	RZ09-031
Series Model	RZ09-0310
Model Difference(s)	Only differ in model name and matching adapter.
Hardware Version	LY320_MB
Software Version	Windows 10
Power Source	1# DC voltage supplied from AC/DC adapter. Brand / Model: RAZER / RC30-0239 2# Supplied from battery. Brand / Model: RAZER / RC30-028102
Power Rating	1# I/P: 100-240V~2A 50/60Hz O/P: 5V/9V/15V --- 3A, 20V --- 3.25A 2# DC 11.55V,4602mAh,53.1Wh
Operation Frequency	UNII-1: 5150 MHz~5250 MHz UNII-2A: 5250 MHz~5350 MHz
Modulation Type	IEEE 802.11a/n/ac: OFDM IEEE 802.11ax: OFDMA
Bit Rate of Transmitter	Up to 2402 Mbps

Note:

1. For a more detailed features description, please refer to the manufacturer's specifications or the user's manual.

2. Channel List:

IEEE 802.11a IEEE 802.11n (HT20) IEEE 802.11ac (VHT20) IEEE 802.11ax (HE20)		IEEE 802.11n (HT40) IEEE 802.11ac (VHT40) IEEE 802.11ax (HE40)		IEEE 802.11ac (VHT80) IEEE 802.11ax (HE80)	
UNII-1		UNII-1		UNII-1	
Channel	Frequency (MHz)	Channel	Frequency (MHz)	Channel	Frequency (MHz)
36	5180	38	5190	42	5210
40	5200	46	5230		
44	5220				
48	5240				

IEEE 802.11ac (VHT160) IEEE 802.11ax (HE160)	
UNII-1	
Channel	Frequency (MHz)
50	5250

IEEE 802.11a IEEE 802.11n (HT20) IEEE 802.11ac (VHT20) IEEE 802.11ax (HE20)		IEEE 802.11n (HT40) IEEE 802.11ac (VHT40) IEEE 802.11ax (HE40)		IEEE 802.11ac (VHT80) IEEE 802.11ax (HE80)	
UNII-2A		UNII-2A		UNII-2A	
Channel	Frequency (MHz)	Channel	Frequency (MHz)	Channel	Frequency (MHz)
52	5260	54	5270	58	5290
56	5280	62	5310		
60	5300				
64	5320				

3. Table for Filed Antenna:

Ant.	Brand	P/N	Antenna Type	Connector	Gain (dBi)
1		BY5780-16-002-C	PIFA	N/A	4.57
2		BY5780-16-001-C	PIFA	N/A	4.49

Note:

The EUT incorporates a MIMO function. Physically, the EUT provides two completed transmitters and receivers (2T2R).

4. The worst case for 1TX/2TX as follow:

Operating Mode TX Mode	1TX	2TX
IEEE 802.11a	V (ANT 1)	-
IEEE 802.11n(HT20)	-	V (ANT 1 + ANT 2)
IEEE 802.11n(HT40)	-	V (ANT 1 + ANT 2)
IEEE 802.11ac(VHT20)	-	V (ANT 1 + ANT 2)
IEEE 802.11ac(VHT40)	-	V (ANT 1 + ANT 2)
IEEE 802.11ac(VHT80)	-	V (ANT 1 + ANT 2)
IEEE 802.11ac(VHT160)	-	V (ANT 1 + ANT 2)
IEEE 802.11ax(HE20)	-	V (ANT 1 + ANT 2)
IEEE 802.11ax(HE40)	-	V (ANT 1 + ANT 2)
IEEE 802.11ax(HE80)	-	V (ANT 1 + ANT 2)
IEEE 802.11ax(HE160)	-	V (ANT 1 + ANT 2)

3.2 TEST MODES

The test system was pre-tested based on the consideration of all possible combinations of EUT operation mode.


Pretest Mode	Description
Mode 1	TX A Mode / CH36, CH40, CH48 (UNII-1)
Mode 2	TX N (HT20) Mode / CH36, CH40, CH48 (UNII-1)
Mode 3	TX N (HT40) Mode / CH38, CH46 (UNII-1)
Mode 4	TX AC (VHT20) Mode / CH36, CH40, CH48 (UNII-1)
Mode 5	TX AC (VHT40) Mode / CH38, CH46 (UNII-1)
Mode 6	TX AC (VHT80) Mode / CH42 (UNII-1)
Mode 7	TX AC (VHT160) Mode / CH50 (UNII-1)
Mode 8	TX AX (HE20) Mode / CH36, CH40, CH48 (UNII-1)
Mode 9	TX AX (HE40) Mode / CH38, CH46 (UNII-1)
Mode 10	TX AX (HE80) Mode / CH42 (UNII-1)
Mode 11	TX AX (HE160) Mode / CH50 (UNII-1)
Mode 12	TX A Mode / CH52, CH60, CH64 (UNII-2A)
Mode 13	TX N (HT20) Mode / CH52, CH60, CH64 (UNII-2A)
Mode 14	TX N (HT40) Mode / CH54, CH62 (UNII-2A)
Mode 15	TX AC (VHT20) Mode / CH52, CH60, CH64 (UNII-2A)
Mode 16	TX AC (VHT40) Mode / CH54, CH62 (UNII-2A)
Mode 17	TX AC (VHT80) Mode / CH58 (UNII-2A)
Mode 18	TX AX (HE20) Mode / CH52, CH60, CH64 (UNII-2A)
Mode 19	TX AX (HE40) Mode / CH54, CH62 (UNII-2A)
Mode 20	TX AX (HE80) Mode / CH58 (UNII-2A)
Mode 21	TX A Mode / CH36 (UNII-1)

Following mode(s) was (were) found to be the worst case(s) and selected for the final test.

Radiated emissions test – Below 1G	
Final Test Mode	Description
Mode 21	TX A Mode / CH36 (UNII-1)

Radiated emissions test – Above 1G	
Final Test Mode	Description
Mode 1	TX A Mode / CH36, CH40, CH48 (UNII-1)
Mode 2	TX N (HT20) Mode / CH36, CH40, CH48 (UNII-1)
Mode 3	TX N (HT40) Mode / CH38, CH46 (UNII-1)
Mode 4	TX AC (VHT20) Mode / CH36, CH40, CH48 (UNII-1)
Mode 5	TX AC (VHT40) Mode / CH38, CH46 (UNII-1)
Mode 6	TX AC (VHT80) Mode / CH42 (UNII-1)
Mode 7	TX AC (VHT160) Mode / CH50 (UNII-1)
Mode 8	TX AX (HE20) Mode / CH36, CH40, CH48 (UNII-1)
Mode 9	TX AX (HE40) Mode / CH38, CH46 (UNII-1)
Mode 10	TX AX (HE80) Mode / CH42 (UNII-1)
Mode 11	TX AX (HE160) Mode / CH50 (UNII-1)
Mode 12	TX A Mode / CH52, CH60, CH64 (UNII-2A)
Mode 13	TX N (HT20) Mode / CH52, CH60, CH64 (UNII-2A)
Mode 14	TX N (HT40) Mode / CH54, CH62 (UNII-2A)
Mode 15	TX AC (VHT20) Mode / CH52, CH60, CH64 (UNII-2A)
Mode 16	TX AC (VHT40) Mode / CH54, CH62 (UNII-2A)
Mode 17	TX AC (VHT80) Mode / CH58 (UNII-2A)
Mode 18	TX AX (HE20) Mode / CH52, CH60, CH64 (UNII-2A)
Mode 19	TX AX (HE40) Mode / CH54, CH62 (UNII-2A)
Mode 20	TX AX (HE80) Mode / CH58 (UNII-2A)

3.3 BLOCK DIAGRAM SHOWING THE CONFIGURATION OF SYSTEM TESTED

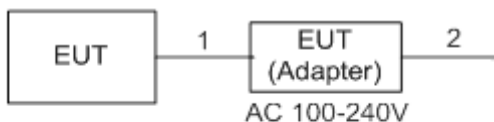

3.4 SUPPORT UNITS

Item	Equipment	Mfr/Brand	Model/Type No.	Series No.
-	-	-	-	-

Item	Cable Type	Shielded Type	Ferrite Core	Length
1	DC Cable	NO	NO	2m
2	AC Cable	NO	NO	1m

4. RADIATED EMISSIONS TEST

4.1 LIMIT

In case the emission fall within the restricted band specified on 15.205(a), then the 15.209(a) limit in the table below has to be followed.

LIMITS OF RADIATED EMISSIONS MEASUREMENT (9 kHz to 1000 MHz)

Frequency (MHz)	Field Strength (microvolts/meter)	Measurement Distance (meters)
0.009-0.490	2400/F(kHz)	300
0.490-1.705	24000/F(kHz)	30
1.705-30.0	30	30
30-88	100	3
88-216	150	3
216-960	200	3
Above 960	500	3

LIMITS OF UNWANTED EMISSION OUT OF THE RESTRICTED BANDS

Frequency (MHz)	EIRP Limit (dBm/MHz)	Equivalent Field Strength at 3m (dBμV/m)
5150-5250	-27	68.3
5250-5350	-27	68.3

NOTE:

- (1) The following formula is used to convert the equipment isotropic radiated power (eirp) to field strength: $E = \frac{1000000\sqrt{30P}}{3}$ μV/m, where P is the eirp (Watts)


4.2 TEST PROCEDURE


- The measuring distance of 3 m shall be used for measurements. The EUT was placed on the top of a rotating table 0.8 meter above the ground at a 3 meter semi-anechoic chamber. The table was rotated 360 degrees to determine the position of the highest radiation.(below 1GHz)
- The measuring distance of 3 m shall be used for measurements. The EUT was placed on the top of a rotating table 1.5 meter above the ground at a 3 meter semi-anechoic chamber. The table was rotated 360 degrees to determine the position of the highest radiation.(above 1GHz)
- The height of the equipment or of the substitution antenna shall be 0.8m or 1.5m; the height of the test antenna shall vary between 1 m to 4 m. Both horizontal and vertical polarizations of the antenna are set to make the measurement.
- For each suspected emission, the EUT was arranged to its worst case and then the antenna was tuned to heights find the maximum reading (used Bore sight function).
- The receiver system was set to peak and average detect function and specified bandwidth with maximum hold mode when the test frequency is above 1 GHz.
- The initial step in collecting radiated emission data is a receiver peak detector mode pre-scanning the measurement frequency range. Significant peaks are then marked and then Quasi Peak detector mode re-measured.
- All readings are Peak unless otherwise stated QP in column of Note. Peak denotes that the Peak reading compliance with the QP Limits and then QP Mode measurement didn't perform. (below 1 GHz)
- All readings are Peak Mode value unless otherwise stated AVG in column of Note. If the Peak Mode Measured value compliance with the Peak Limits and lower than AVG Limits, the EUT shall be deemed to meet both Peak & AVG Limits and then only Peak Mode was measured, but AVG Mode didn't perform. (above 1 GHz)
- For the actual test configuration, please refer to the related Item –EUT Test Photos.

4.3 DEVIATION FROM TEST STANDARD

No deviation

4.4 TEST SETUP

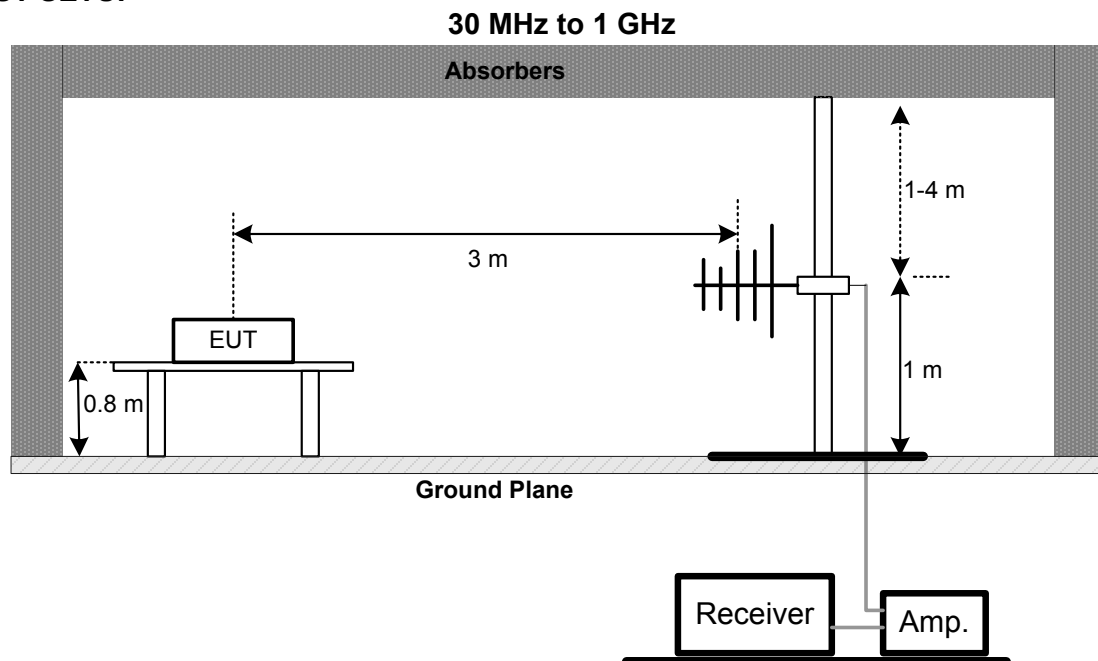

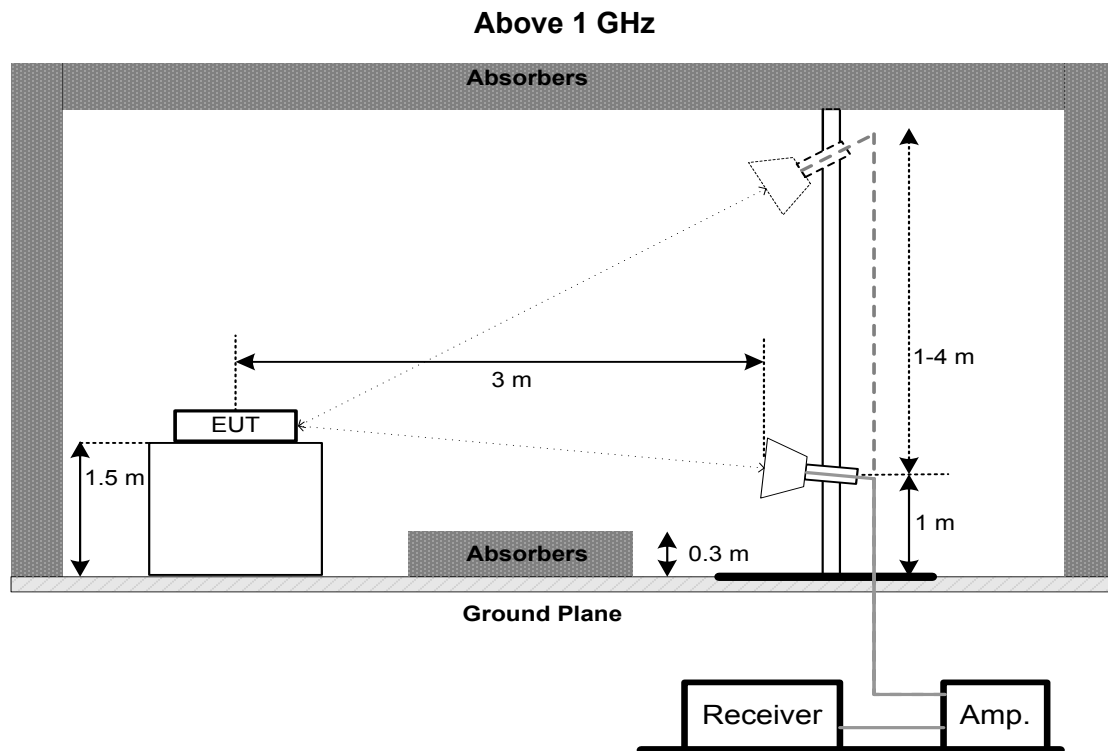

4.5 EUT OPERATION CONDITIONS

The EUT was configured for testing in a typical fashion (as a customer would normally use it). The EUT has been programmed to continuously transmit during test. This operating condition was tested and used to collect the included data.

The EUT was programmed to be in continuously transmitting/TX mode.

4.6 EUT TEST CONDITIONS

Temperature: 24°C Relative Humidity: 68% Test Voltage: AC 120V/60Hz

4.7 TEST RESULTS - 30 MHz TO 1000 MHz

Please refer to the APPENDIX A.

4.8 TEST RESULTS - ABOVE 1000 MHz

Please refer to the APPENDIX B.

Remark:

- (1) No limit: This is fundamental signal, the judgment is not applicable.
For fundamental signal judgment was referred to Peak output test.

5. MEASUREMENT INSTRUMENTS LIST

Radiated Emissions - 30 MHz to 1 GHz					
Item	Kind of Equipment	Manufacturer	Type No.	Serial No.	Calibrated until
1	Antenna	Schwarzbeck	VULB9160	9160-3232	Mar. 09, 2020
2	Amplifier	HP	8447D	2944A09673	Aug. 11, 2019
3	Receiver	Agilent	N9038A	MY52130039	Aug. 11, 2019
4	Cable	emci	LMR-400(30MHz-1GHz)(8m+5m)	N/A	May 24, 2020
5	Controller	CT	SC100	N/A	N/A
6	Controller	MF	MF-7802	MF780208416	N/A
7	Measurement Software	Farad	EZ-EMC Ver.NB-03A1-01	N/A	N/A



Radiated Emissions - Above 1 GHz					
Item	Kind of Equipment	Manufacturer	Type No.	Serial No.	Calibrated until
1	Double Ridged Guide Antenna	ETS	3115	75789	Mar. 09, 2020
2	Broad-Band Horn Antenna	Schwarzbeck	BBHA 9170	9170319	Jun. 23, 2020
3	Amplifier	Agilent	8449B	3008A02333	Mar. 10, 2020
4	Microwave Preamplifier With Adaptor	EMC INSTRUMENT	EMC2654045	980039 & HA01	Mar. 10, 2020
5	Receiver	Agilent	N9038A	MY52130039	Aug. 11, 2019
6	Controller	CT	SC100	N/A	N/A
7	Controller	MF	MF-7802	MF780208416	N/A
8	Cable	mitron	B10-01-01-12M	18072744	Jun. 29, 2020
9	Measurement Software	Farad	EZ-EMC Ver.NB-03A1-01	N/A	N/A

Remark: "N/A" denotes no model name, serial no. or calibration specified.
All calibration period of equipment list is one year.

6. EUT TEST PHOTOS



Radiated Emissions Test Photos

30 MHz to 1000 MHz

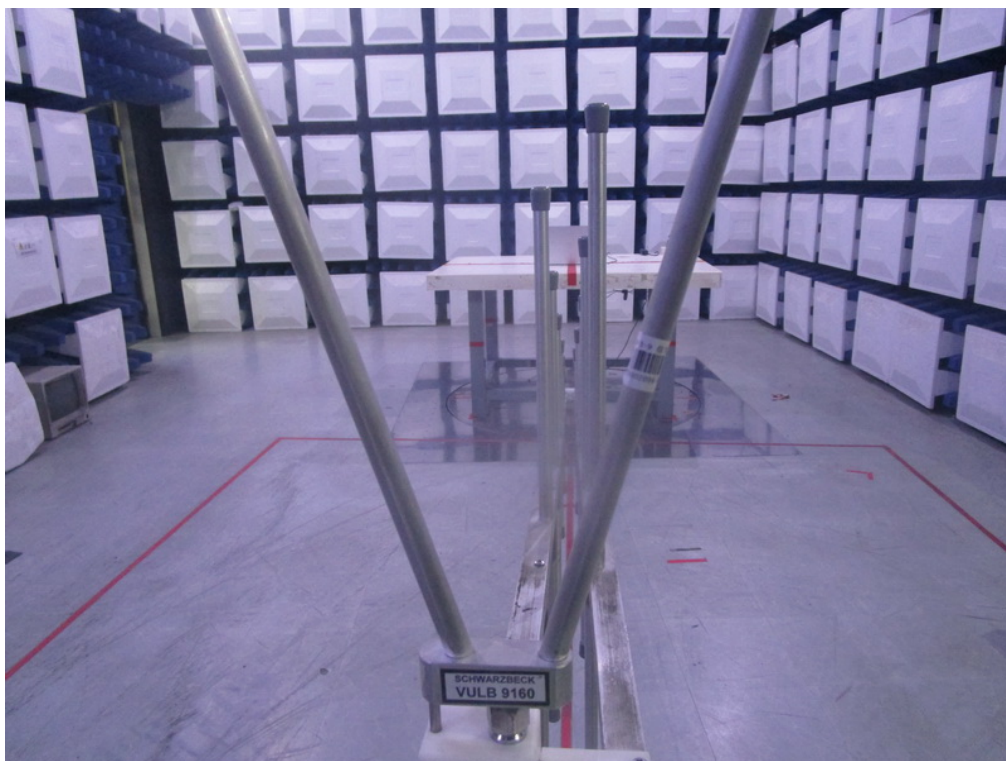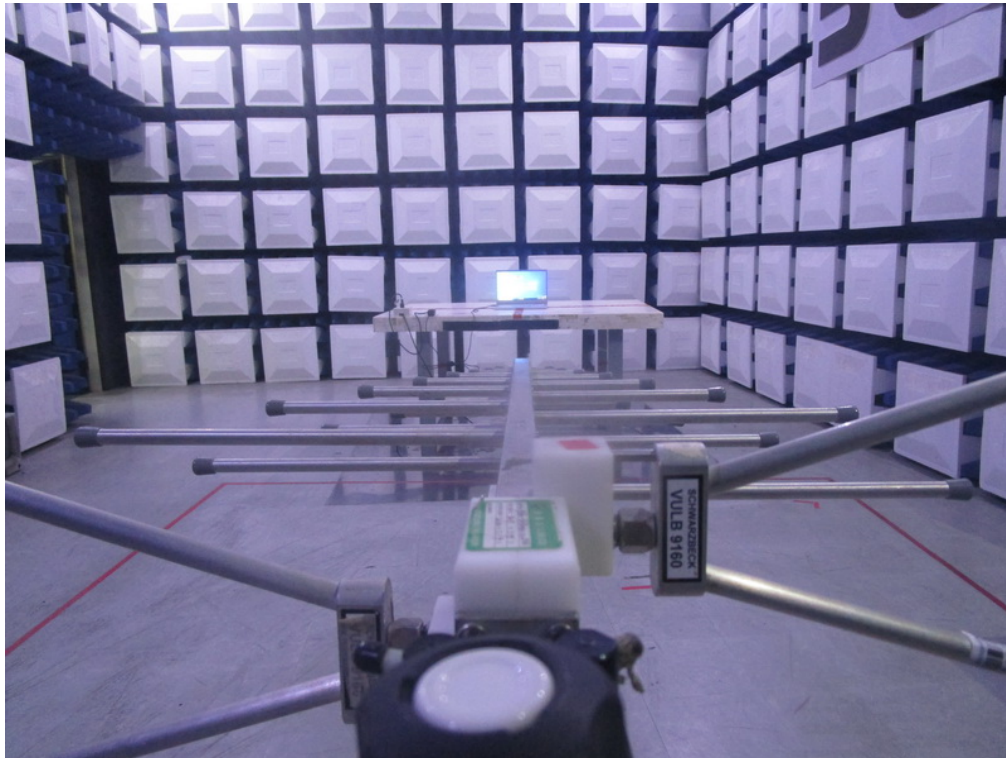

Radiated Emissions Test Photos


Above 1 GHz

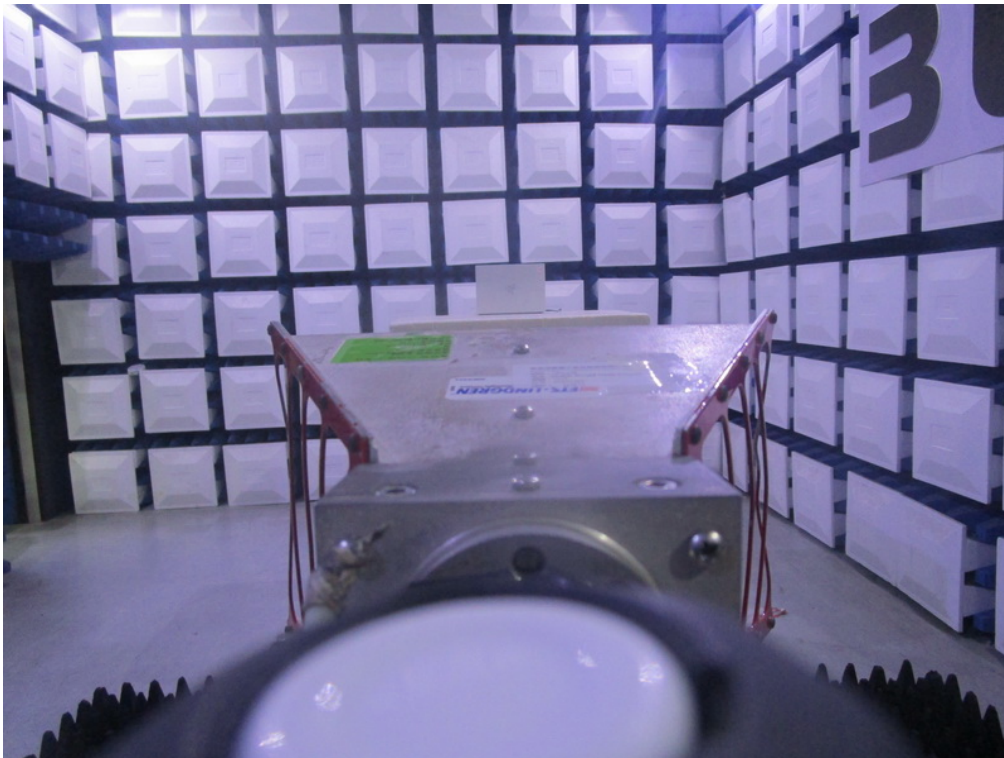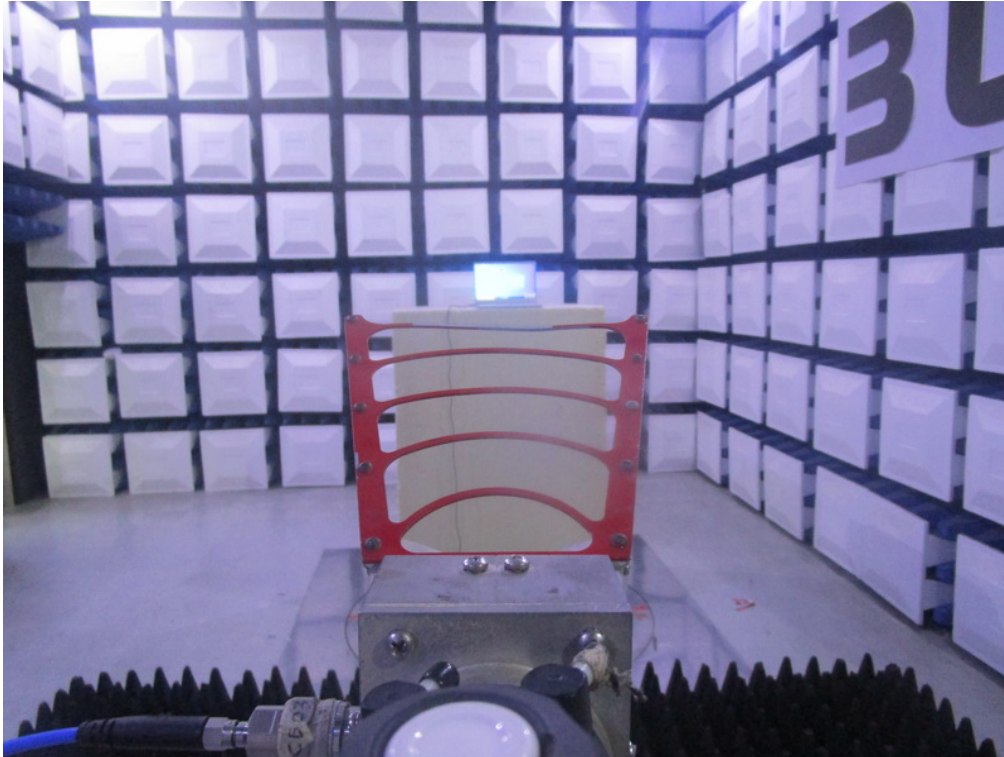

APPENDIX A - RADIATED EMISSION - 30 MHZ TO 1 GHZ

Test Mode: TX A Mode Channel 36_Ant.1

Vertical

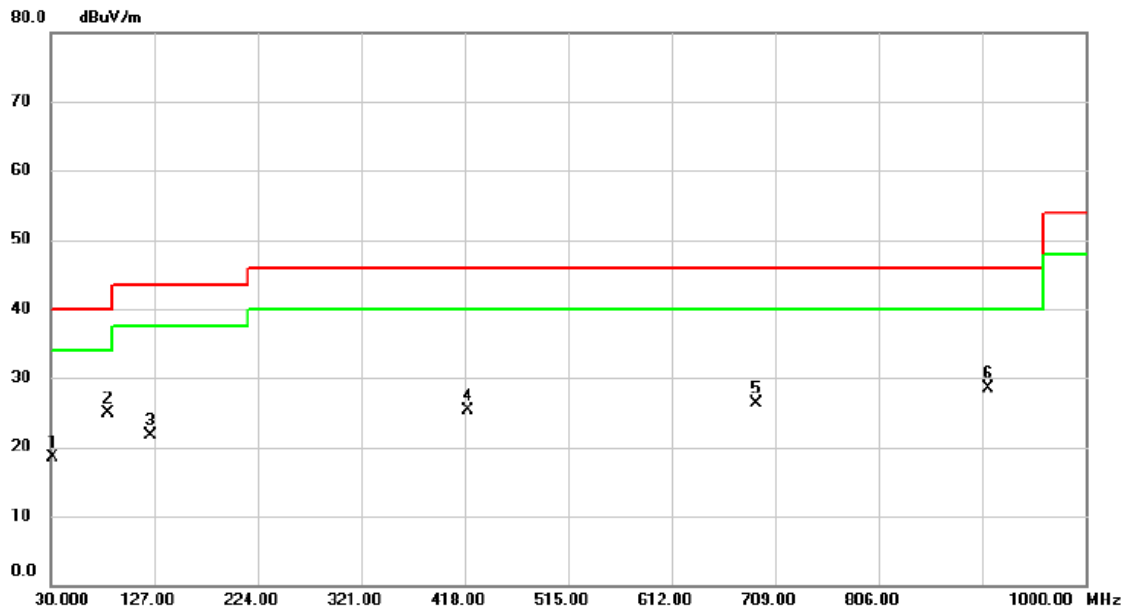


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		31.940	33.34	-14.79	18.55	40.00	-21.45	peak	
2	*	83.350	42.35	-17.39	24.96	40.00	-15.04	peak	
3		123.120	34.74	-13.04	21.70	43.50	-21.80	peak	
4		420.910	34.12	-8.88	25.24	46.00	-20.76	peak	
5		691.055	30.53	-4.13	26.40	46.00	-19.60	peak	
6		909.305	30.14	-1.70	28.44	46.00	-17.56	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Test Mode: TX A Mode Channel 36_Ant.1

Horizontal

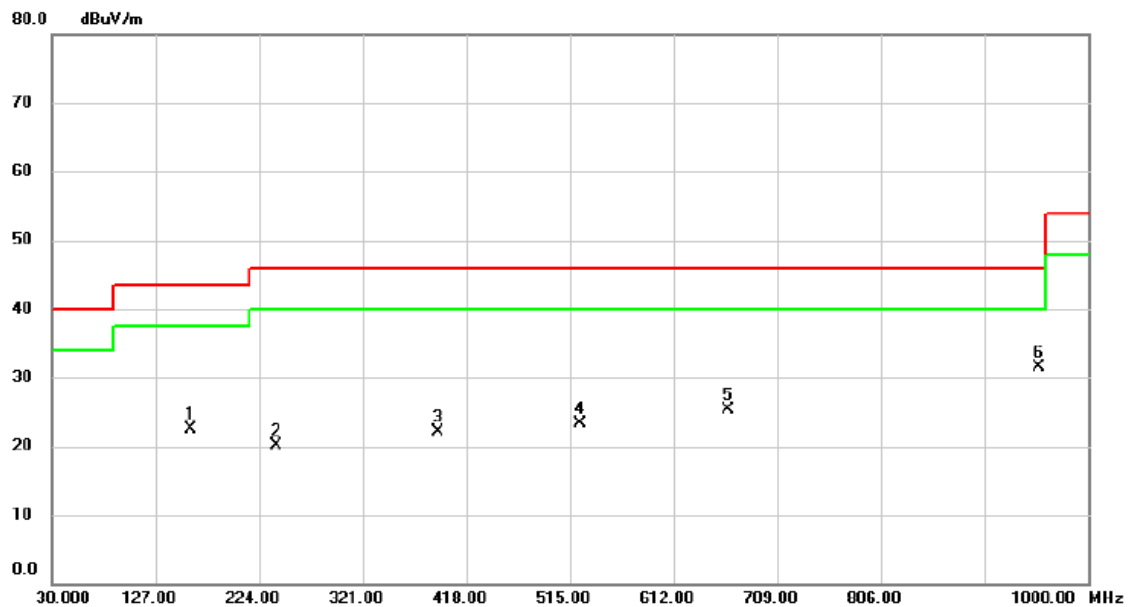

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		159.980	33.47	-11.00	22.47	43.50	-21.03	peak	
2		240.005	34.05	-14.00	20.05	46.00	-25.95	peak	
3		390.840	31.72	-9.68	22.04	46.00	-23.96	peak	
4		525.185	30.78	-7.44	23.34	46.00	-22.66	peak	
5		662.925	29.78	-4.50	25.28	46.00	-20.72	peak	
6	*	953.925	32.27	-0.72	31.55	46.00	-14.45	peak	

REMARKS:


- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

APPENDIX B - RADIATED EMISSION - ABOVE 1000 MHZ

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz_Ant. 1

Vertical

130 dBuV/m

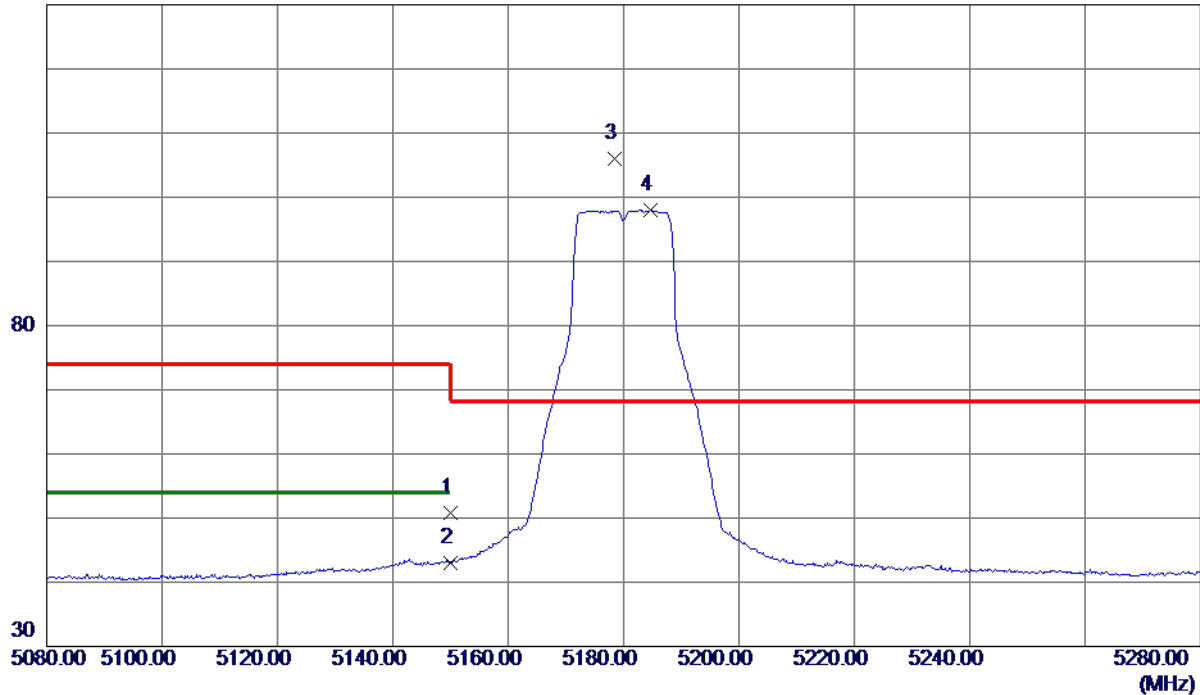


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	36.50	14.32	50.82	74.00	-23.18	Peak	
2	5150.0000	28.77	14.32	43.09	54.00	-10.91	AVG	
3 *	5178.5000	91.61	14.38	105.99	68.30	37.69	Peak	No Limit
4	5184.7000	83.65	14.40	98.05	999.00	-900.95	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz_Ant. 1

Vertical

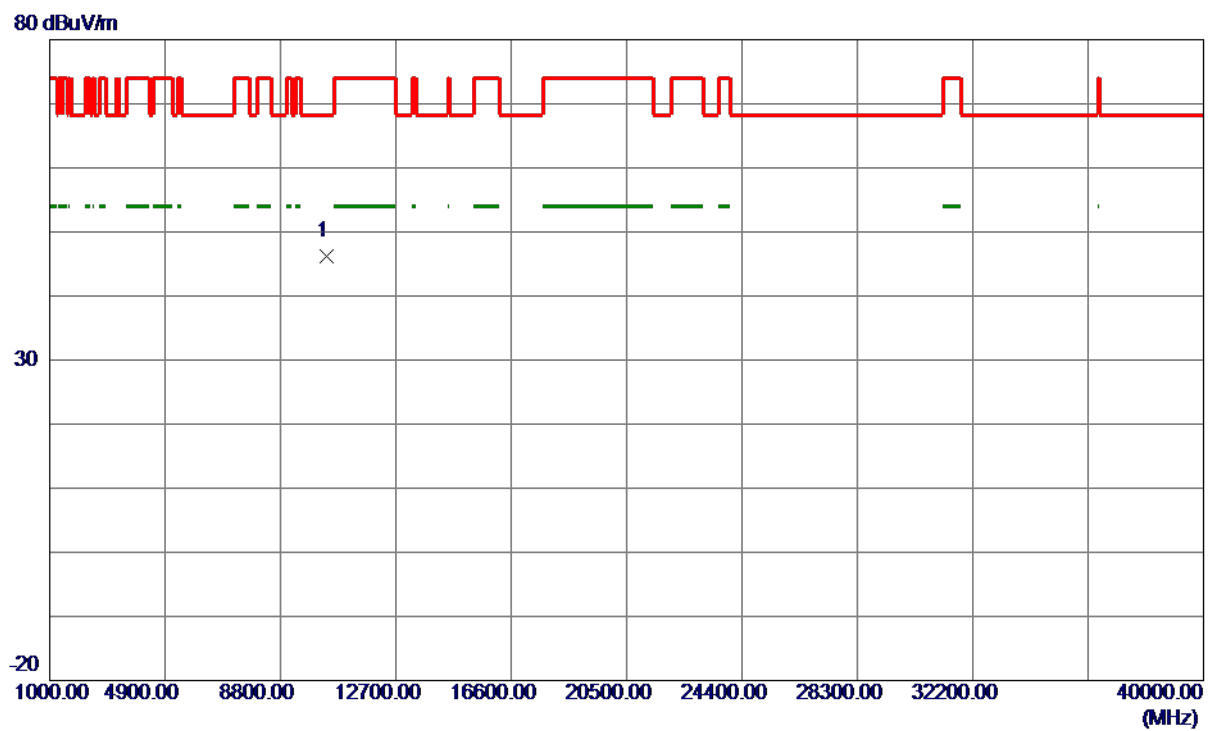


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10359.8050	34.90	11.30	46.20	68.30	-22.10	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz_Ant.1

Horizontal

130 dBuV/m

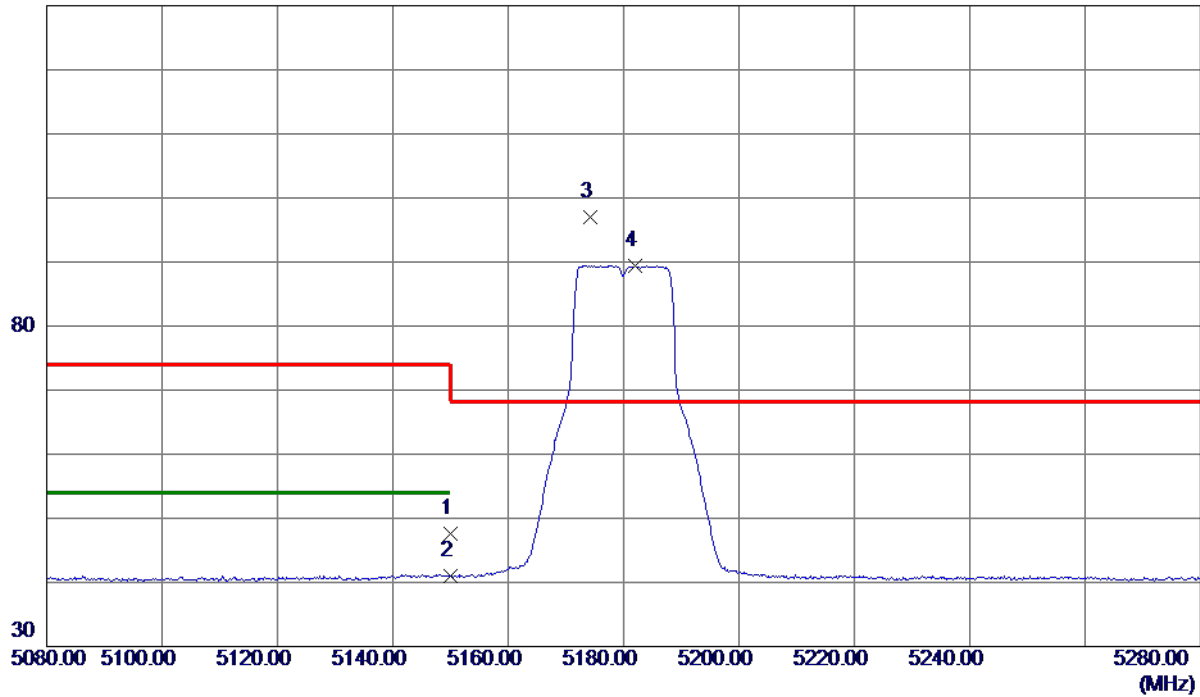

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	33.20	14.32	47.52	74.00	-26.48	Peak	
2	5150.0000	26.62	14.32	40.94	54.00	-13.06	AVG	
3 *	5174.2000	82.69	14.37	97.06	68.30	28.76	Peak	No Limit
4	5181.9000	75.06	14.39	89.45	999.00	-909.55	AVG	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5180 MHz_Ant. 1

Horizontal

80 dBuV/m

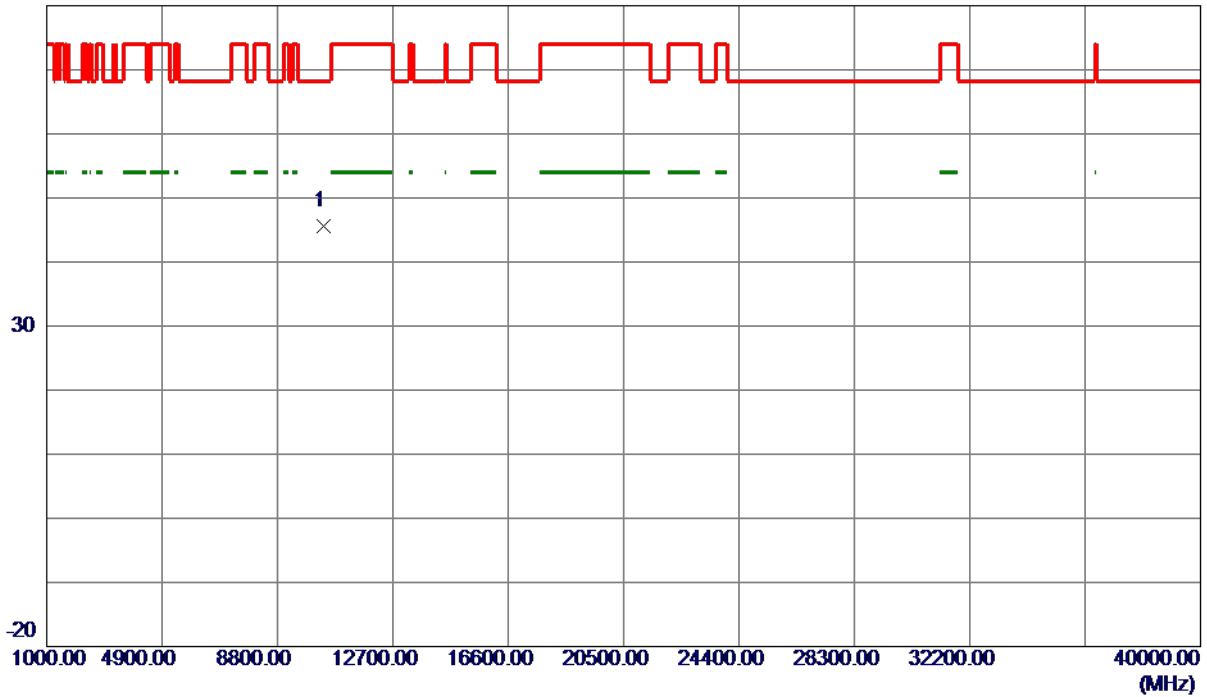


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10360.4740	34.22	11.30	45.52	68.30	-22.78	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz_Ant. 1

Vertical

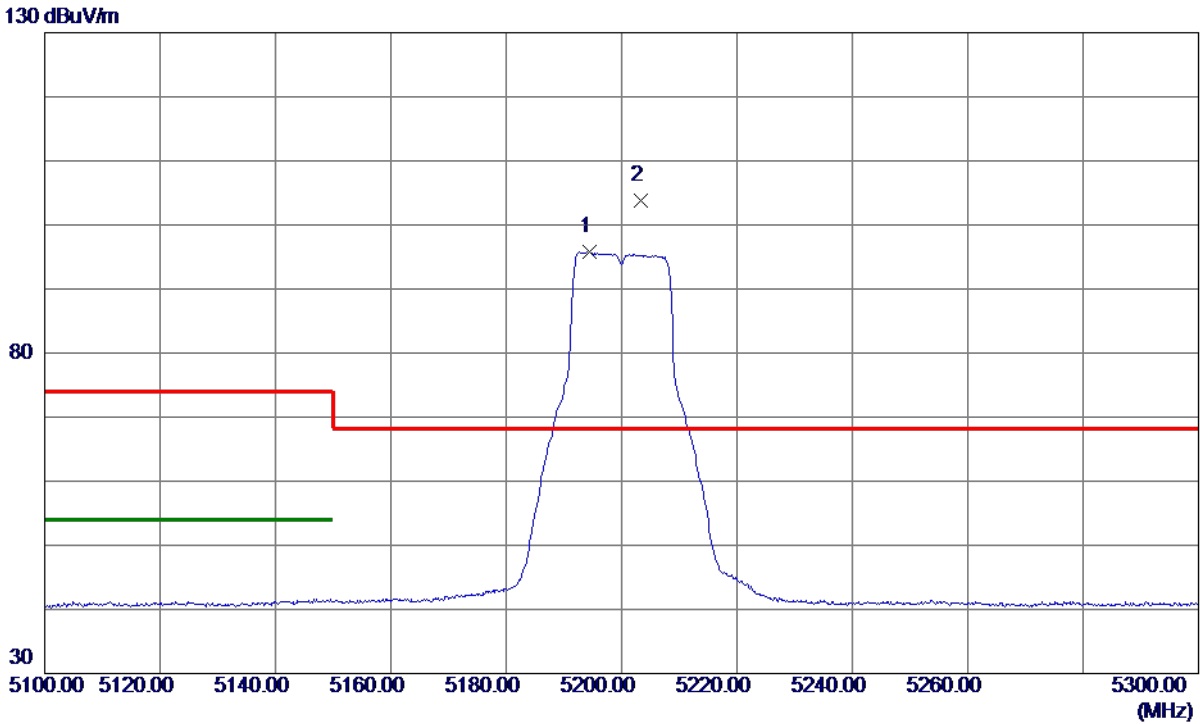


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5194.5000	81.33	14.42	95.75	999.00	-903.25	AVG	No Limit
2 *	5203.3000	89.36	14.44	103.80	68.30	35.50	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz_Ant. 1

Vertical

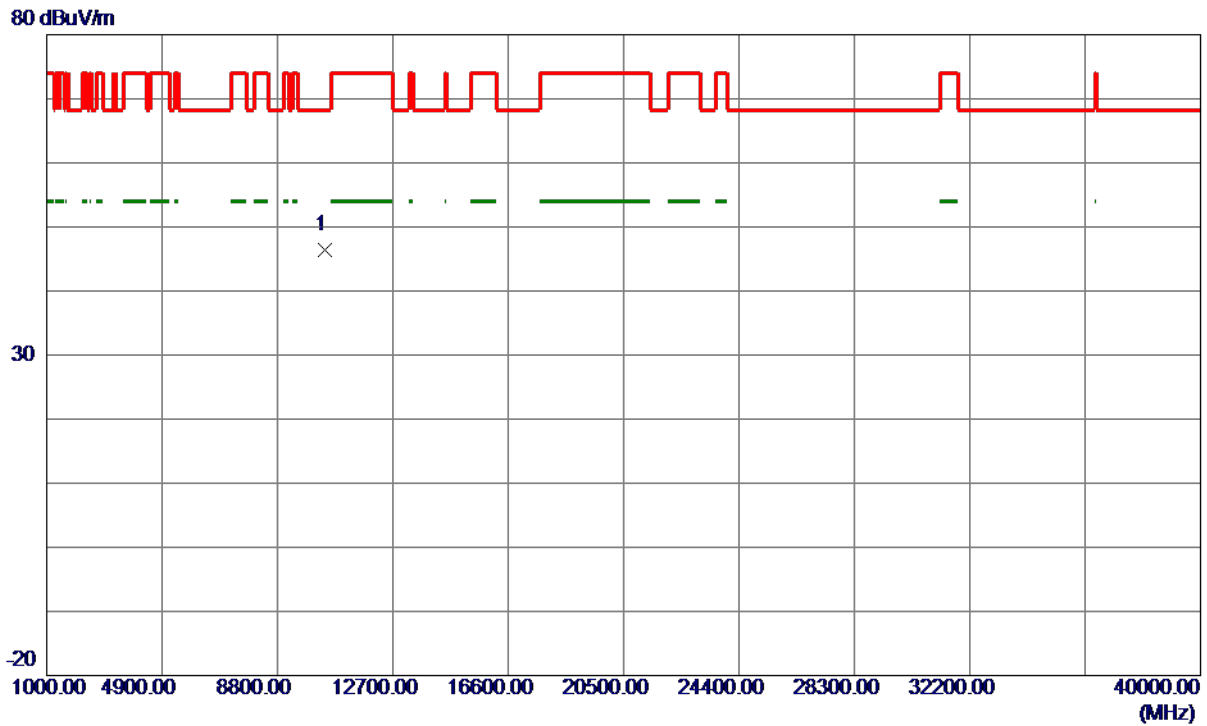

No.	Freq.	Reading	Correct	Measure	Limit	Margin		
	MHz	dBuV/m	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1 *	10400.2009	35.04	11.37	46.41	68.30	-21.89	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz_Ant. 1

Horizontal

130 dBuV/m

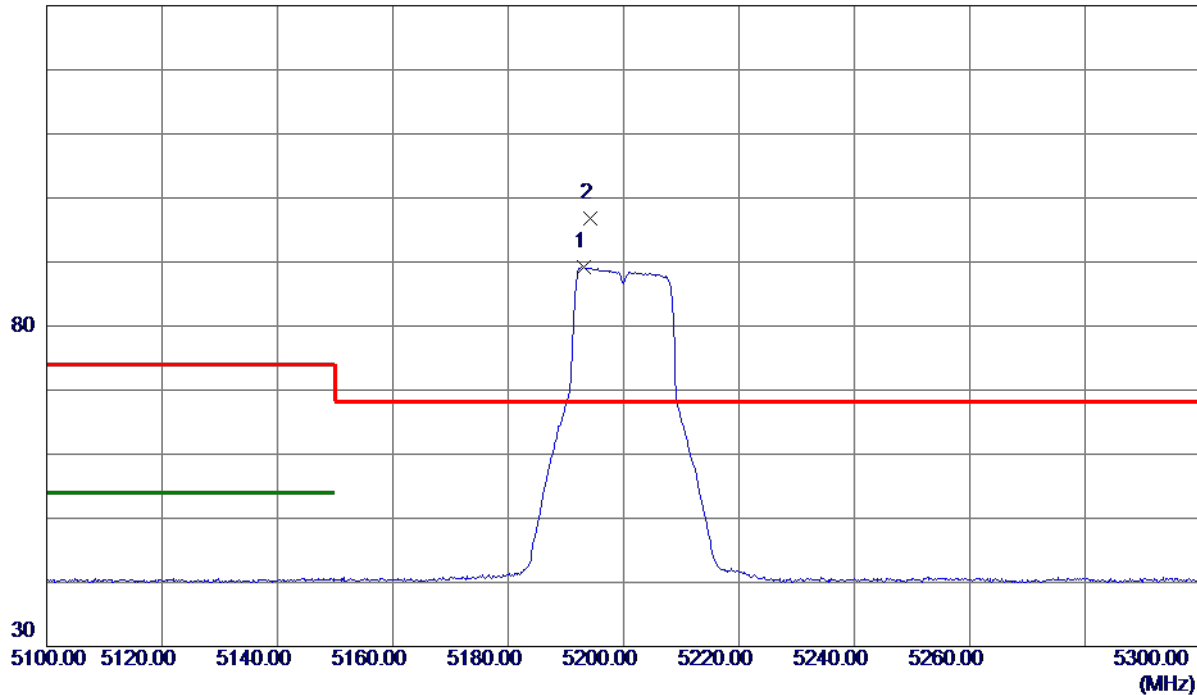

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5193.2000	74.78	14.42	89.20	999.00	-909.80	AVG	No Limit
2 *	5194.3000	82.33	14.42	96.75	68.30	28.45	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5200 MHz_Ant. 1

Horizontal

80 dBuV/m

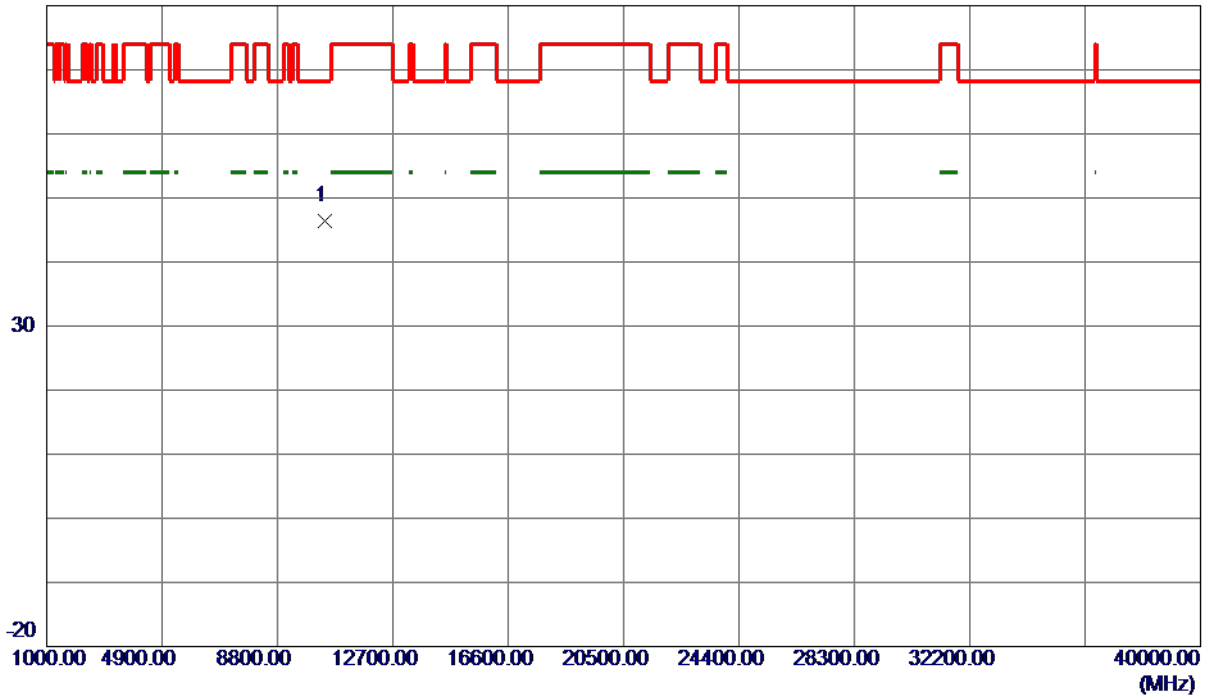

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10400.2100	34.97	11.37	46.34	68.30	-21.96	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz_Ant. 1

Vertical

130 dBuV/m

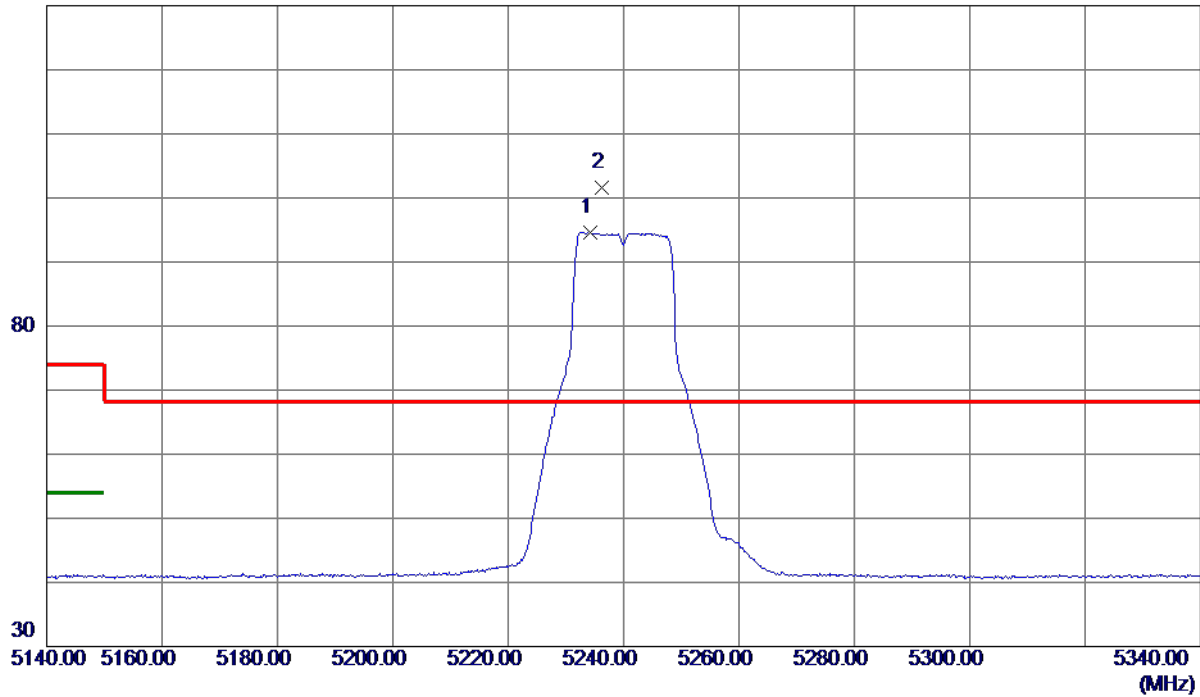

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5234.2000	80.06	14.52	94.58	999.00	-904.42	AVG	No Limit
2 *	5236.2000	87.09	14.52	101.61	68.30	33.31	Peak	No Limit


REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz_Ant. 1

Vertical

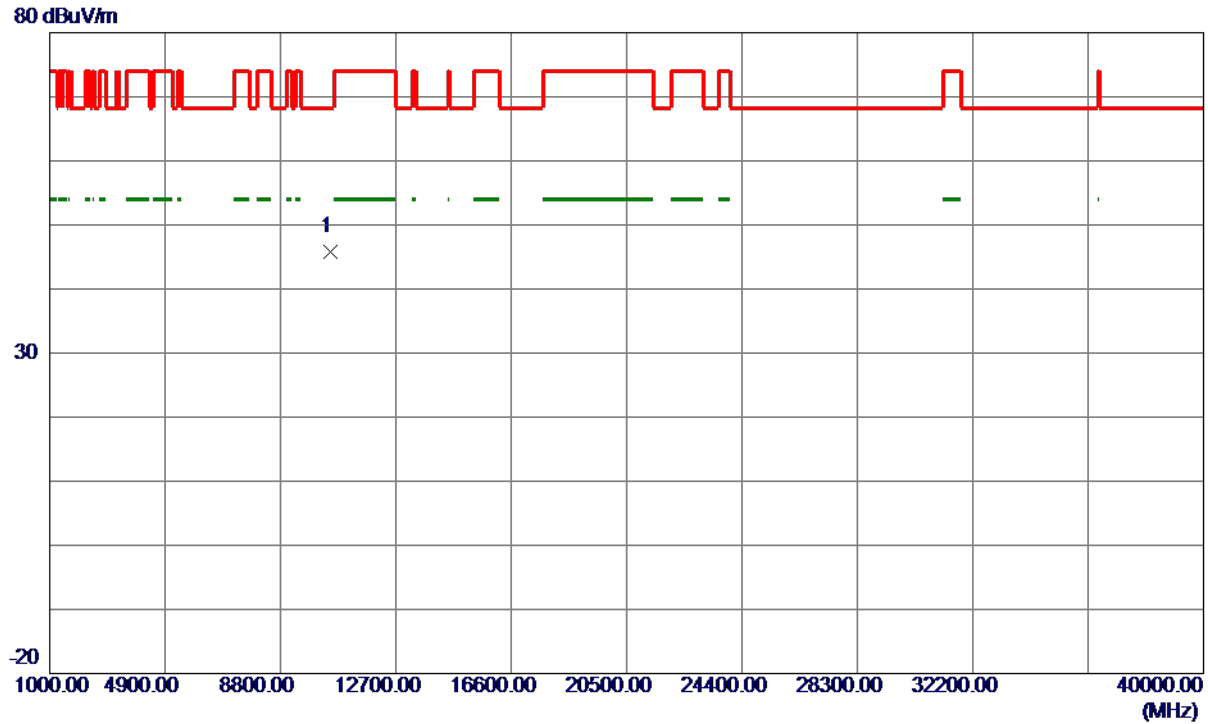


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10479.5940	34.22	11.50	45.72	68.30	-22.58	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz_Ant. 1

Horizontal

130 dBuV/m

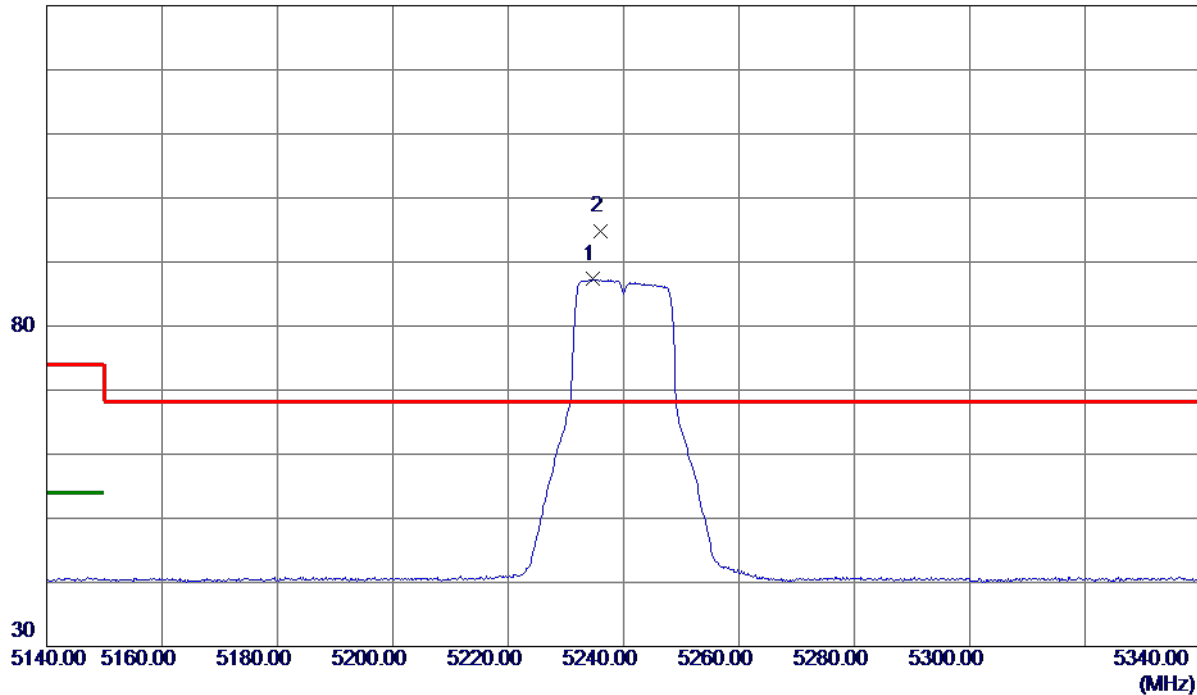

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5234.7000	72.78	14.52	87.30	999.00	-911.70	AVG	No Limit
2 *	5236.1000	80.23	14.52	94.75	68.30	26.45	Peak	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX A Mode 5240 MHz_Ant. 1

Horizontal

80 dBuV/m

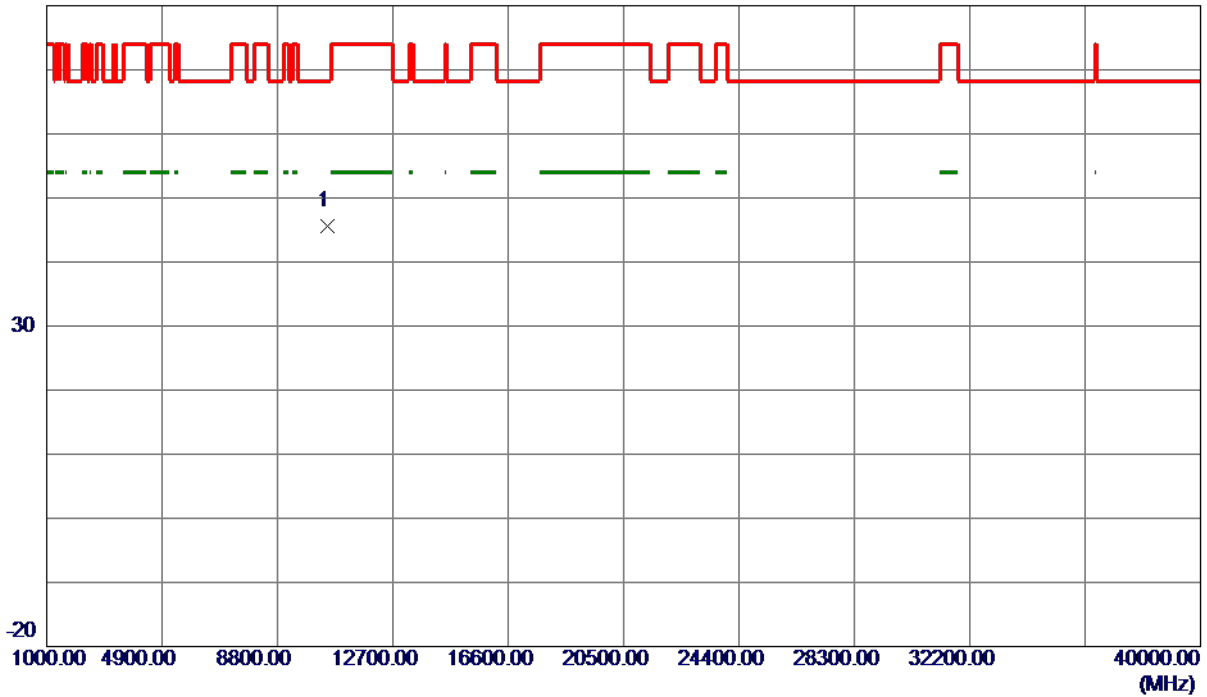

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10480.1080	34.19	11.50	45.69	68.30	-22.61	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

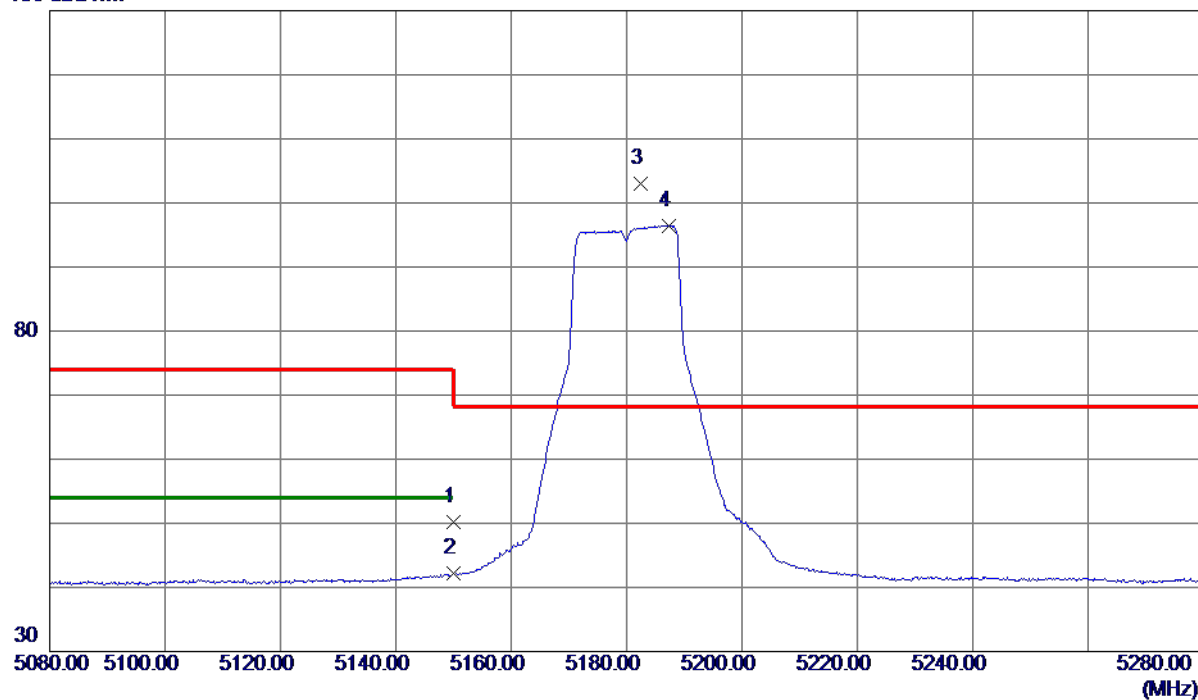


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.89	14.32	50.21	74.00	-23.79	Peak	
2	5150.0000	27.83	14.32	42.15	54.00	-11.85	AVG	
3 *	5182.4000	88.71	14.39	103.10	68.30	34.80	Peak	No Limit
4	5187.4000	82.03	14.40	96.43	999.00	-902.57	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz_Ant.1+Ant.2

Vertical

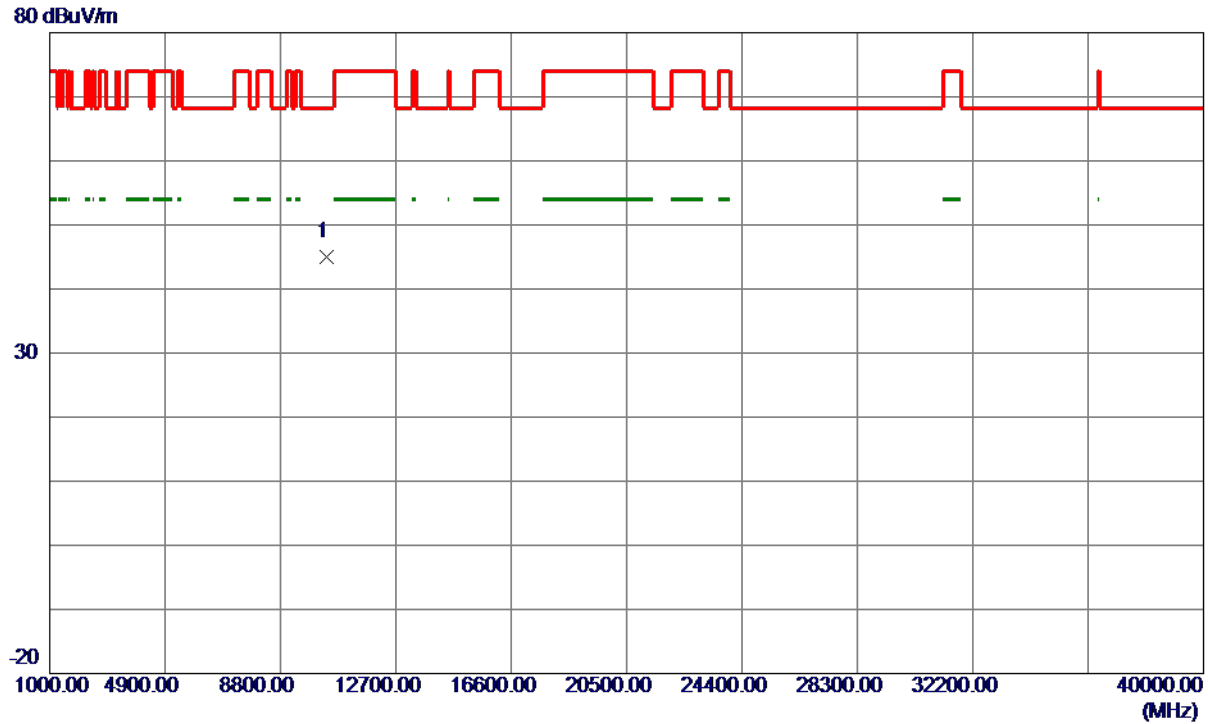


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10363.1250	33.67	11.30	44.97	68.30	-23.33	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

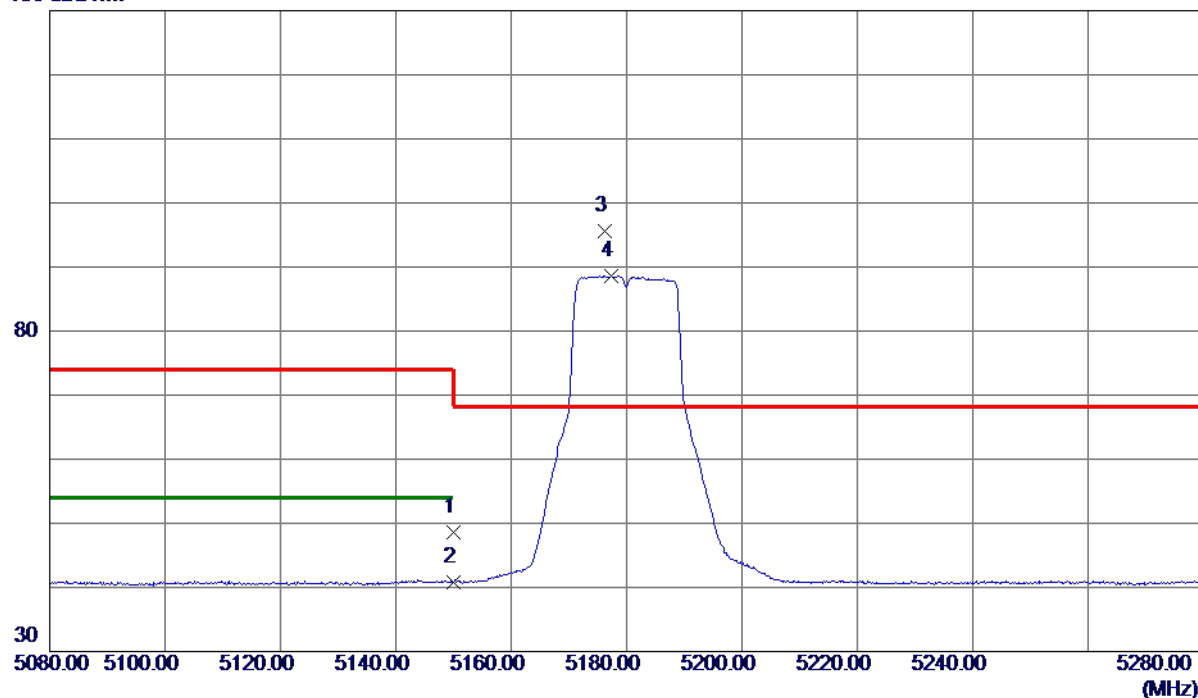

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	34.37	14.32	48.69	74.00	-25.31	Peak	
2	5150.0000	26.42	14.32	40.74	54.00	-13.26	AVG	
3 *	5176.3000	81.30	14.38	95.68	68.30	27.38	Peak	No Limit
4	5177.4000	74.21	14.38	88.59	999.00	-910.41	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5180 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

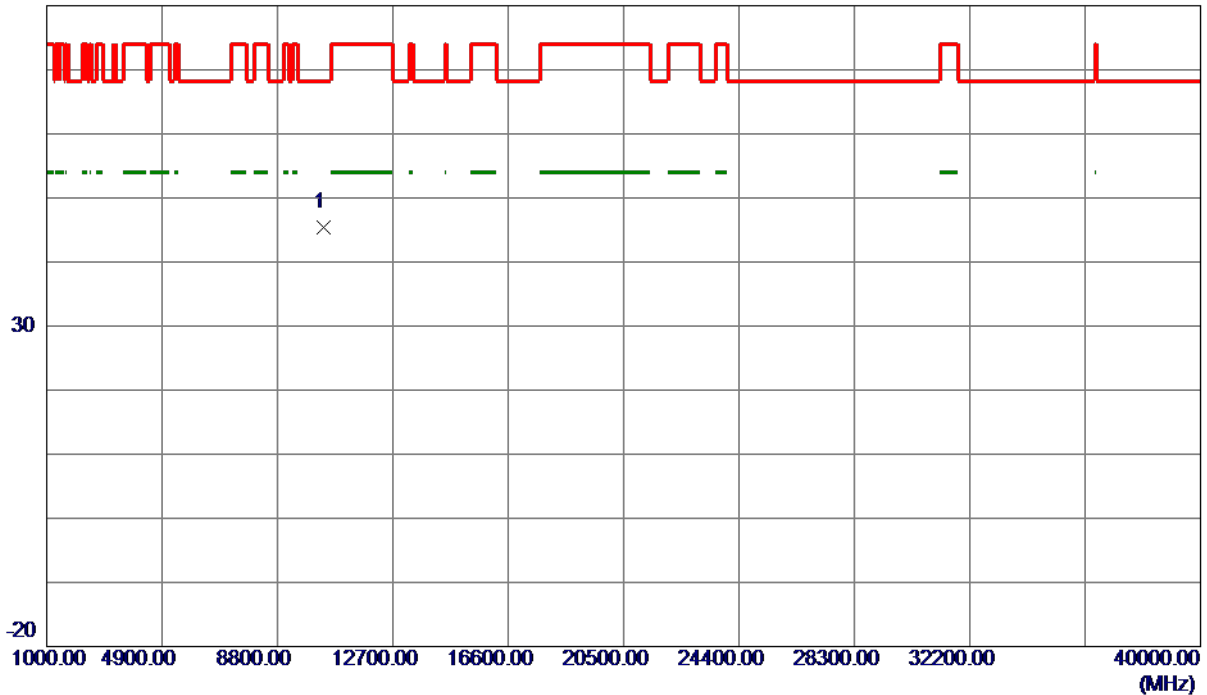

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10357.8600	34.12	11.29	45.41	68.30	-22.89	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz _Ant.1+Ant.2

Vertical

130 dBuV/m

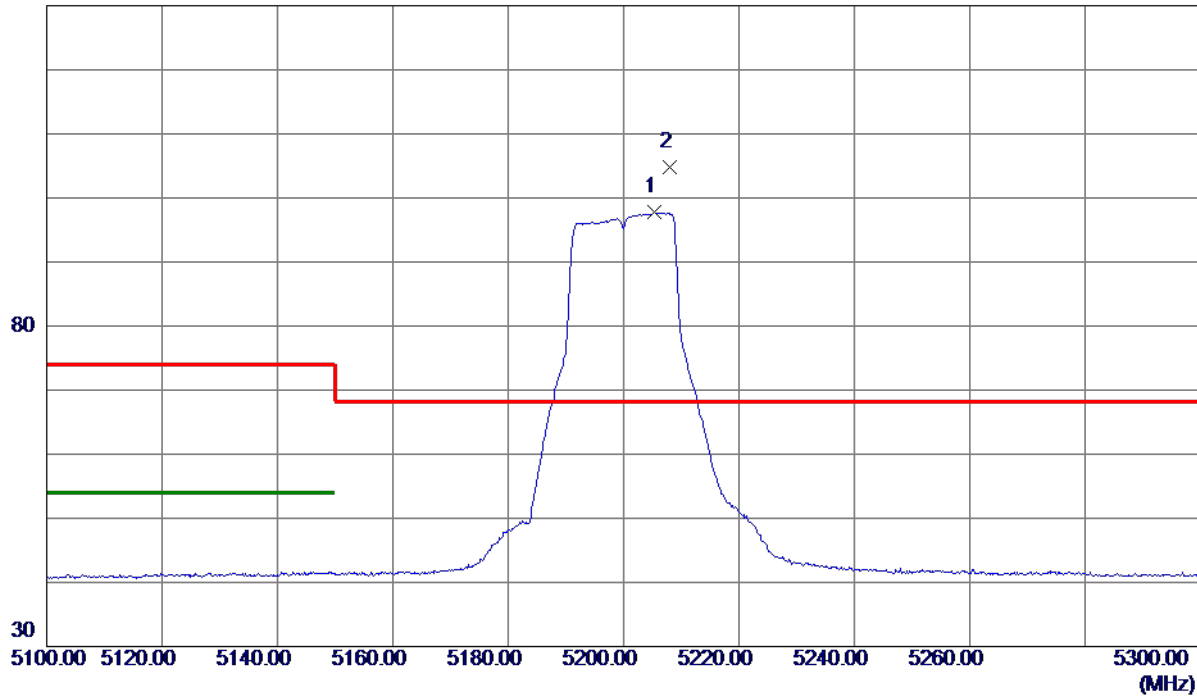

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5205.4000	83.30	14.45	97.75	999.00	-901.25	AVG	No Limit
2 *	5208.0000	90.36	14.45	104.81	68.30	36.51	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

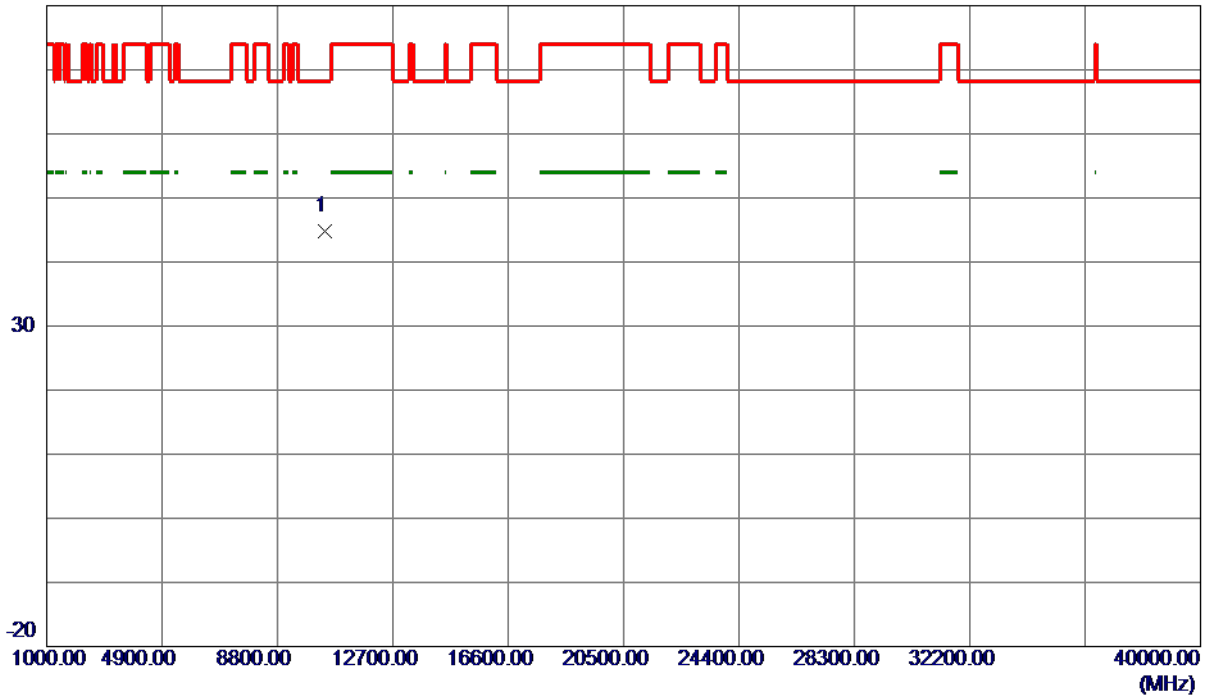


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10403.4050	33.47	11.37	44.84	68.30	-23.46	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz_Ant.1+Ant.2

Horizontal

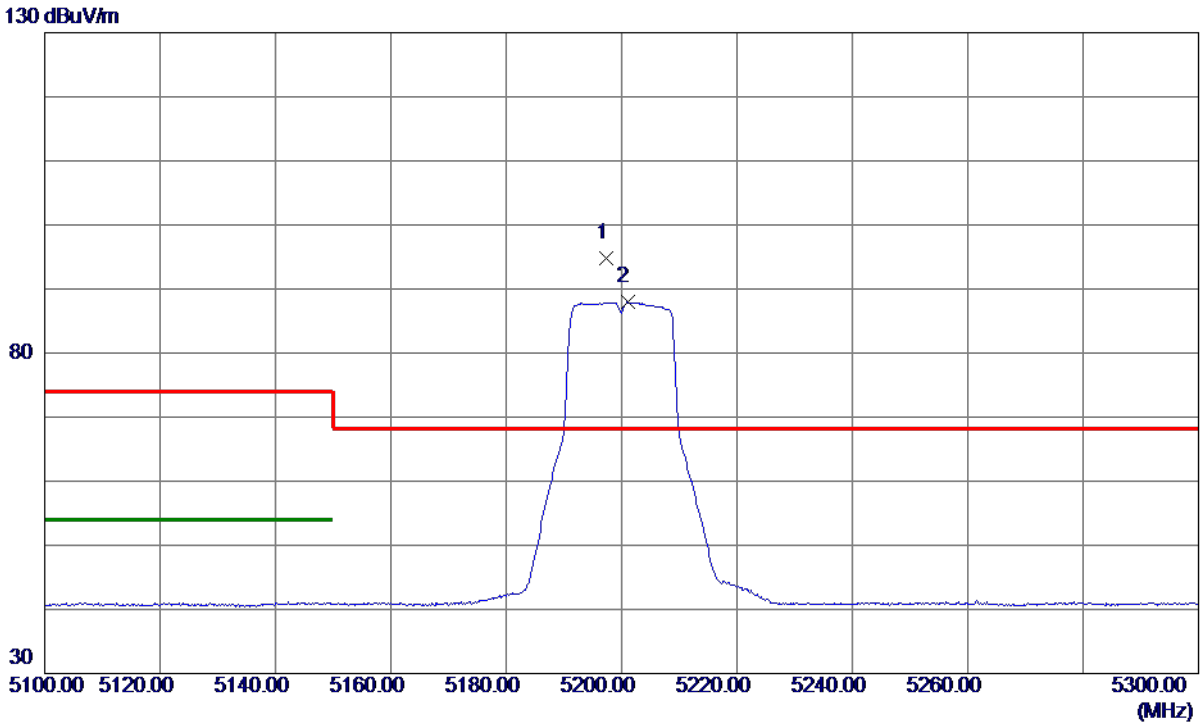


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5197.4000	80.40	14.43	94.83	68.30	26.53	Peak	No Limit
2	5201.0000	73.50	14.44	87.94	999.00	-911.06	AVG	No Limit

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5200 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

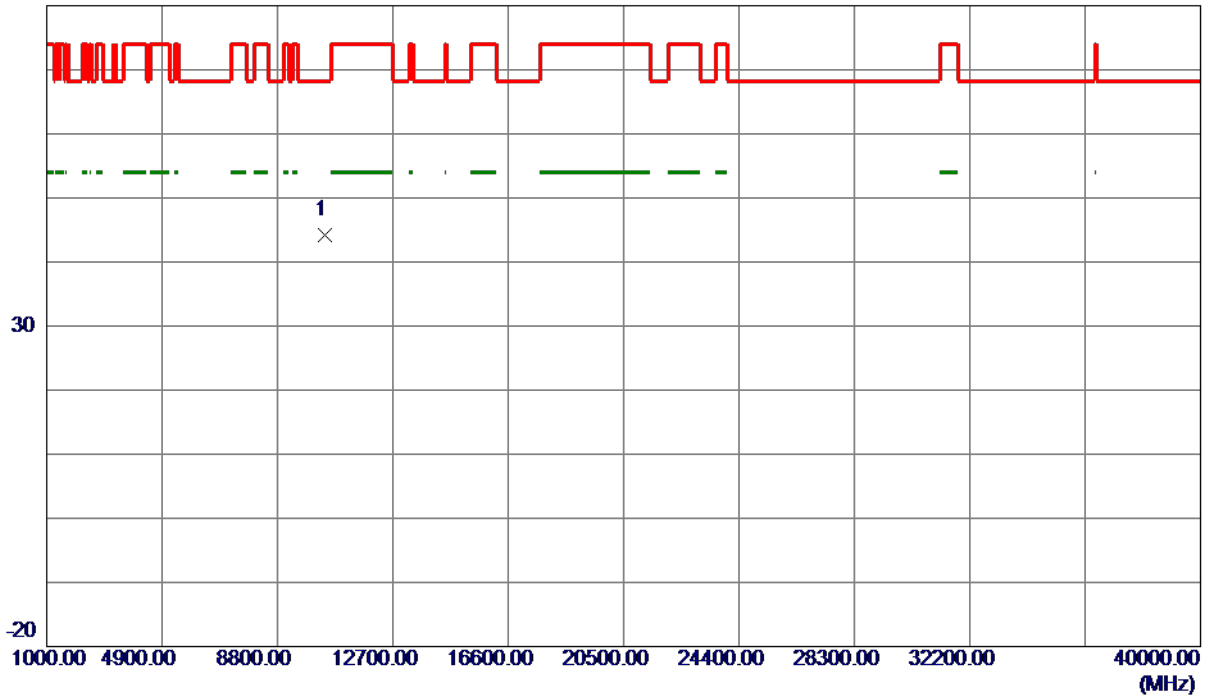


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10399.6050	32.84	11.37	44.21	68.30	-24.09	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz_Ant.1+Ant.2

Vertical

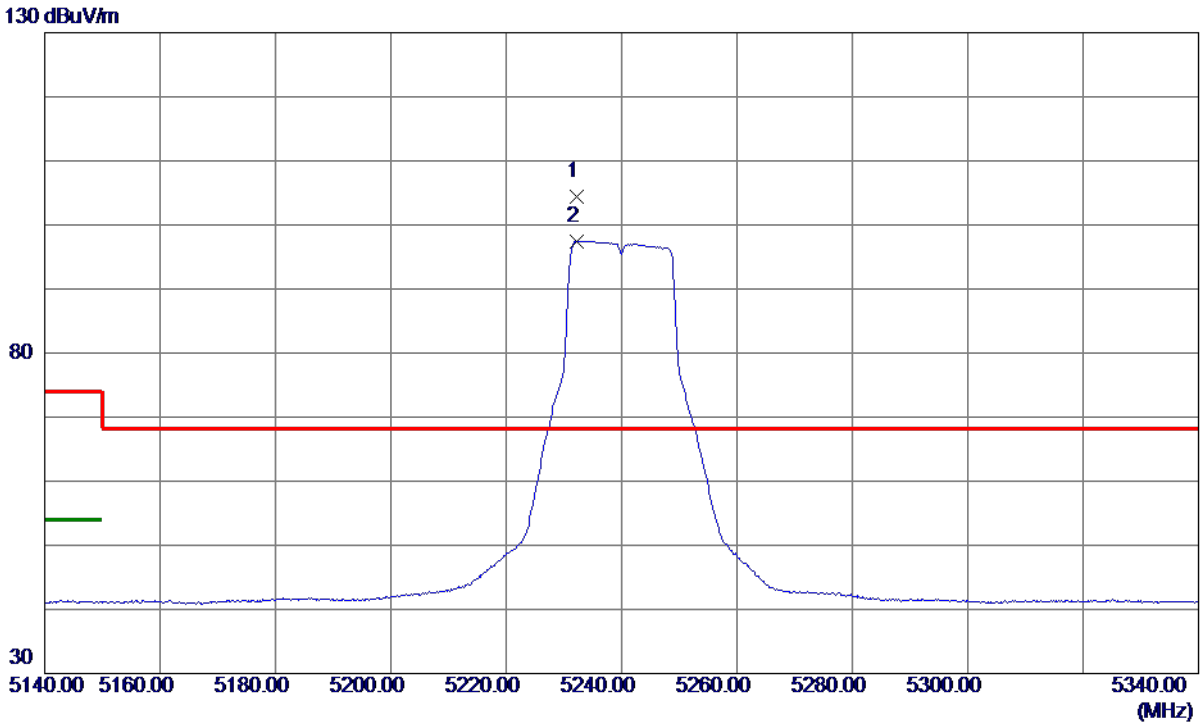


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5232.2000	89.85	14.51	104.36	68.30	36.06	Peak	No Limit
2	5232.2000	82.98	14.51	97.49	999.00	-901.51	AVG	No Limit

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz_Ant.1+Ant.2

Vertical

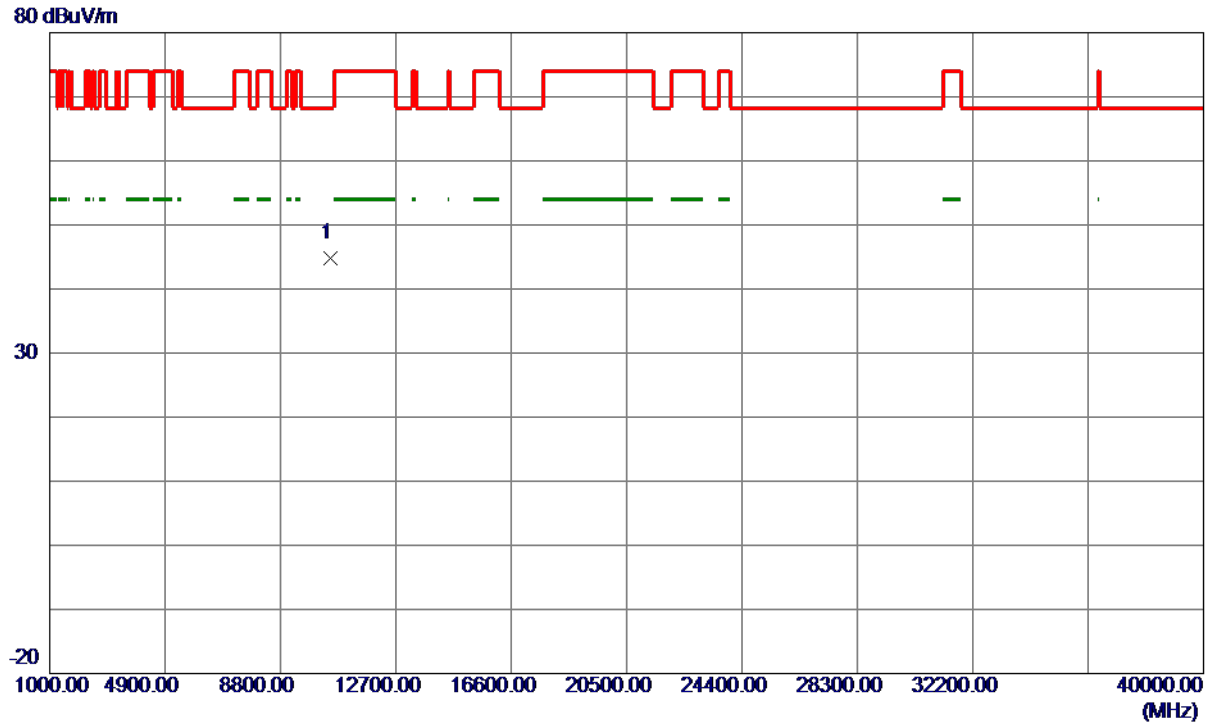


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10476.4800	33.26	11.50	44.76	68.30	-23.54	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

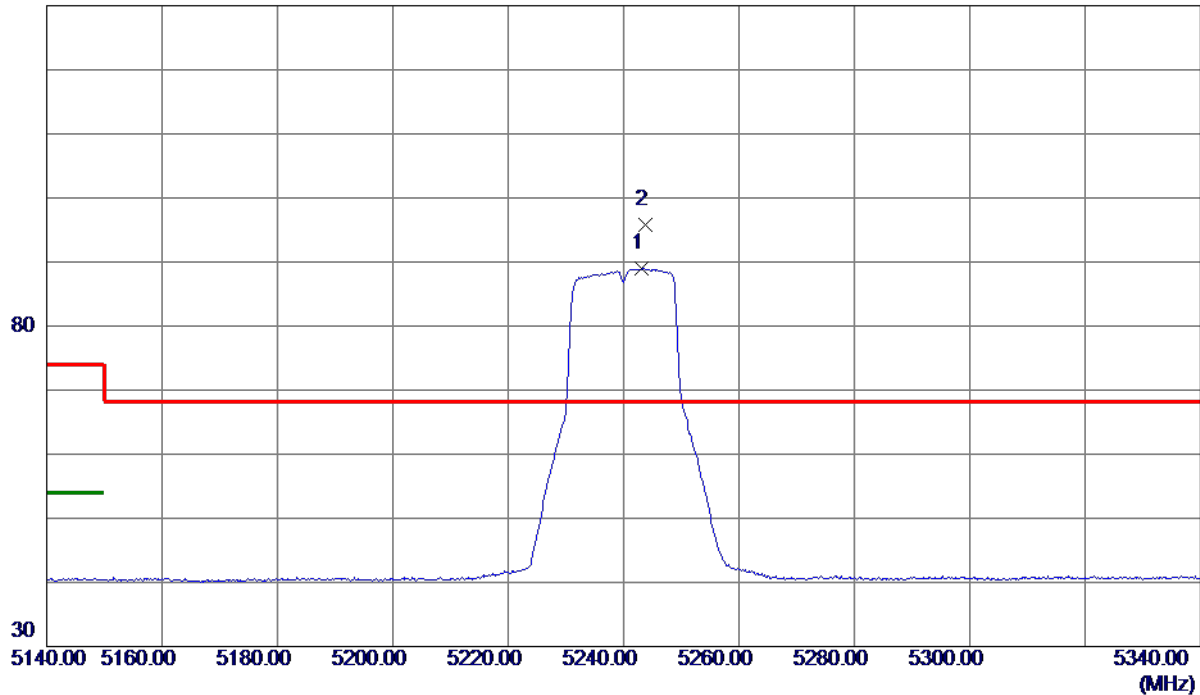

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5243.2000	74.41	14.54	88.95	999.00	-910.05	AVG	No Limit
2 *	5243.8000	81.20	14.54	95.74	68.30	27.44	Peak	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT20) Mode 5240 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

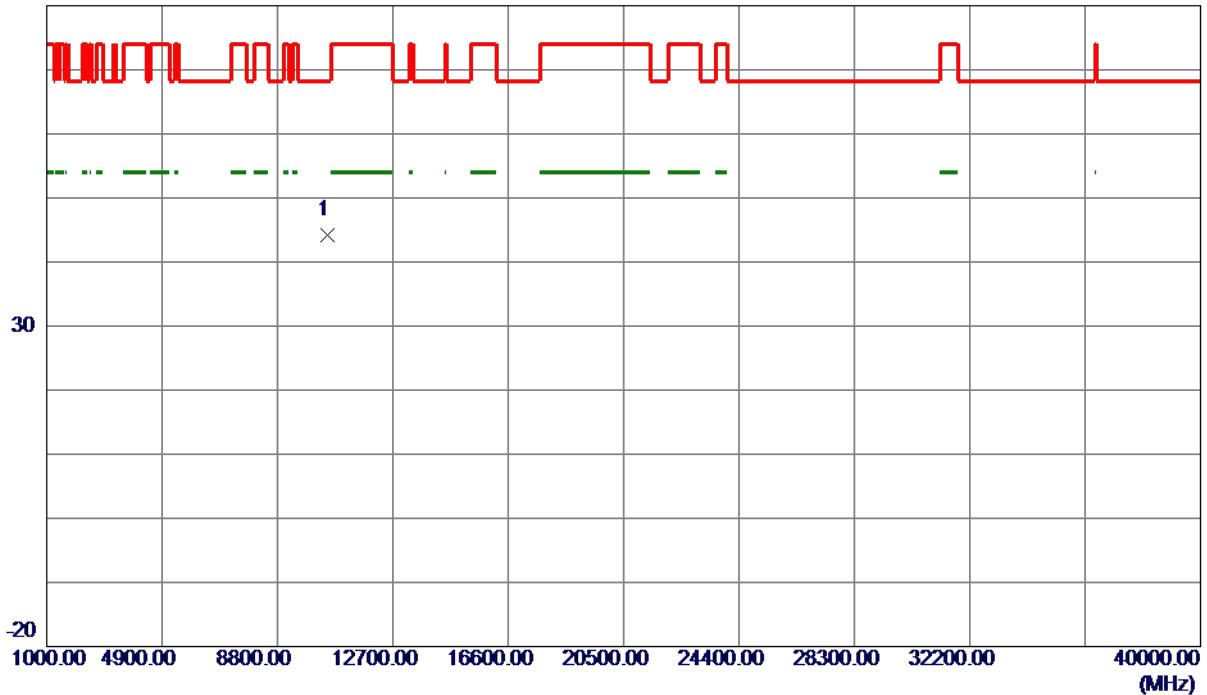

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10479.0650	32.75	11.50	44.25	68.30	-24.05	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

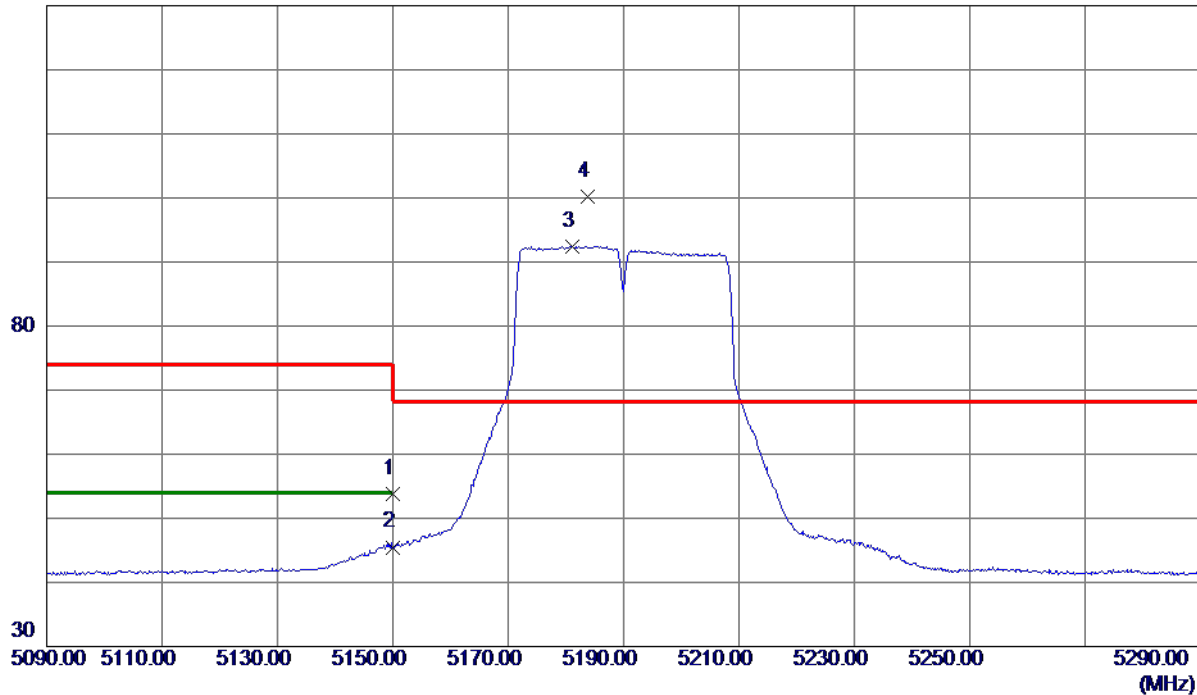


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	39.44	14.32	53.76	74.00	-20.24	Peak	
2	5150.0000	31.18	14.32	45.50	54.00	-8.50	AVG	
3	5181.2000	78.06	14.39	92.45	999.00	-906.55	AVG	No Limit
4 *	5183.8000	85.79	14.40	100.19	68.30	31.89	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz_Ant.1+Ant.2

Vertical

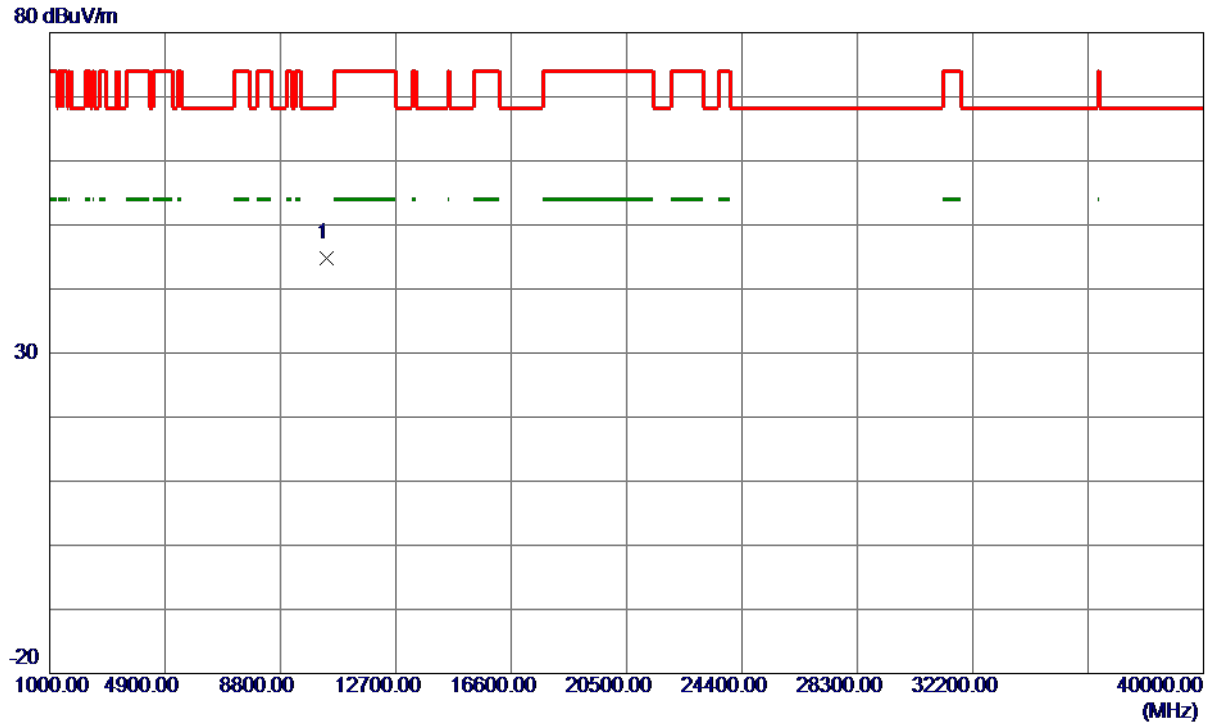


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10375.8650	33.47	11.33	44.80	68.30	-23.50	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

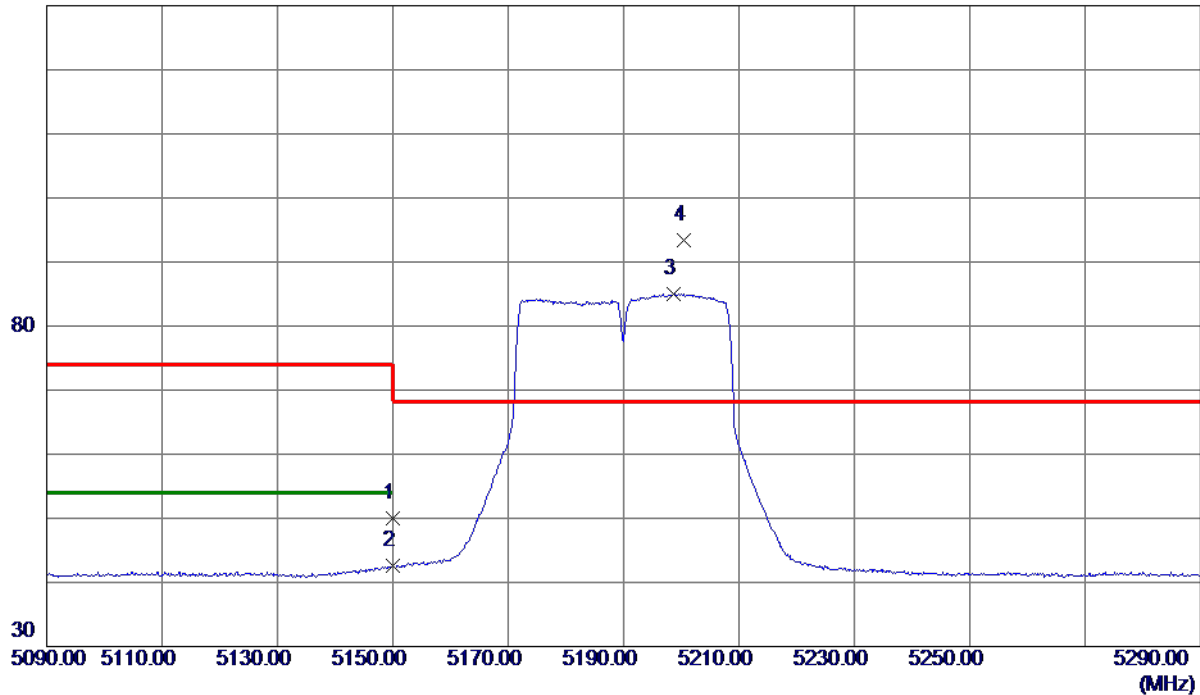


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.62	14.32	49.94	74.00	-24.06	Peak	
2	5150.0000	28.34	14.32	42.66	54.00	-11.34	AVG	
3	5198.7000	70.62	14.43	85.05	999.00	-913.95	AVG	No Limit
4 *	5200.5000	78.91	14.44	93.35	68.30	25.05	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5190 MHz_Ant.1+Ant.2

Horizontal

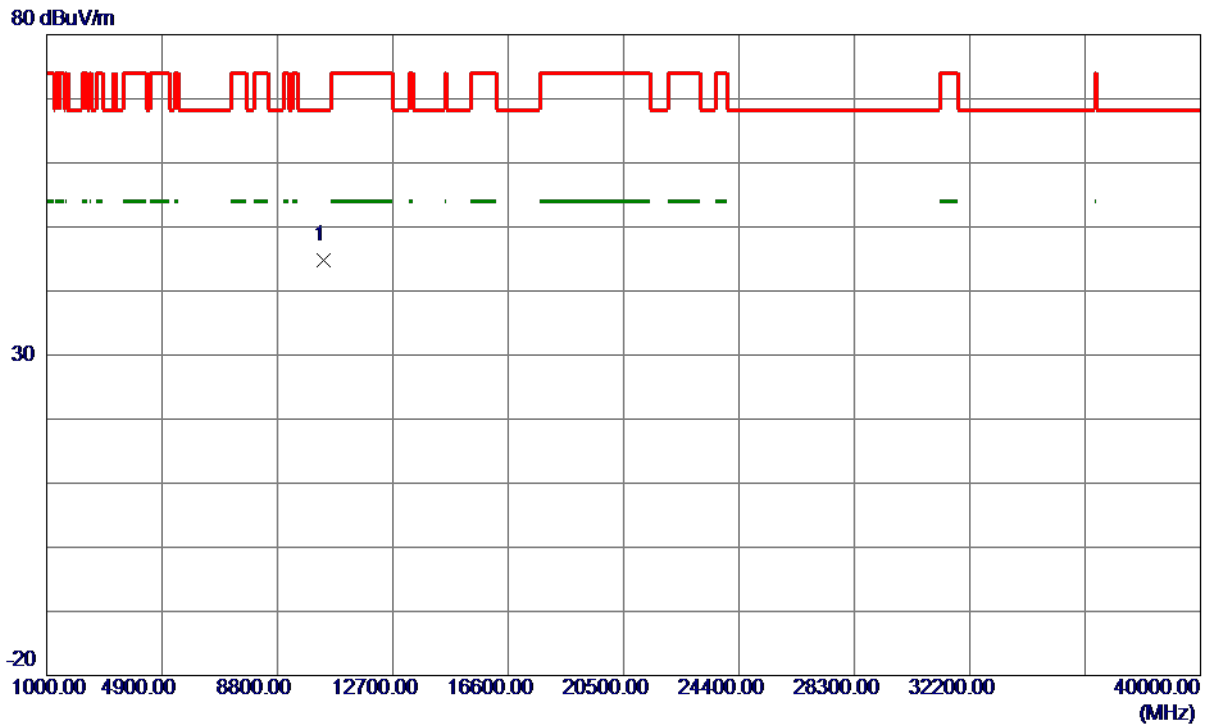


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10380.4700	33.38	11.33	44.71	68.30	-23.59	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz _Ant.1+Ant.2

Vertical

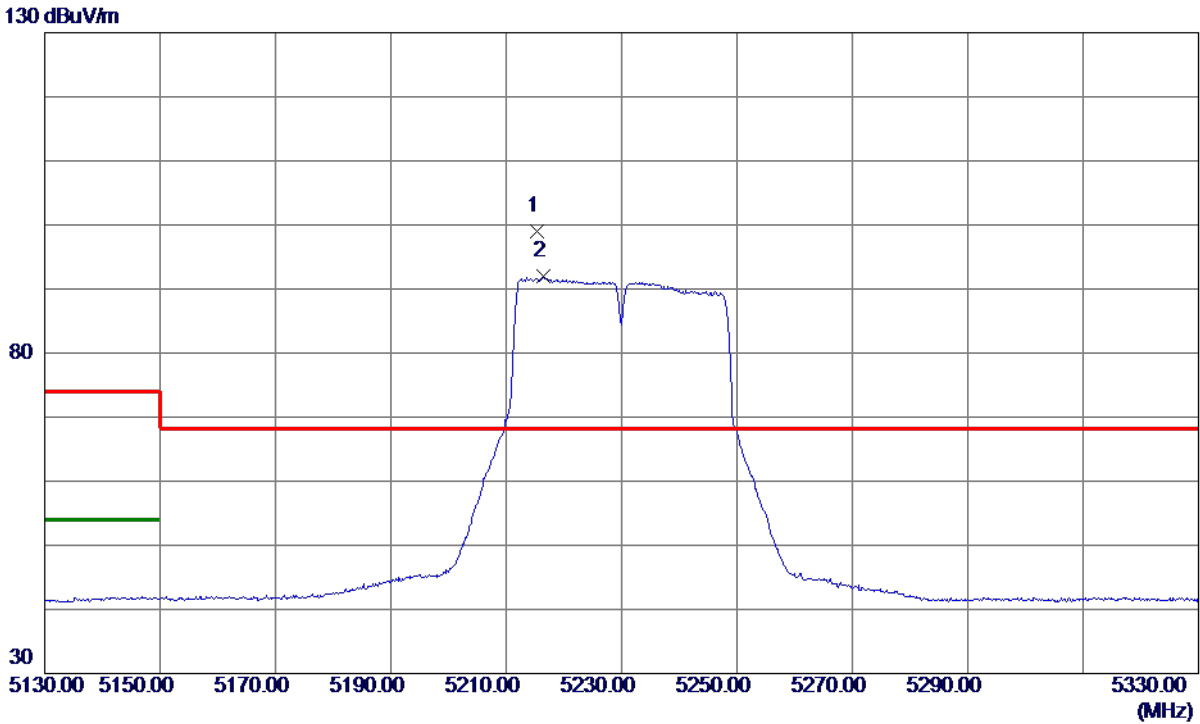

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5215.4000	84.50	14.47	98.97	68.30	30.67	Peak	No Limit
2	5216.4000	77.50	14.47	91.97	999.00	-907.03	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

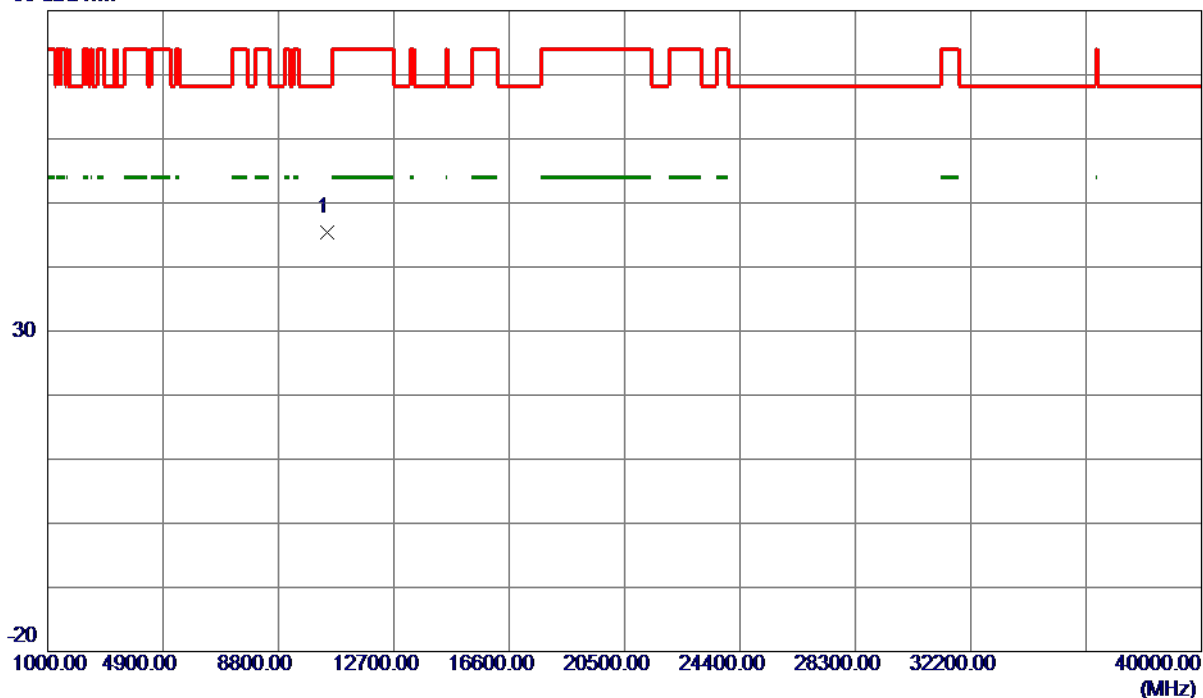

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10464.7300	33.98	11.48	45.46	68.30	-22.84	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

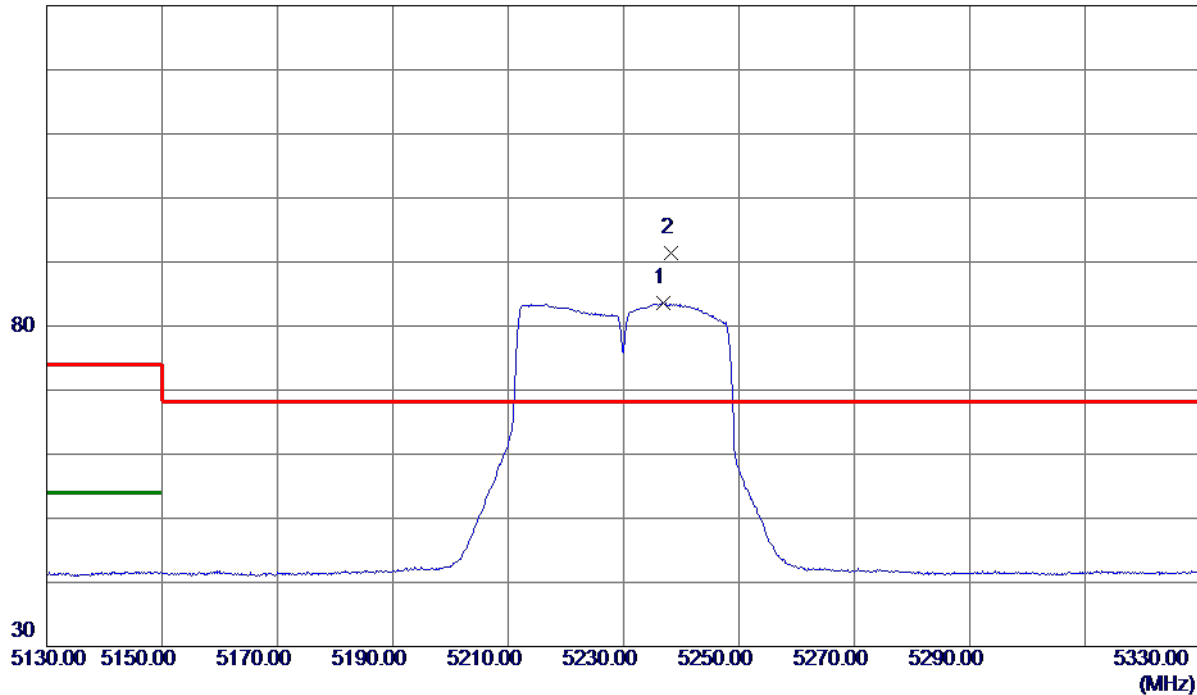

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5236.8000	69.15	14.52	83.67	999.00	-915.33	AVG	No Limit
2 *	5238.2000	76.89	14.52	91.41	68.30	23.11	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX N (HT40) Mode 5230 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

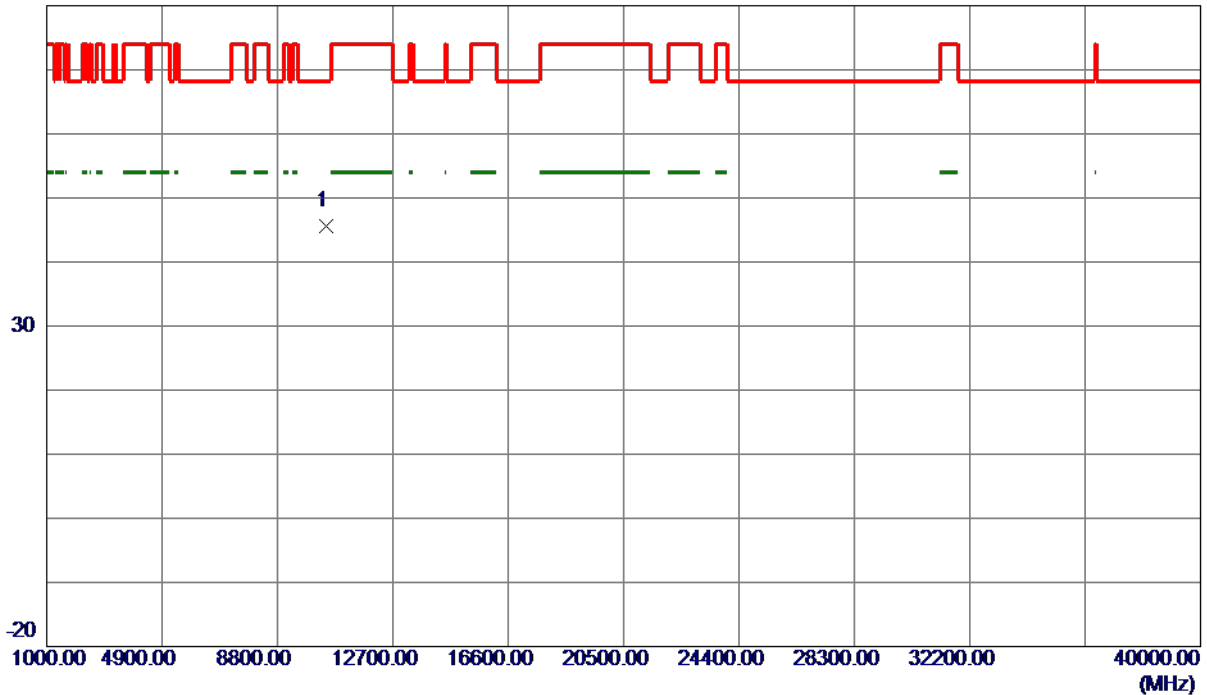

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10463.7650	34.20	11.47	45.67	68.30	-22.63	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5260 MHz_Ant.1

Vertical

130 dBuV/m

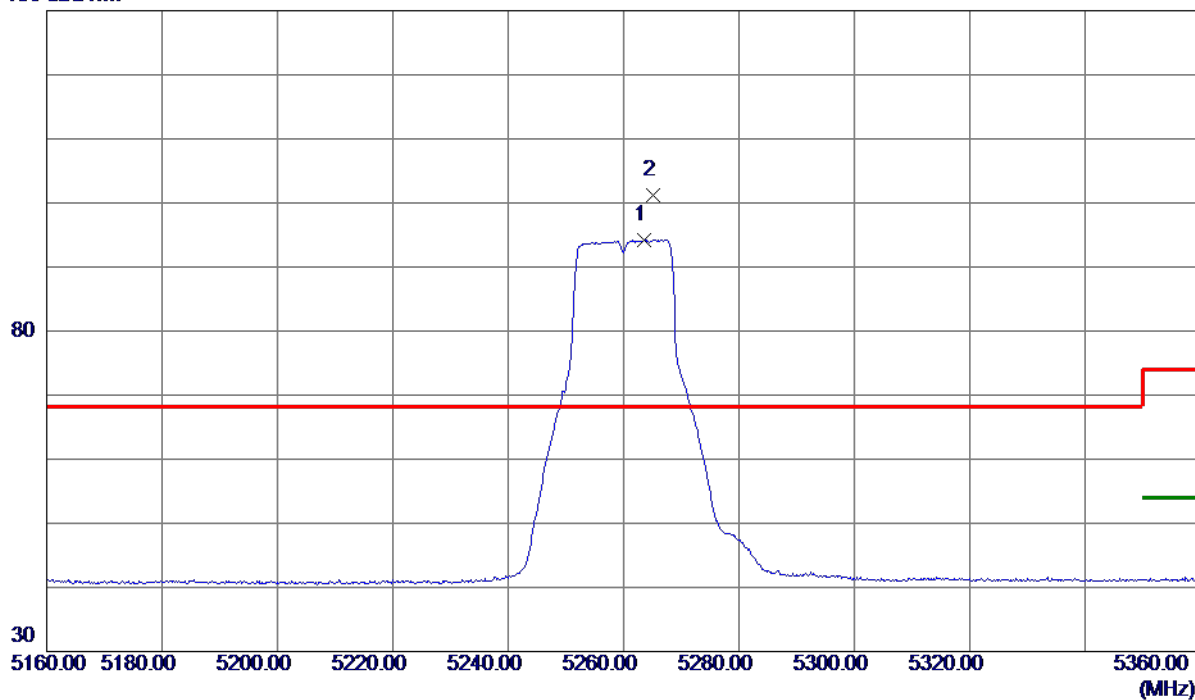

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5263.5000	79.70	14.58	94.28	999.00	-904.72	AVG	No Limit
2 *	5265.2000	86.65	14.59	101.24	68.30	32.94	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5260 MHz_Ant.1

Vertical

80 dBuV/m

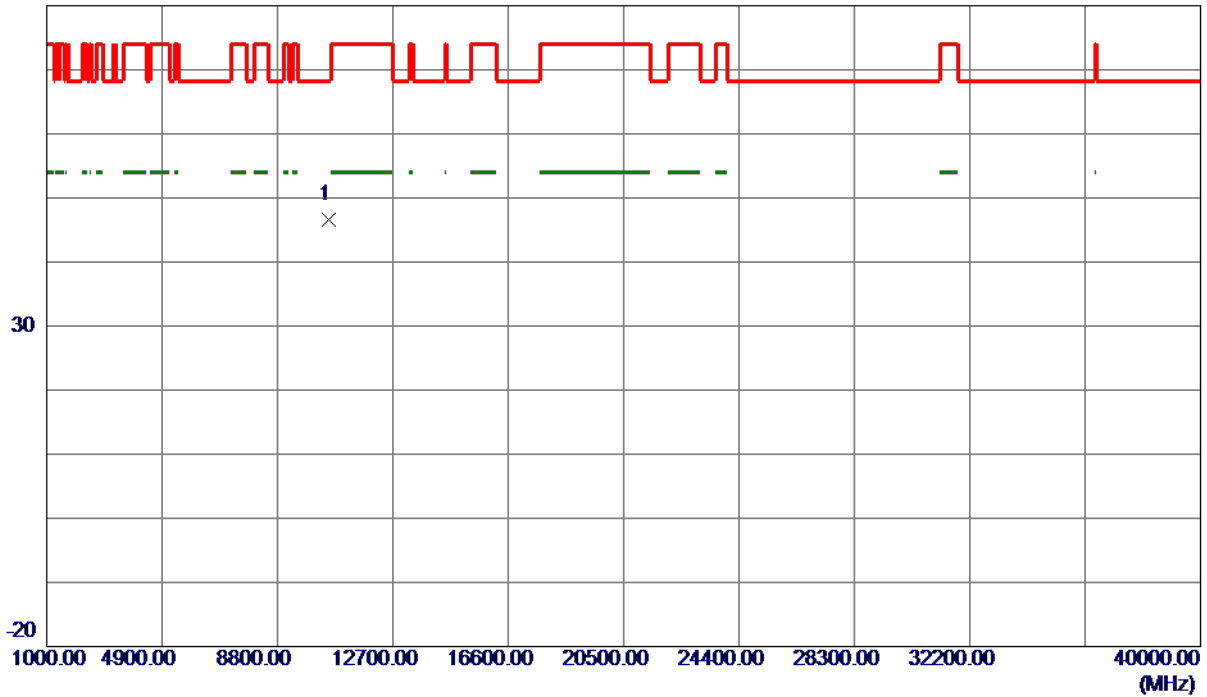

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10519.5220	35.13	11.54	46.67	68.30	-21.63	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5260 MHz_Ant.1

Horizontal

130 dBuV/m

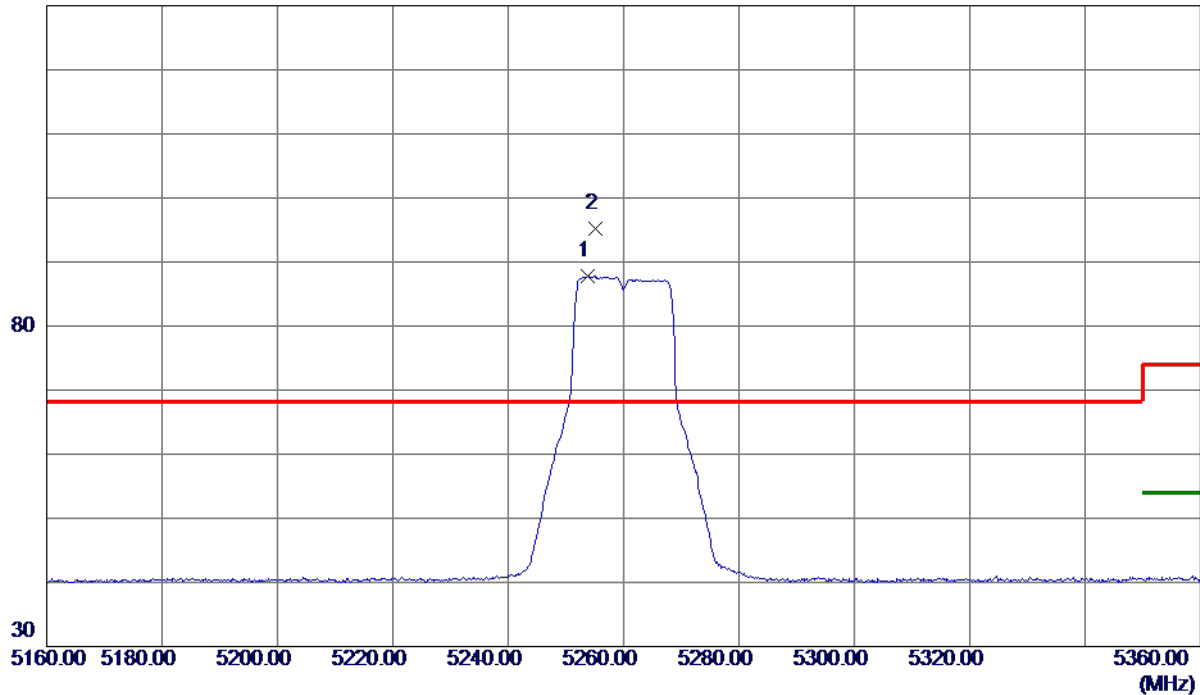


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5253.7000	73.28	14.56	87.84	999.00	-911.16	AVG	No Limit
2 *	5255.1000	80.56	14.56	95.12	68.30	26.82	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5260 MHz_Ant.1

Horizontal

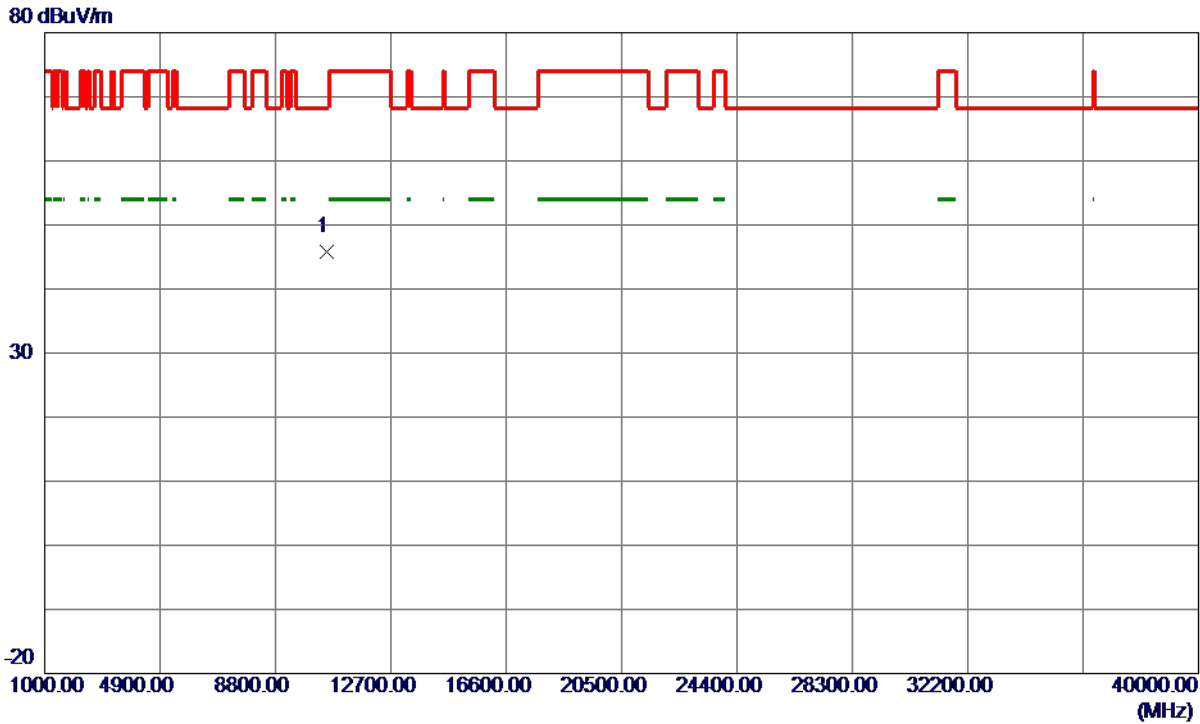

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10520.3640	34.20	11.54	45.74	68.30	-22.56	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5300 MHz_Ant.1

Vertical

130 dBuV/m

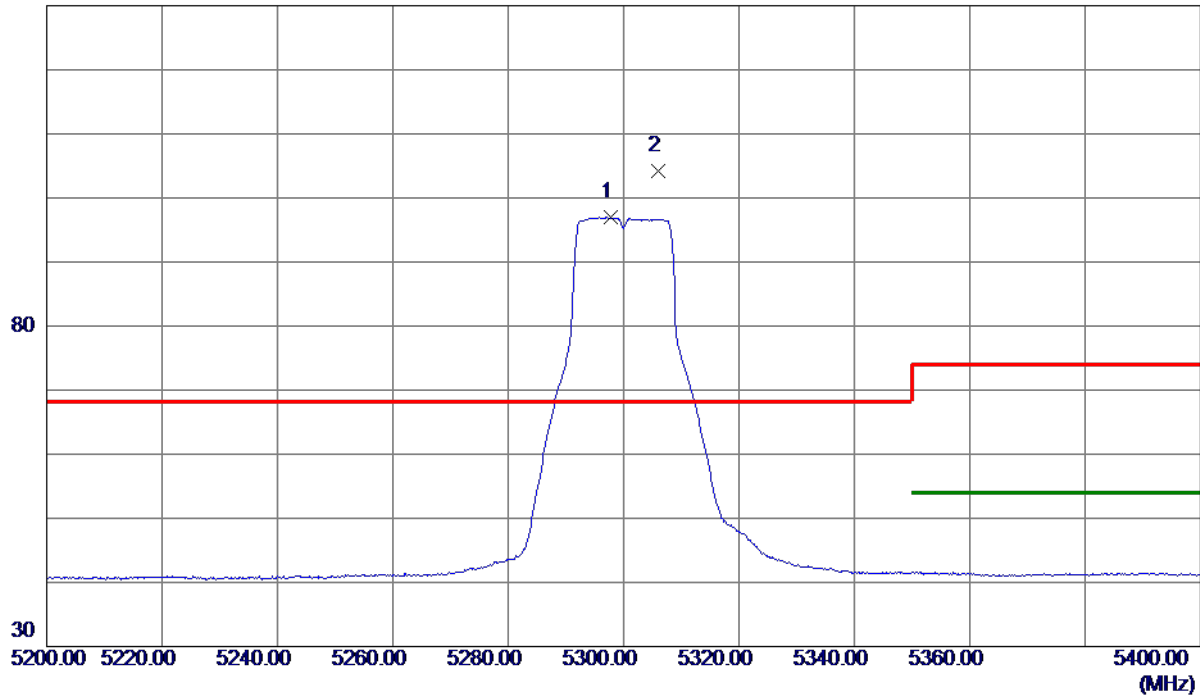

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5297.7000	82.26	14.67	96.93	999.00	-902.07	AVG	No Limit
2 *	5306.0000	89.45	14.69	104.14	68.30	35.84	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5300 MHz_Ant.1

Vertical

80 dBuV/m

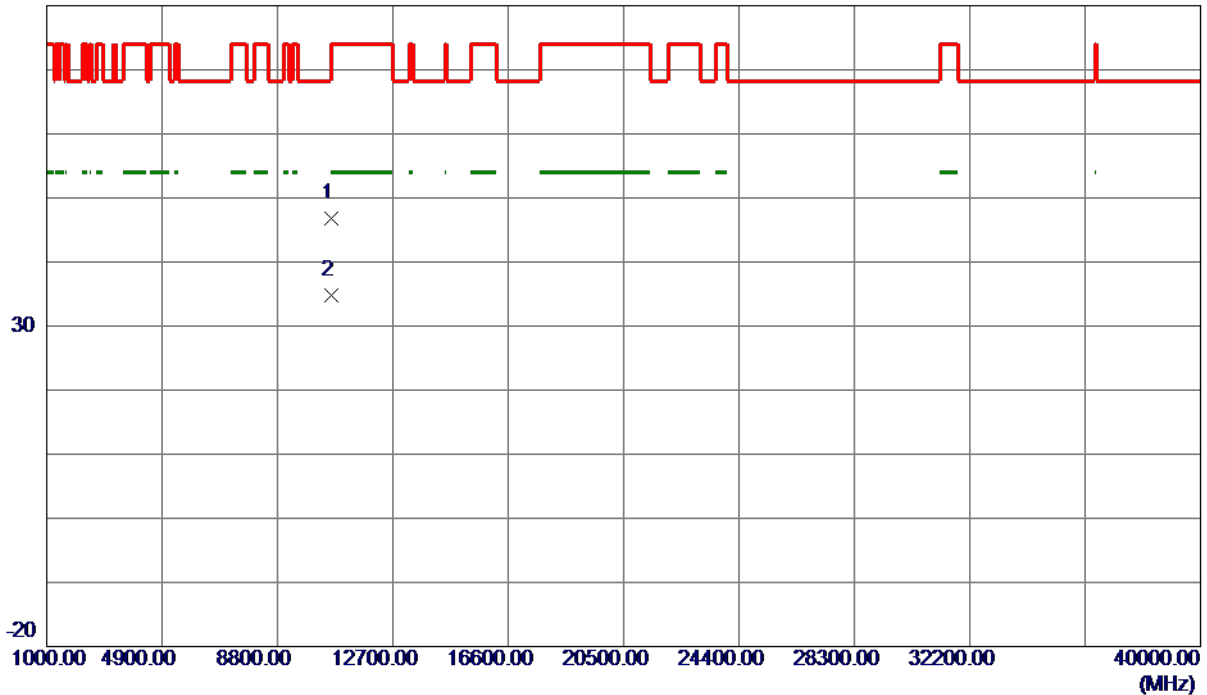

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	10600.2330	35.16	11.55	46.71	74.00	-27.29	Peak	
2 *	10600.3200	23.24	11.55	34.79	54.00	-19.21	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5300 MHz_Ant.1

Horizontal

130 dBuV/m

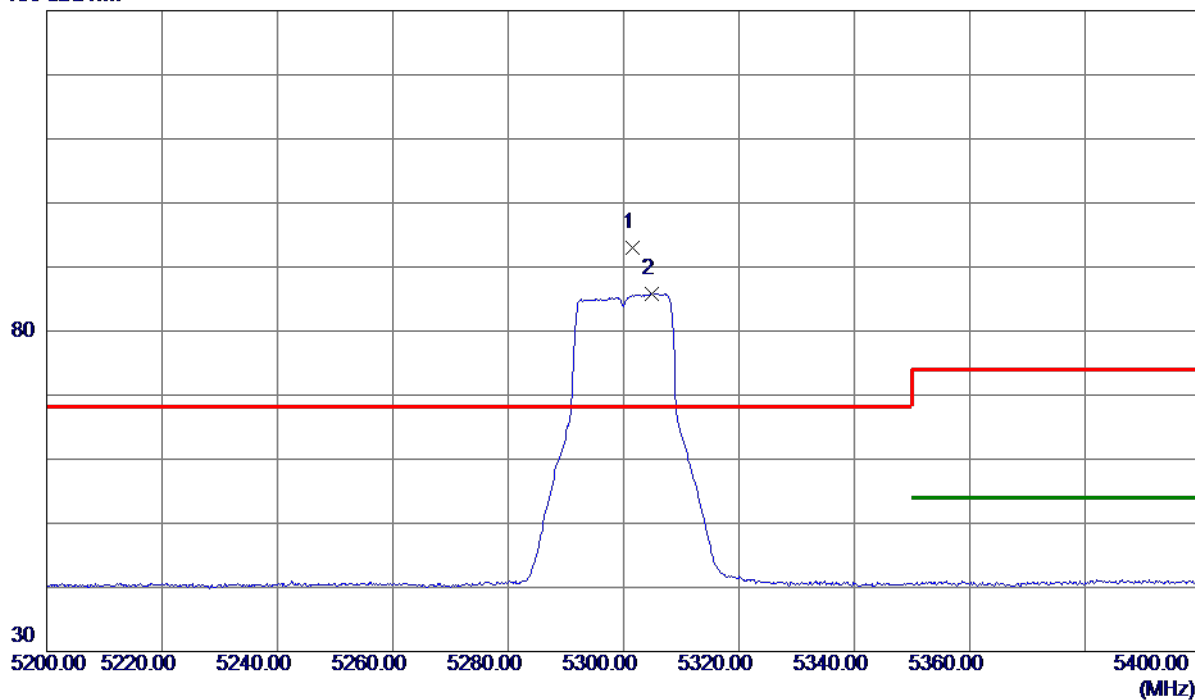

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5301.6000	78.39	14.67	93.06	68.30	24.76	Peak	No Limit
2	5304.8000	71.19	14.68	85.87	999.00	-913.13	AVG	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5300 MHz_Ant.1

Horizontal

80 dBuV/m

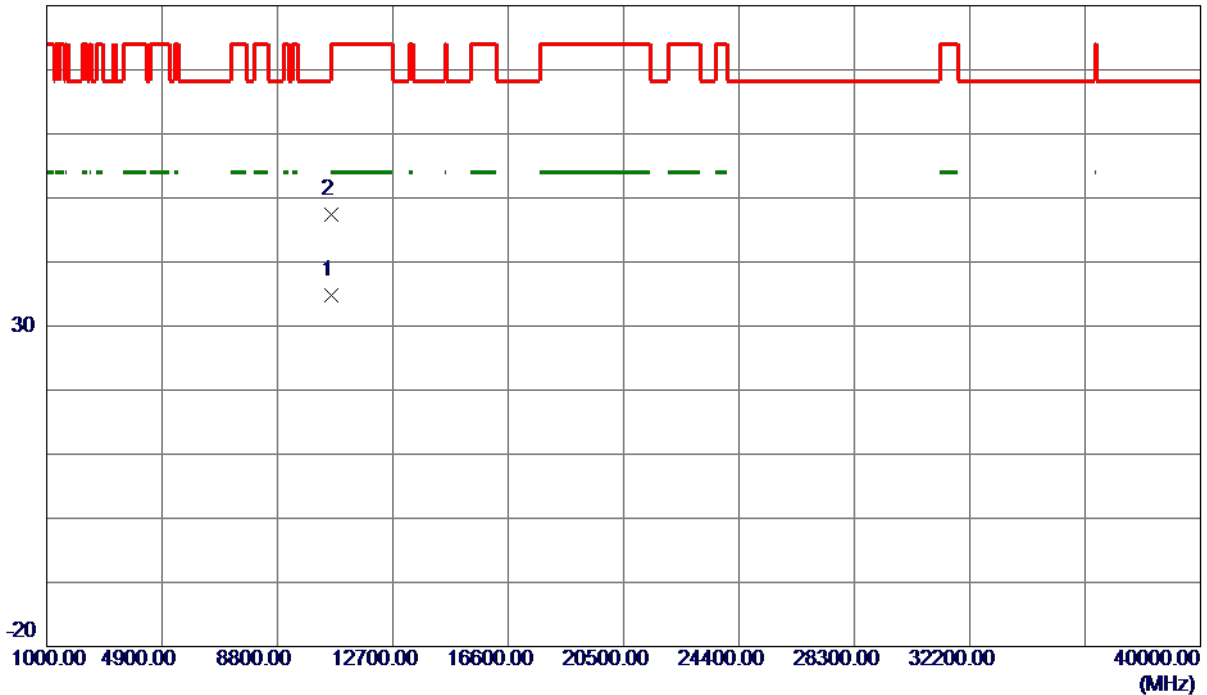

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10600.4290	23.24	11.55	34.79	54.00	-19.21	AVG	
2	10600.4370	35.92	11.55	47.47	74.00	-26.53	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5320 MHz_Ant.1

Vertical

130 dBuV/m

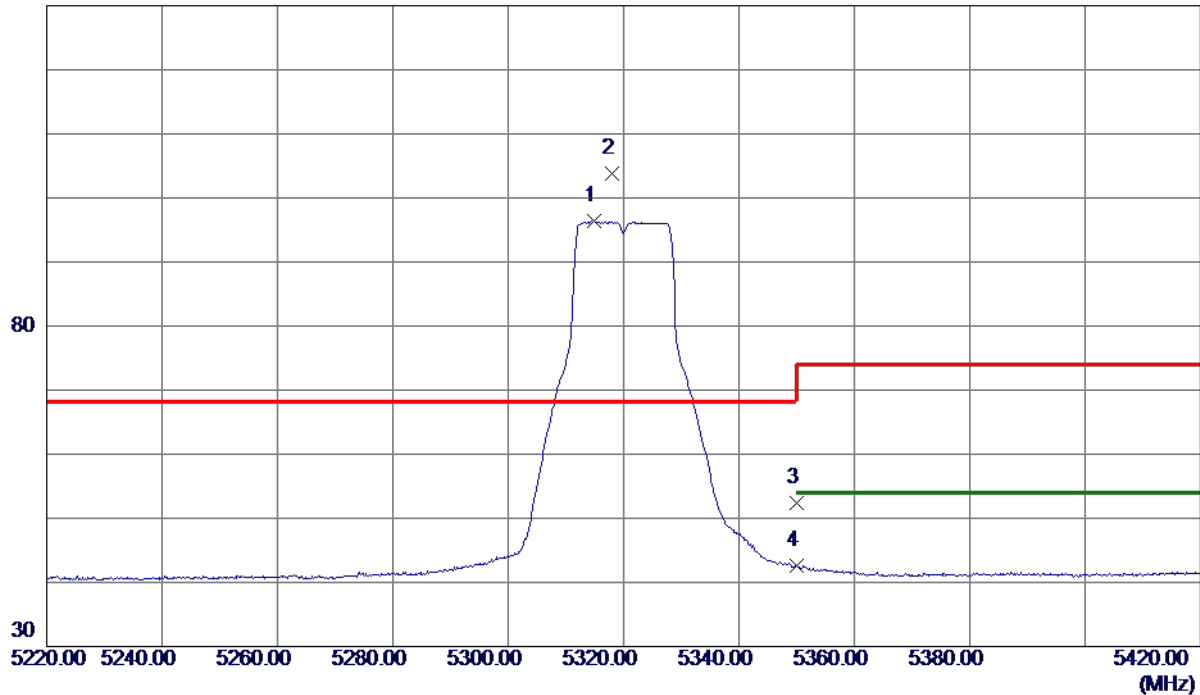

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5314.8000	81.62	14.71	96.33	999.00	-902.67	AVG	No Limit
2 *	5317.9000	89.13	14.71	103.84	68.30	35.54	Peak	No Limit
3	5350.0000	37.69	14.79	52.48	74.00	-21.52	Peak	
4	5350.0000	27.75	14.79	42.54	999.00	-956.46	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5320 MHz_Ant.1

Vertical

80 dBuV/m

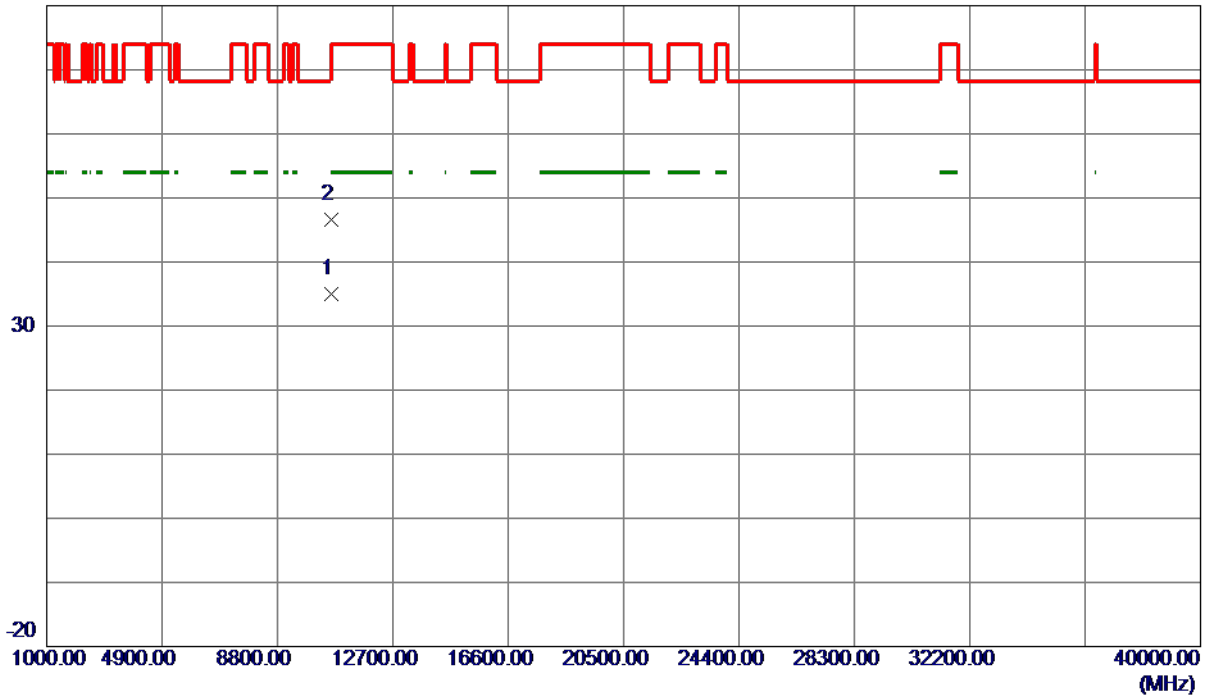

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10639.7870	23.50	11.56	35.06	54.00	-18.94	AVG	
2	10640.4880	35.00	11.56	46.56	74.00	-27.44	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5320 MHz_Ant.1

Horizontal

130 dBuV/m

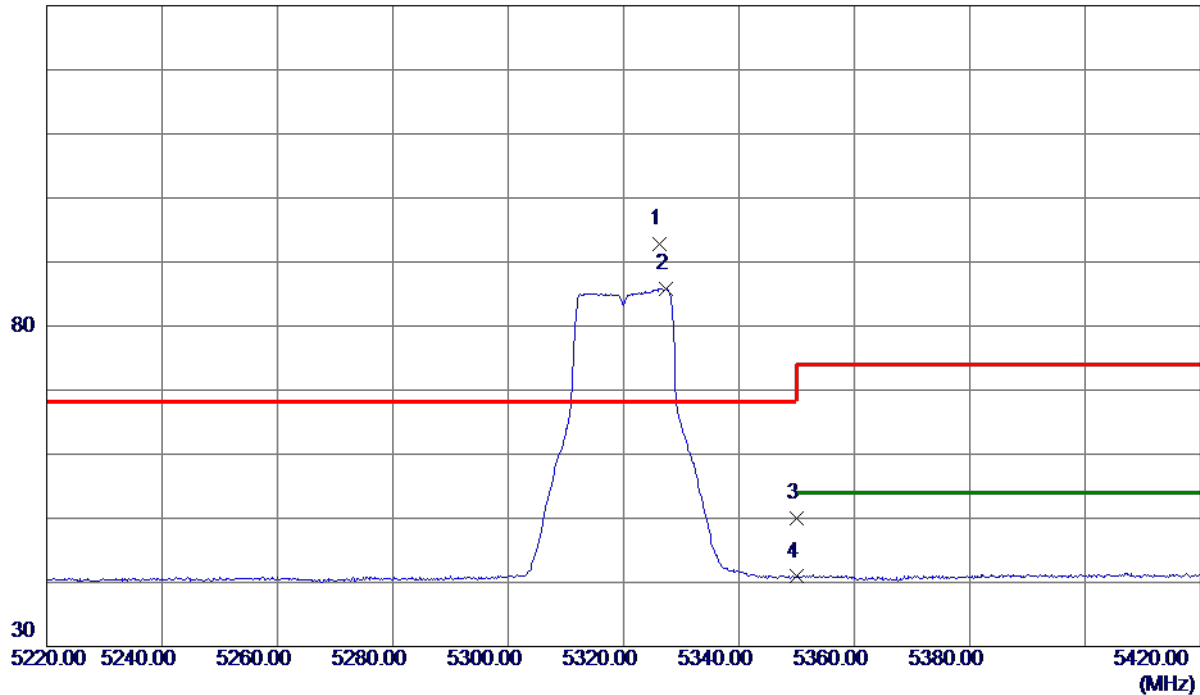

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5326.3000	78.02	14.73	92.75	68.30	24.45	Peak	No Limit
2	5327.3000	71.13	14.74	85.87	999.00	-913.13	AVG	No Limit
3	5350.0000	35.17	14.79	49.96	74.00	-24.04	Peak	
4	5350.0000	26.11	14.79	40.90	999.00	-958.10	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX A Mode 5320 MHz_Ant.1

Horizontal

80 dBuV/m

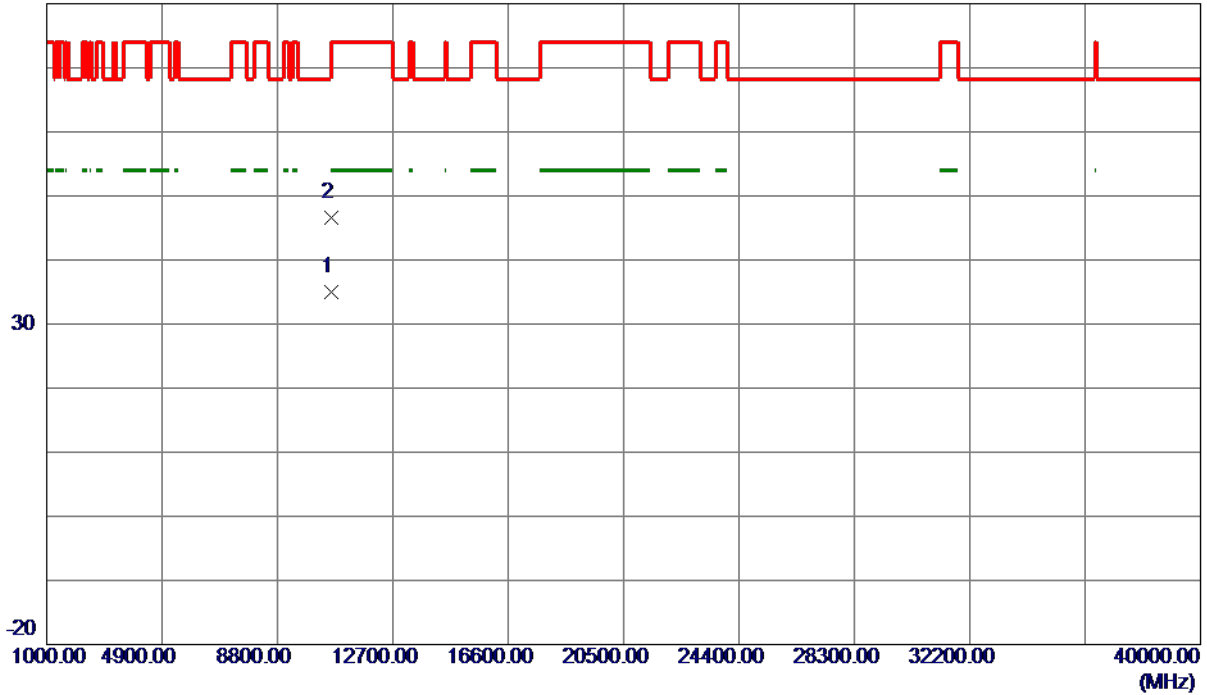

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10640.1070	23.42	11.56	34.98	54.00	-19.02	AVG	
2	10640.4390	34.97	11.56	46.53	74.00	-27.47	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5260 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

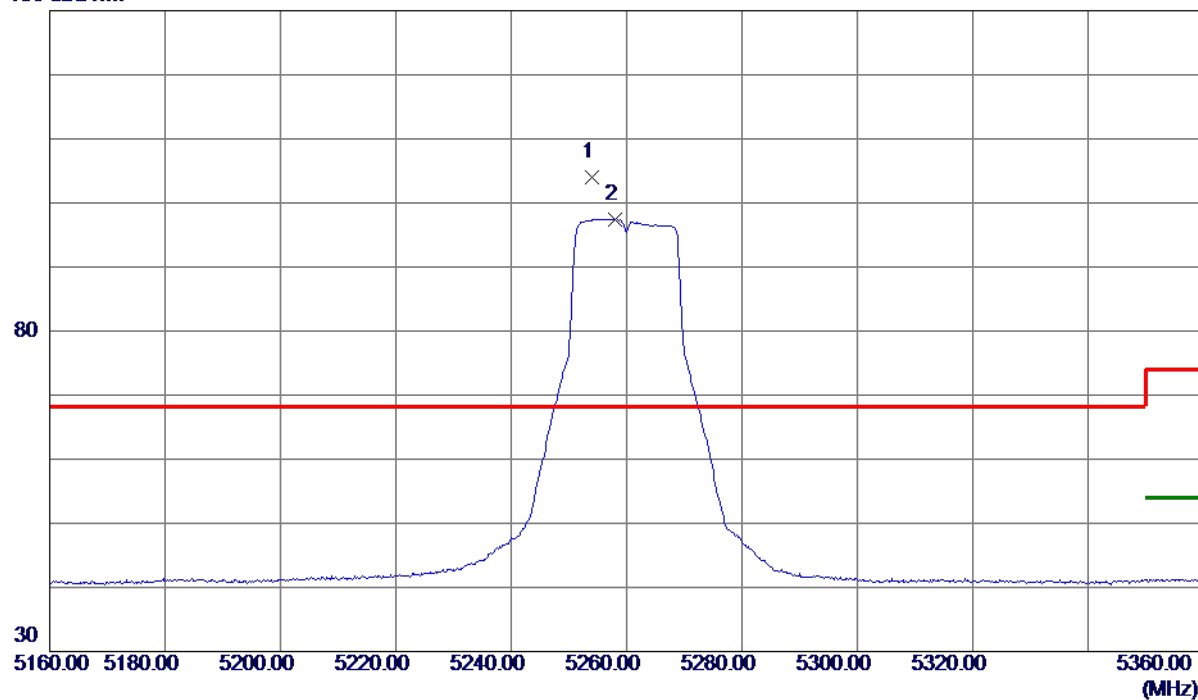

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5254.0000	89.53	14.56	104.09	68.30	35.79	Peak	No Limit
2	5258.0000	82.92	14.57	97.49	999.00	-901.51	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5260 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

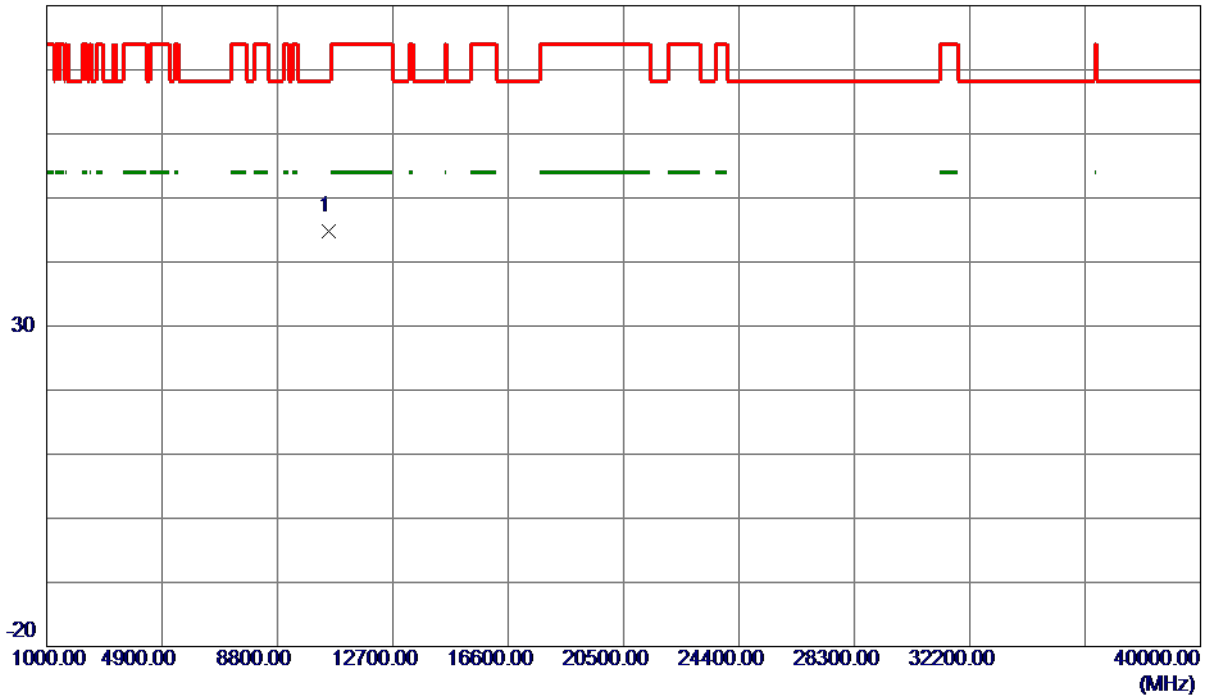

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10519.0150	33.19	11.54	44.73	68.30	-23.57	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5260 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

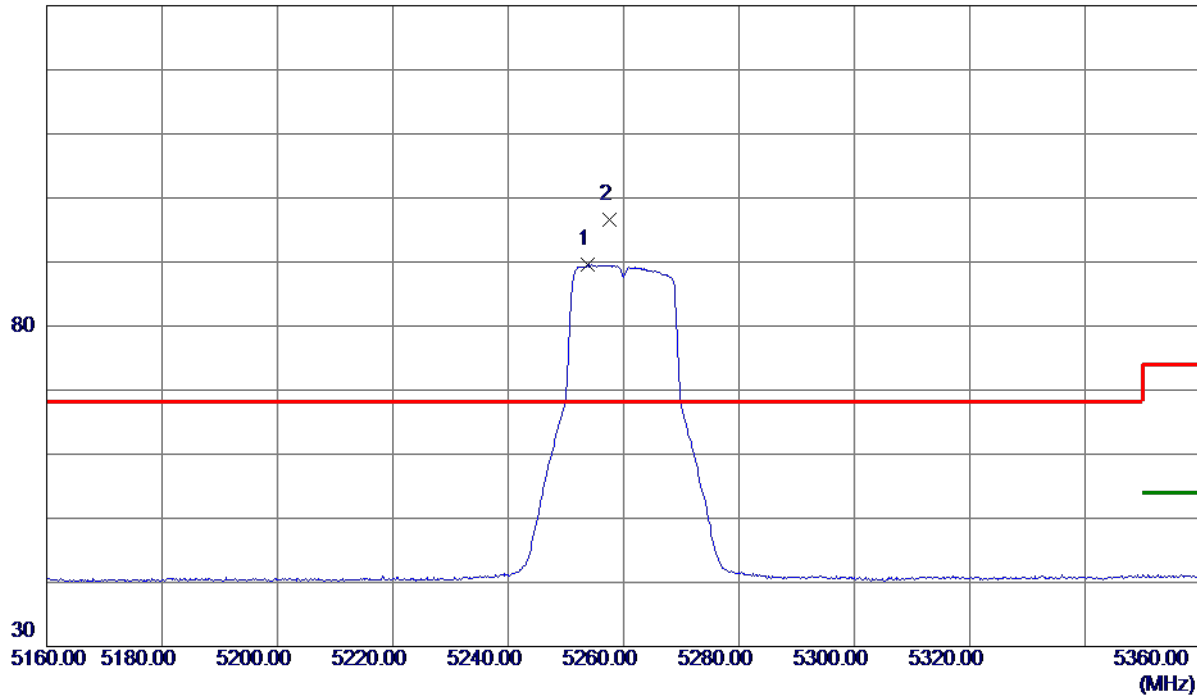

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5253.7000	74.99	14.56	89.55	999.00	-909.45	AVG	No Limit
2 *	5257.5000	82.01	14.57	96.58	68.30	28.28	Peak	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5260 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

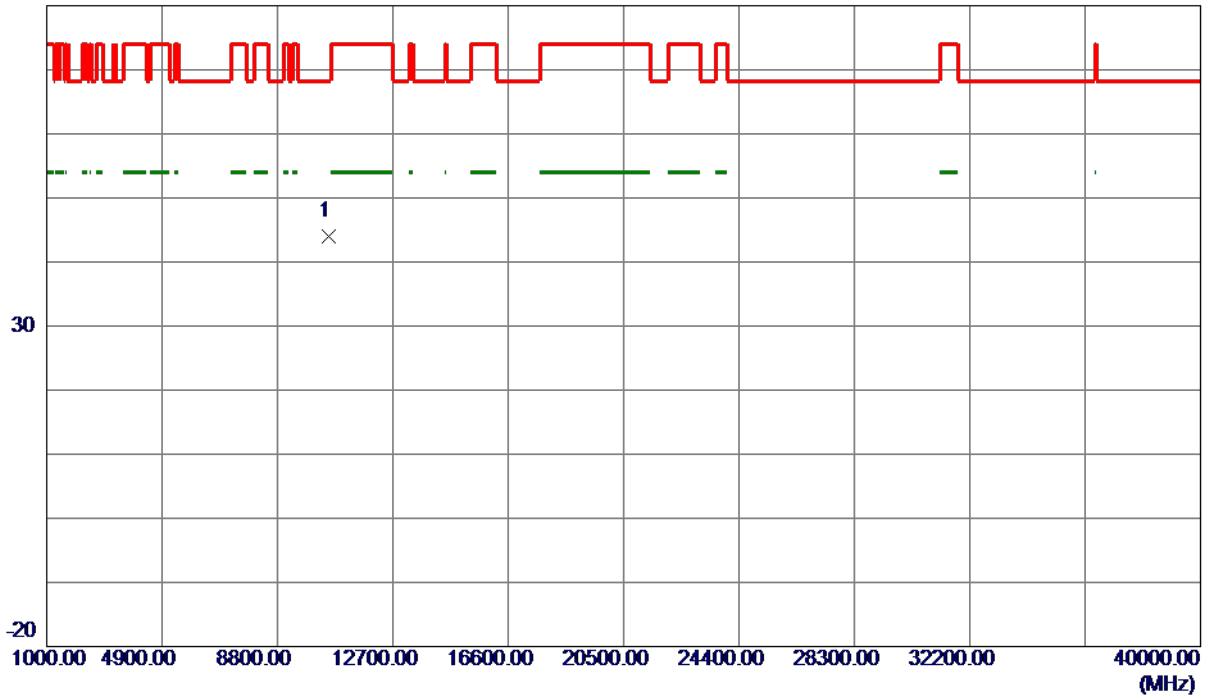

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10522.4900	32.42	11.54	43.96	68.30	-24.34	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5300 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

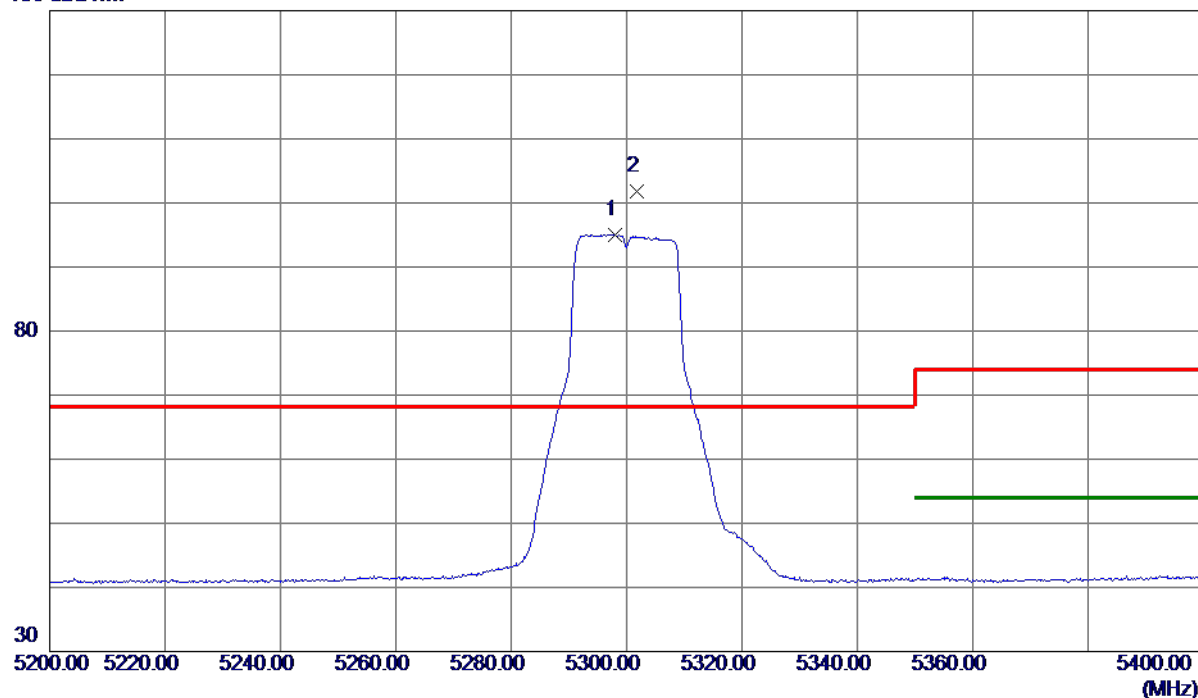

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5298.1000	80.41	14.67	95.08	999.00	-903.92	AVG	No Limit
2 *	5301.8000	87.20	14.68	101.88	68.30	33.58	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5300 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

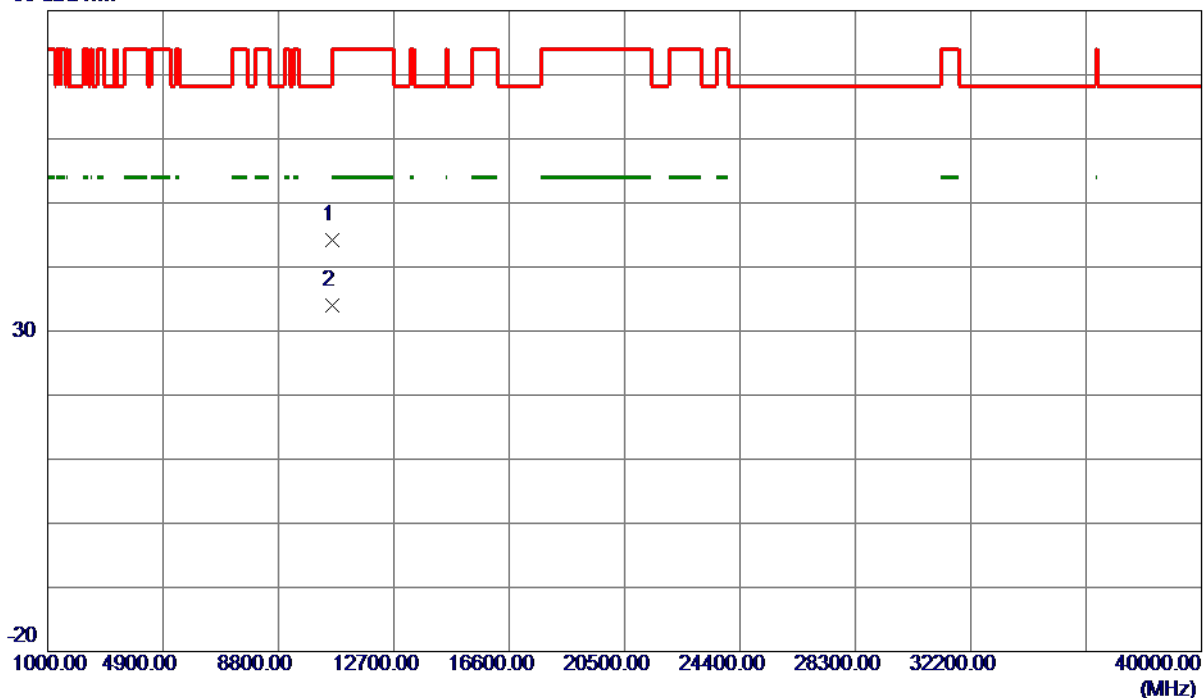

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	10600.8350	32.72	11.55	44.27	74.00	-29.73	Peak	
2 *	10602.7050	22.37	11.55	33.92	54.00	-20.08	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5300 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

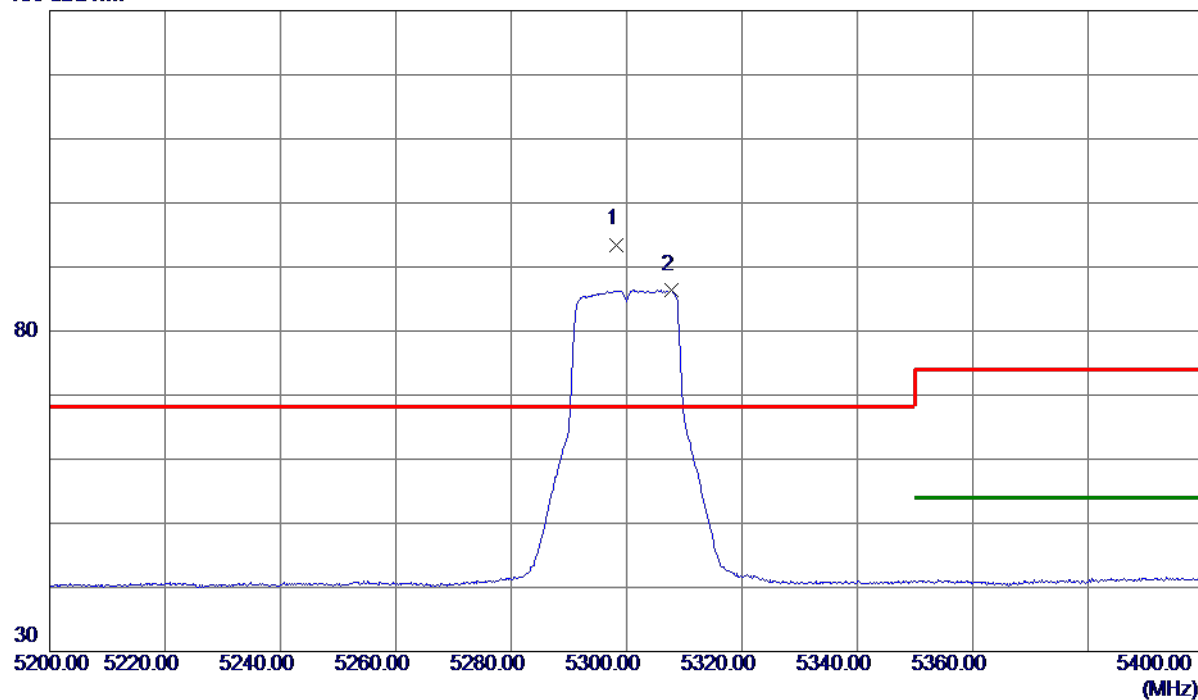

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5298.3000	78.83	14.67	93.50	68.30	25.20	Peak	No Limit
2	5307.8000	71.70	14.69	86.39	999.00	-912.61	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5300 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

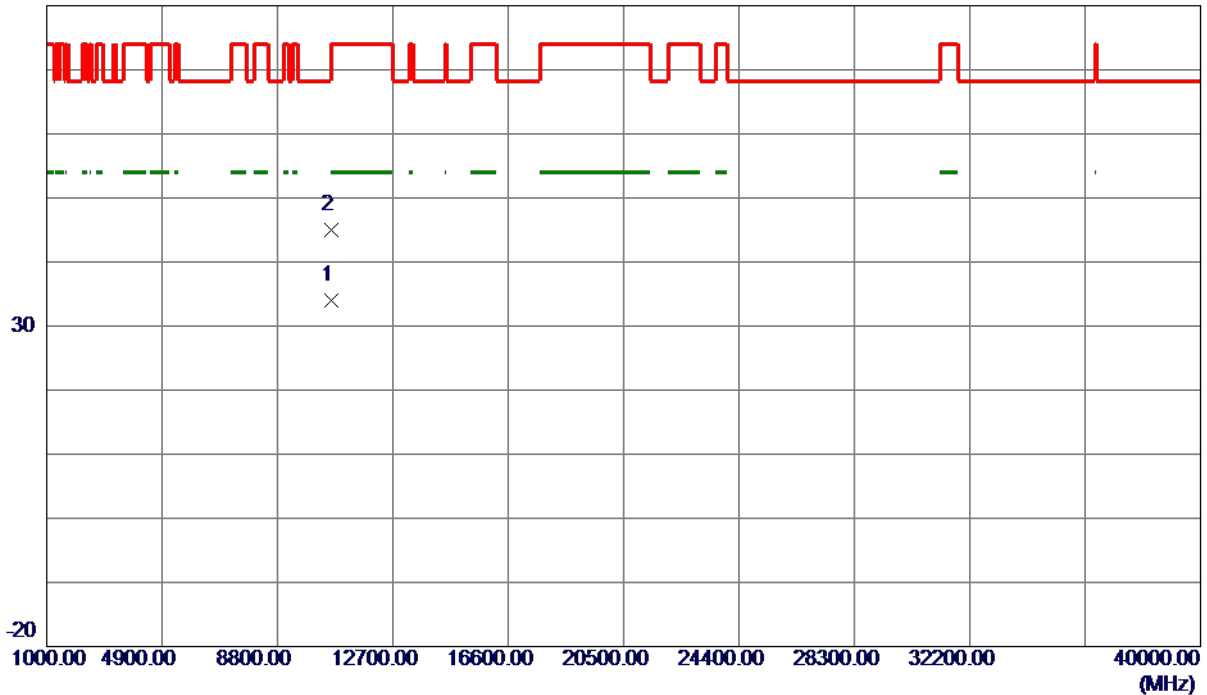

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10603.3000	22.43	11.55	33.98	54.00	-20.02	AVG	
2	10603.3400	33.43	11.55	44.98	74.00	-29.02	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5320 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

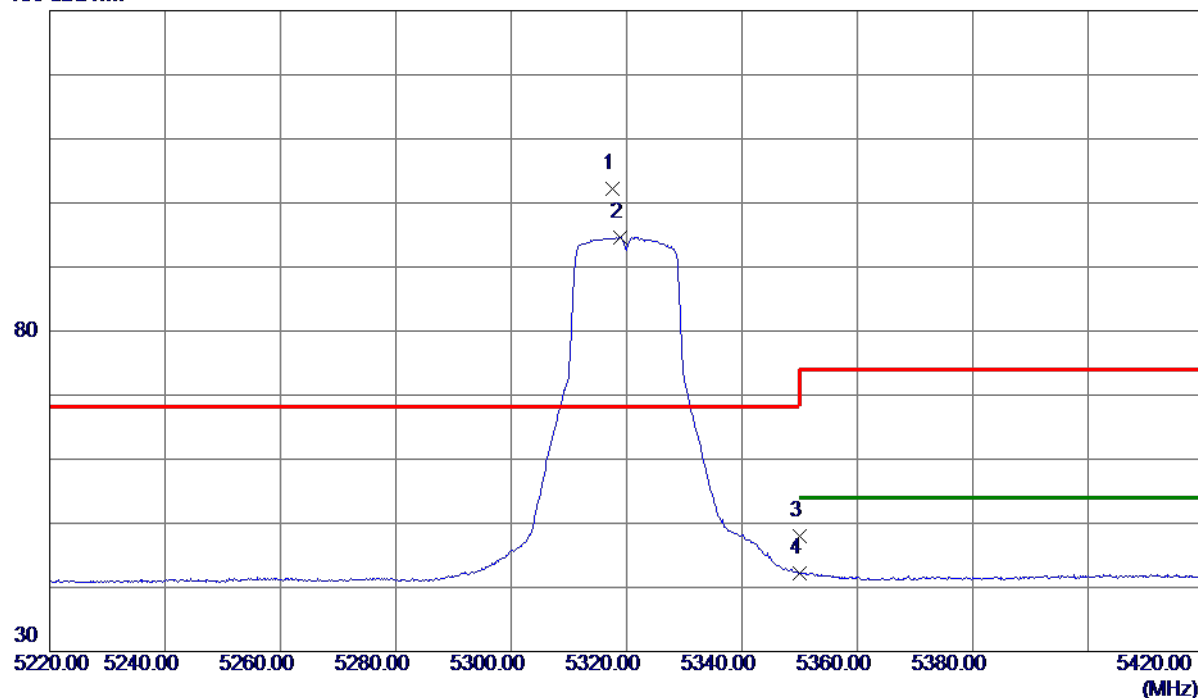

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5317.5000	87.43	14.71	102.14	68.30	33.84	Peak	No Limit
2	5318.8000	79.93	14.72	94.65	999.00	-904.35	AVG	No Limit
3	5350.0000	33.26	14.79	48.05	74.00	-25.95	Peak	
4	5350.0000	27.43	14.79	42.22	999.00	-956.78	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5320 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

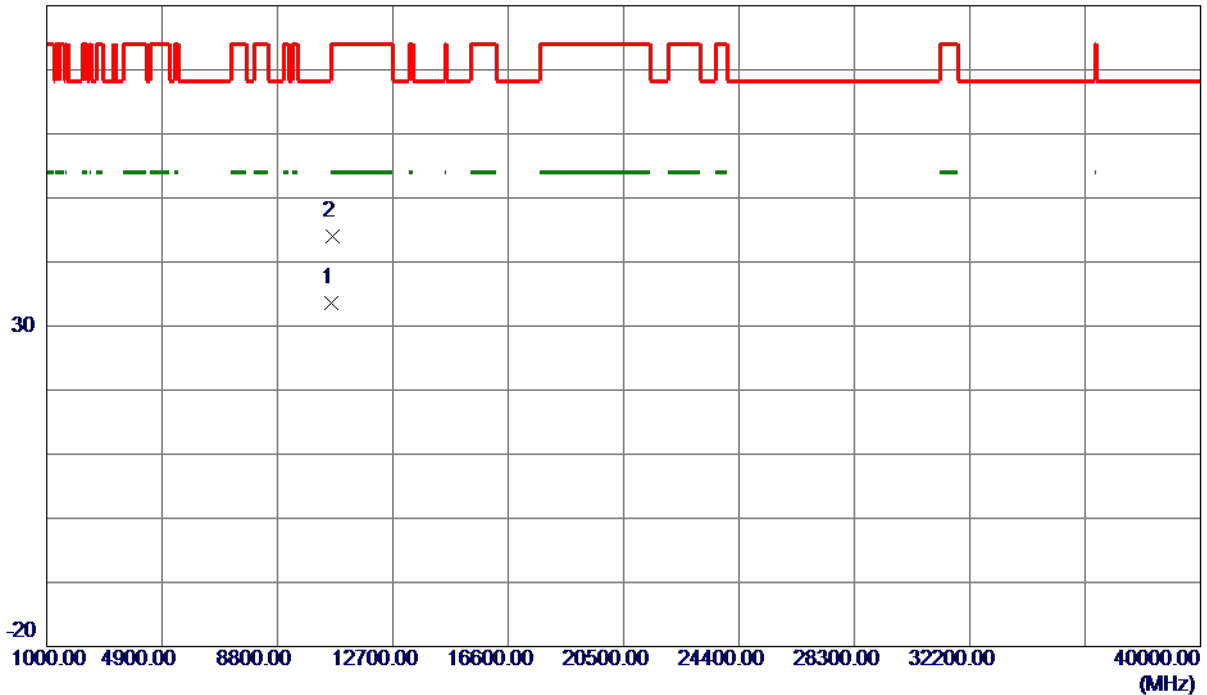

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10636.2850	22.10	11.56	33.66	54.00	-20.34	AVG	
2	10642.8000	32.51	11.56	44.07	74.00	-29.93	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5320 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

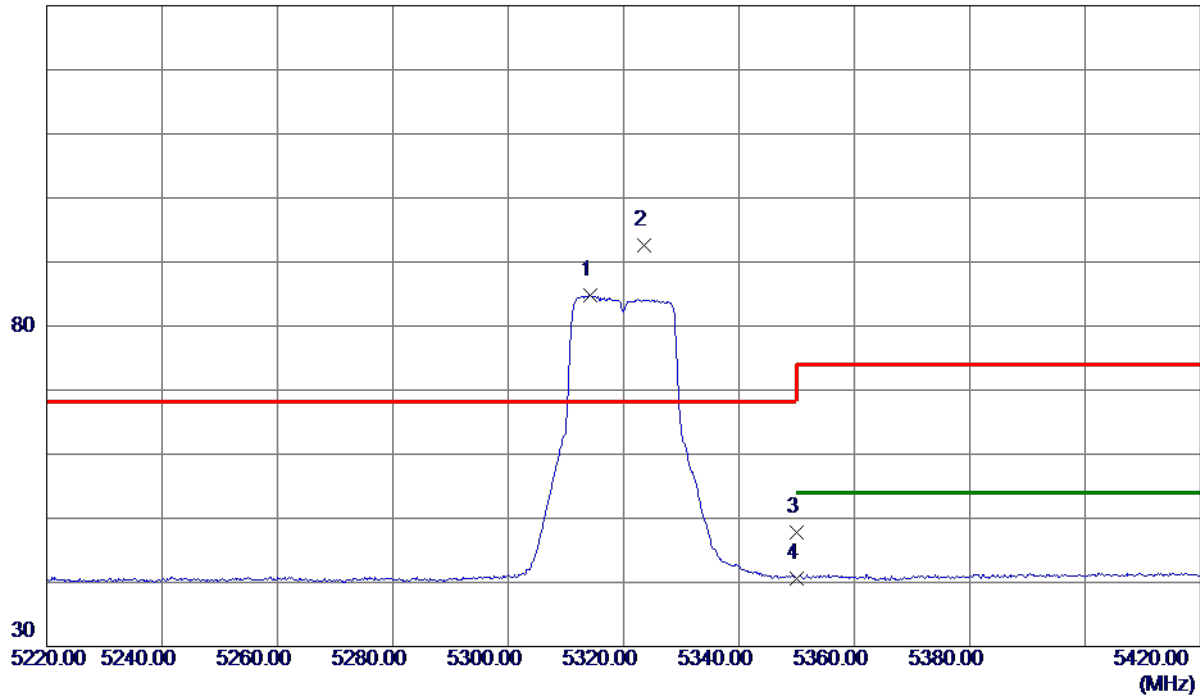

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5314.2000	70.02	14.70	84.72	999.00	-914.28	AVG	No Limit
2 *	5323.6000	77.84	14.73	92.57	68.30	24.27	Peak	No Limit
3	5350.0000	32.93	14.79	47.72	74.00	-26.28	Peak	
4	5350.0000	25.83	14.79	40.62	999.00	-958.38	AVG	

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT20) Mode 5320 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

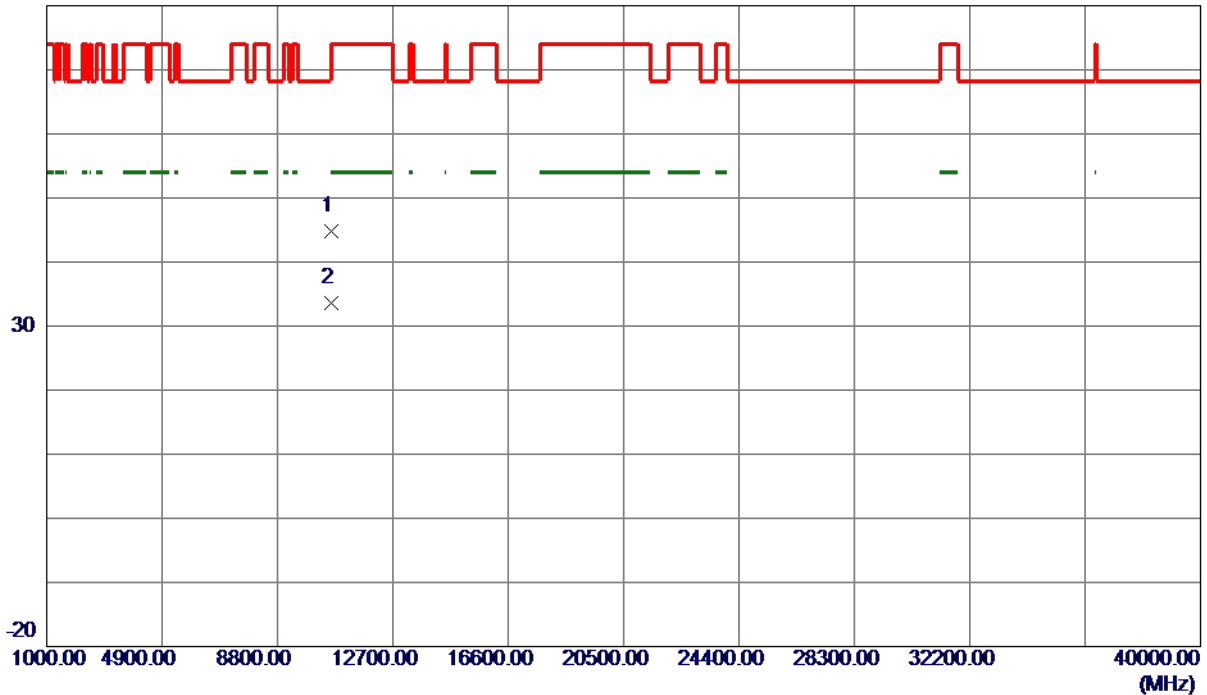

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	10635.2800	33.18	11.56	44.74	74.00	-29.26	Peak	
2 *	10636.2100	22.02	11.56	33.58	54.00	-20.42	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5270 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

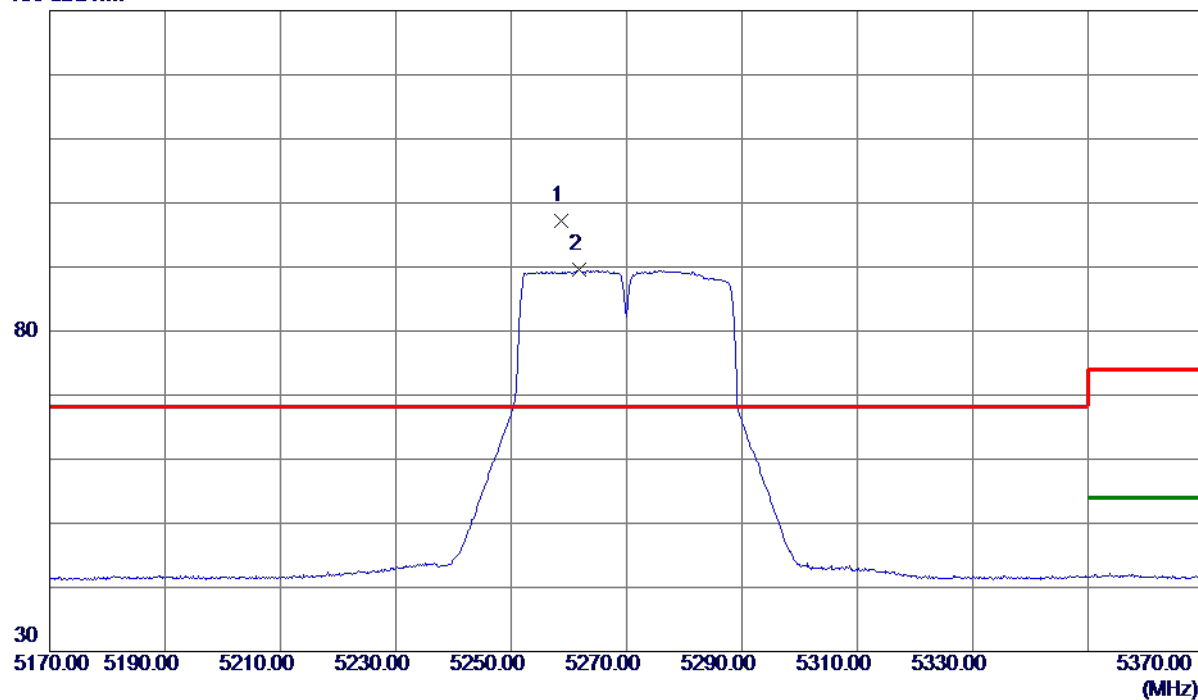

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5258.7000	82.65	14.57	97.22	68.30	28.92	Peak	No Limit
2	5261.7000	74.94	14.58	89.52	999.00	-909.48	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5270 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

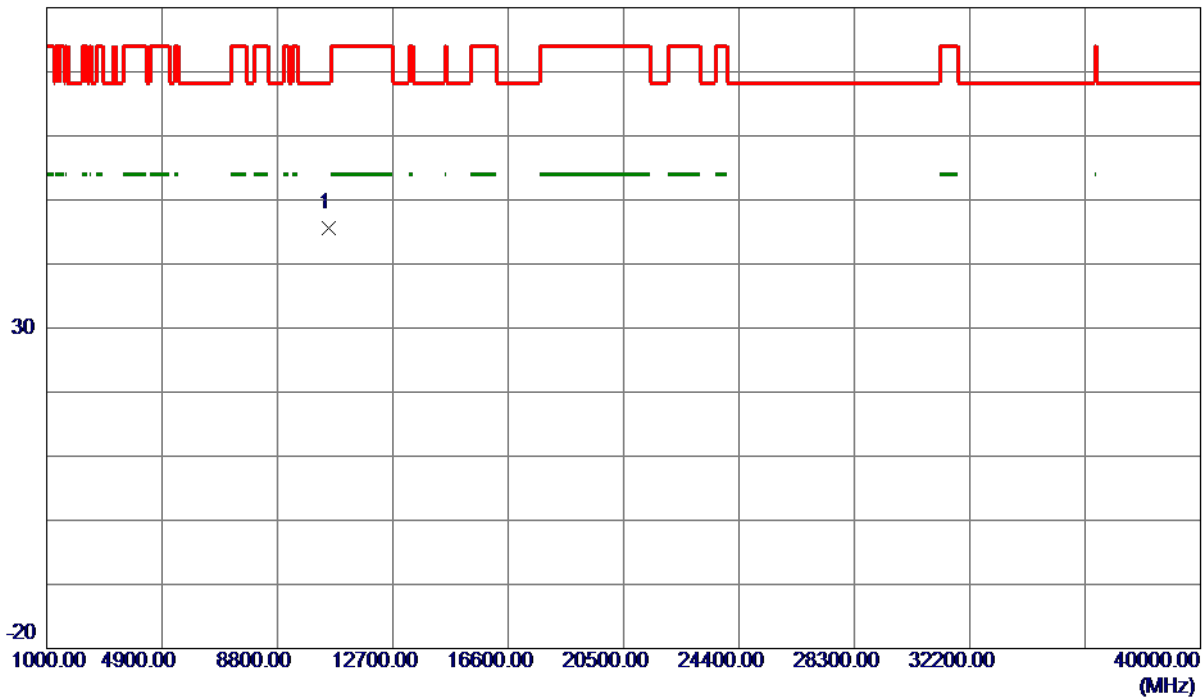


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10541.9650	33.98	11.54	45.52	68.30	-22.78	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5270 MHz_Ant.1+Ant.2

Horizontal

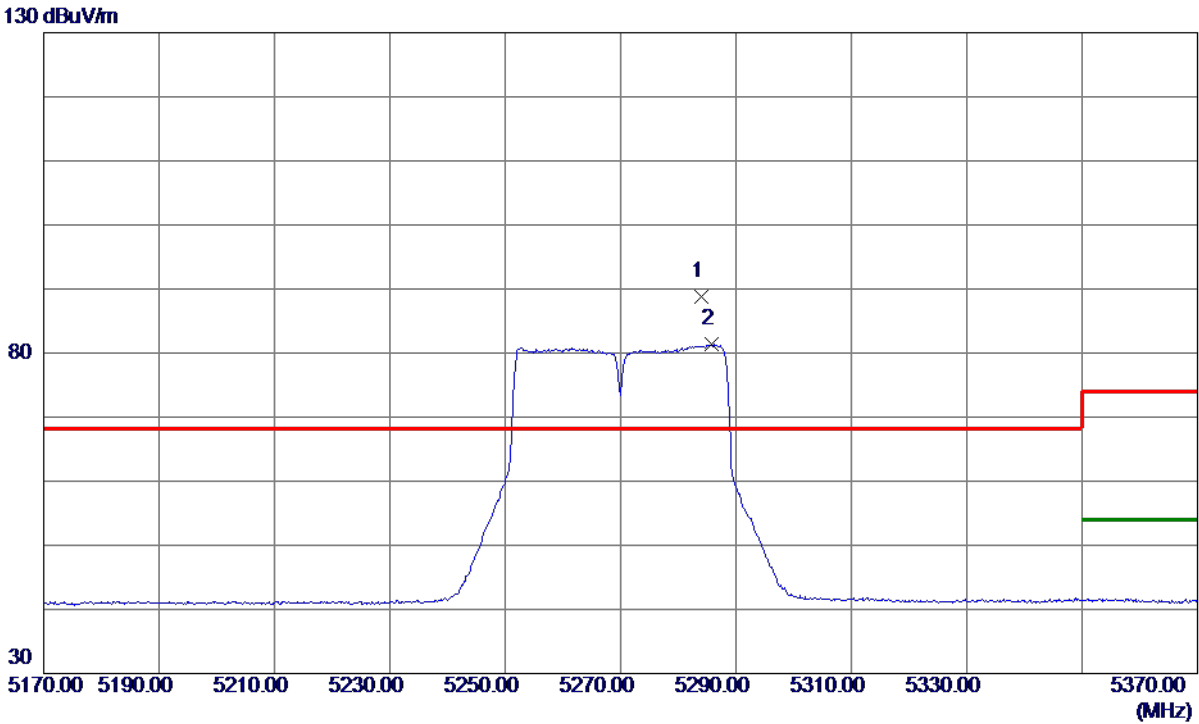


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5283.9000	74.12	14.63	88.75	68.30	20.45	Peak	No Limit
2	5285.8000	66.79	14.64	81.43	999.00	-917.57	AVG	No Limit

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5270 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

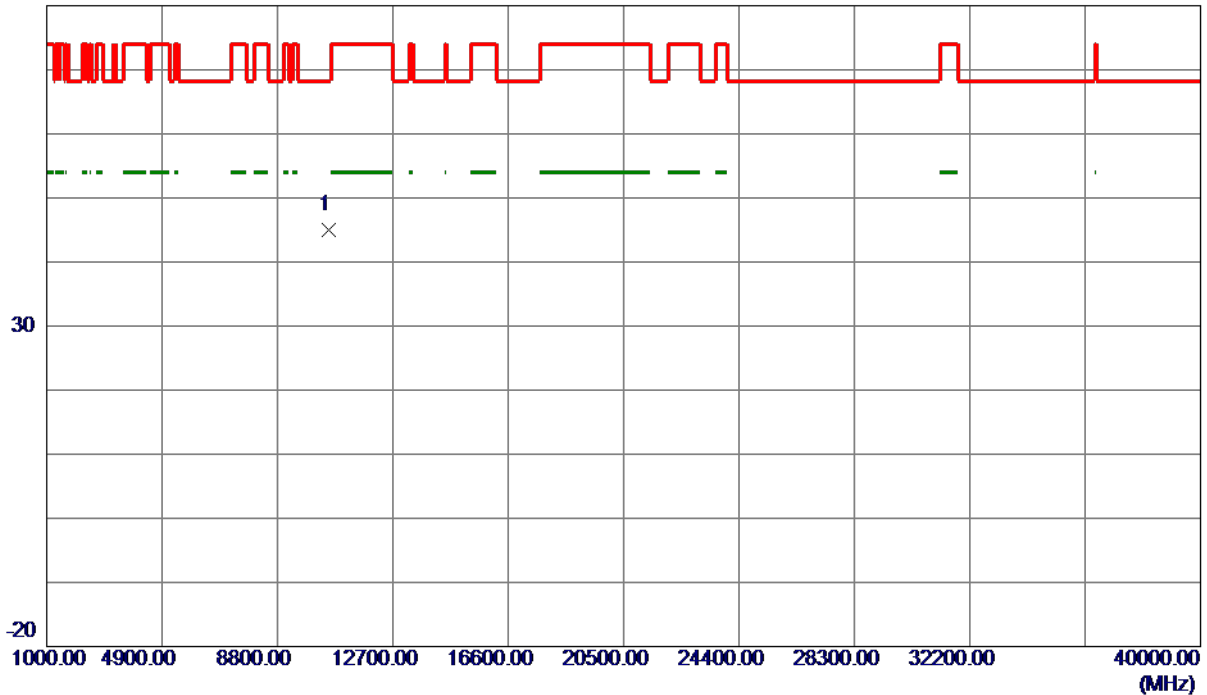

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10541.5350	33.42	11.54	44.96	68.30	-23.34	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5310 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

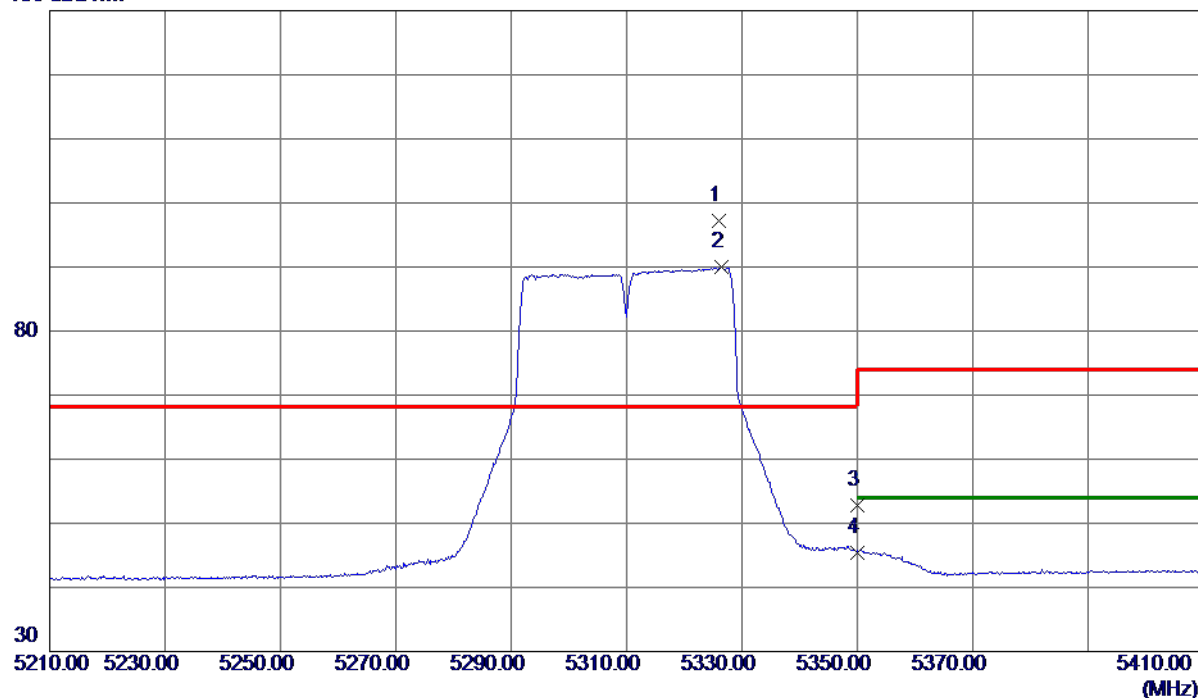


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5326.0000	82.44	14.73	97.17	68.30	28.87	Peak	No Limit
2	5326.5000	75.23	14.73	89.96	999.00	-909.04	AVG	No Limit
3	5350.0000	38.10	14.79	52.89	74.00	-21.11	Peak	
4	5350.0000	30.69	14.79	45.48	999.00	-953.52	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5310 MHz_Ant.1+Ant.2

Vertical

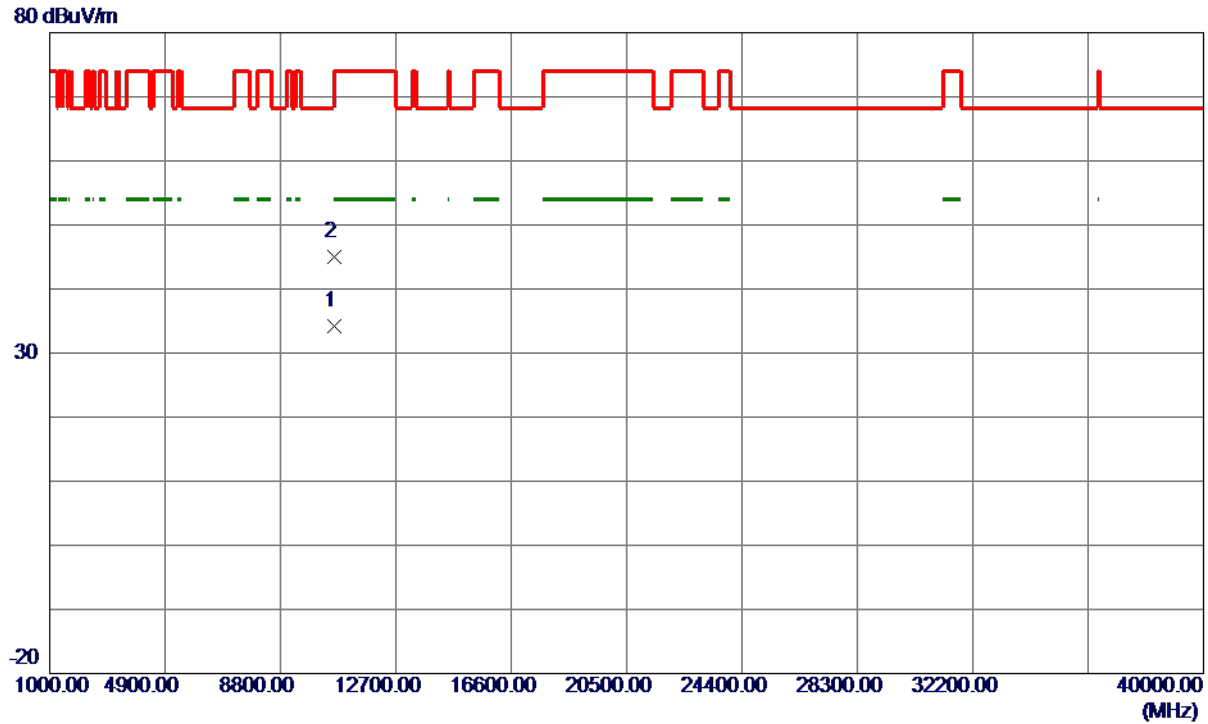

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10620.3250	22.64	11.56	34.20	54.00	-19.80	AVG	
2	10622.7900	33.48	11.56	45.04	74.00	-28.96	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5310 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

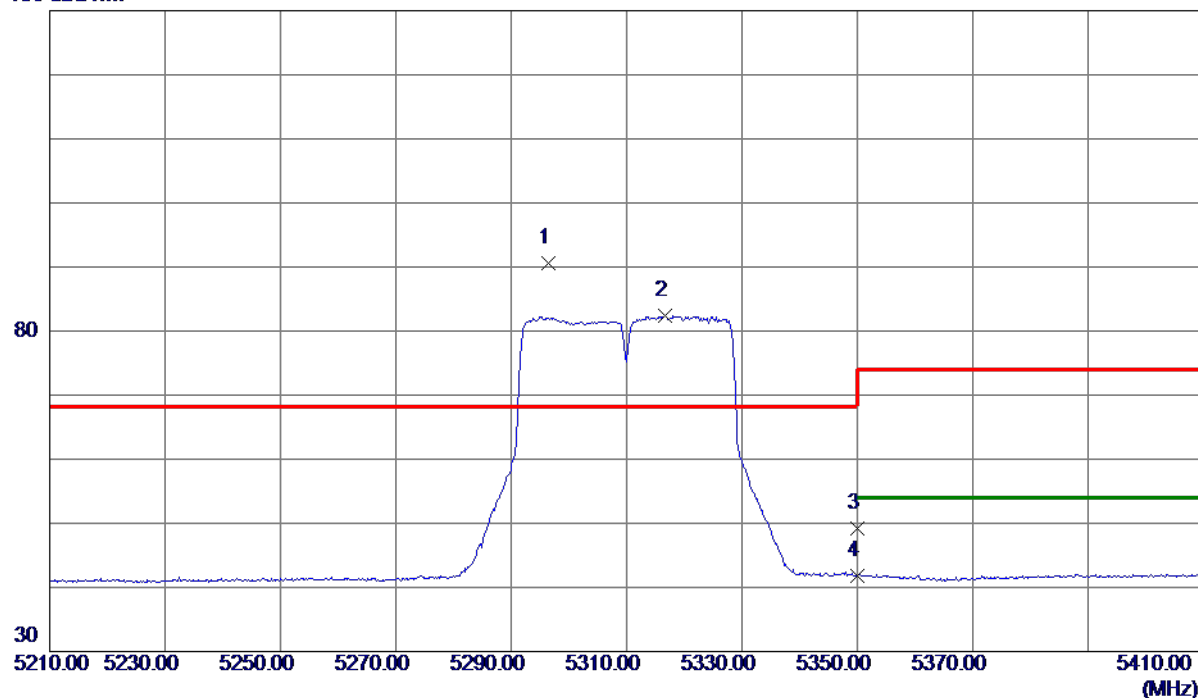

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5296.5000	76.00	14.66	90.66	68.30	22.36	Peak	No Limit
2	5316.7000	67.68	14.71	82.39	999.00	-916.61	AVG	No Limit
3	5350.0000	34.43	14.79	49.22	74.00	-24.78	Peak	
4	5350.0000	27.07	14.79	41.86	999.00	-957.14	AVG	

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX N (HT40) Mode 5310 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

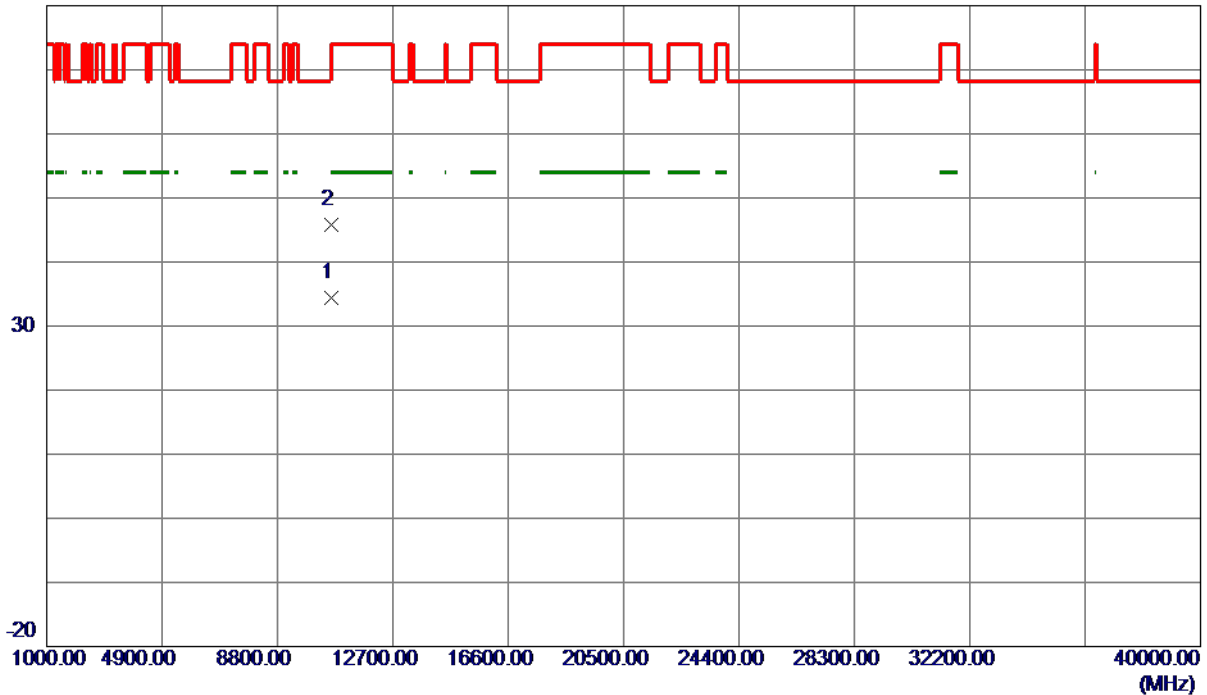

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10618.7950	22.84	11.56	34.40	54.00	-19.60	AVG	
2	10619.1800	34.25	11.56	45.81	74.00	-28.19	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

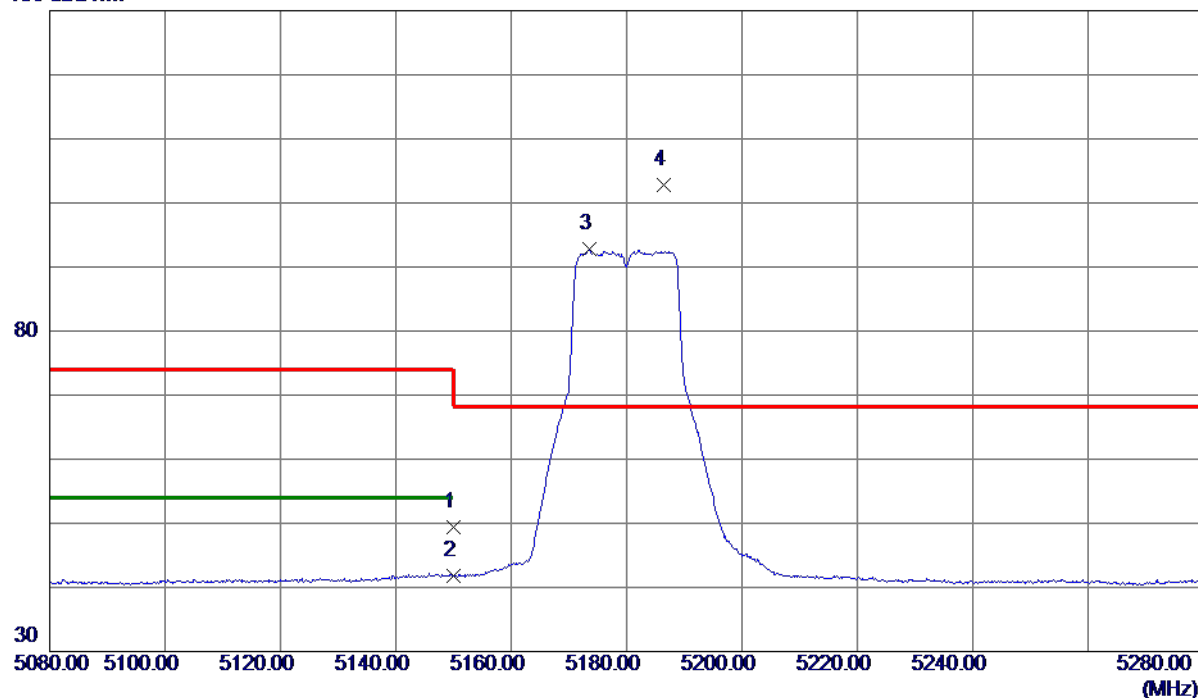

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.04	14.32	49.36	74.00	-24.64	Peak	
2	5150.0000	27.55	14.32	41.87	54.00	-12.13	AVG	
3	5173.5000	78.49	14.37	92.86	999.00	-906.14	AVG	No Limit
4 *	5186.4000	88.47	14.40	102.87	68.30	34.57	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

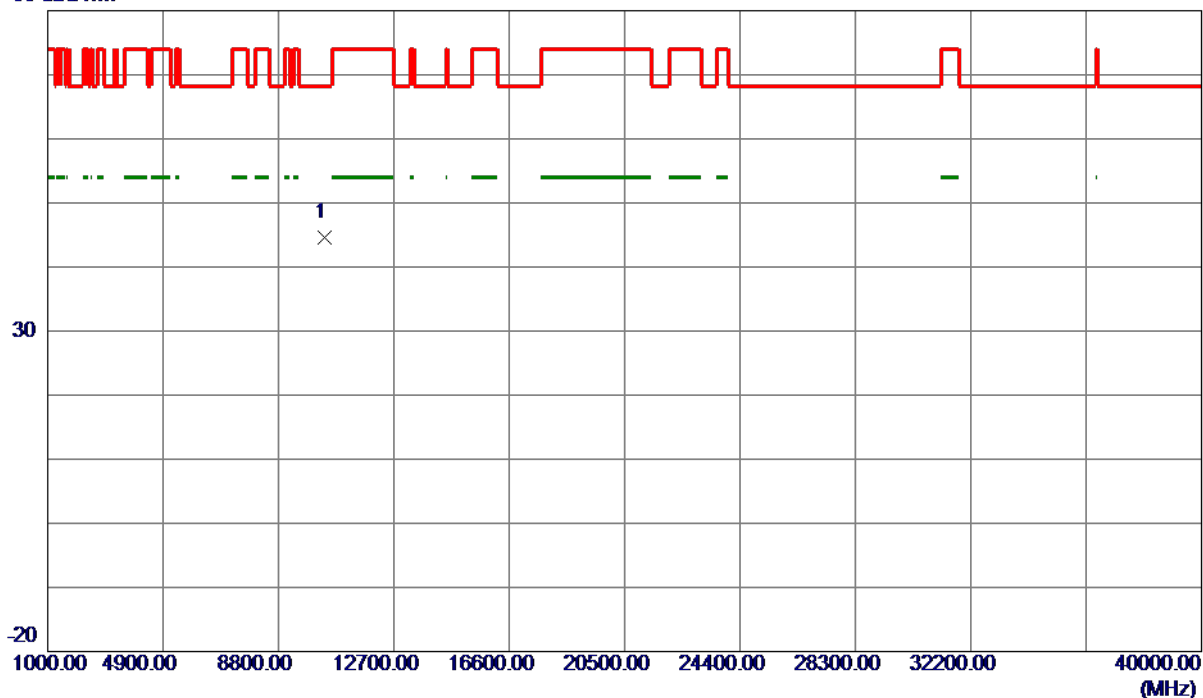

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10362.5800	33.30	11.30	44.60	68.30	-23.70	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

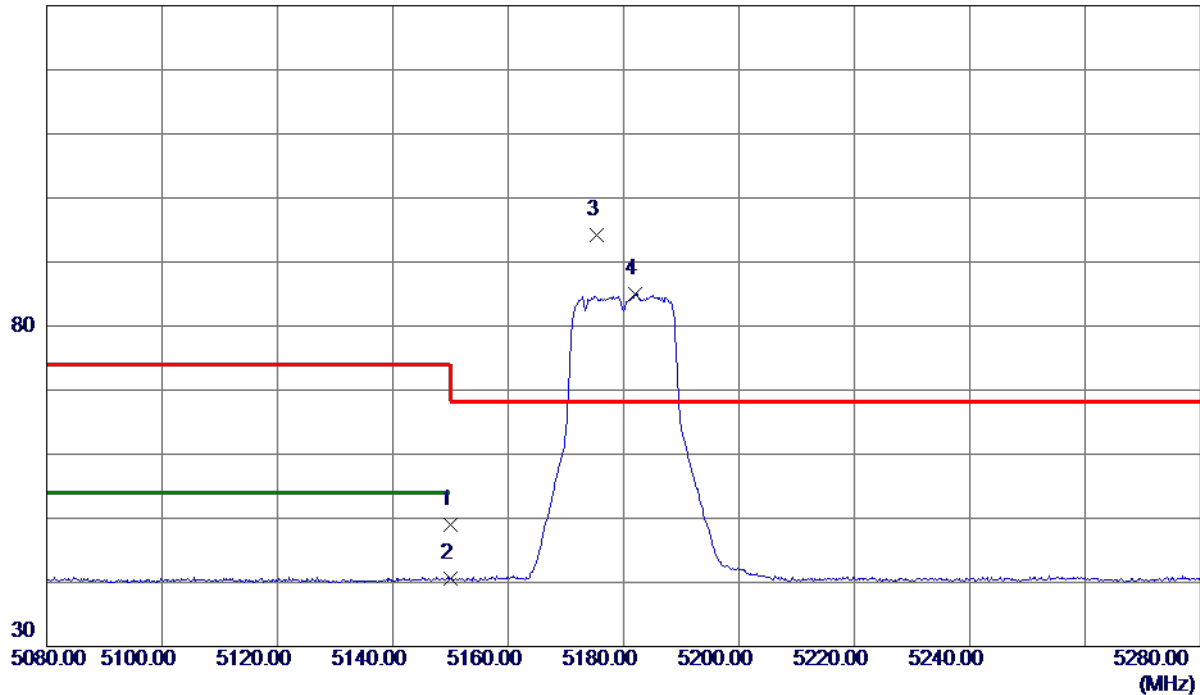

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	34.75	14.32	49.07	74.00	-24.93	Peak	
2	5150.0000	26.33	14.32	40.65	54.00	-13.35	AVG	
3 *	5175.3000	79.86	14.38	94.24	68.30	25.94	Peak	No Limit
4	5182.1000	70.60	14.39	84.99	999.00	-914.01	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5180 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

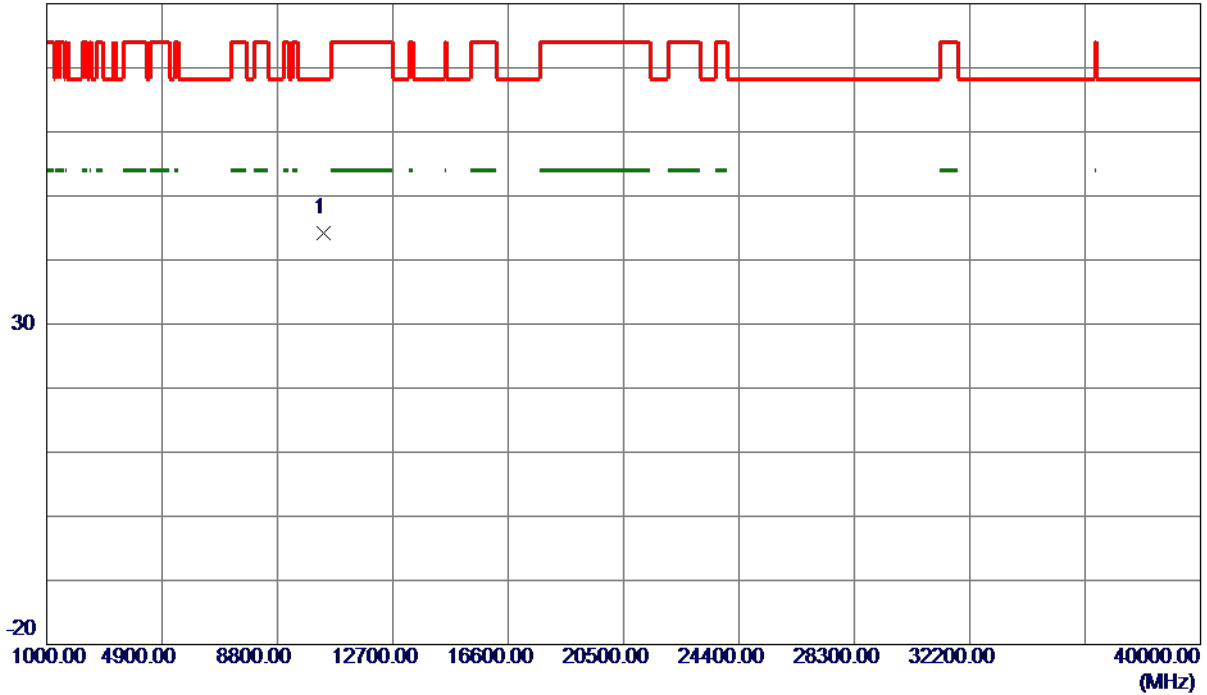

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10356.3550	32.96	11.29	44.25	68.30	-24.05	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

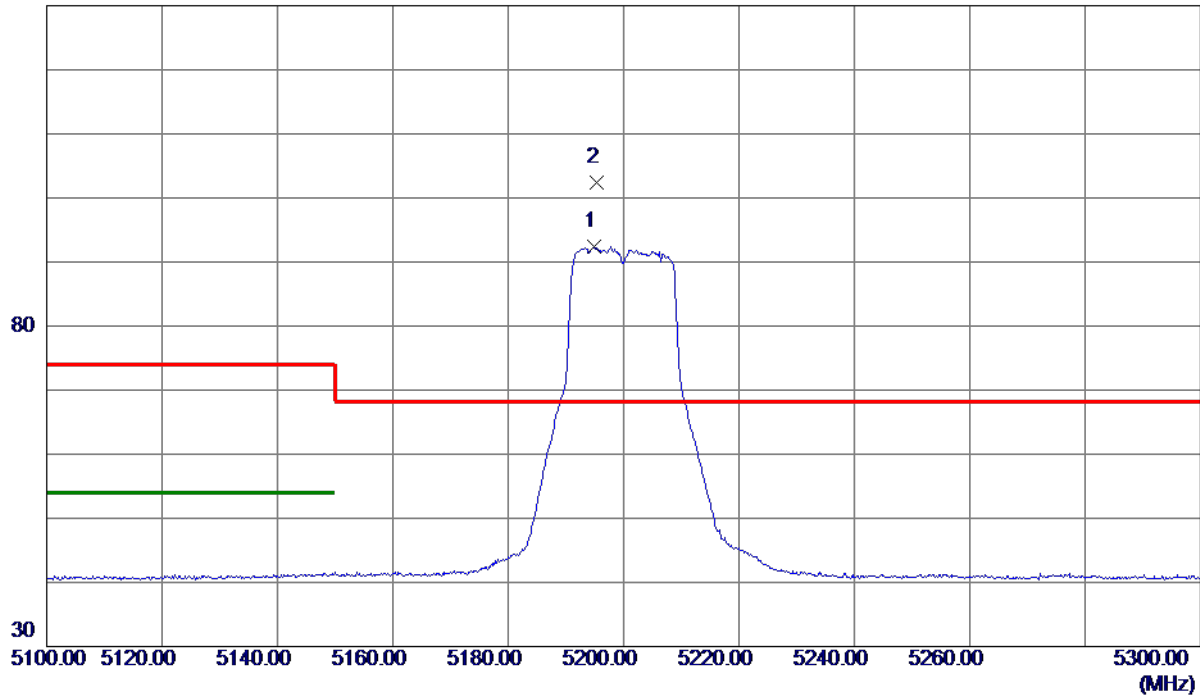


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5194.9000	77.94	14.42	92.36	999.00	-906.64	AVG	No Limit
2 *	5195.4000	88.06	14.42	102.48	68.30	34.18	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz_Ant.1+Ant.2

Vertical

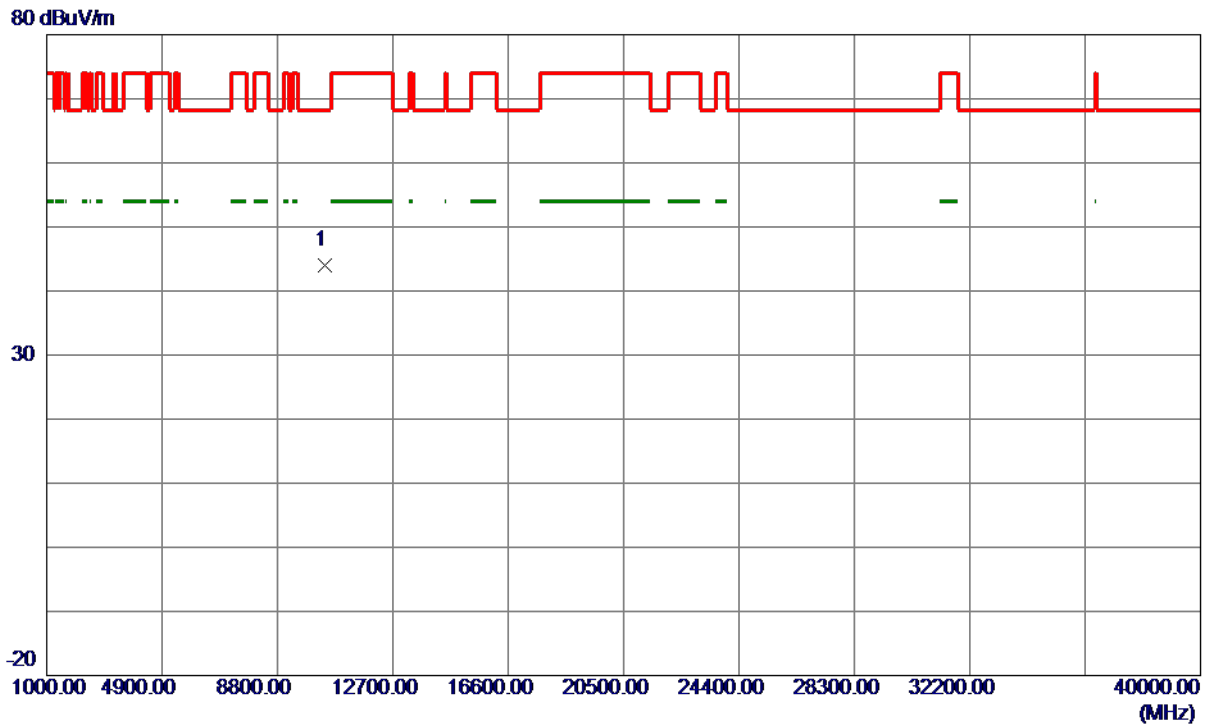


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10402.2750	32.59	11.37	43.96	68.30	-24.34	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz_Ant.1+Ant.2

Horizontal

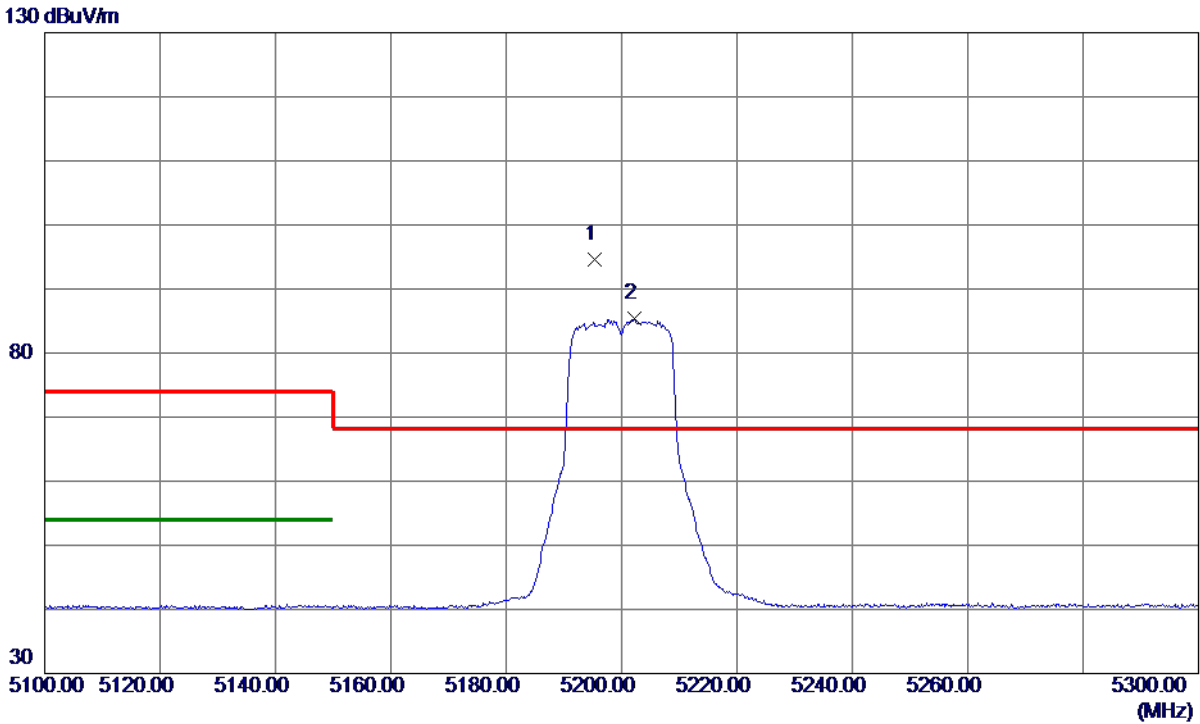


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5195.4000	80.13	14.42	94.55	68.30	26.25	Peak	No Limit
2	5202.2000	70.90	14.44	85.34	999.00	-913.66	AVG	No Limit

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5200 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

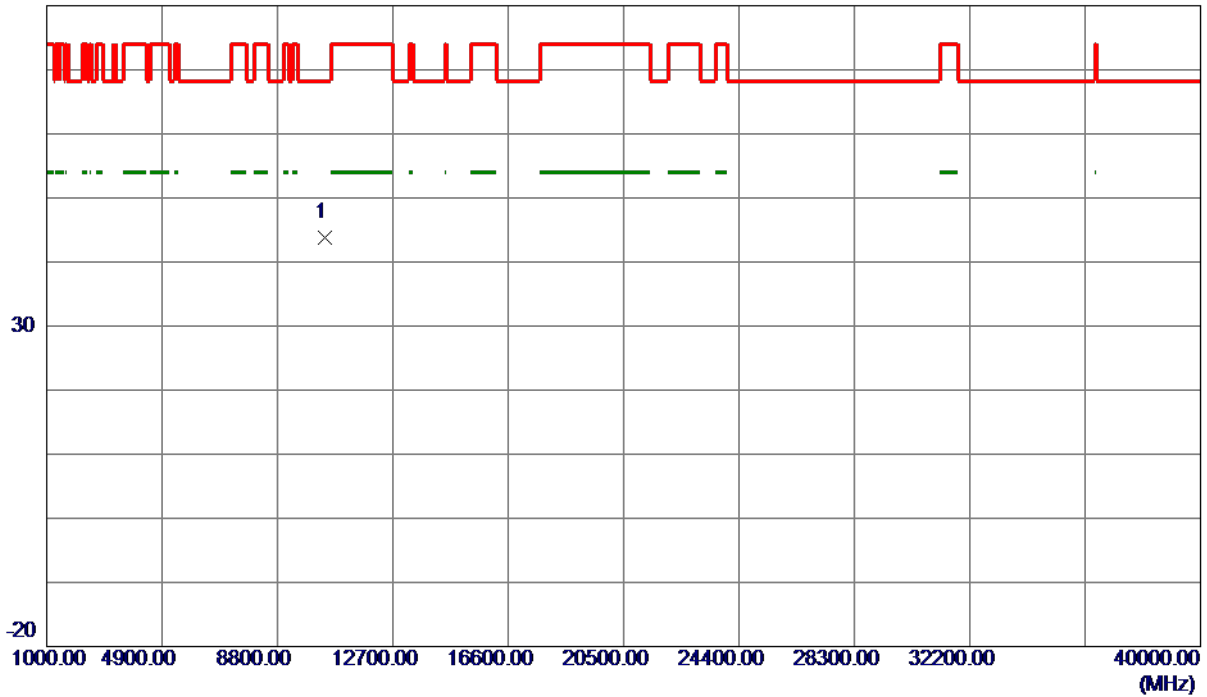

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10397.3099	32.53	11.36	43.89	68.30	-24.41	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

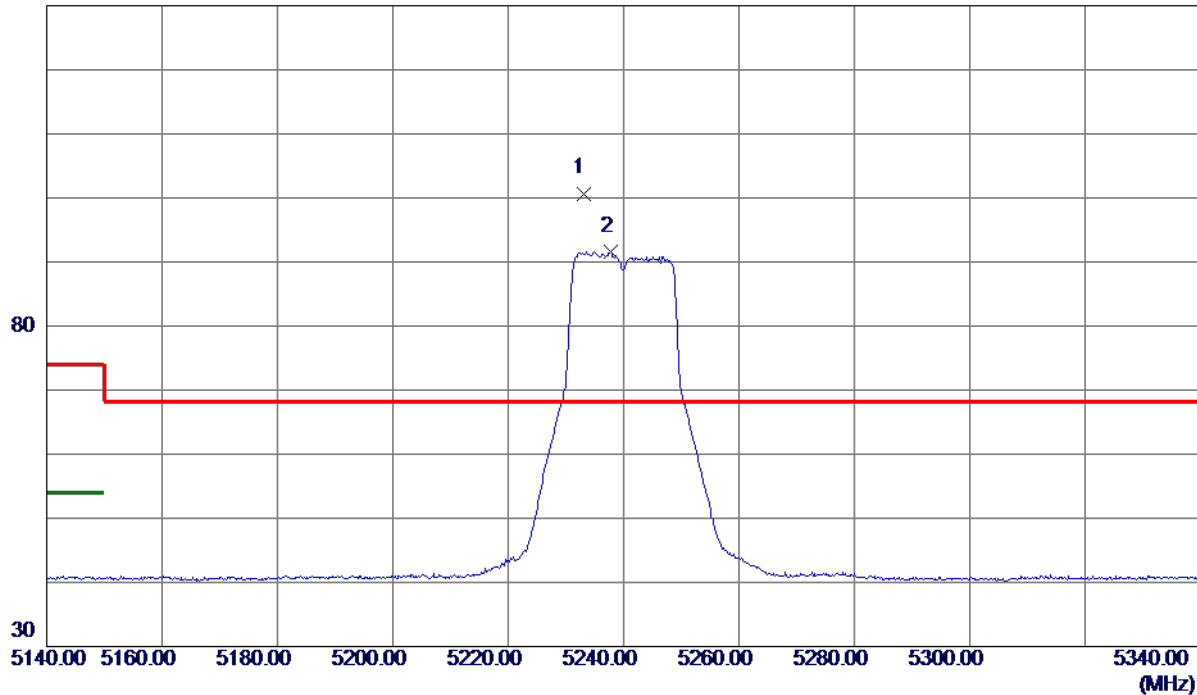

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5233.0000	86.19	14.51	100.70	68.30	32.40	Peak	No Limit
2	5237.7000	77.08	14.52	91.60	999.00	-907.40	AVG	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

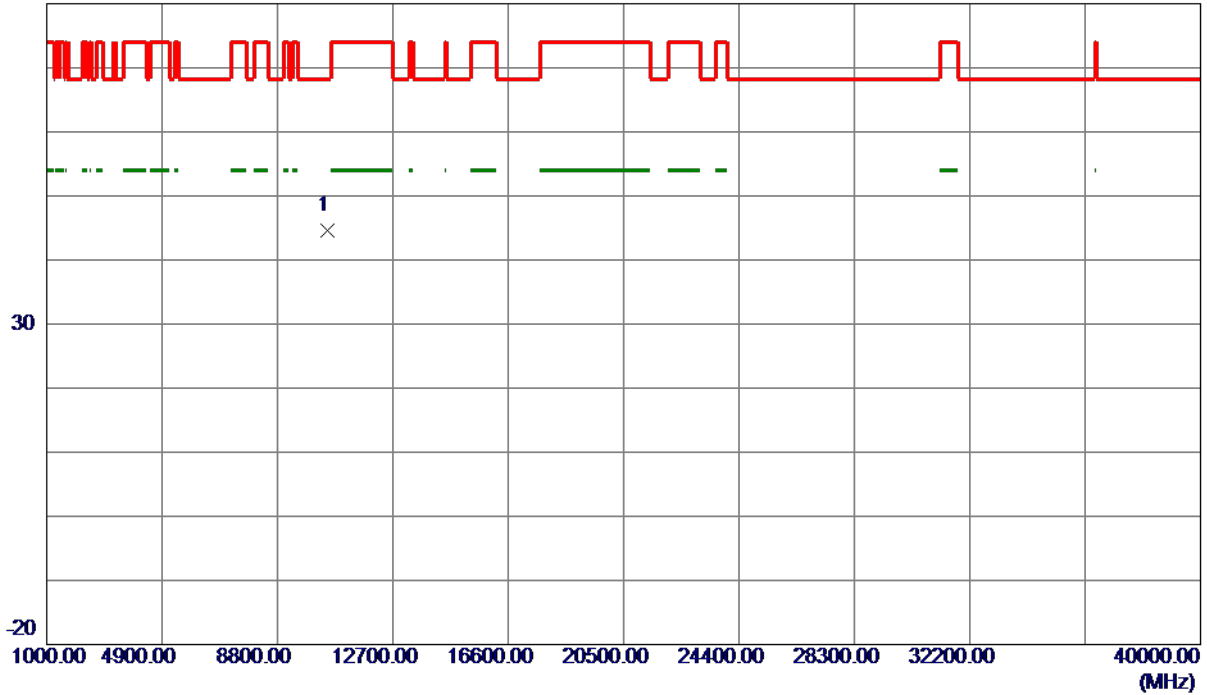


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10480.4200	33.05	11.50	44.55	68.30	-23.75	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz_Ant.1+Ant.2

Horizontal

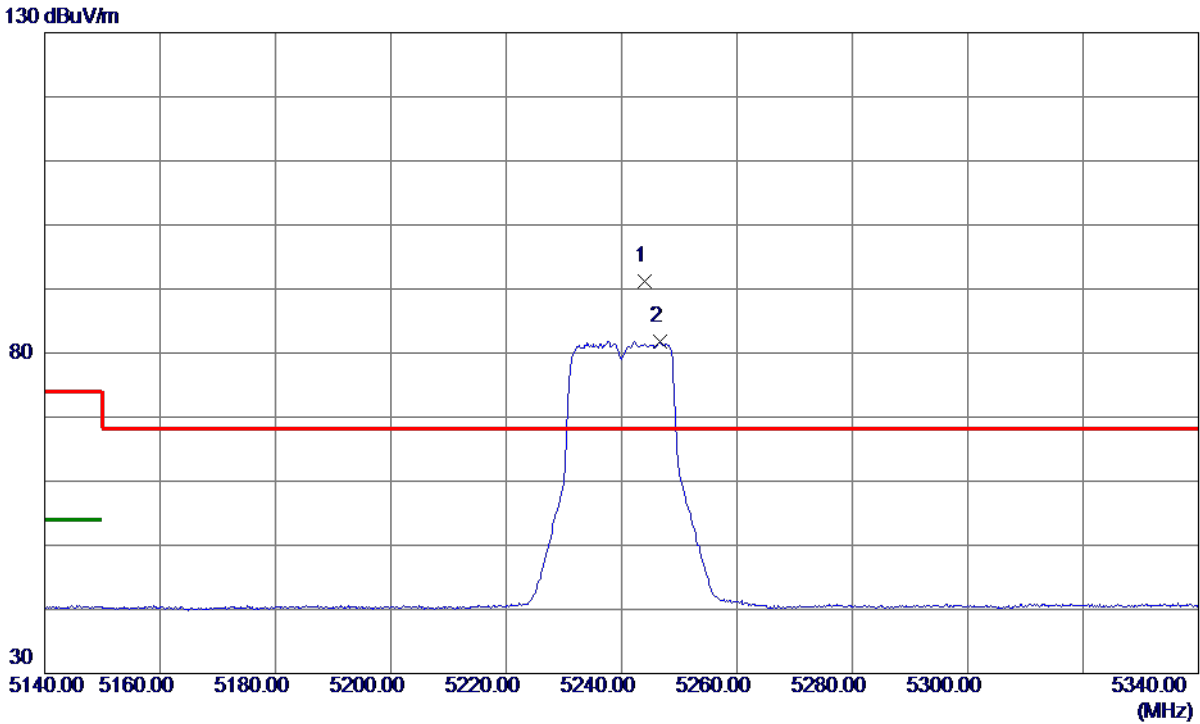

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5243.9000	76.62	14.54	91.16	68.30	22.86	Peak	No Limit
2	5246.7000	67.27	14.54	81.81	999.00	-917.19	AVG	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT20) Mode 5240 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

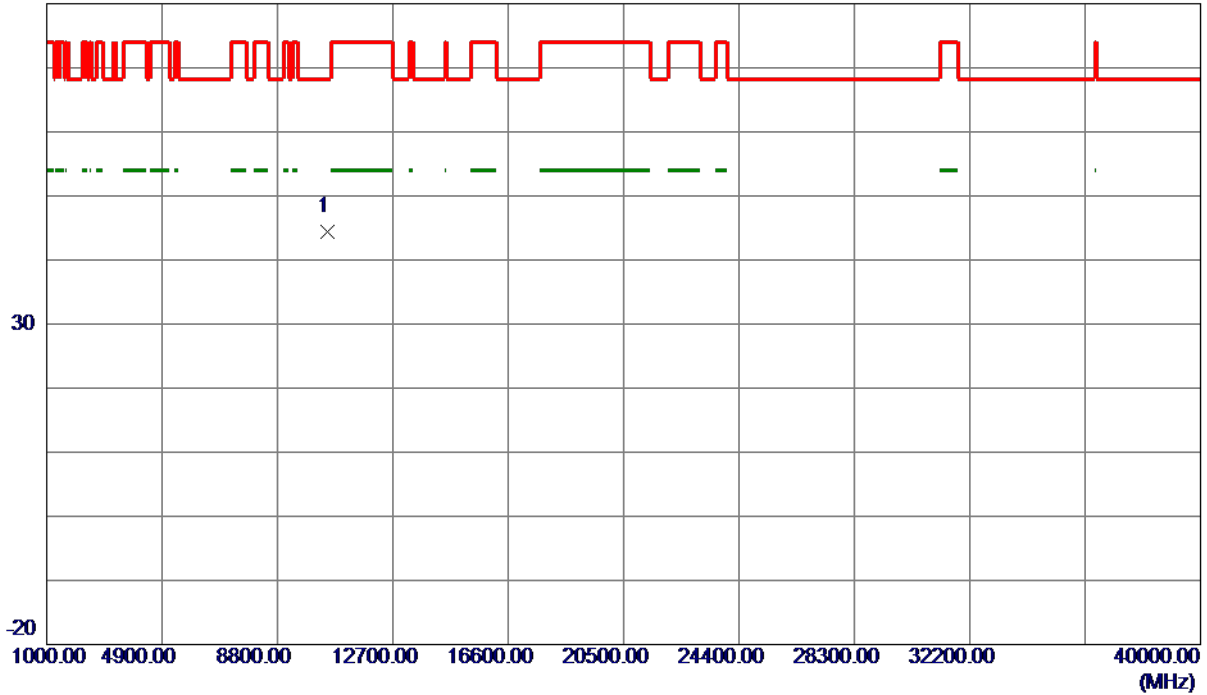

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10478.1400	32.84	11.50	44.34	68.30	-23.96	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

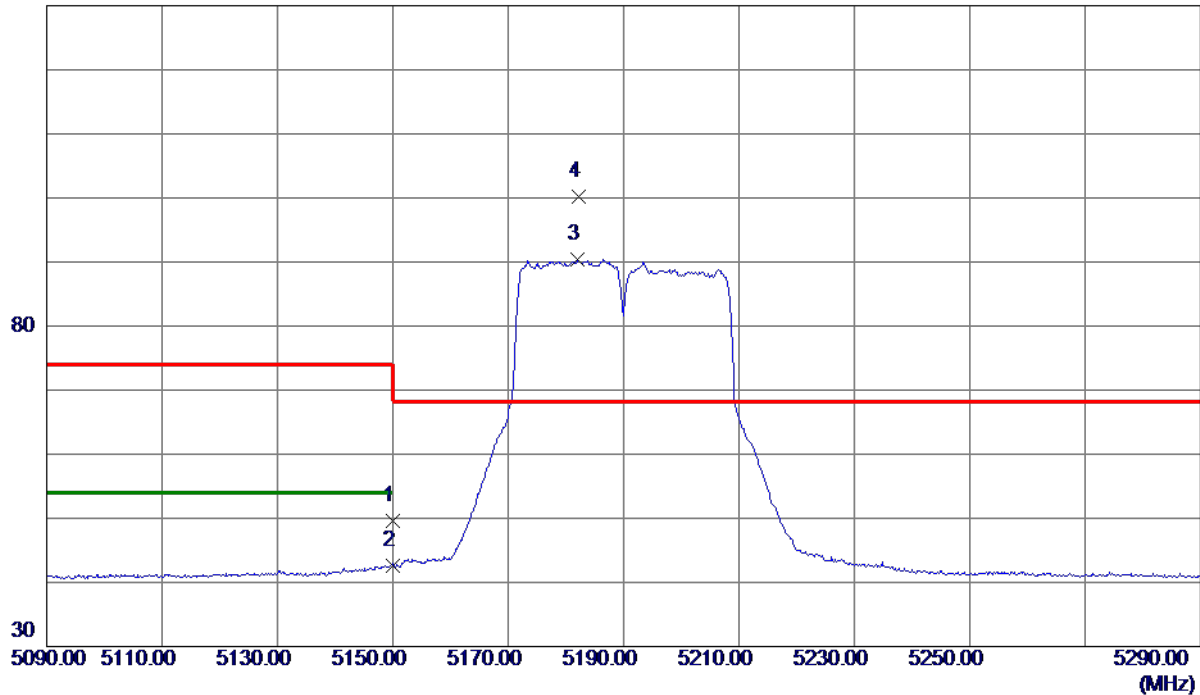


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	35.28	14.32	49.60	74.00	-24.40	Peak	
2	5150.0000	28.22	14.32	42.54	54.00	-11.46	AVG	
3	5182.0000	75.95	14.39	90.34	999.00	-908.66	AVG	No Limit
4 *	5182.2000	85.86	14.39	100.25	68.30	31.95	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz_Ant.1+Ant.2

Vertical

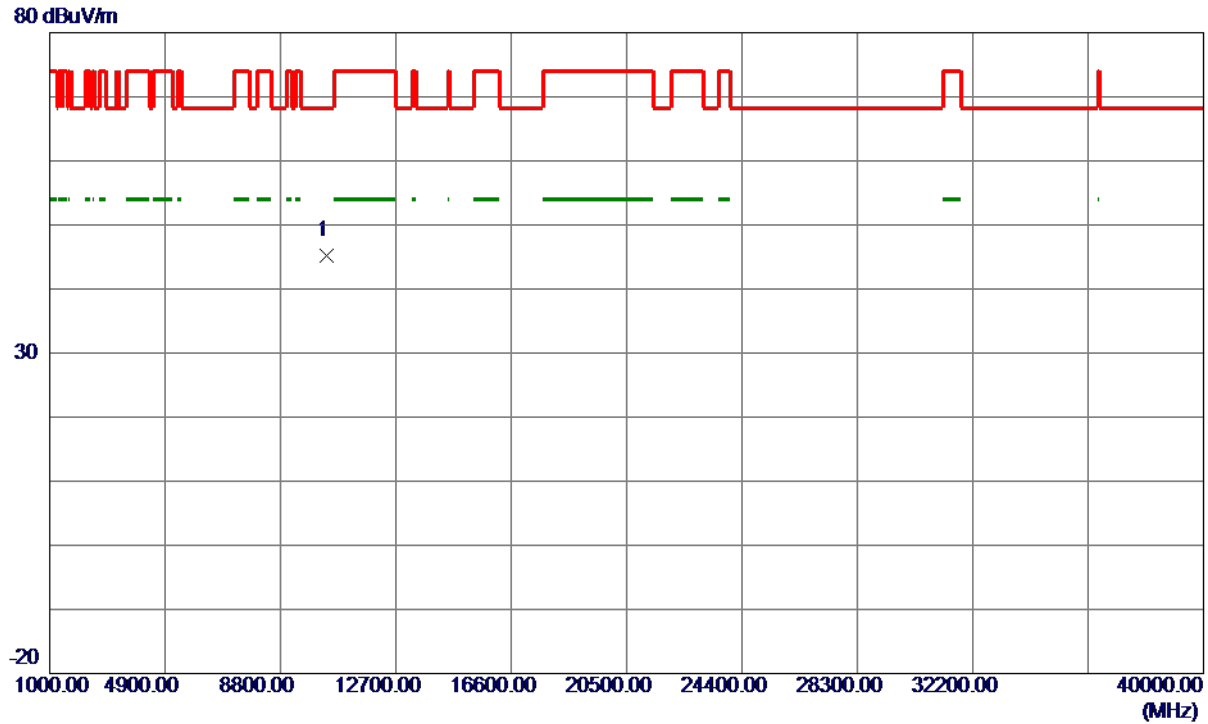


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10381.0000	33.79	11.33	45.12	68.30	-23.18	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

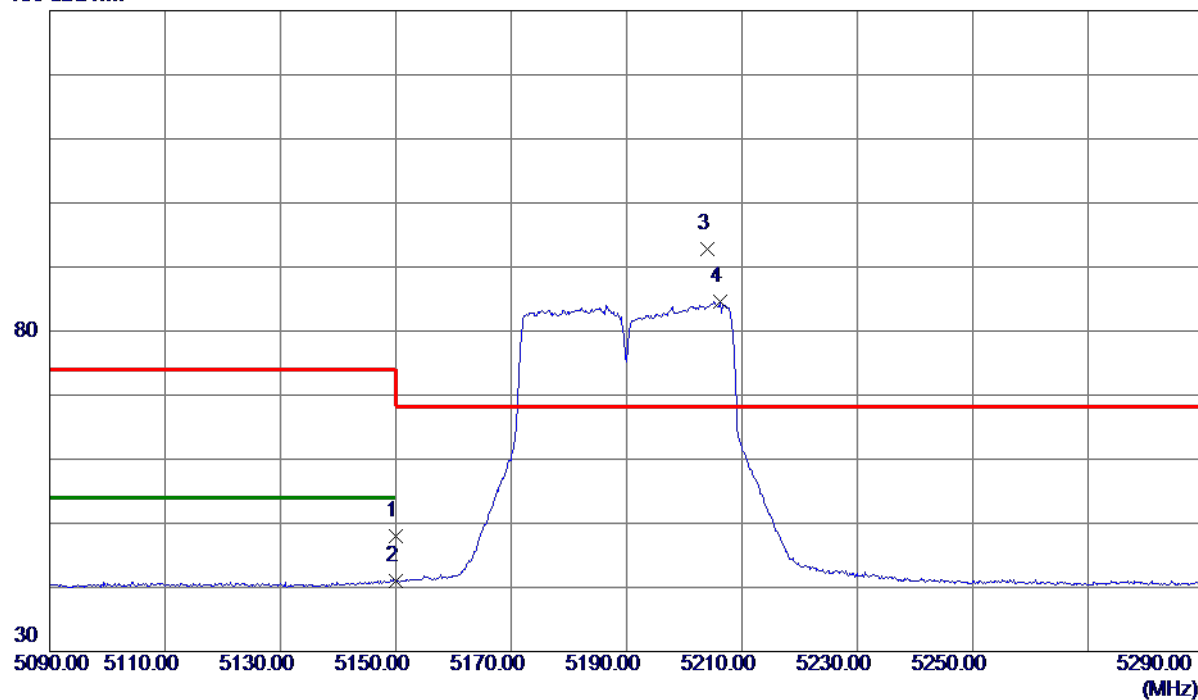

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	33.69	14.32	48.01	74.00	-25.99	Peak	
2	5150.0000	26.64	14.32	40.96	54.00	-13.04	AVG	
3 *	5203.9000	78.44	14.44	92.88	68.30	24.58	Peak	No Limit
4	5206.3000	70.11	14.45	84.56	999.00	-914.44	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5190 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

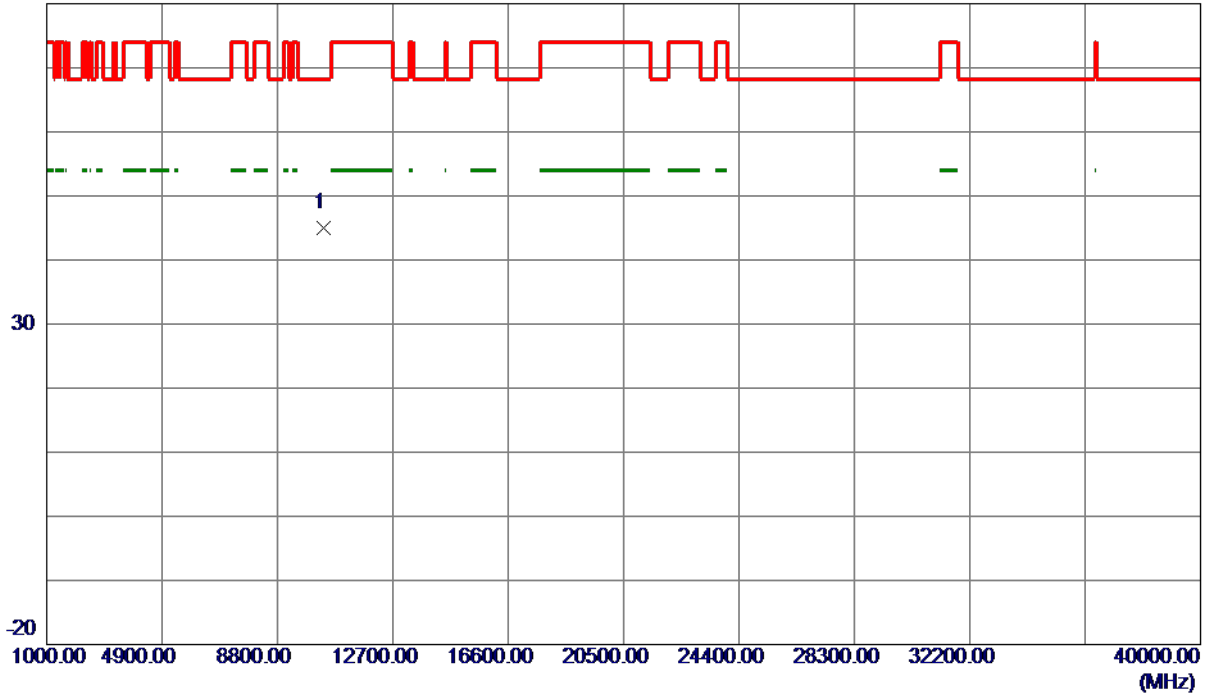

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10376.7100	33.62	11.33	44.95	68.30	-23.35	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

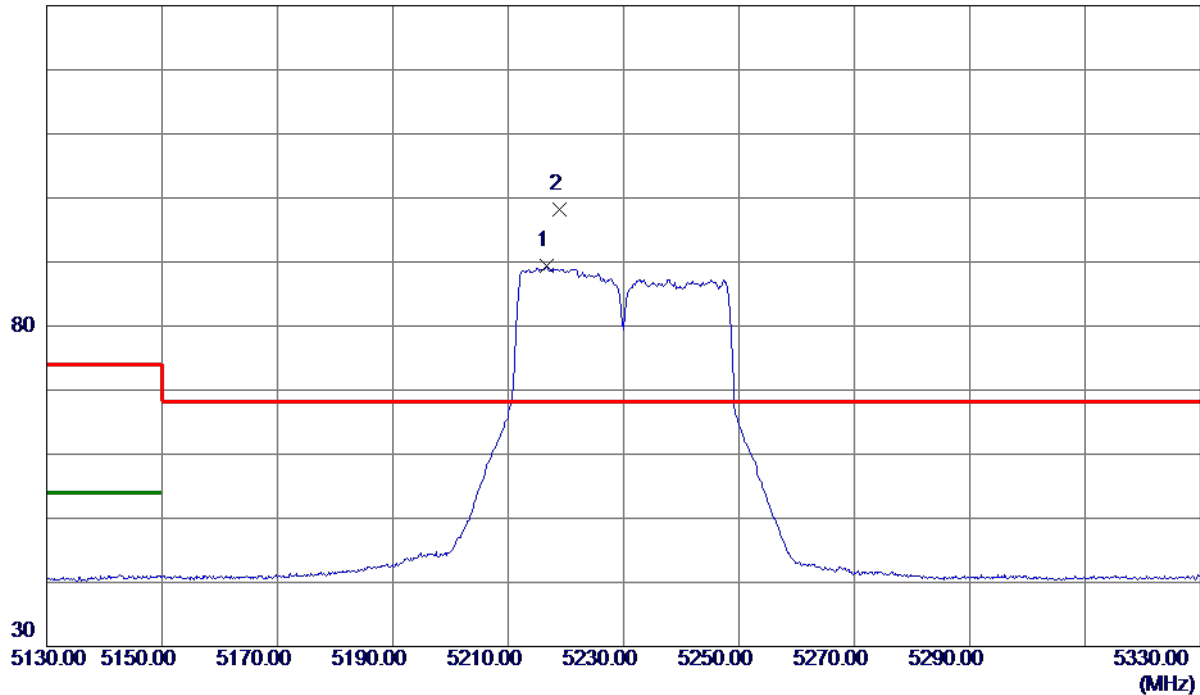


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5216.6000	74.86	14.47	89.33	999.00	-909.67	AVG	No Limit
2 *	5218.8000	83.73	14.48	98.21	68.30	29.91	Peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz_Ant.1+Ant.2

Vertical

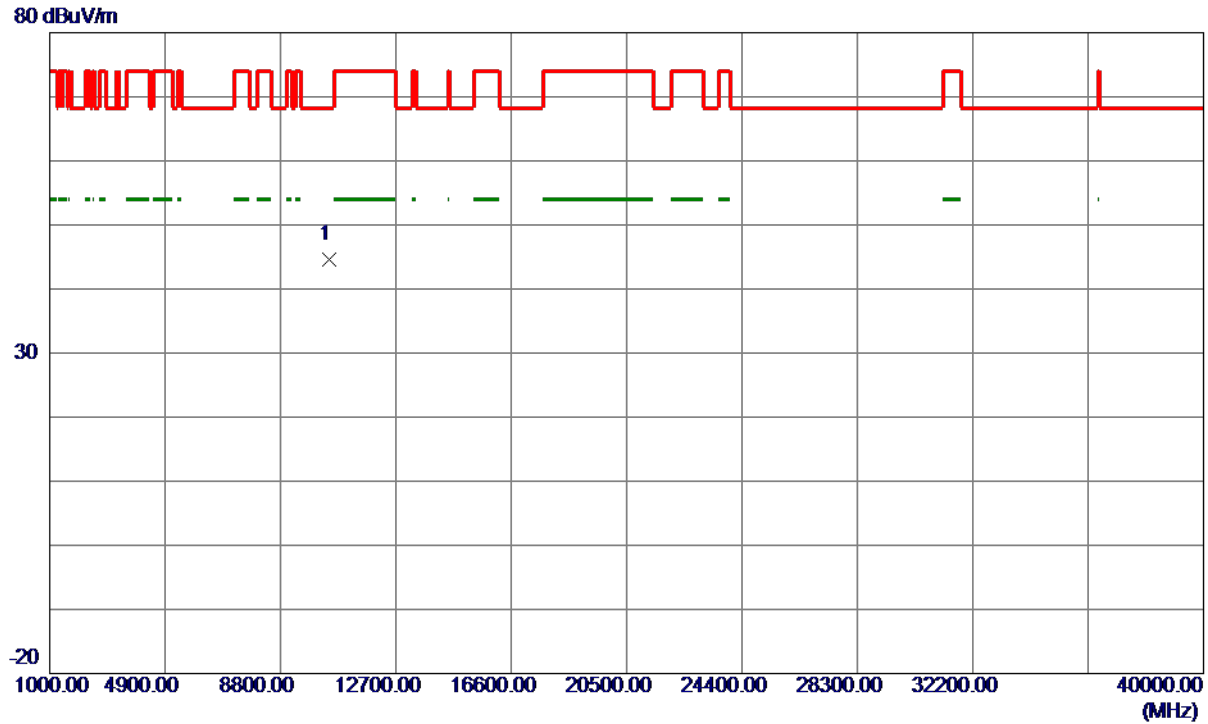


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10457.2050	33.22	11.46	44.68	68.30	-23.62	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

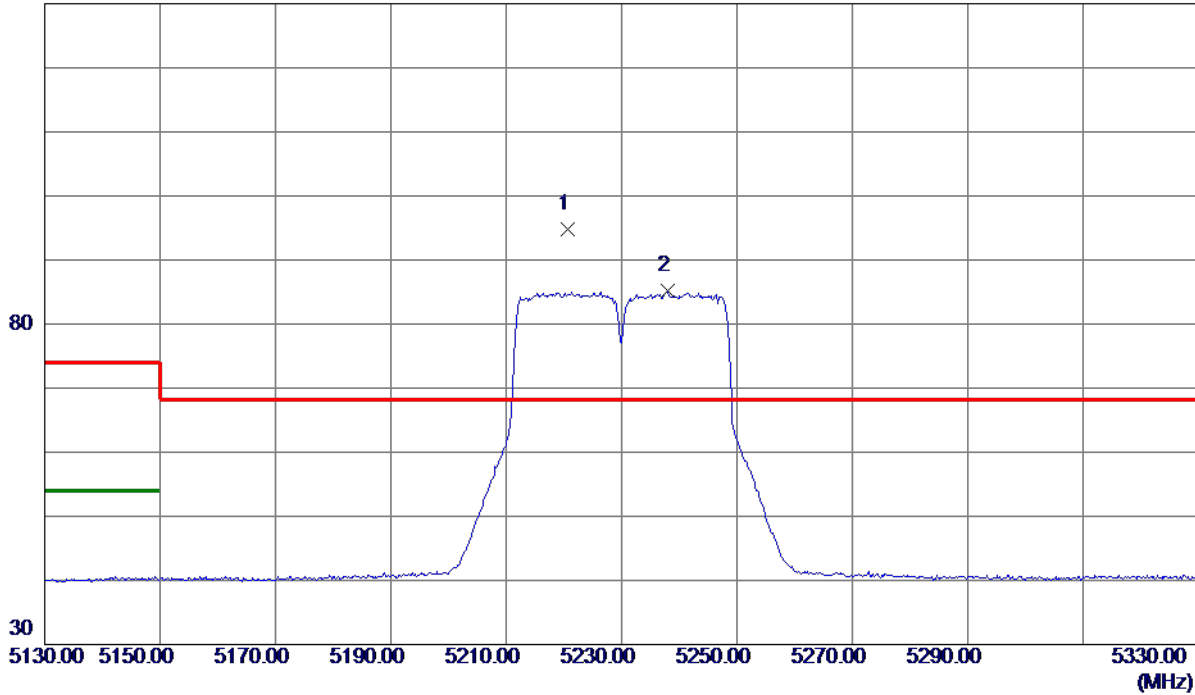

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5220.6000	80.34	14.48	94.82	68.30	26.52	Peak	No Limit
2	5237.9000	70.70	14.52	85.22	999.00	-913.78	AVG	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT40) Mode 5230 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

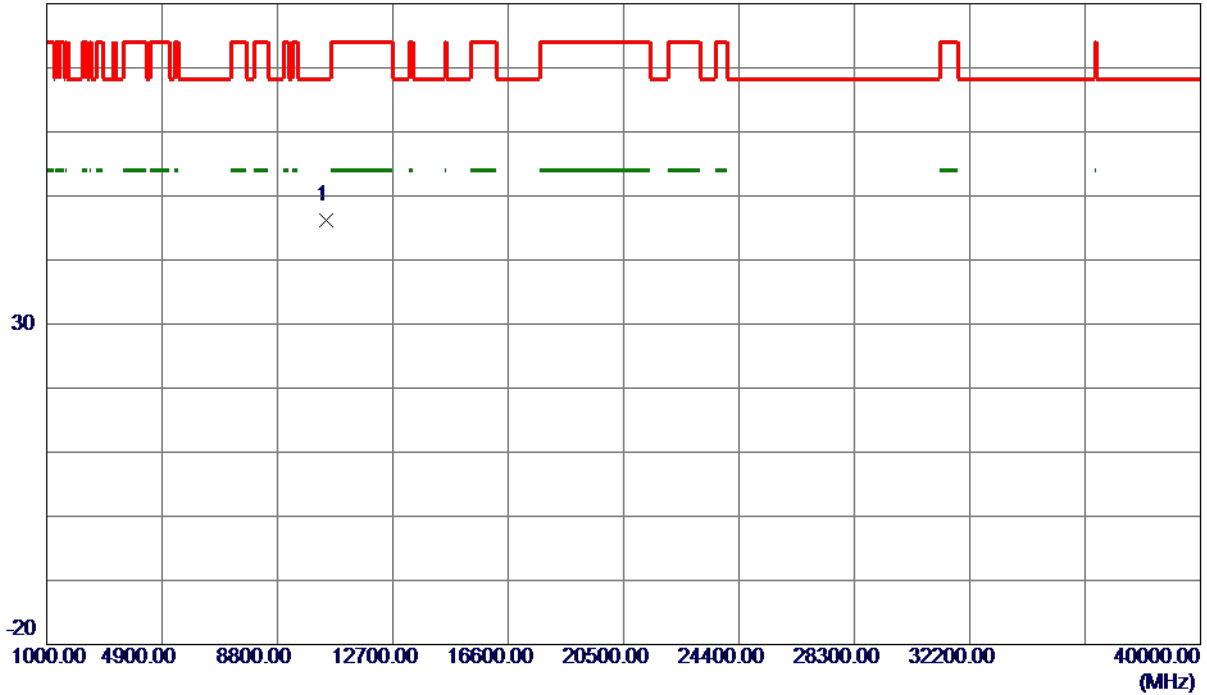

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10455.0300	34.79	11.46	46.25	68.30	-22.05	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

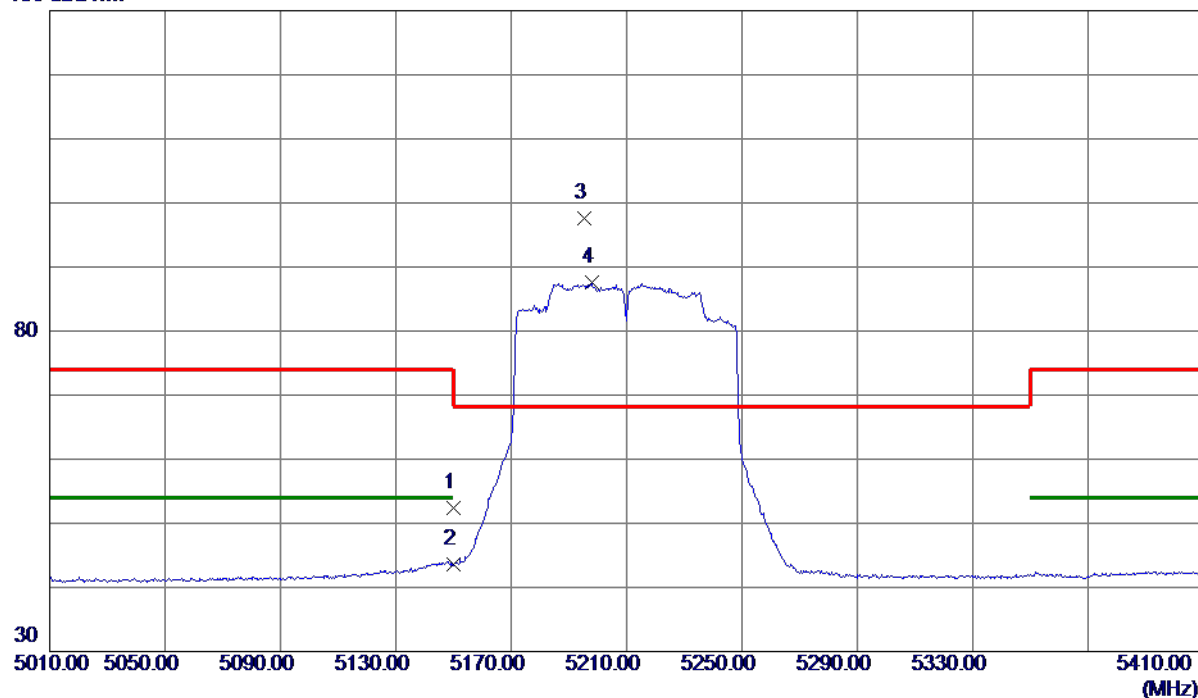

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	38.02	14.32	52.34	74.00	-21.66	Peak	
2	5150.0000	29.22	14.32	43.54	54.00	-10.46	AVG	
3 *	5195.4000	83.11	14.42	97.53	68.30	29.23	Peak	No Limit
4	5197.8000	73.17	14.43	87.60	999.00	-911.40	AVG	No Limit

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

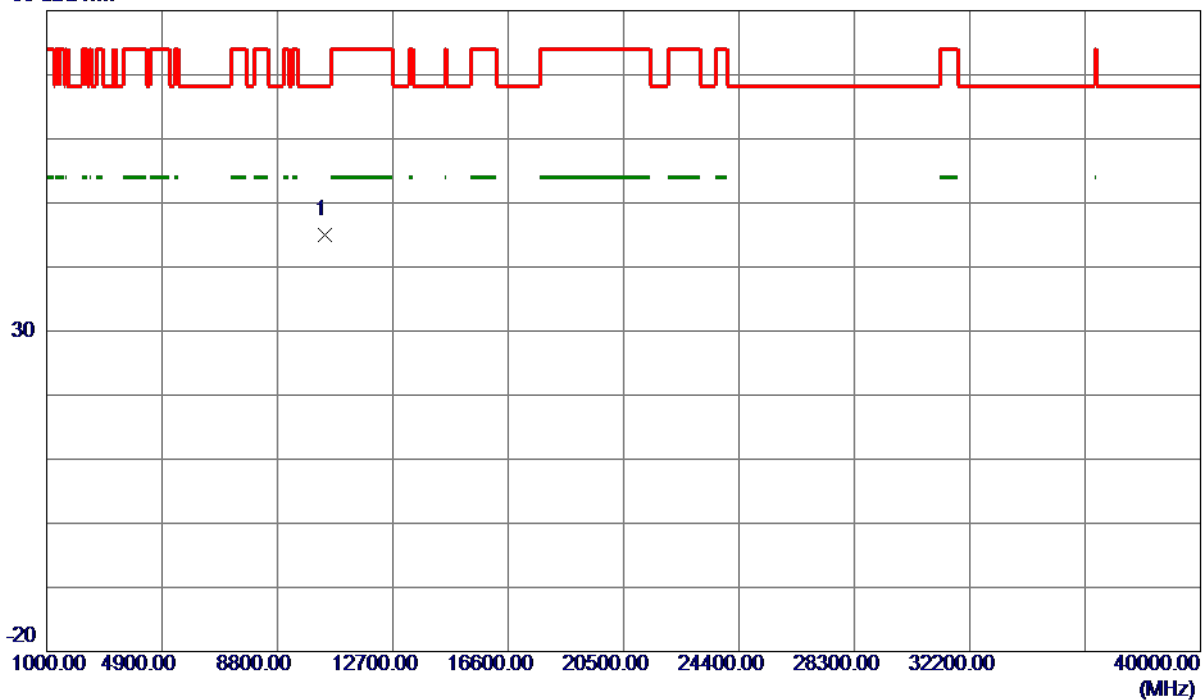

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10422.8450	33.62	11.40	45.02	68.30	-23.28	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

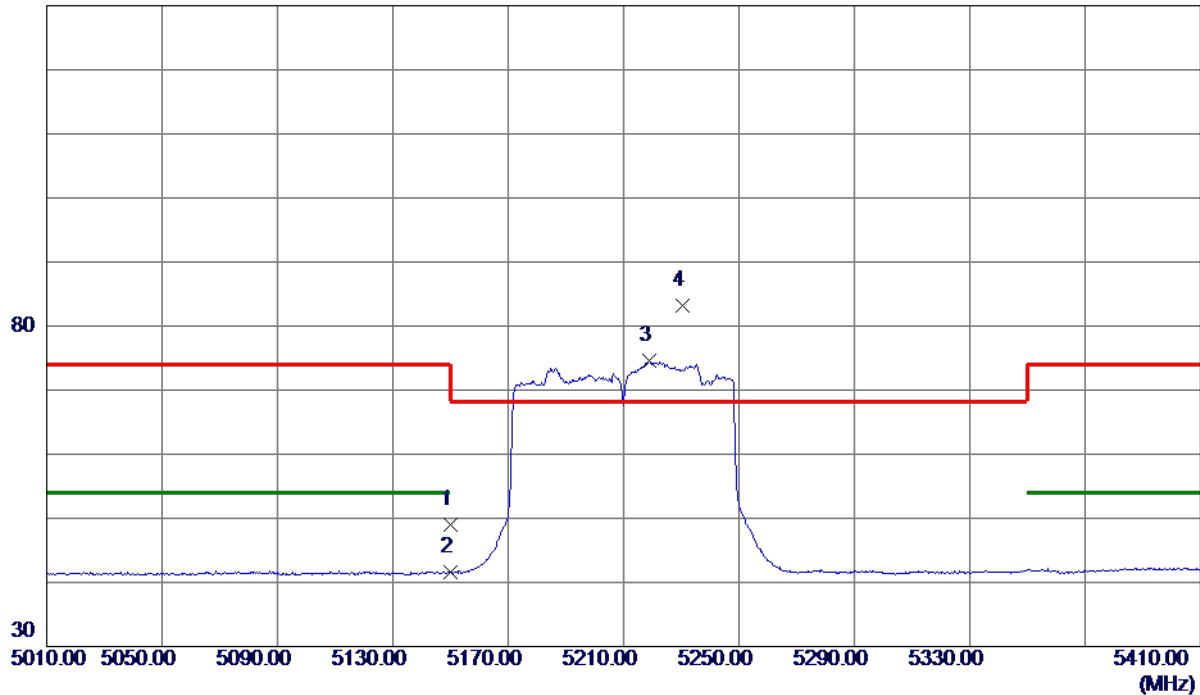

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5150.0000	34.65	14.32	48.97	74.00	-25.03	Peak	
2	5150.0000	27.27	14.32	41.59	54.00	-12.41	AVG	
3	5219.0000	60.04	14.48	74.52	999.00	-924.48	AVG	No Limit
4 *	5230.4000	68.73	14.51	83.24	68.30	14.94	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT80) Mode 5210 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

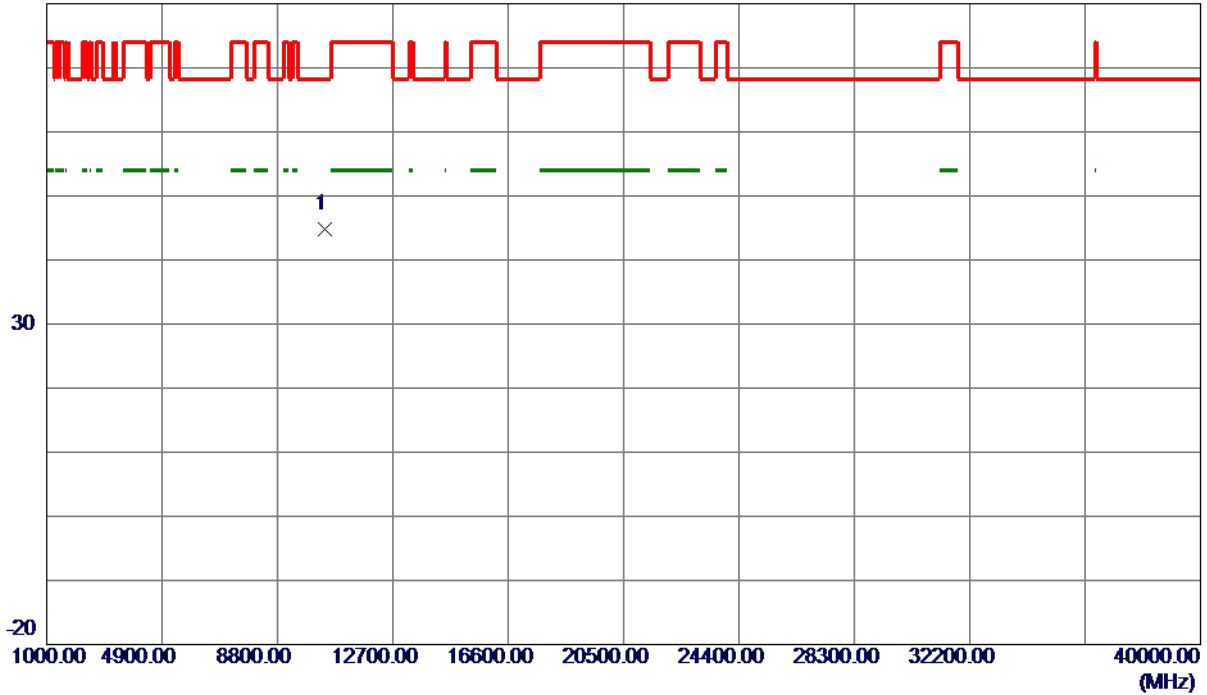


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10417.2300	33.36	11.40	44.76	68.30	-23.54	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT160) Mode 5250 MHz_Ant.1+Ant.2

Vertical

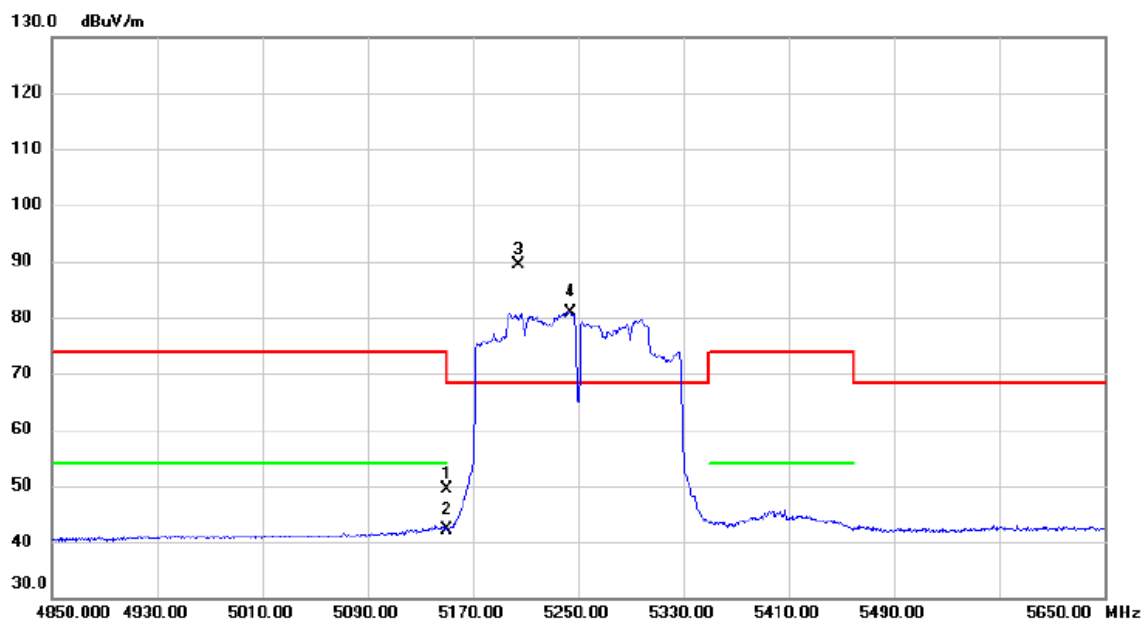


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	35.08	14.31	49.39	74.00	-24.61	peak	
2		5150.000	27.87	14.31	42.18	54.00	-11.82	AVG	
3	*	5204.400	74.83	14.45	89.28	68.30	20.98	peak	No Limit
4	X	5244.000	66.30	14.54	80.84	68.30	12.54	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT160) Mode 5250 MHz_Ant.1+Ant.2

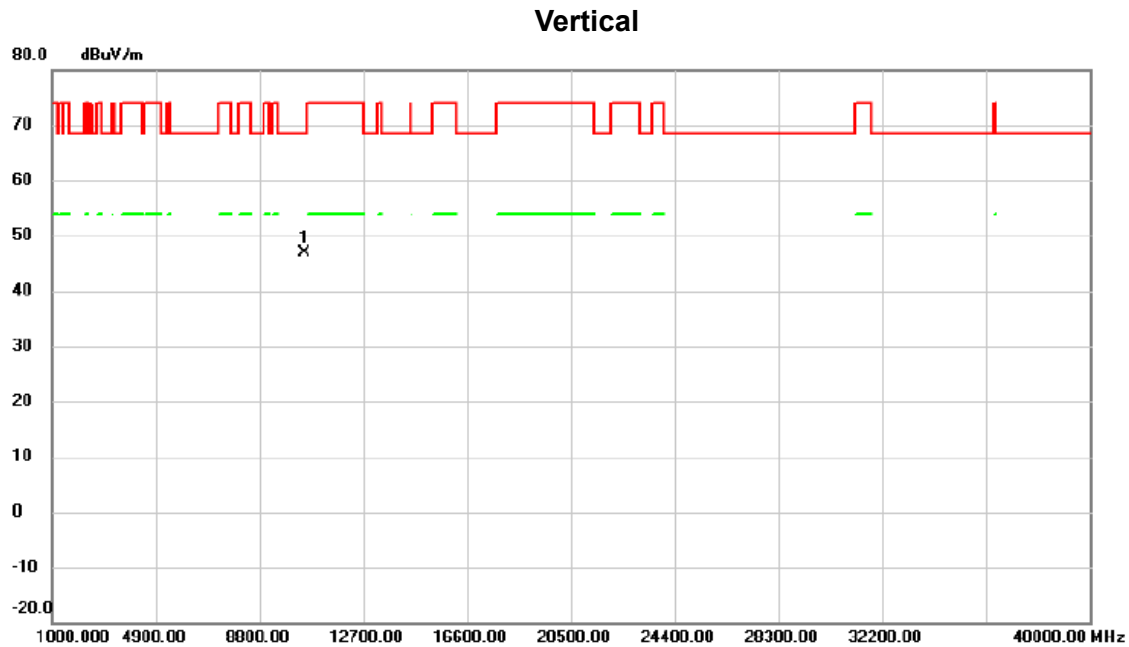


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10500.650	33.76	13.18	46.94	68.30	-21.36	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT160) Mode 5250 MHz_Ant.1+Ant.2

Horizontal

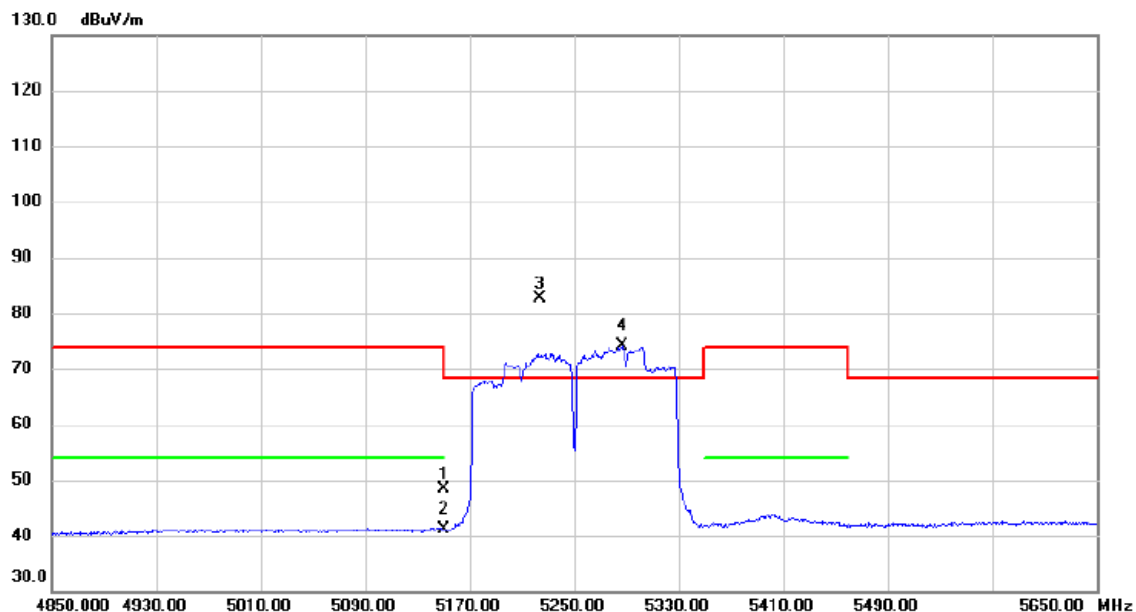


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	34.03	14.31	48.34	74.00	-25.66	peak	
2		5150.000	26.76	14.31	41.07	54.00	-12.93	AVG	
3	*	5224.000	68.19	14.49	82.68	68.30	14.38	peak	No Limit
4	X	5286.400	59.38	14.65	74.03	68.30	5.73	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AC (VHT160) Mode 5250 MHz_Ant.1+Ant.2

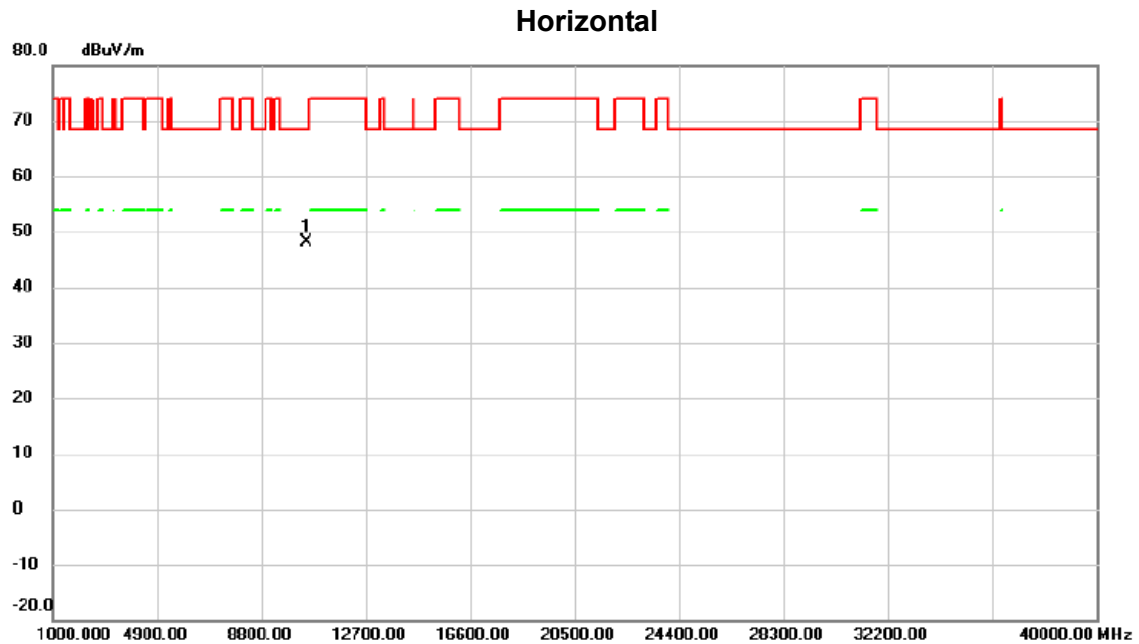

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10501.410	34.99	13.18	48.17	68.30	-20.13	peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5260 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

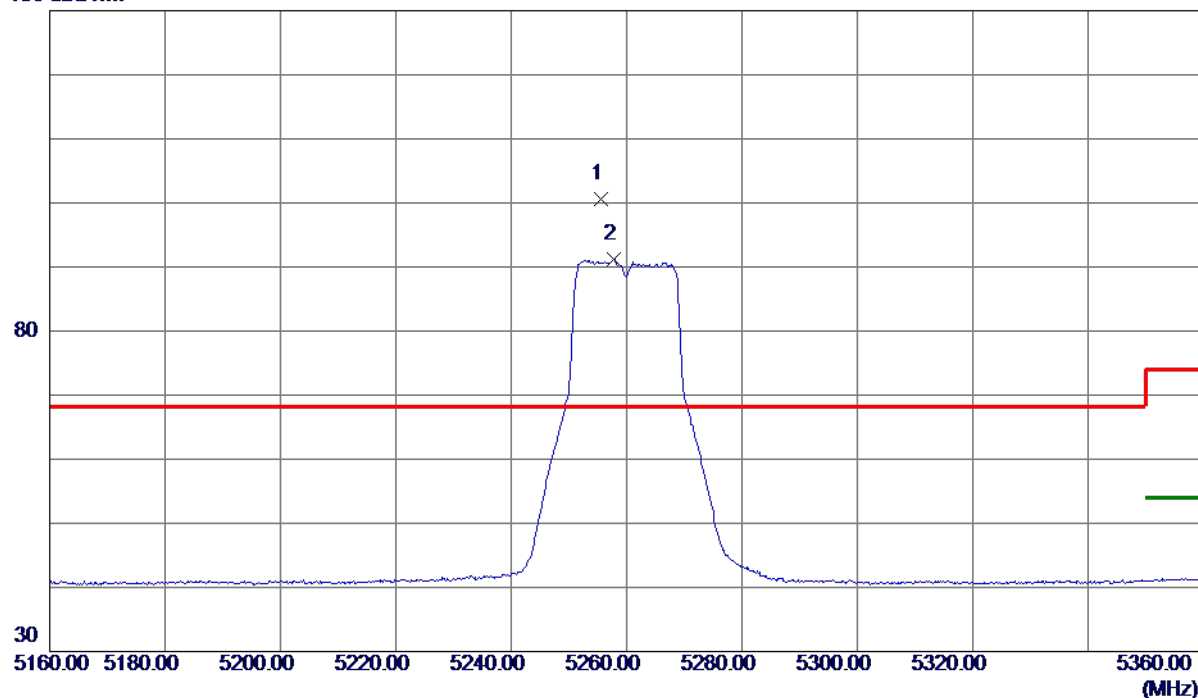

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5255.5000	86.10	14.57	100.67	68.30	32.37	Peak	No Limit
2	5257.7000	76.63	14.57	91.20	999.00	-907.80	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5260 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

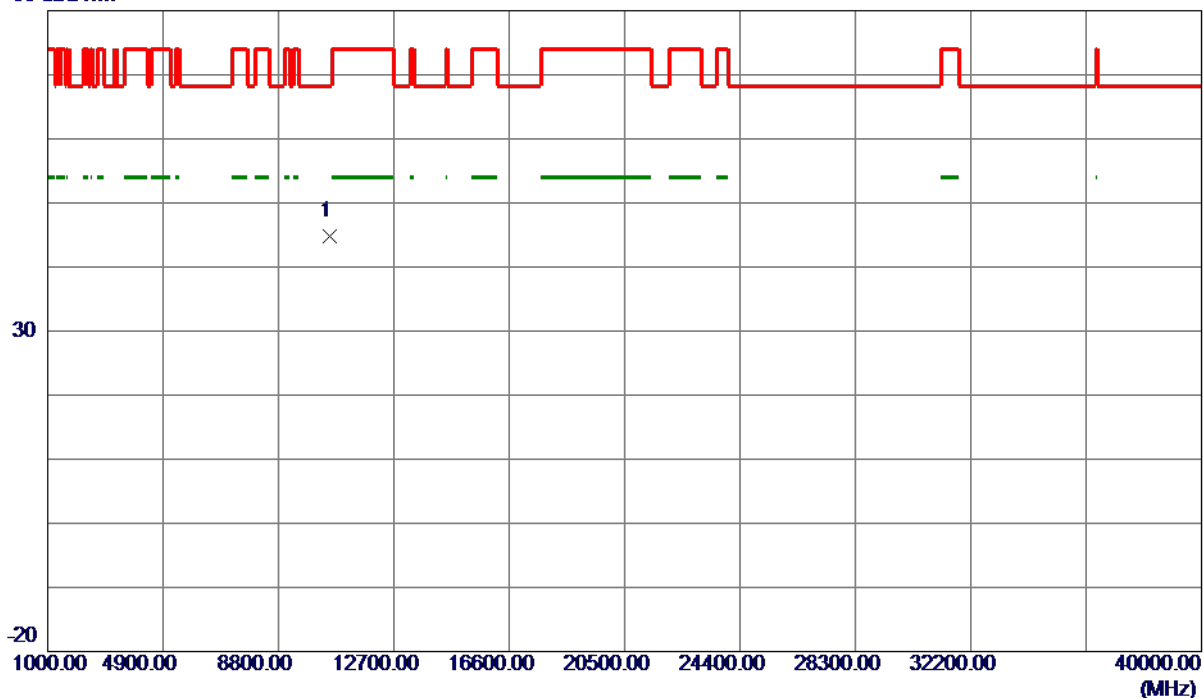

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10524.3450	33.20	11.54	44.74	68.30	-23.56	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5260 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

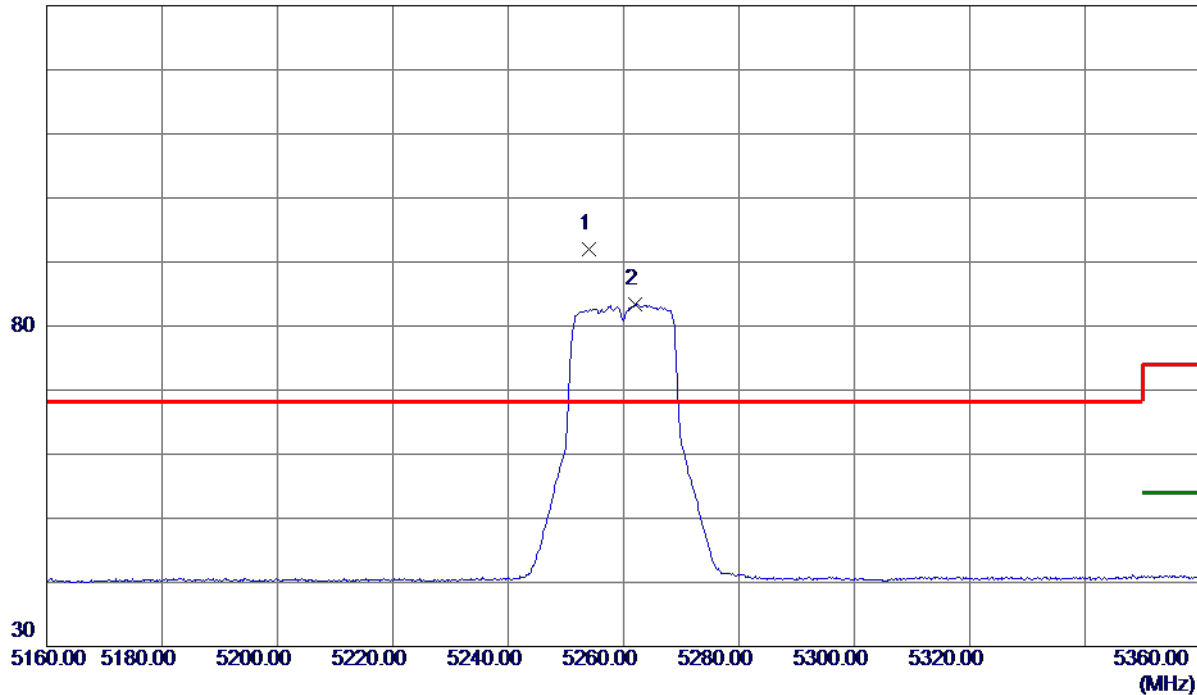


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5254.1000	77.52	14.56	92.08	68.30	23.78	Peak	No Limit
2	5262.1000	68.84	14.58	83.42	999.00	-915.58	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5260 MHz_Ant.1+Ant.2

Horizontal

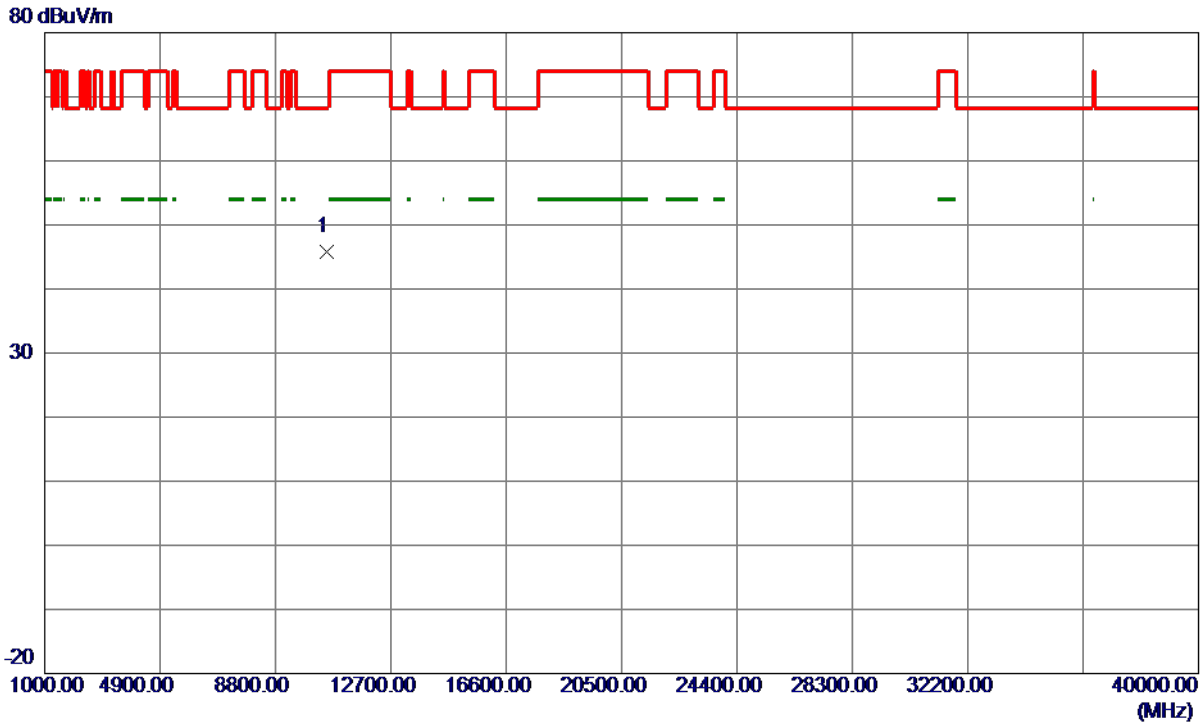


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10523.3600	34.17	11.54	45.71	68.30	-22.59	Peak	

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5300 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

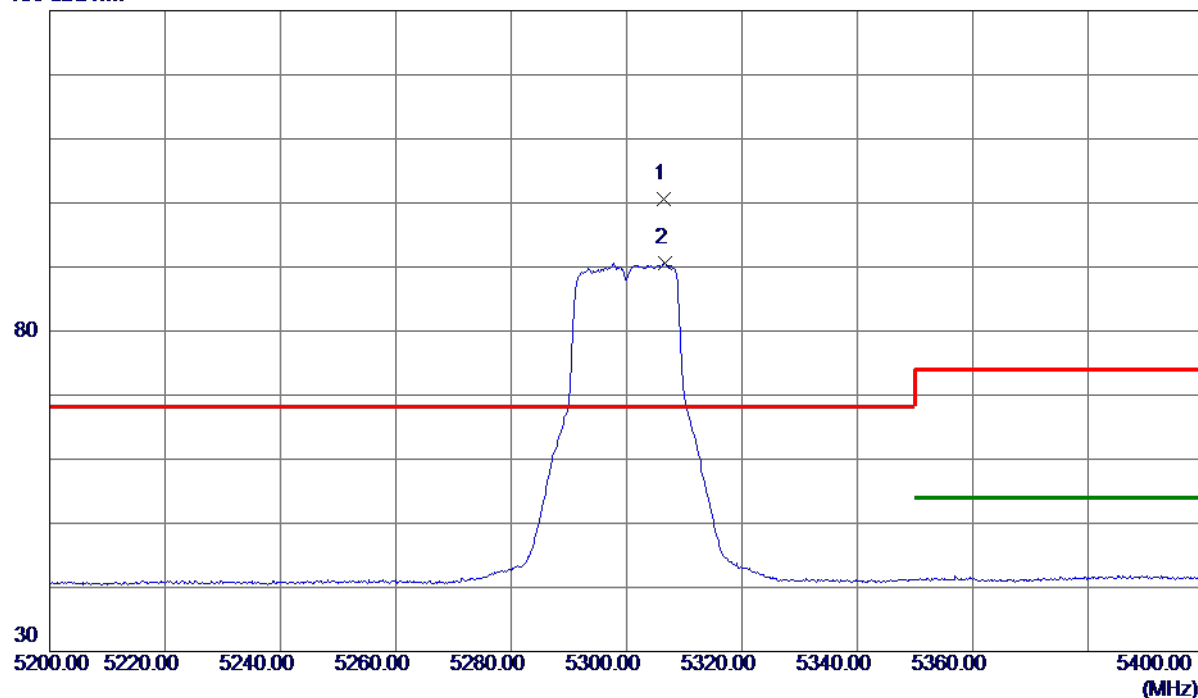

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5306.5000	85.99	14.69	100.68	68.30	32.38	Peak	No Limit
2	5306.7000	75.93	14.69	90.62	999.00	-908.38	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5300 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

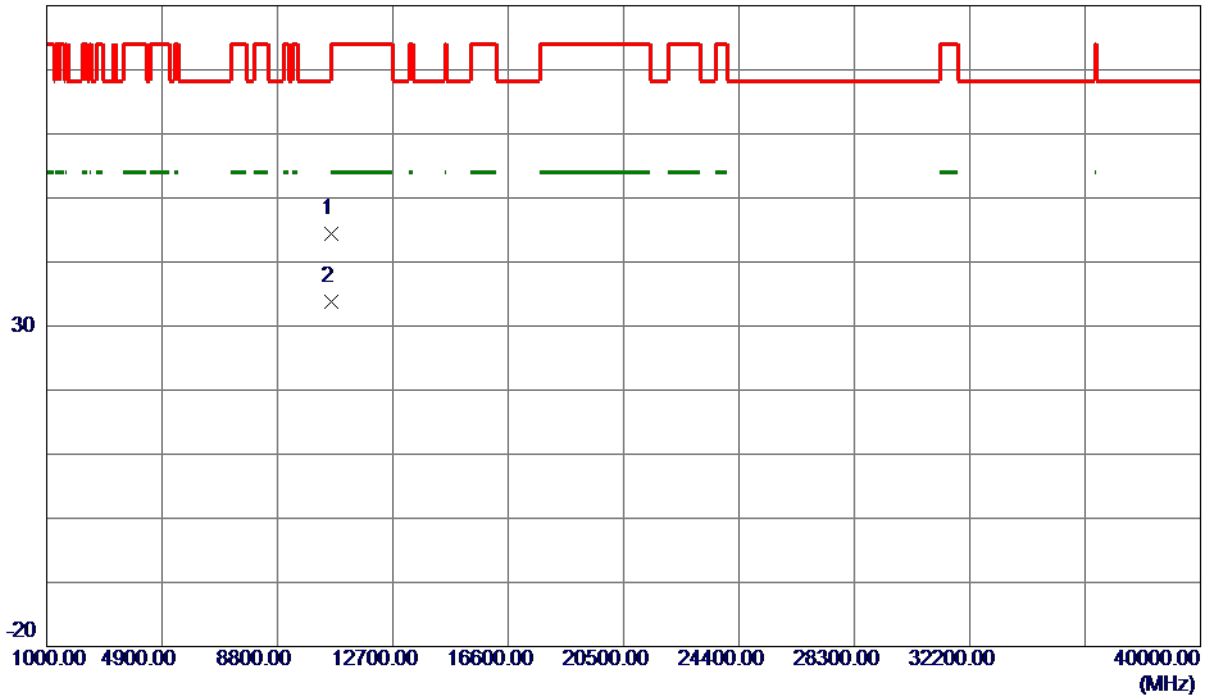

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	10600.0700	32.90	11.55	44.45	74.00	-29.55	Peak	
2 *	10604.1350	22.19	11.55	33.74	54.00	-20.26	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5300 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

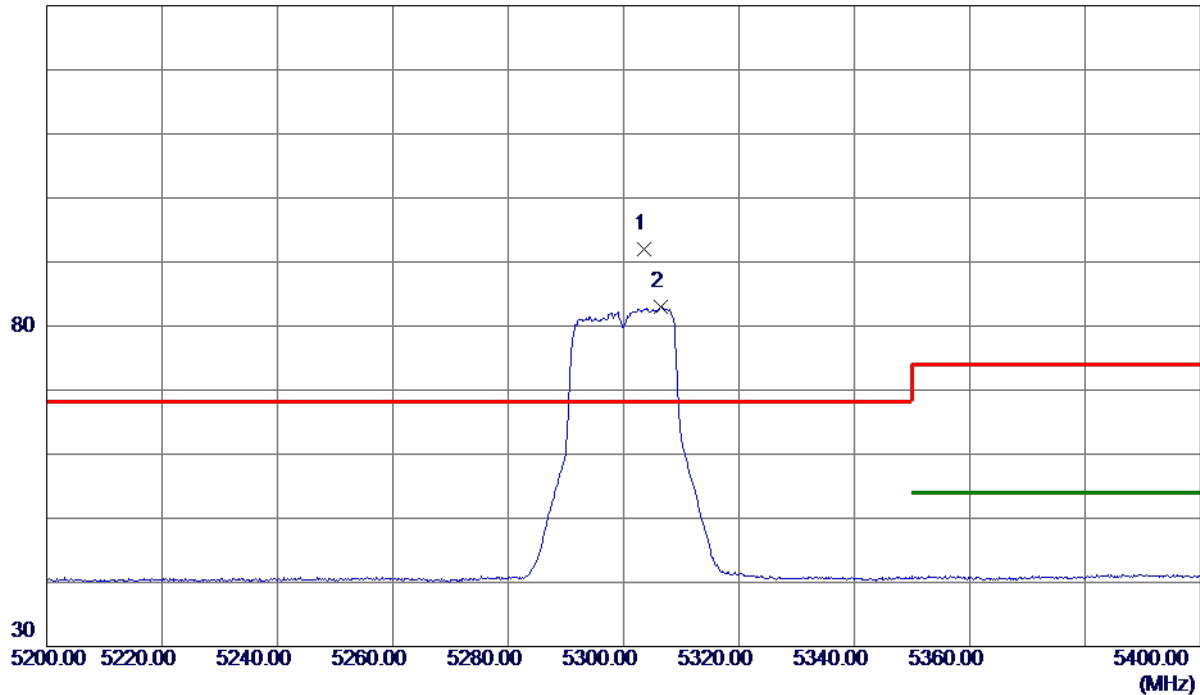

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5303.6000	77.37	14.68	92.05	68.30	23.75	Peak	No Limit
2	5306.5000	68.36	14.69	83.05	999.00	-915.95	AVG	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5300 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

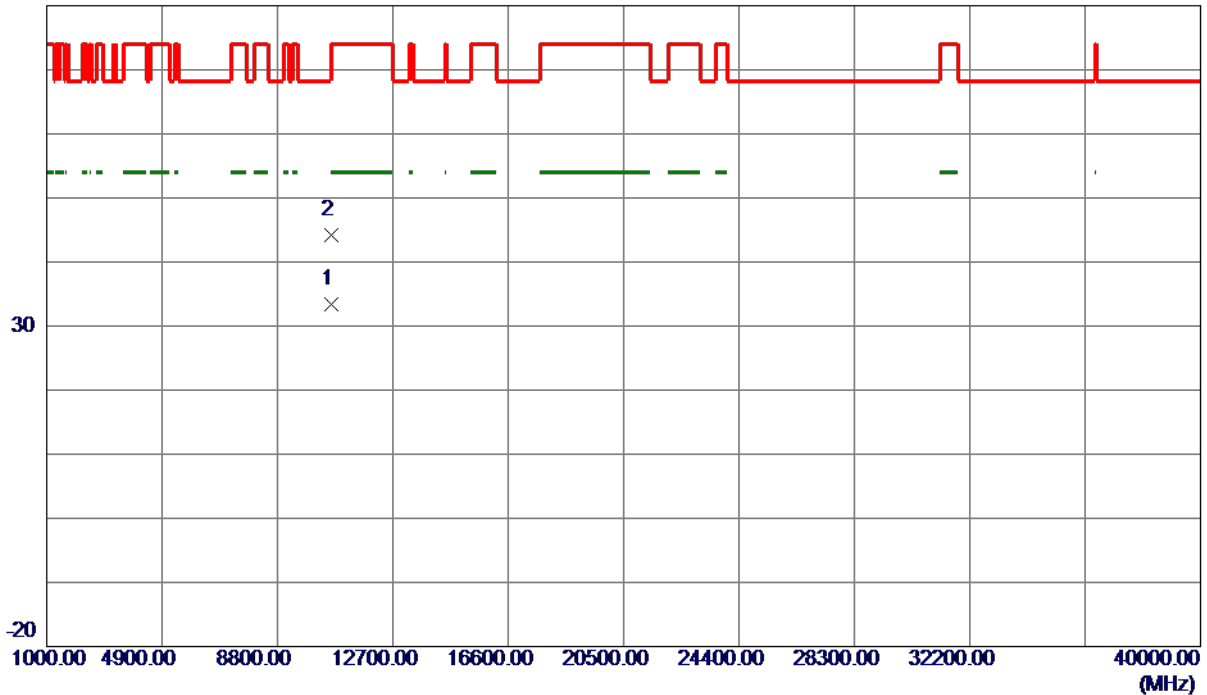

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10603.7250	21.86	11.55	33.41	54.00	-20.59	AVG	
2	10604.8550	32.70	11.55	44.25	74.00	-29.75	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5320 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

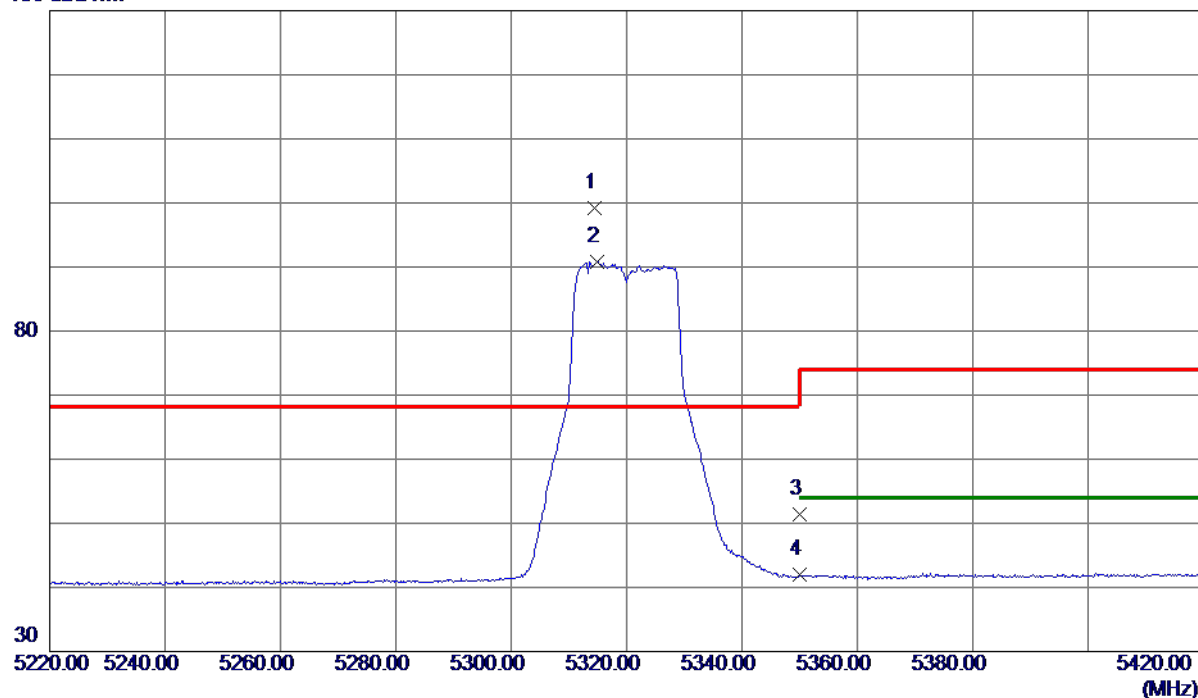

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5314.4000	84.50	14.71	99.21	68.30	30.91	Peak	No Limit
2	5314.8000	76.16	14.71	90.87	999.00	-908.13	AVG	No Limit
3	5350.0000	36.55	14.79	51.34	74.00	-22.66	Peak	
4	5350.0000	27.16	14.79	41.95	999.00	-957.05	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5320 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

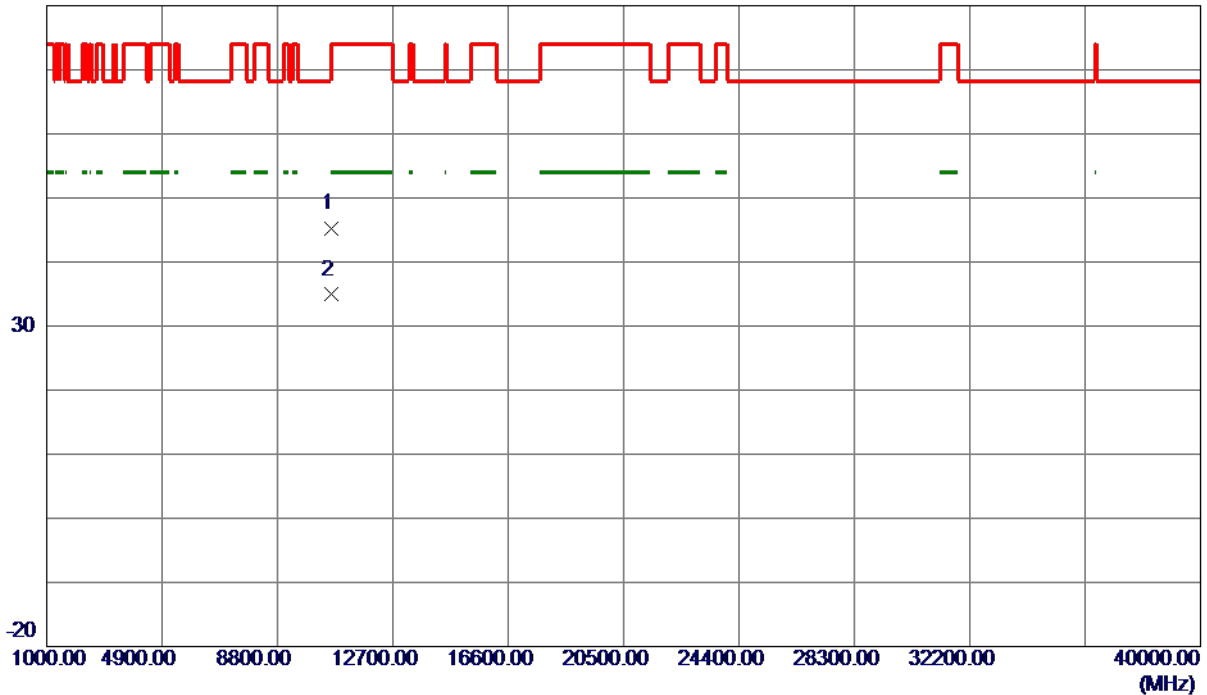

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	10636.8300	33.66	11.56	45.22	74.00	-28.78	Peak	
2 *	10637.9500	23.34	11.56	34.90	54.00	-19.10	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5320 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

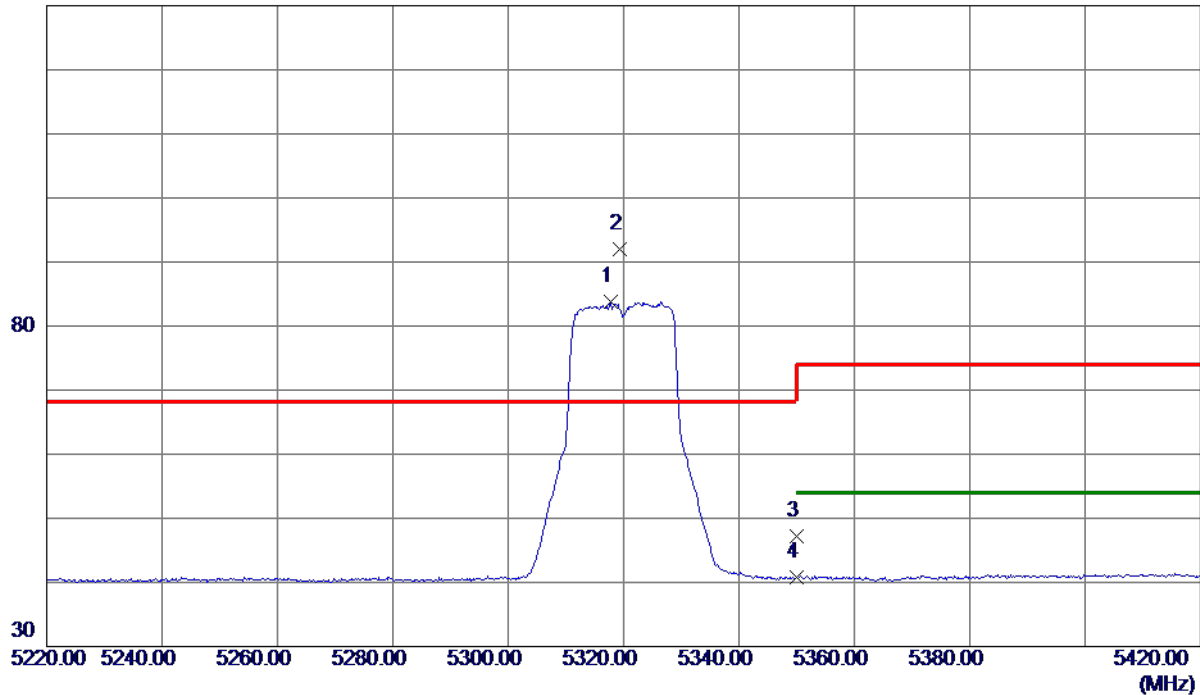

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5317.7000	69.08	14.71	83.79	999.00	-915.21	AVG	No Limit
2 *	5319.4000	77.35	14.72	92.07	68.30	23.77	Peak	No Limit
3	5350.0000	32.39	14.79	47.18	74.00	-26.82	Peak	
4	5350.0000	25.96	14.79	40.75	999.00	-958.25	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT20) Mode 5320 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

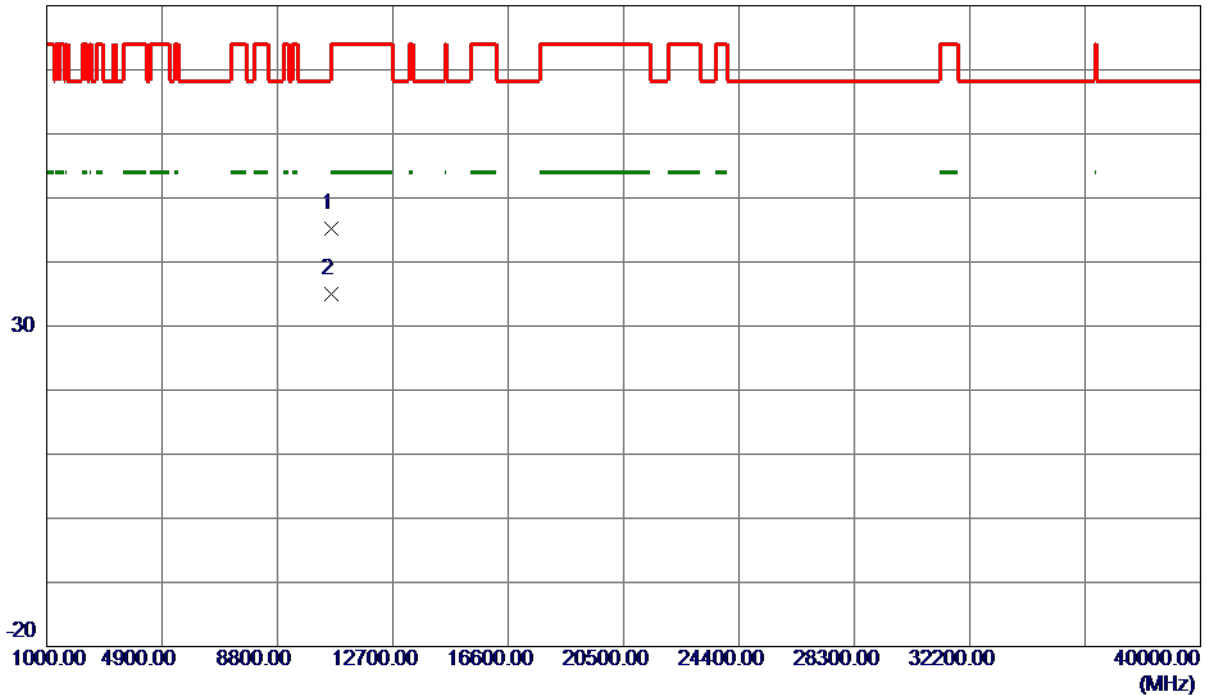

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	10635.0300	33.57	11.56	45.13	74.00	-28.87	Peak	
2 *	10638.6800	23.46	11.56	35.02	54.00	-18.98	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5270 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

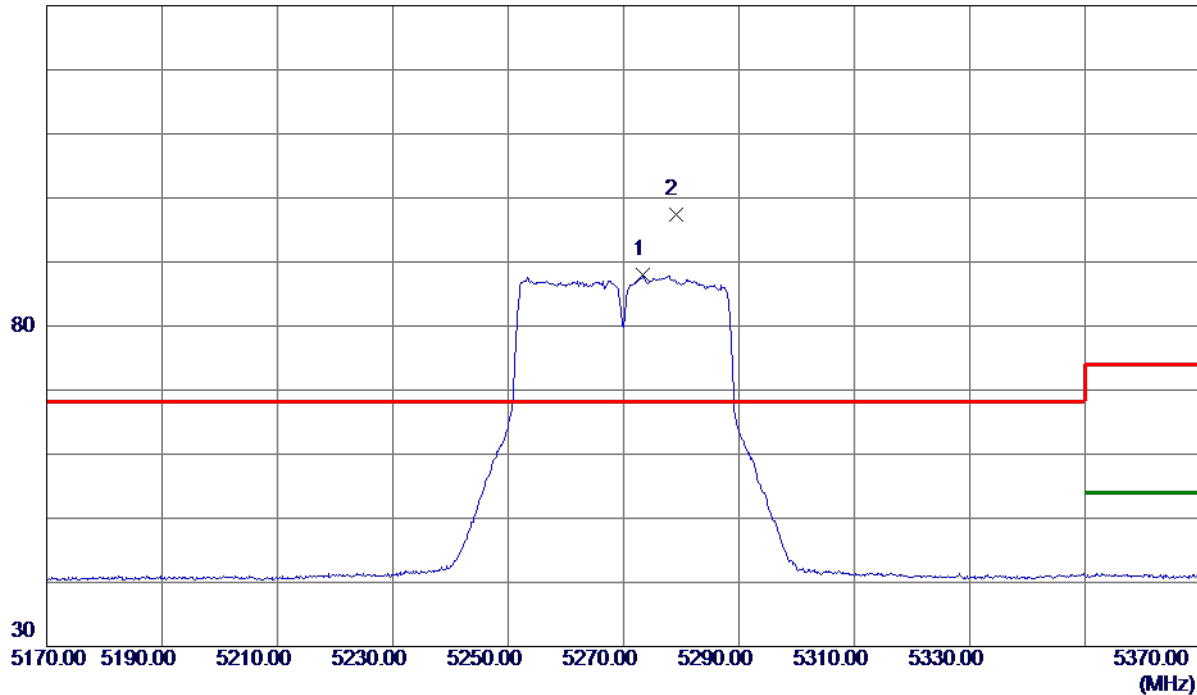

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5273.4000	73.32	14.61	87.93	999.00	-911.07	AVG	No Limit
2 *	5279.0000	82.83	14.62	97.45	68.30	29.15	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5270 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

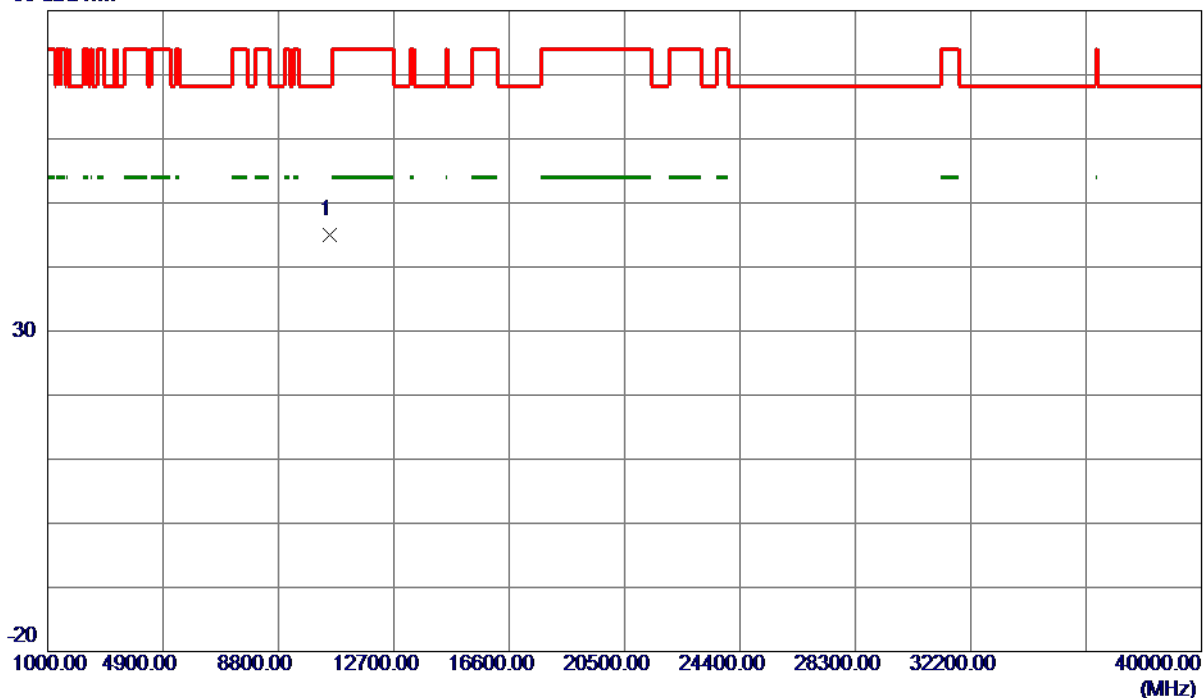

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10536.9900	33.42	11.54	44.96	68.30	-23.34	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5270 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

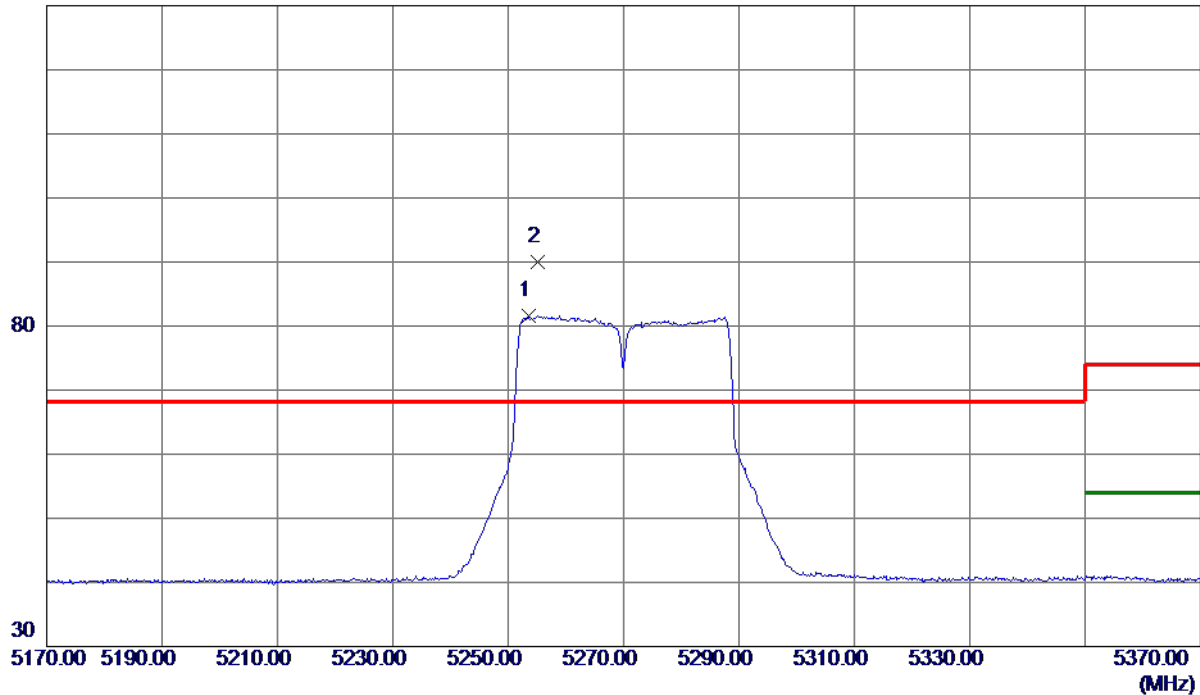

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5253.5000	67.01	14.56	81.57	999.00	-917.43	AVG	No Limit
2 *	5255.2000	75.41	14.56	89.97	68.30	21.67	Peak	No Limit


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5270 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

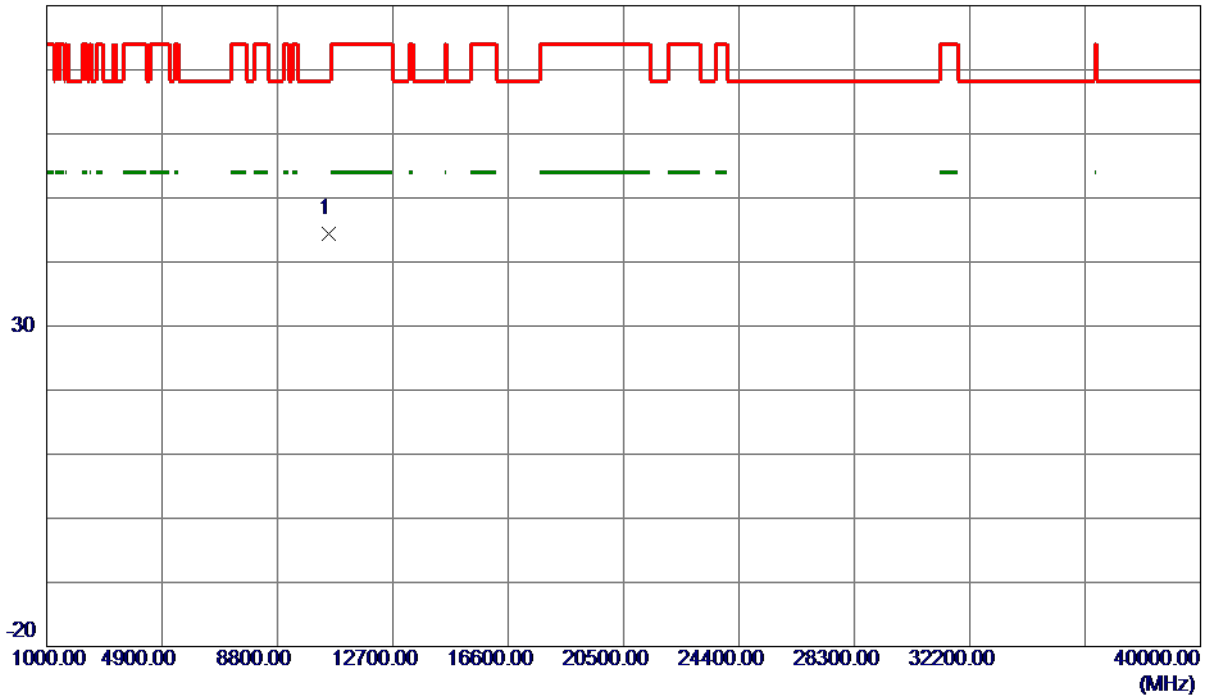

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10541.6449	32.90	11.54	44.44	68.30	-23.86	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5310 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

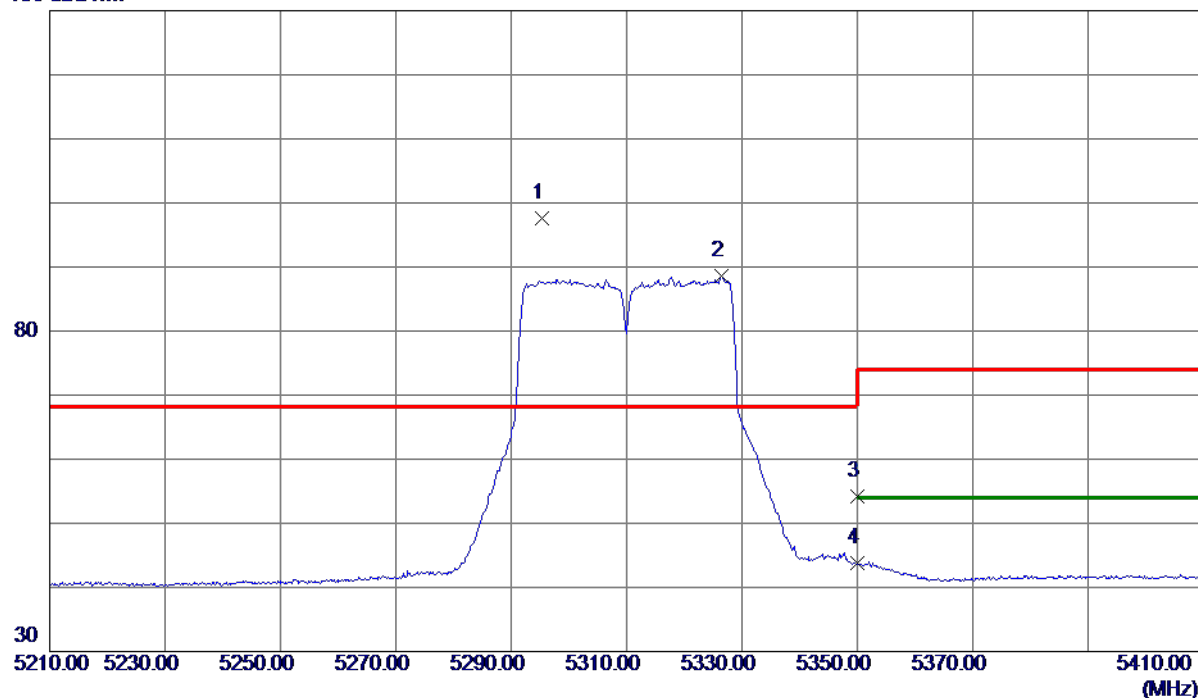

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5295.3000	82.94	14.66	97.60	68.30	29.30	Peak	No Limit
2	5326.5000	73.92	14.73	88.65	999.00	-910.35	AVG	No Limit
3	5350.0000	39.43	14.79	54.22	74.00	-19.78	Peak	
4	5350.0000	28.97	14.79	43.76	999.00	-955.24	AVG	


REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5310 MHz_Ant.1+Ant.2

Vertical

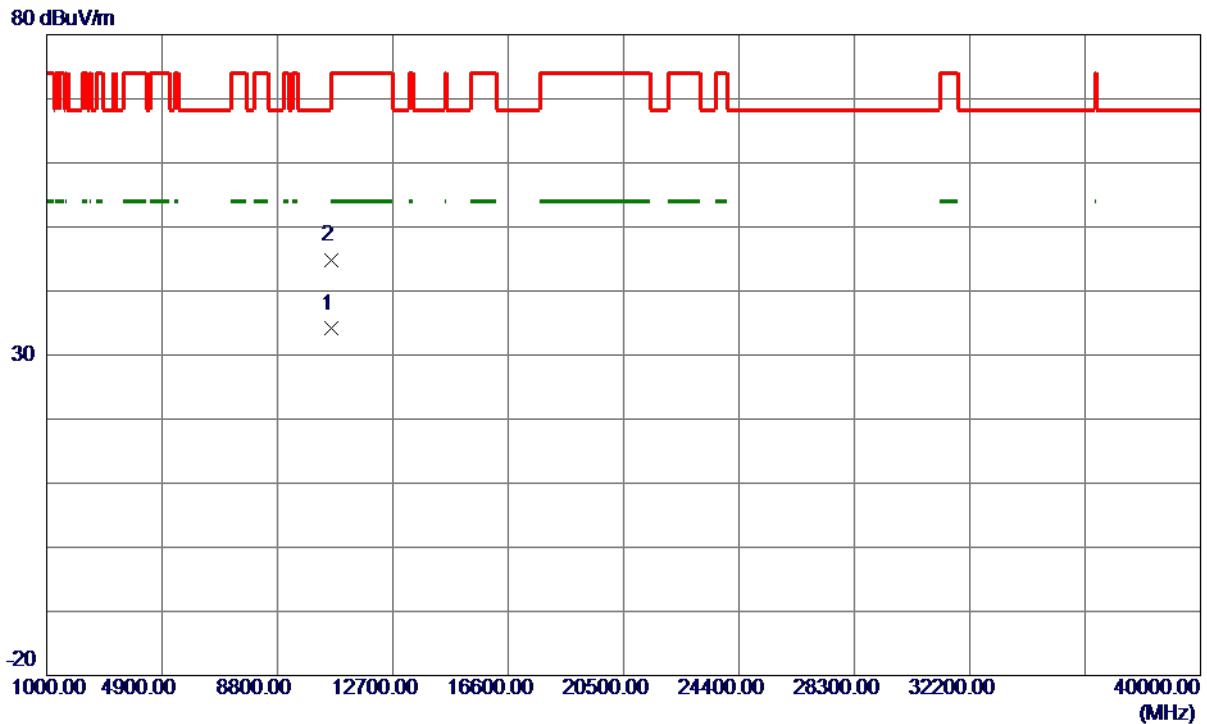

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10620.8850	22.54	11.56	34.10	54.00	-19.90	AVG	
2	10623.9150	33.25	11.56	44.81	74.00	-29.19	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5310 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

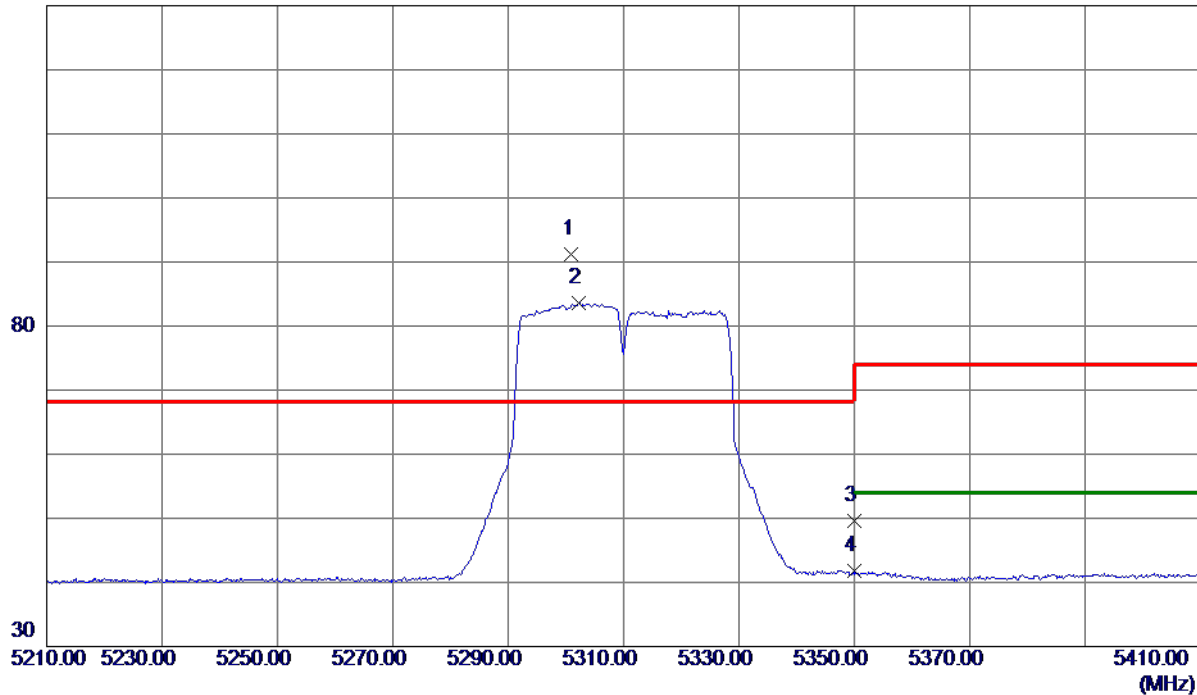

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5301.0000	76.54	14.67	91.21	68.30	22.91	Peak	No Limit
2	5302.2000	68.89	14.68	83.57	999.00	-915.43	AVG	No Limit
3	5350.0000	34.75	14.79	49.54	74.00	-24.46	Peak	
4	5350.0000	27.02	14.79	41.81	999.00	-957.19	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT40) Mode 5310 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

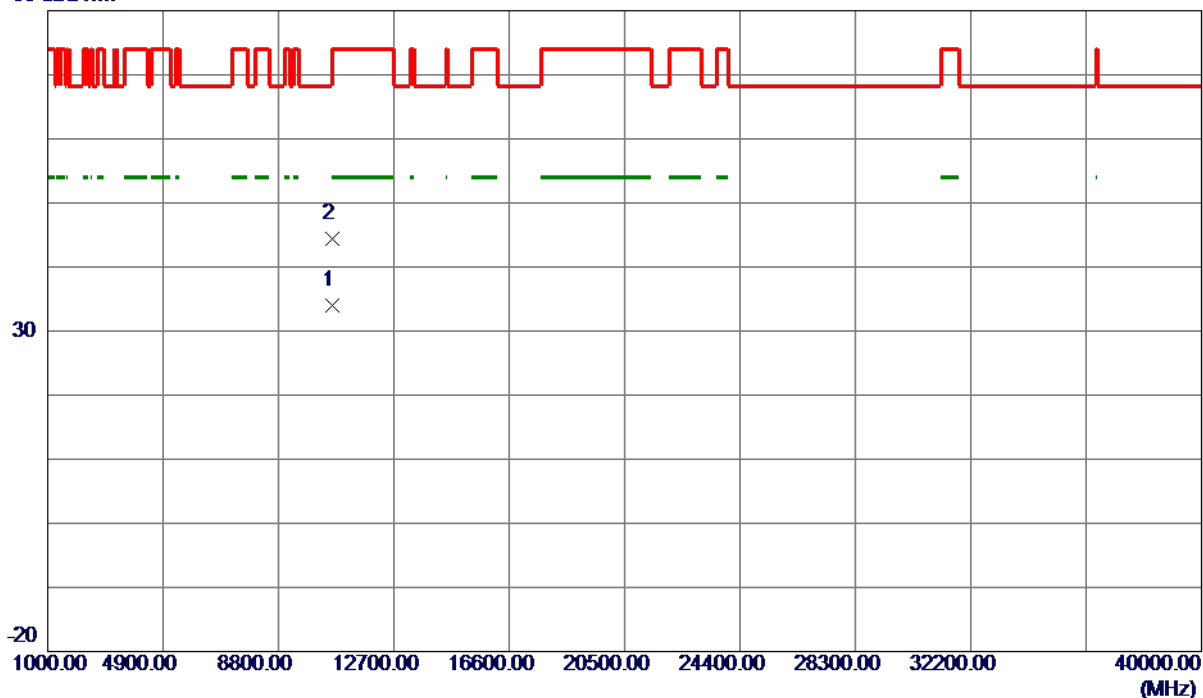

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10616.8650	22.45	11.55	34.00	54.00	-20.00	AVG	
2	10617.4200	32.85	11.55	44.40	74.00	-29.60	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT80) Mode 5290 MHz_Ant.1+Ant.2

Vertical

130 dBuV/m

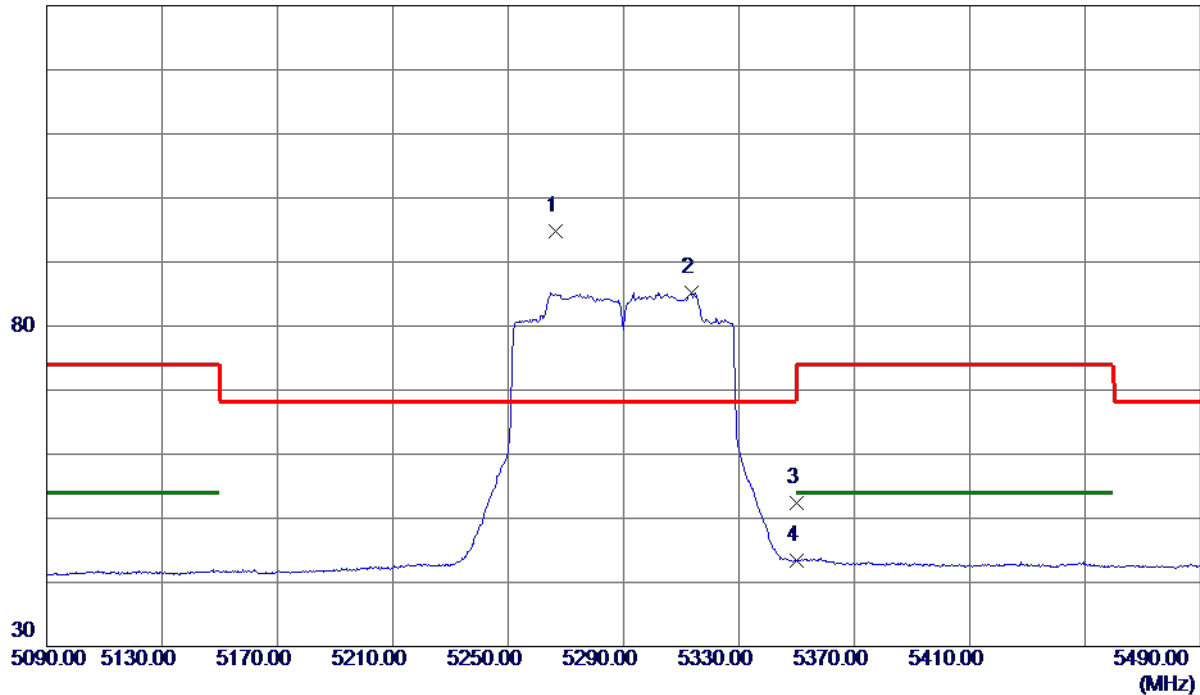

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	5266.6000	80.16	14.59	94.75	68.30	26.45	Peak	No Limit
2	5313.6000	70.56	14.70	85.26	999.00	-913.74	AVG	No Limit
3	5350.0000	37.70	14.79	52.49	74.00	-21.51	Peak	
4	5350.0000	28.54	14.79	43.33	999.00	-955.67	AVG	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT80) Mode 5290 MHz_Ant.1+Ant.2

Vertical

80 dBuV/m

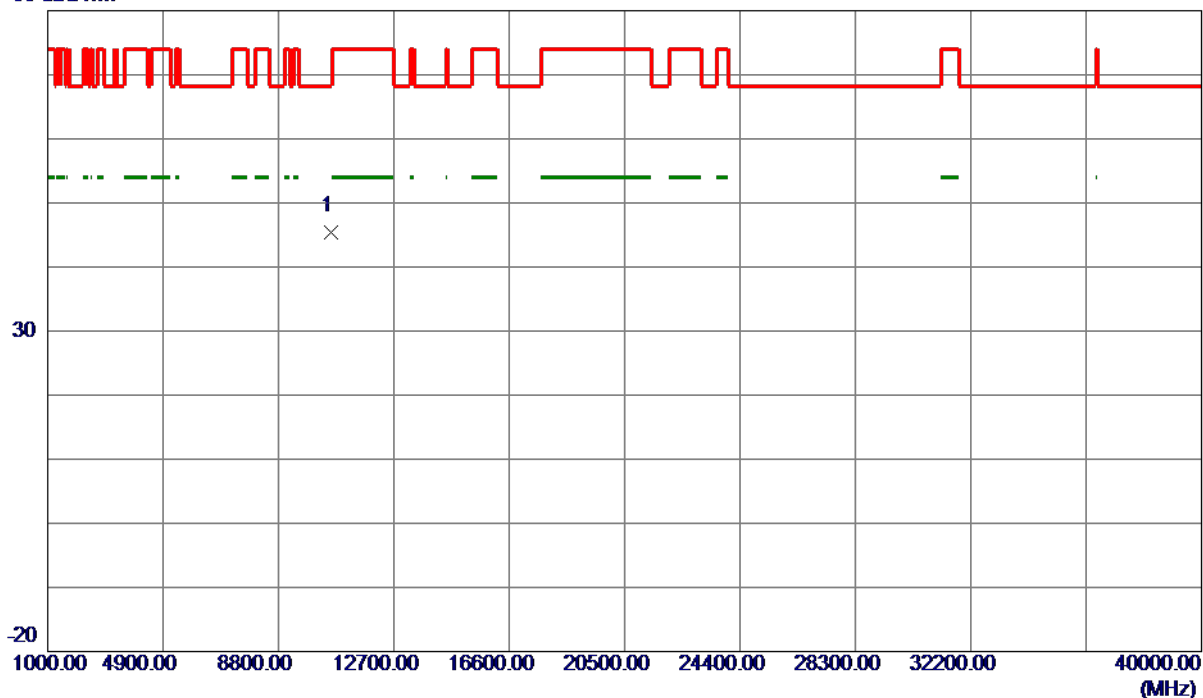

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10584.9550	33.95	11.55	45.50	68.30	-22.80	Peak	


REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT80) Mode 5290 MHz_Ant.1+Ant.2

Horizontal

130 dBuV/m

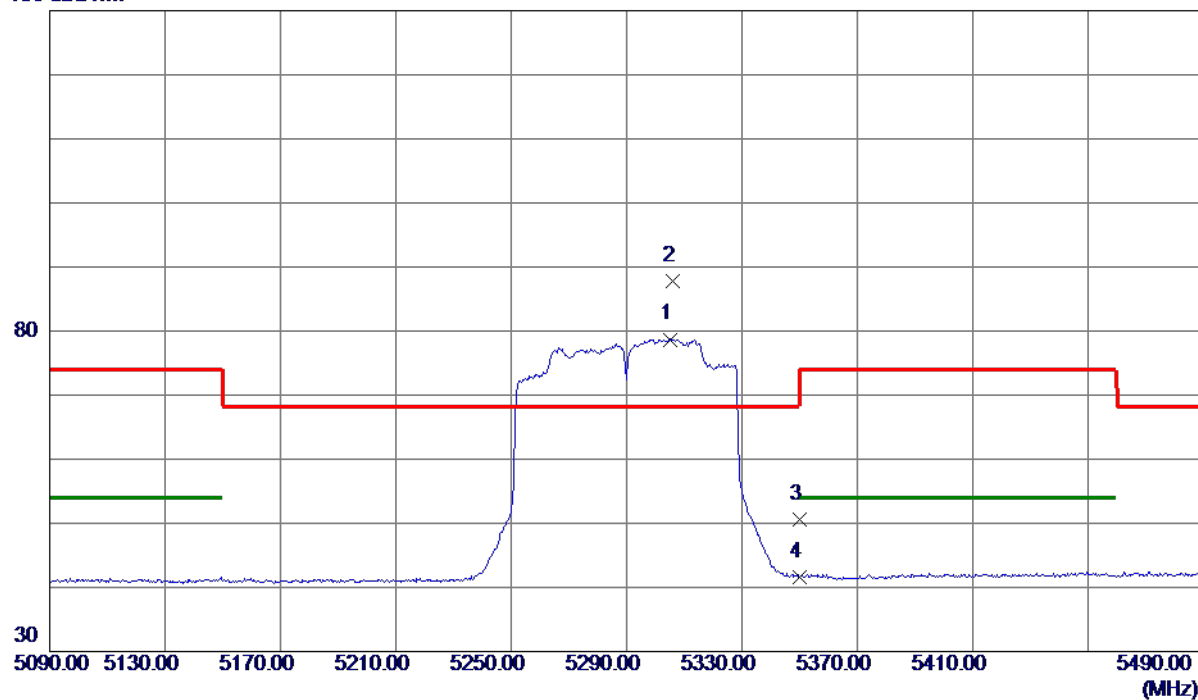

No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	5305.0000	64.02	14.68	78.70	999.00	-920.30	AVG	No Limit
2 *	5306.0000	73.16	14.69	87.85	68.30	19.55	Peak	No Limit
3	5350.0000	35.74	14.79	50.53	74.00	-23.47	Peak	
4	5350.0000	26.75	14.79	41.54	999.00	-957.46	AVG	

REMARKS:


(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AC (VHT80) Mode 5290 MHz_Ant.1+Ant.2

Horizontal

80 dBuV/m

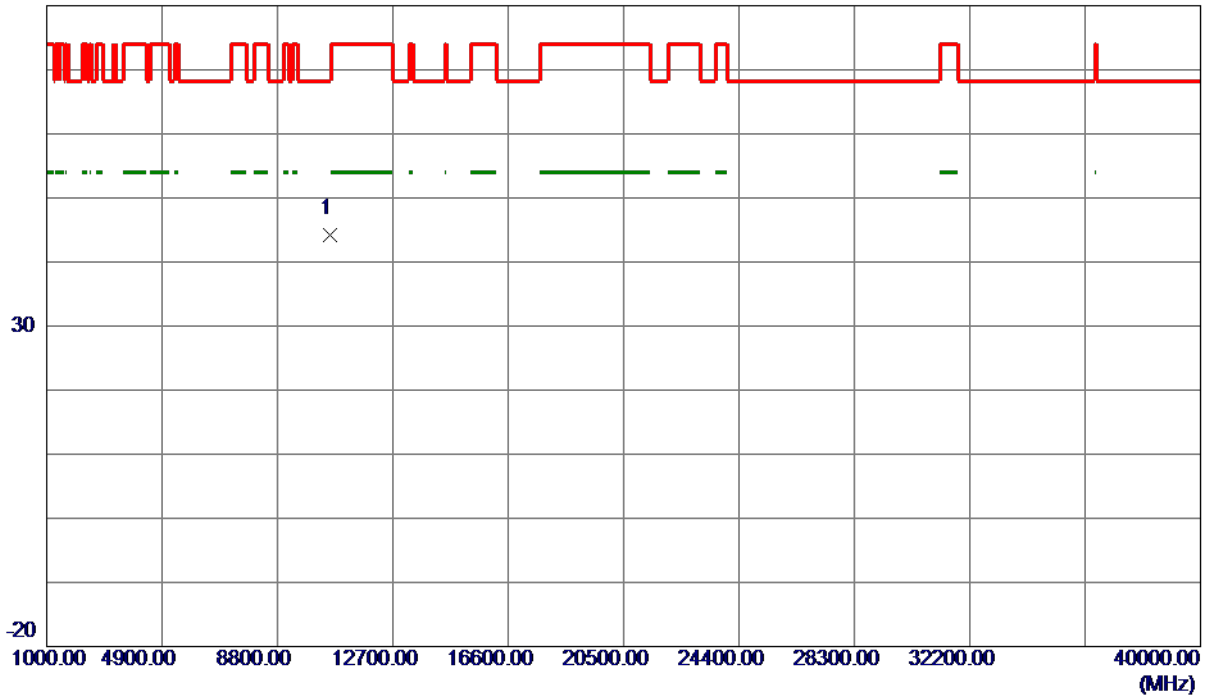


No.	Freq. MHz	Reading Level dBuV/m	Correct Factor dB	Measure ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1 *	10575.8050	32.75	11.55	44.30	68.30	-24.00	Peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz_Ant.1+Ant.2

Vertical

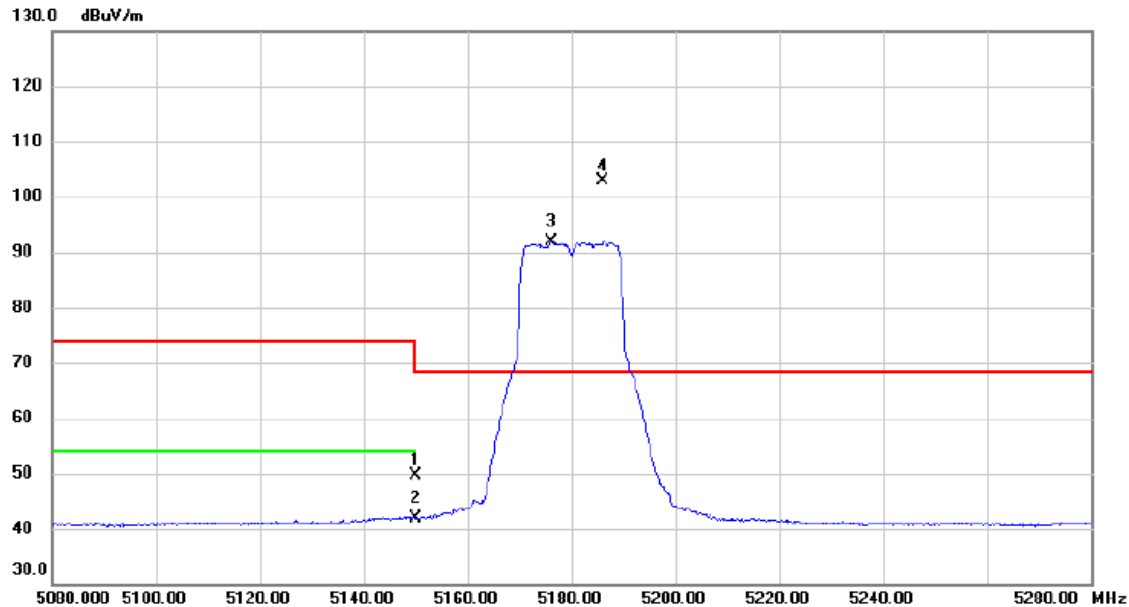


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	35.41	14.31	49.72	74.00	-24.28	peak	
2		5150.000	27.54	14.31	41.85	54.00	-12.15	AVG	
3	X	5176.200	77.60	14.38	91.98	68.30	23.68	AVG	No Limit
4	*	5186.000	88.59	14.40	102.99	68.30	34.69	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz_Ant.1+Ant.2

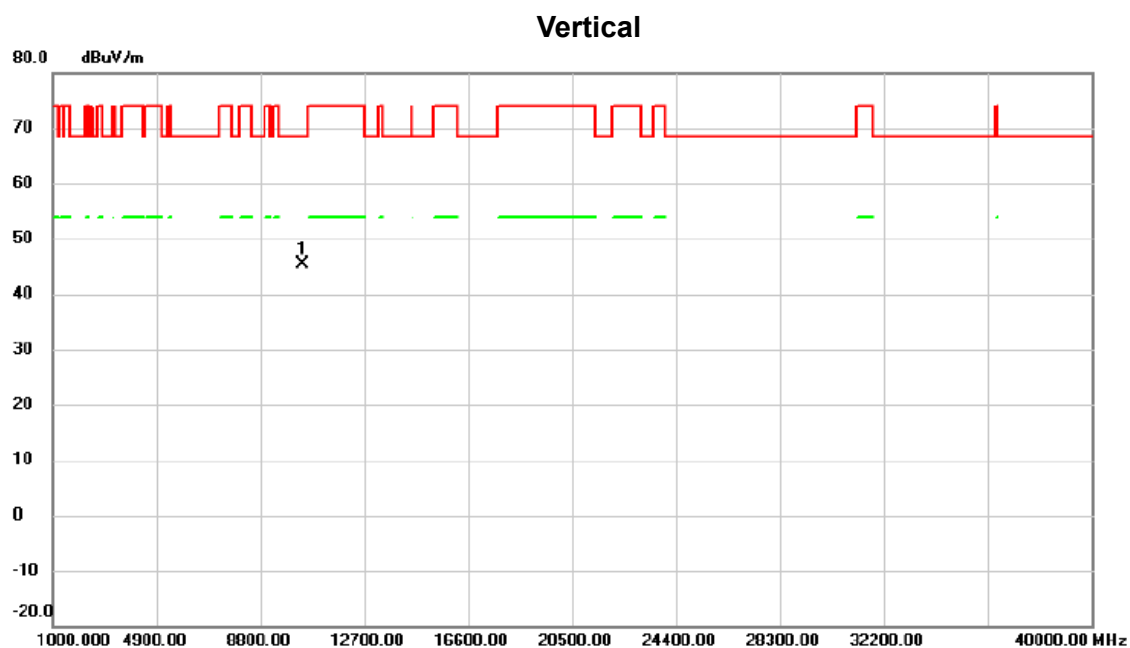


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10364.730	34.13	11.30	45.43	68.30	-22.87	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz_Ant.1+Ant.2

Horizontal

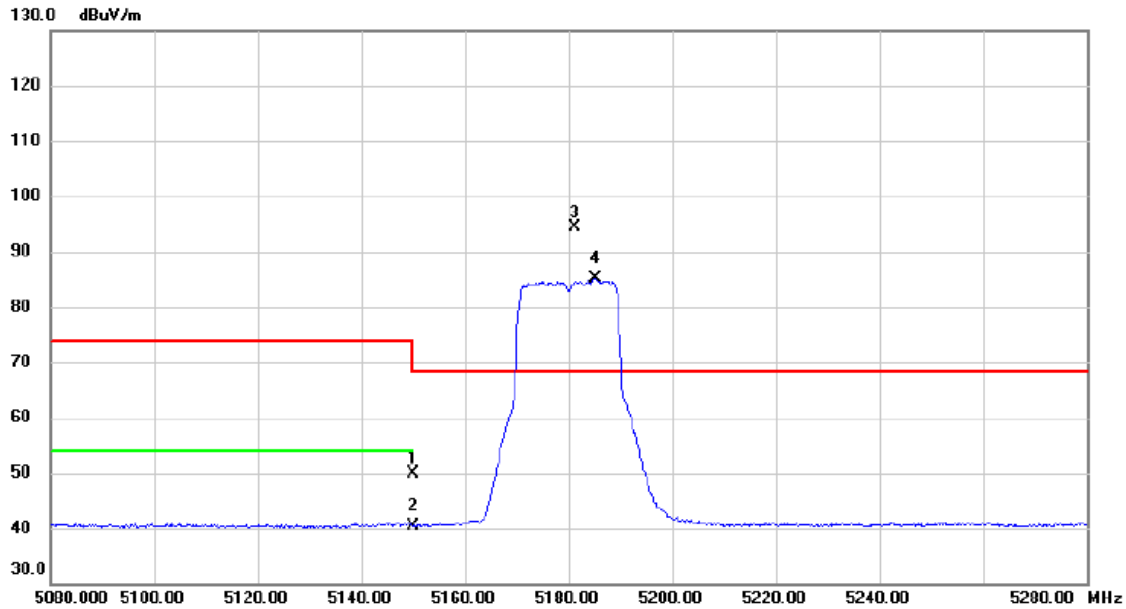


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	35.66	14.31	49.97	74.00	-24.03	peak	
2		5150.000	26.12	14.31	40.43	54.00	-13.57	AVG	
3	*	5181.100	80.02	14.39	94.41	68.30	26.11	peak	No Limit
4	X	5185.100	70.68	14.39	85.07	68.30	16.77	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5180 MHz_Ant.1+Ant.2

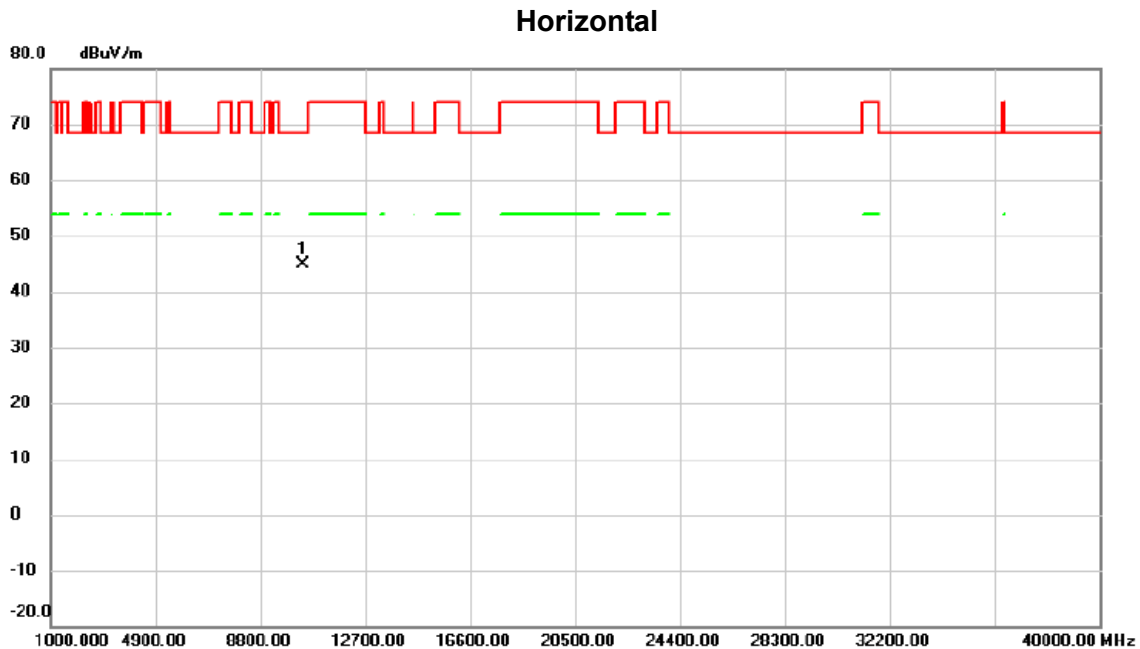


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10364.770	33.48	11.30	44.78	68.30	-23.52	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz_Ant.1+Ant.2

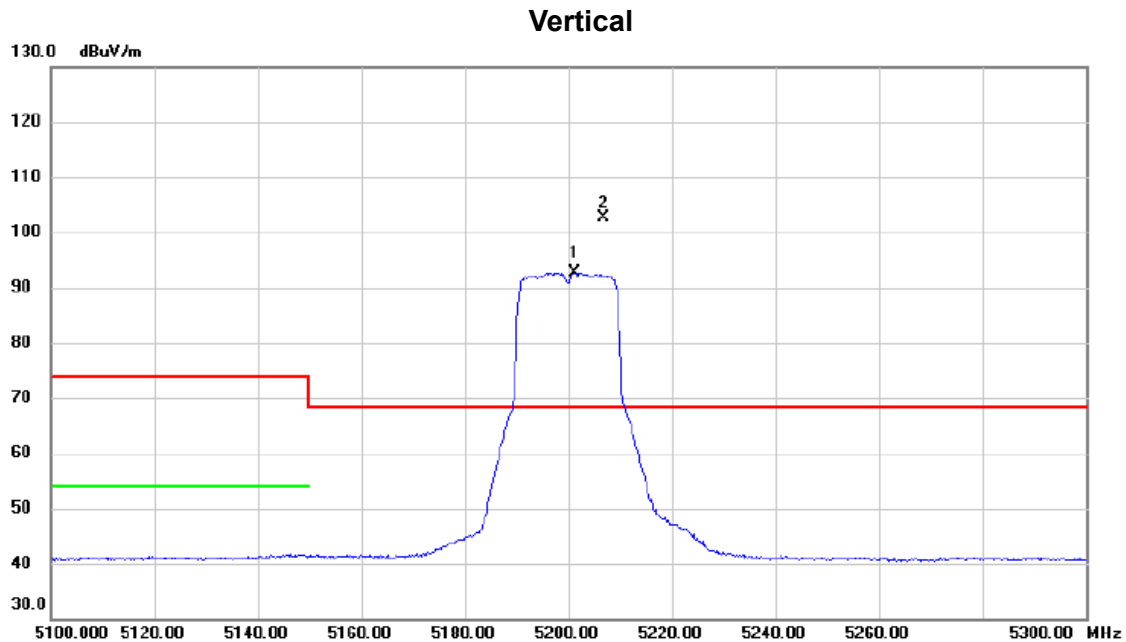


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5201.200	78.28	14.43	92.71	68.30	24.41	AVG	No Limit
2	*	5206.700	88.27	14.45	102.72	68.30	34.42	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz_Ant.1+Ant.2

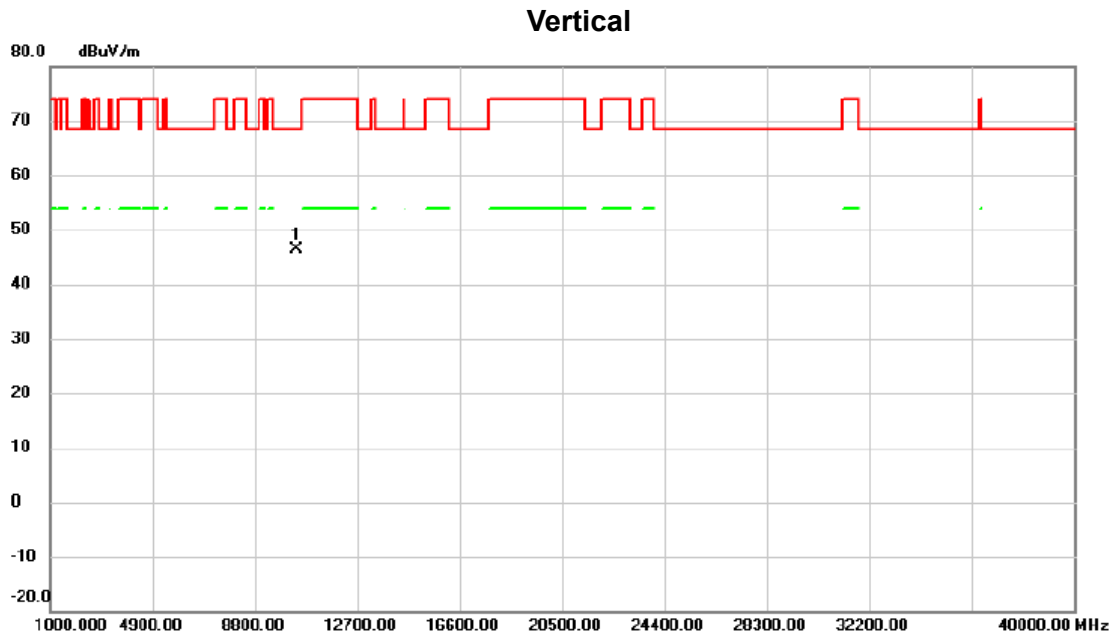


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10400.975	34.97	11.37	46.34	68.30	-21.96	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz_Ant.1+Ant.2

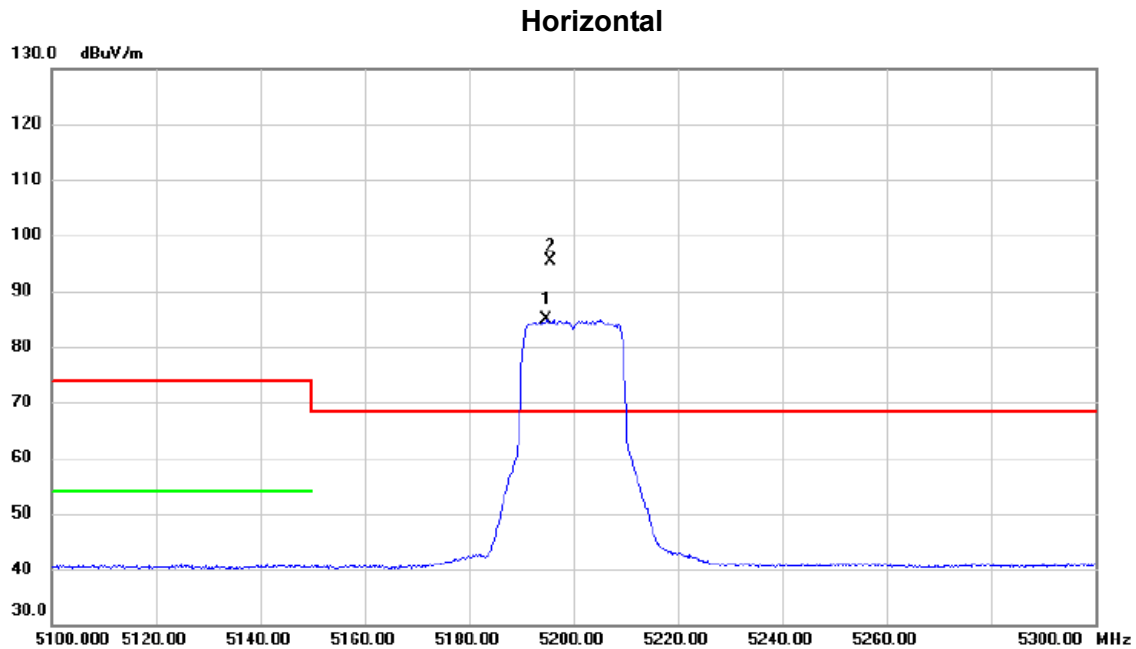


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5194.900	70.44	14.42	84.86	68.30	16.56	AVG	No Limit
2	*	5195.600	80.85	14.42	95.27	68.30	26.97	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5200 MHz_Ant.1+Ant.2

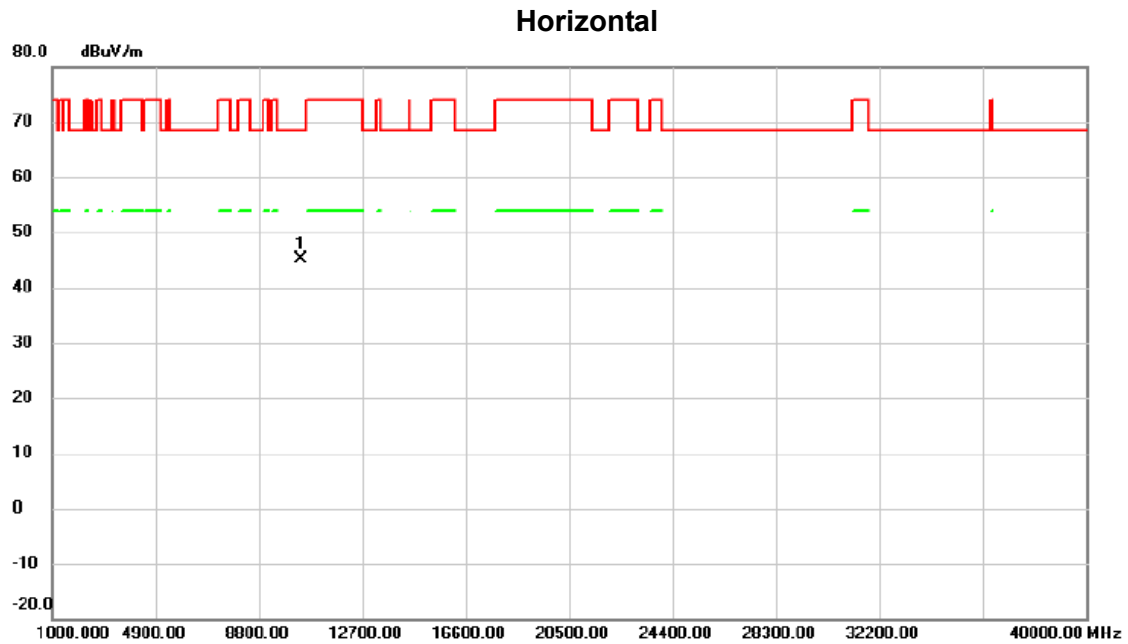


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10397.140	33.82	11.36	45.18	68.30	-23.12	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz_Ant.1+Ant.2

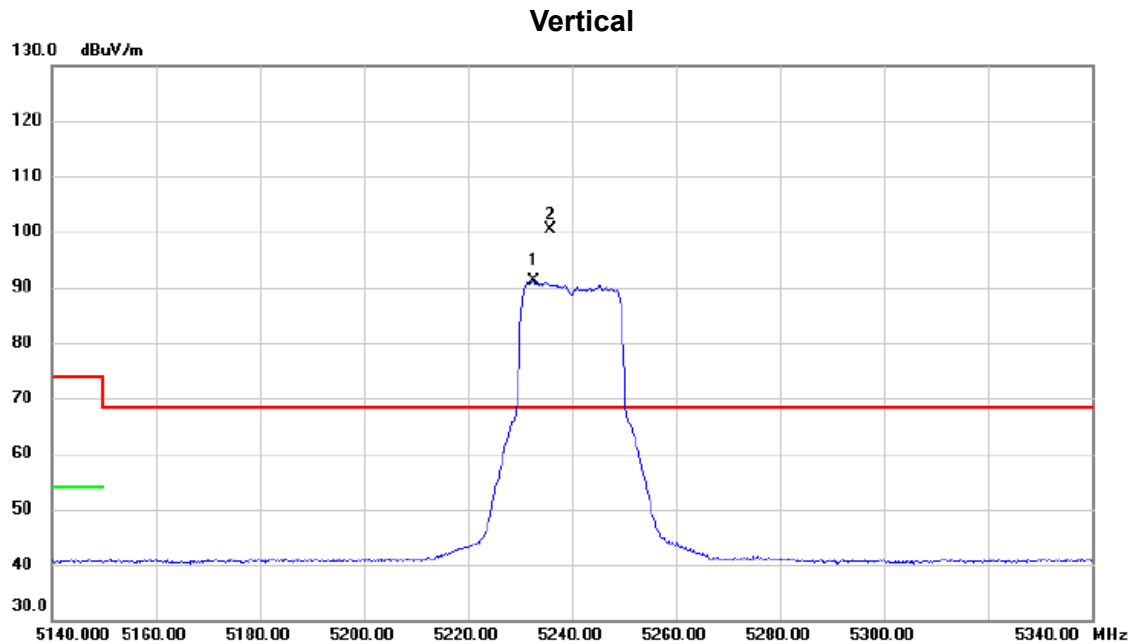


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5232.700	76.52	14.51	91.03	68.30	22.73	AVG	No Limit
2	*	5235.900	85.86	14.52	100.38	68.30	32.08	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz_Ant.1+Ant.2

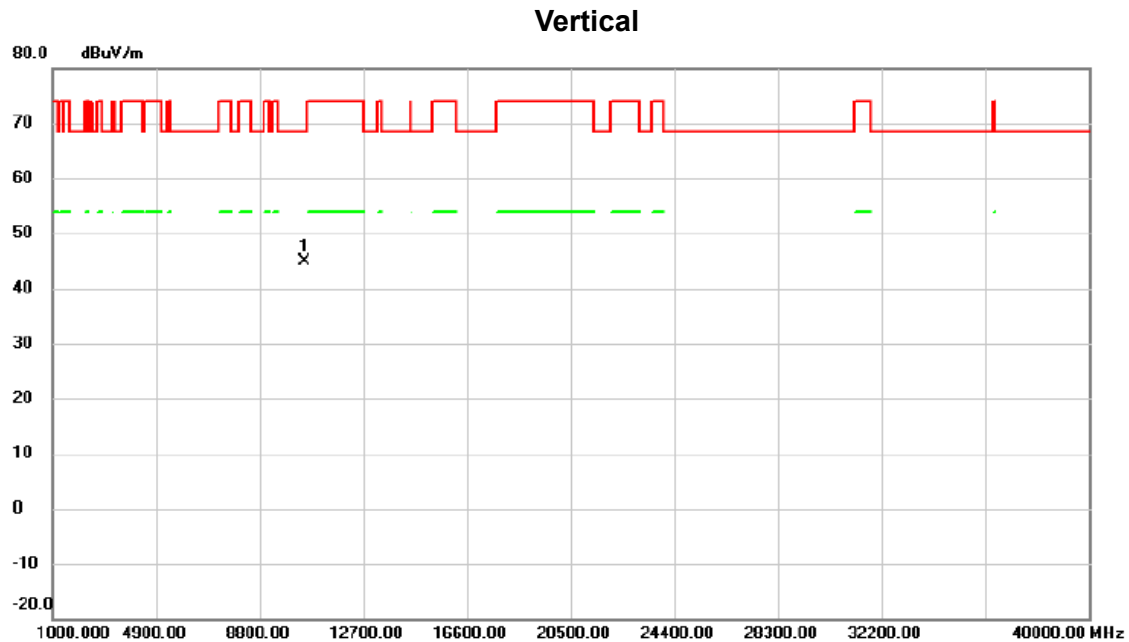


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10479.445	33.35	11.50	44.85	68.30	-23.45	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz_Ant.1+Ant.2


Horizontal

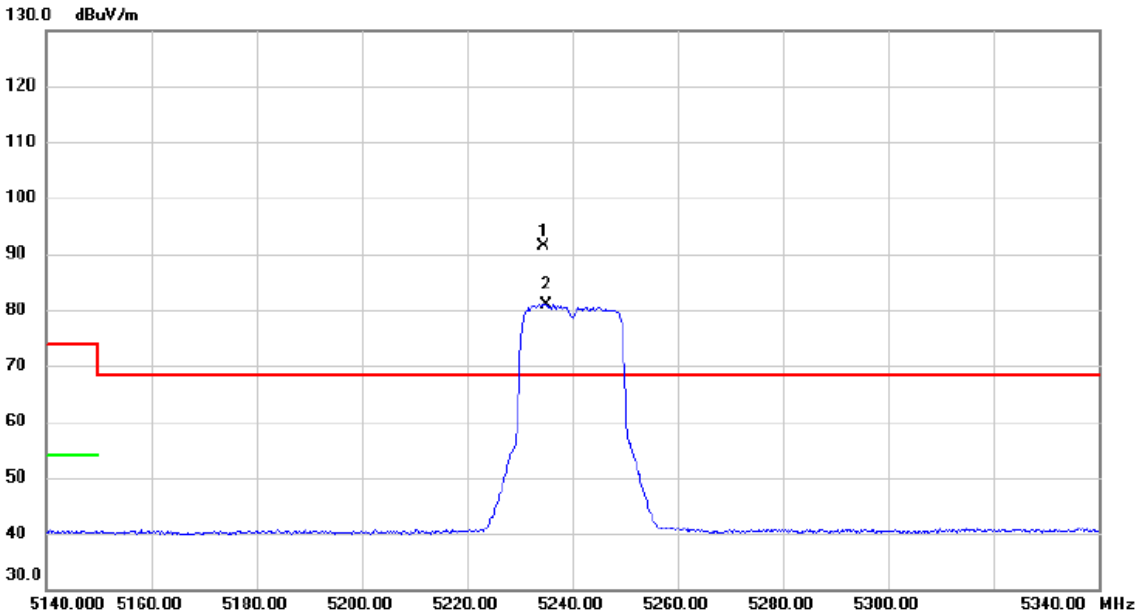

No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5234.500	76.91	14.52	91.43	68.30	23.13	peak	No Limit
2	X	5235.100	66.47	14.52	80.99	68.30	12.69	AVG	No Limit

REMARKS:
 (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE20) Mode 5240 MHz_Ant.1+Ant.2

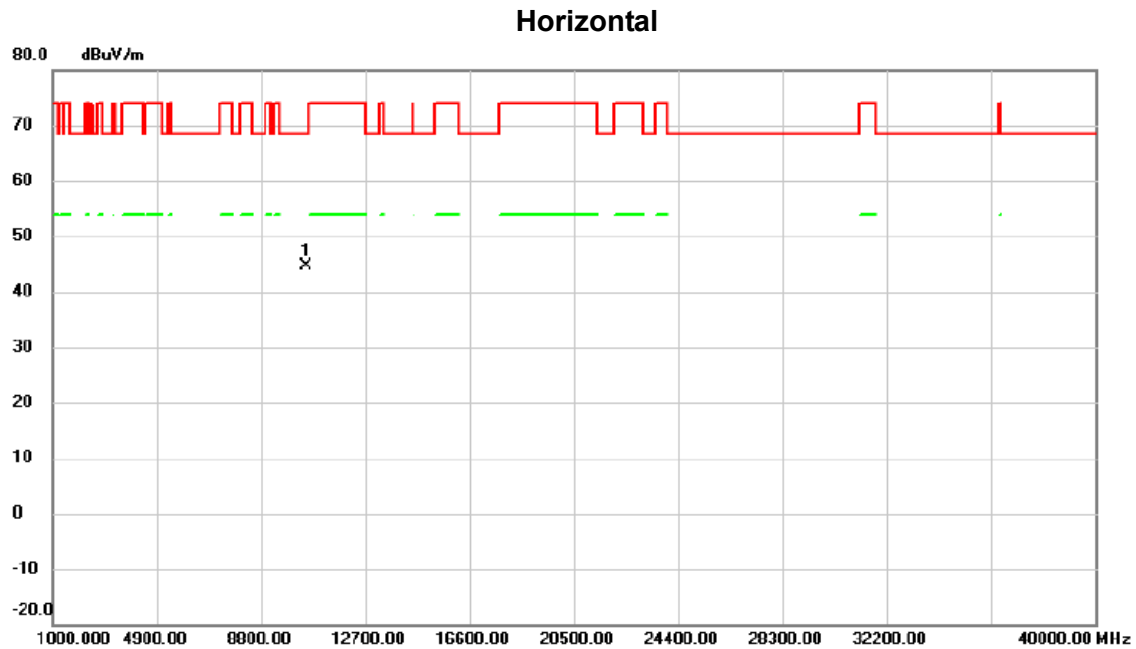


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	10476.375	33.06	11.50	44.56	68.30	-23.74	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz_Ant.1+Ant.2

Vertical

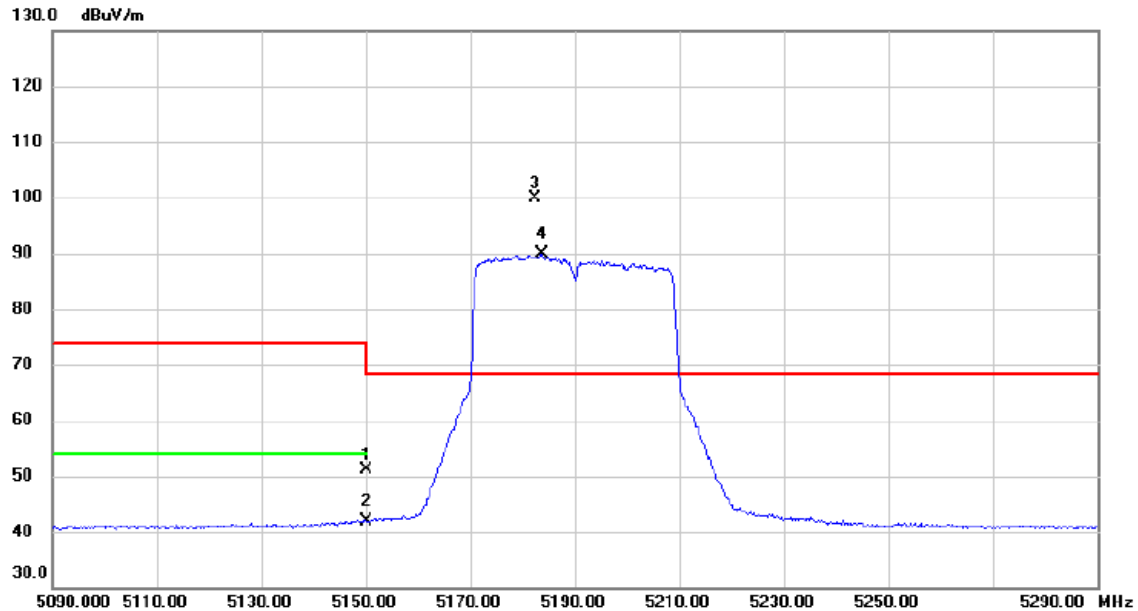


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	36.93	14.31	51.24	74.00	-22.76	peak	
2		5150.000	27.48	14.31	41.79	54.00	-12.21	AVG	
3	*	5182.400	85.54	14.39	99.93	68.30	31.63	peak	No Limit
4	X	5183.600	75.49	14.39	89.88	68.30	21.58	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz_Ant.1+Ant.2

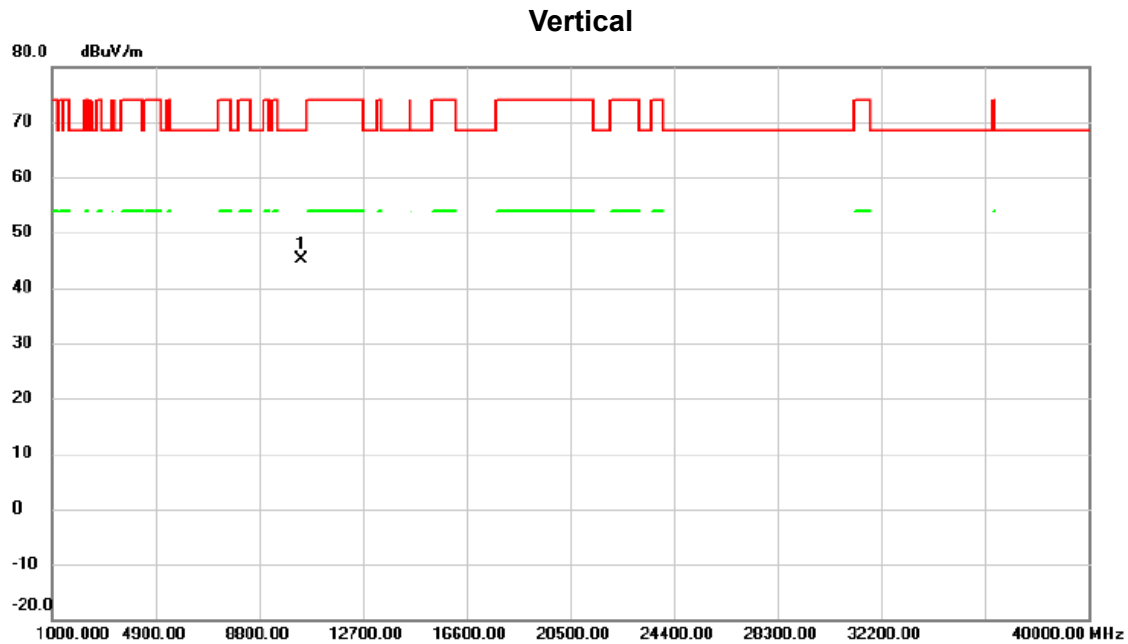


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10382.980	33.81	11.34	45.15	68.30	-23.15	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz_Ant.1+Ant.2

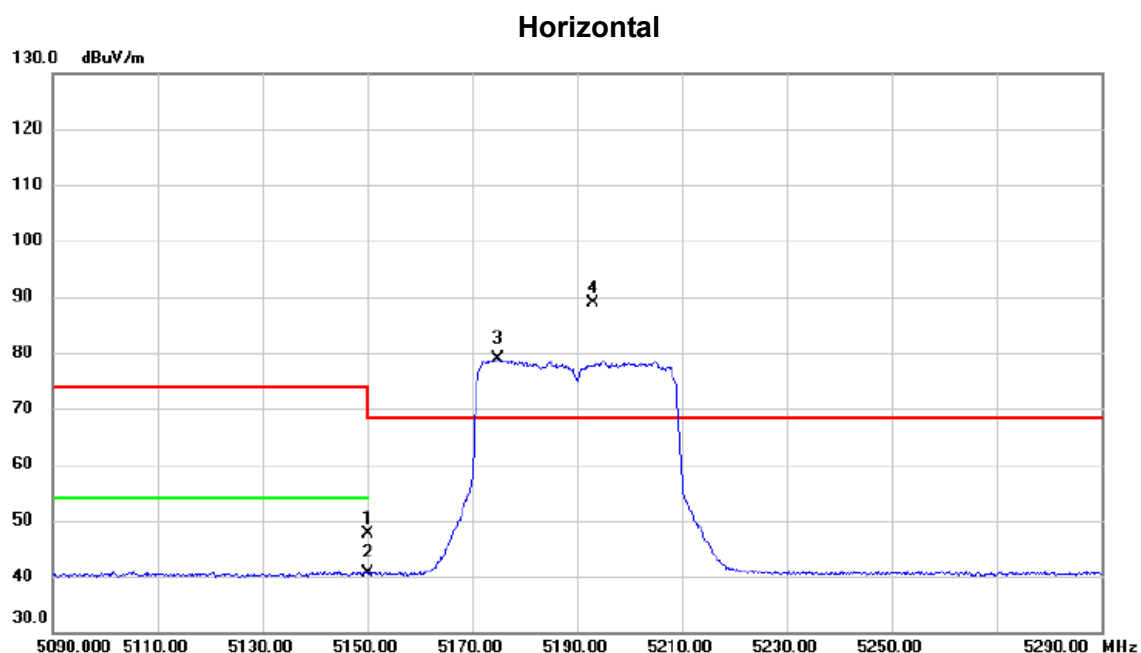


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	33.42	14.31	47.73	74.00	-26.27	peak	
2		5150.000	26.20	14.31	40.51	54.00	-13.49	AVG	
3	X	5174.900	64.51	14.37	78.88	68.30	10.58	AVG	No Limit
4	*	5193.000	74.41	14.42	88.83	68.30	20.53	peak	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5190 MHz_Ant.1+Ant.2

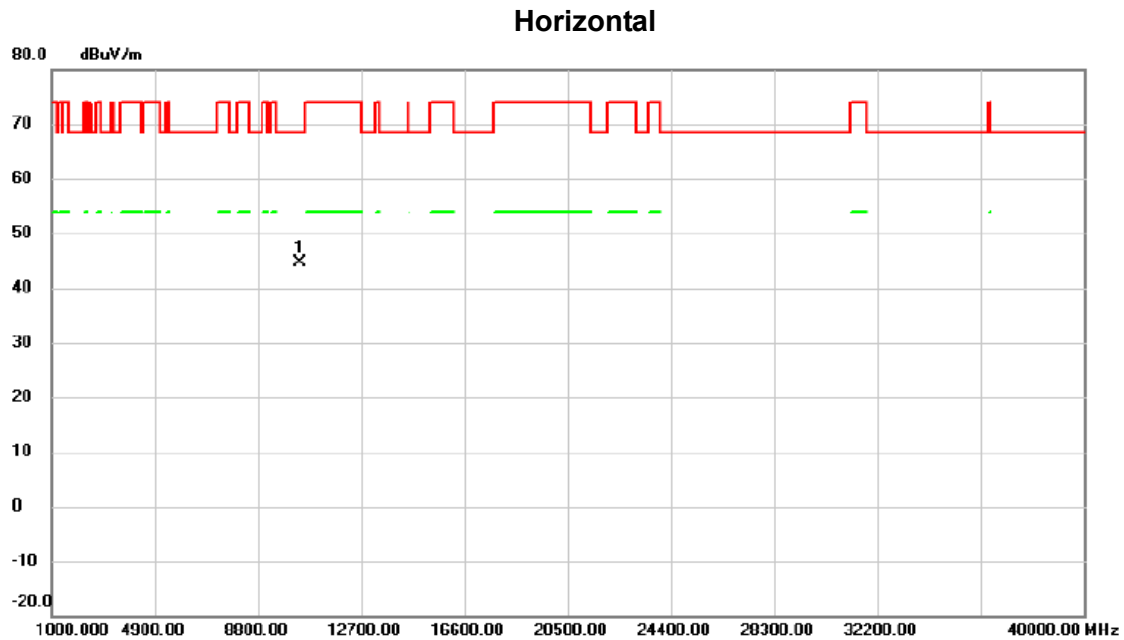


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10378.690	33.40	11.33	44.73	68.30	-23.57	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz_Ant.1+Ant.2

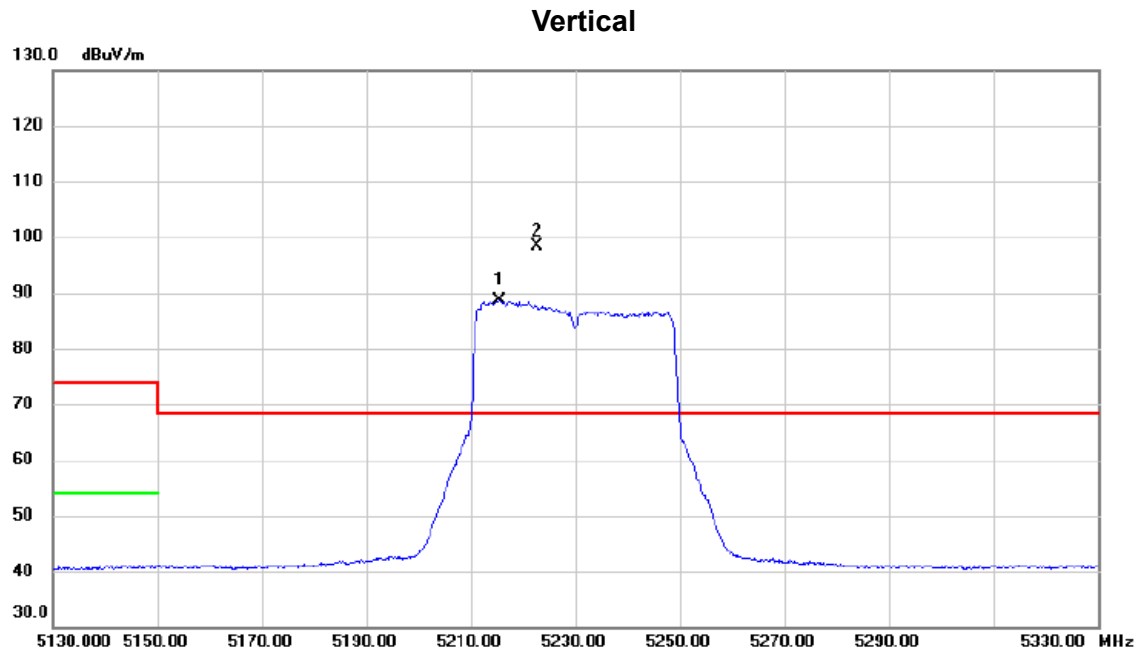


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5215.400	74.13	14.47	88.60	68.30	20.30	AVG	No Limit
2	*	5222.700	84.01	14.49	98.50	68.30	30.20	peak	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz_Ant.1+Ant.2

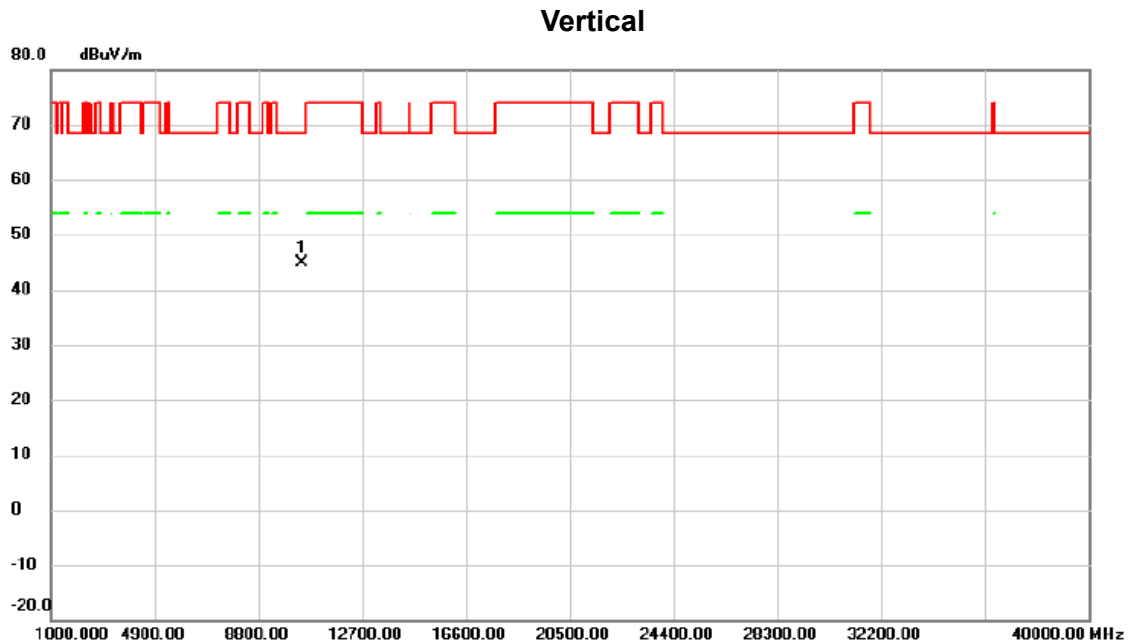


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10456.605	33.43	11.47	44.90	68.30	-23.40	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz_Ant.1+Ant.2

Horizontal

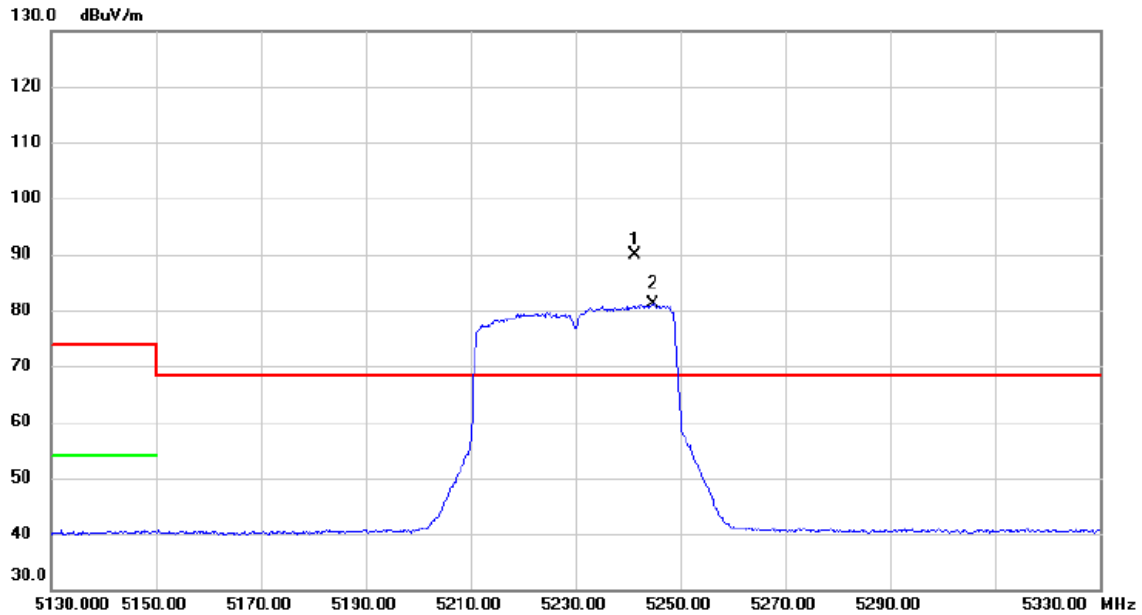


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5241.400	75.43	14.53	89.96	68.30	21.66	peak	No Limit
2	X	5244.900	66.55	14.54	81.09	68.30	12.79	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE40) Mode 5230 MHz_Ant.1+Ant.2

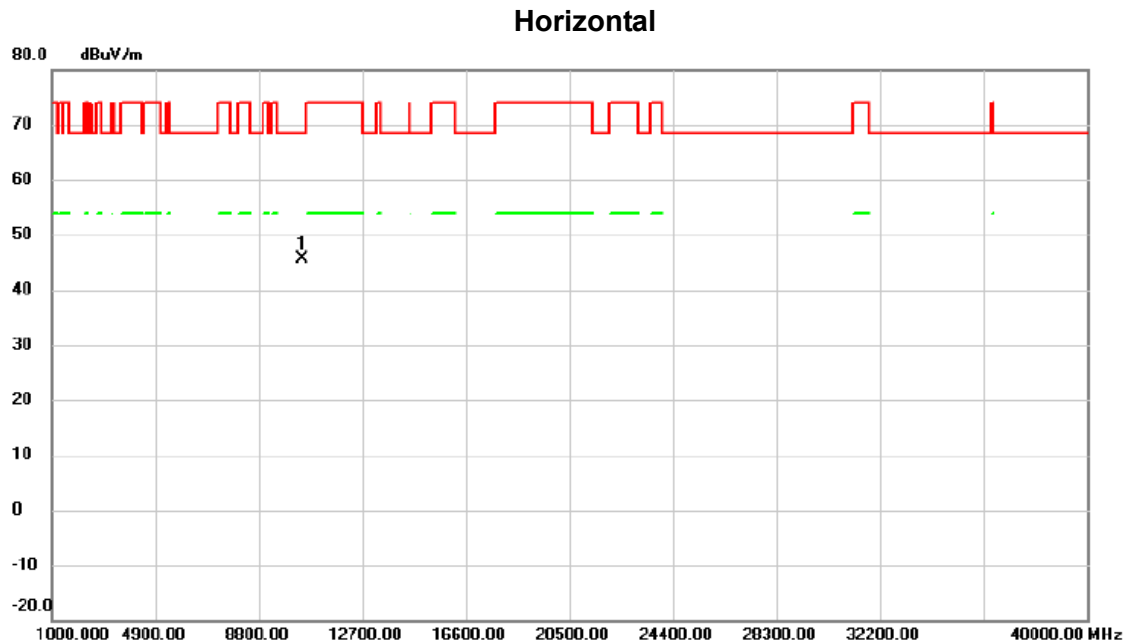


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10459.600	34.14	11.47	45.61	68.30	-22.69	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz_Ant.1+Ant.2

Vertical

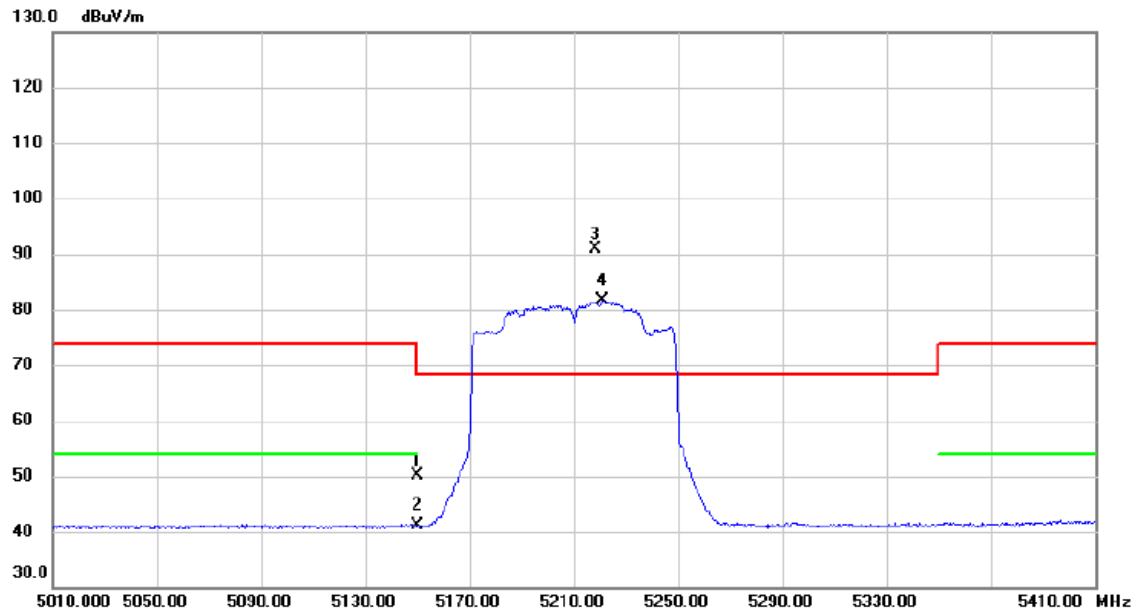


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	35.81	14.31	50.12	74.00	-23.88	peak	
2		5150.000	26.80	14.31	41.11	54.00	-12.89	AVG	
3	*	5218.400	76.29	14.48	90.77	68.30	22.47	peak	No Limit
4	X	5221.200	67.14	14.49	81.63	68.30	13.33	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz_Ant.1+Ant.2

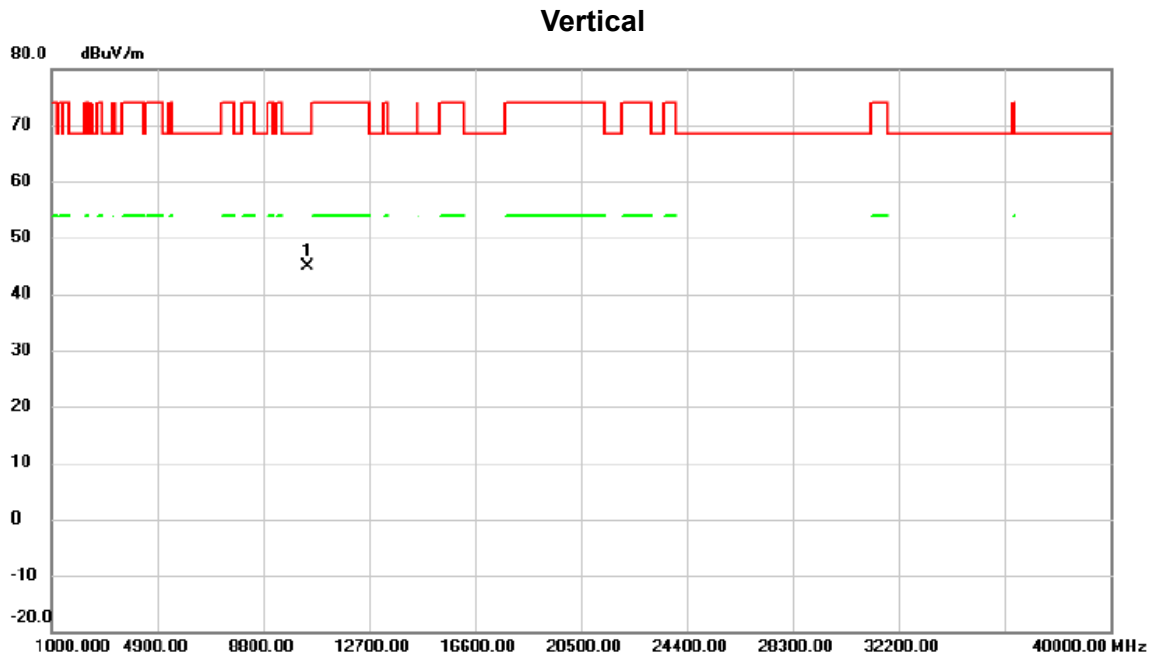


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10424.830	33.53	11.40	44.93	68.30	-23.37	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz_Ant.1+Ant.2

Horizontal

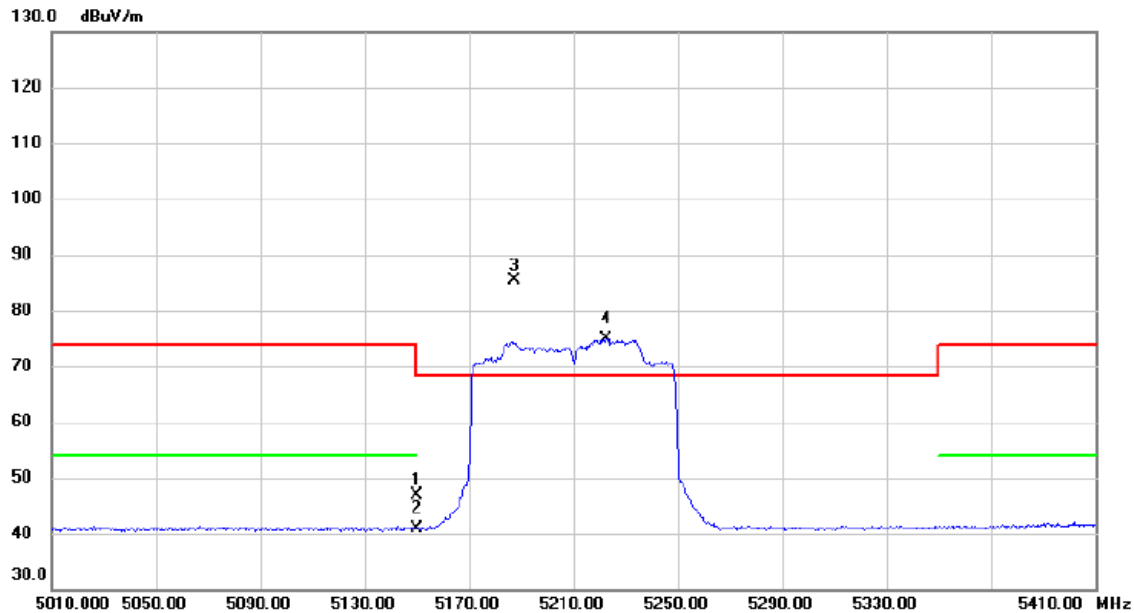


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	32.54	14.31	46.85	74.00	-27.15	peak	
2		5150.000	26.53	14.31	40.84	54.00	-13.16	AVG	
3	*	5187.400	70.98	14.41	85.39	68.30	17.09	peak	No Limit
4	X	5222.600	60.42	14.49	74.91	68.30	6.61	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE80) Mode 5210 MHz_Ant.1+Ant.2

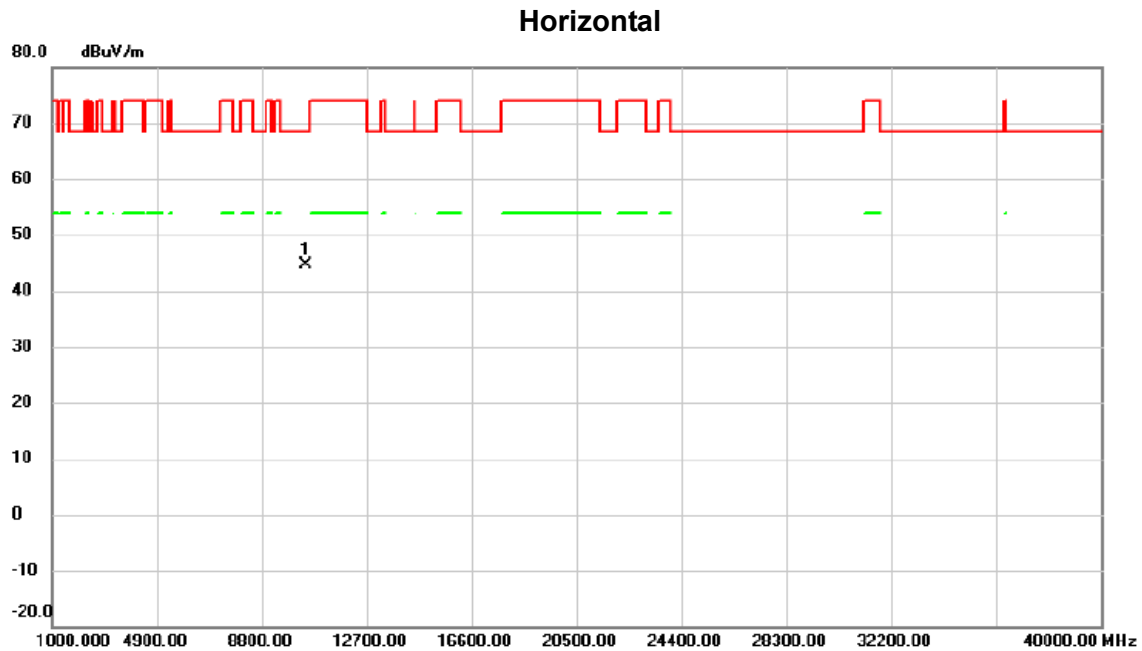


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10419.935	33.32	11.40	44.72	68.30	-23.58	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE160) Mode 5250 MHz_Ant.1+Ant.2

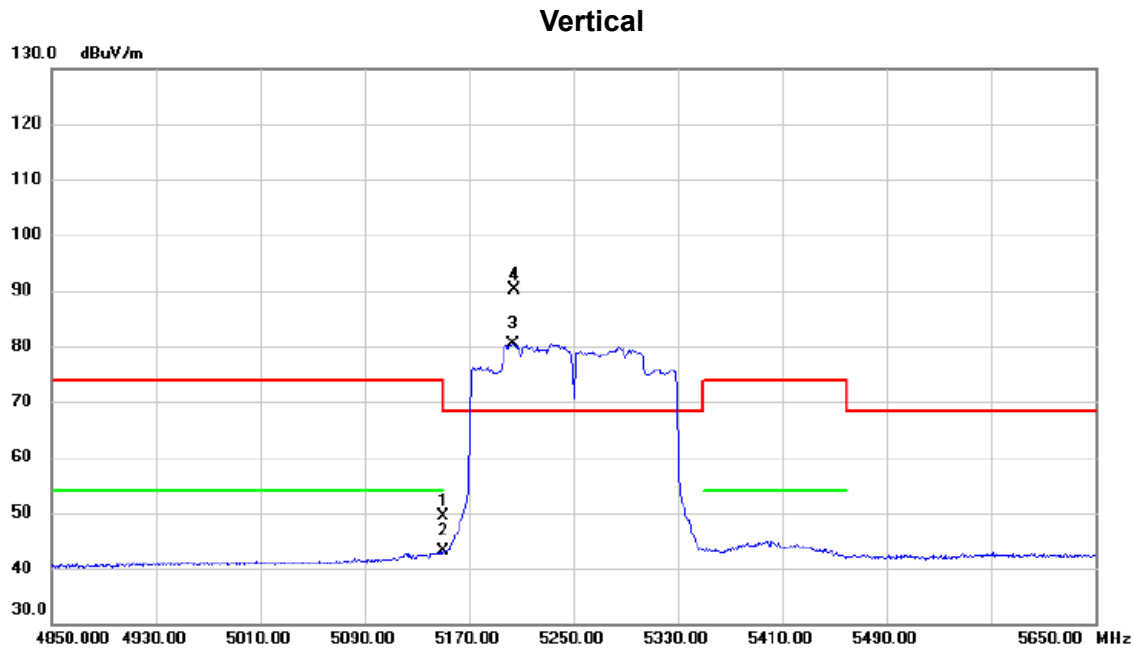


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	35.00	14.31	49.31	74.00	-24.69	peak	
2		5150.000	28.71	14.31	43.02	54.00	-10.98	AVG	
3	X	5204.000	65.97	14.45	80.42	68.30	12.12	AVG	No Limit
4	*	5205.200	75.58	14.45	90.03	68.30	21.73	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE160) Mode 5250 MHz_Ant.1+Ant.2

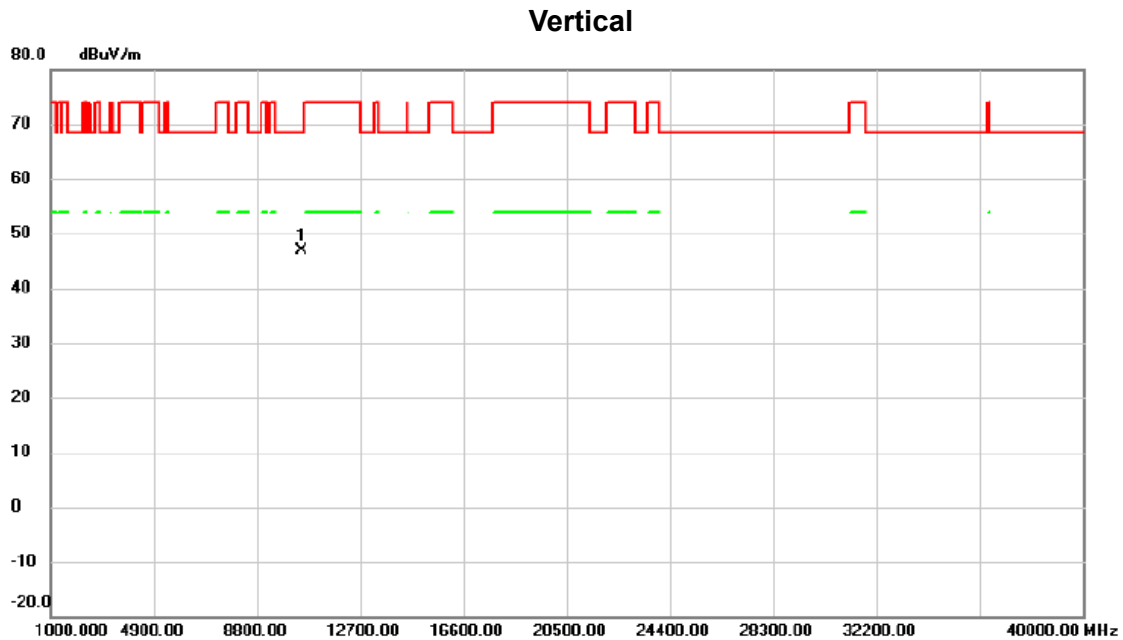


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10500.650	33.76	13.18	46.94	68.30	-21.36	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE160) Mode 5250 MHz_Ant.1+Ant.2

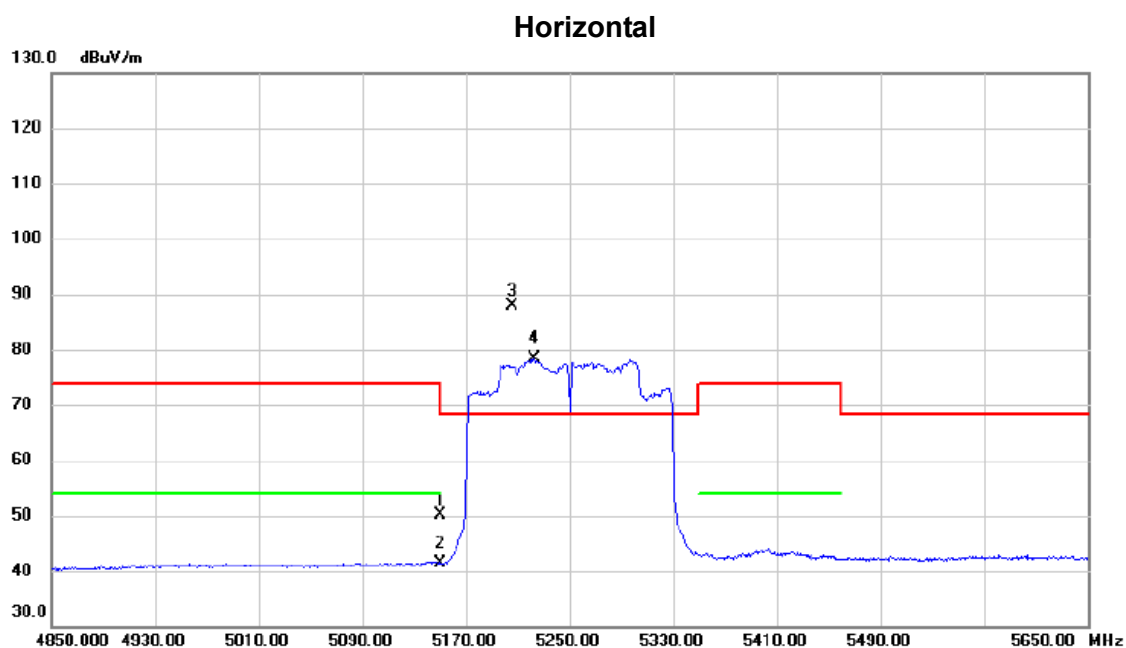


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		5150.000	35.79	14.31	50.10	74.00	-23.90	peak	
2		5150.000	27.16	14.31	41.47	54.00	-12.53	AVG	
3	*	5205.600	73.52	14.45	87.97	68.30	19.67	peak	No Limit
4	X	5223.200	63.80	14.49	78.29	68.30	9.99	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-1_TX AX (HE160) Mode 5250 MHz_Ant.1+Ant.2

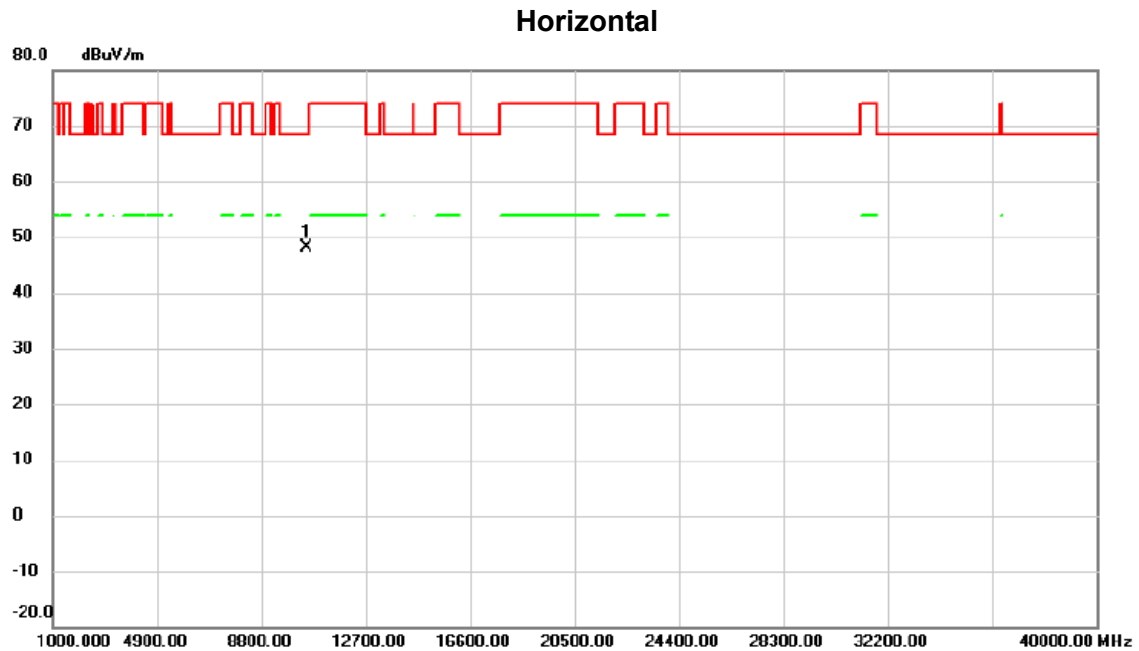


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	10501.410	34.99	13.18	48.17	68.30	-20.13	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5260 MHz_Ant.1+Ant.2

Vertical

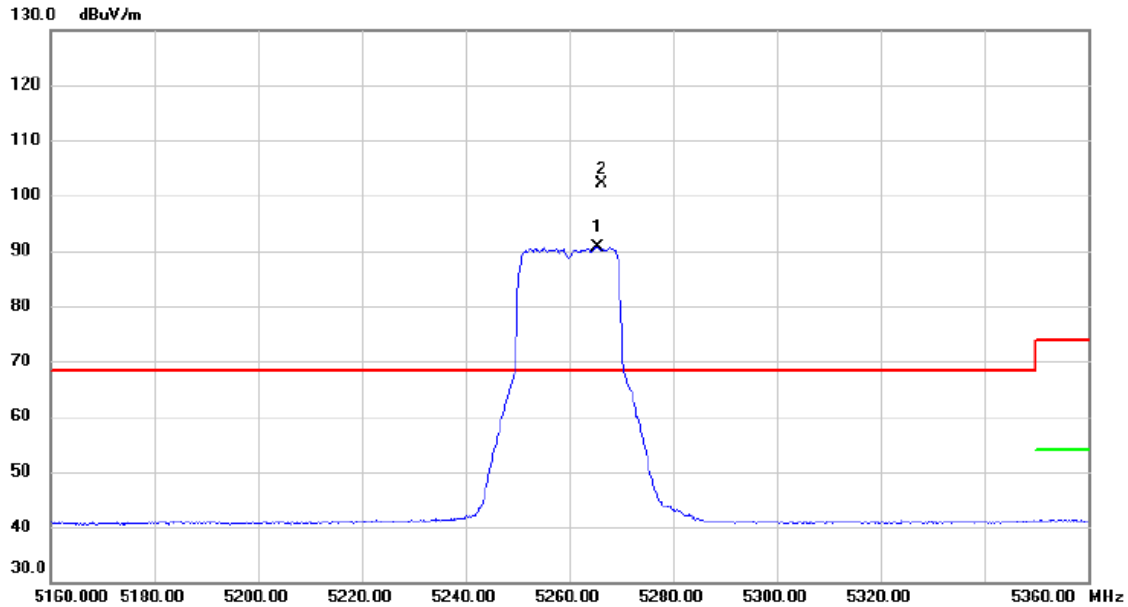


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5265.400	76.06	14.59	90.65	68.30	22.35	AVG	No Limit
2	*	5266.400	87.56	14.60	102.16	68.30	33.86	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5260 MHz_Ant.1+Ant.2

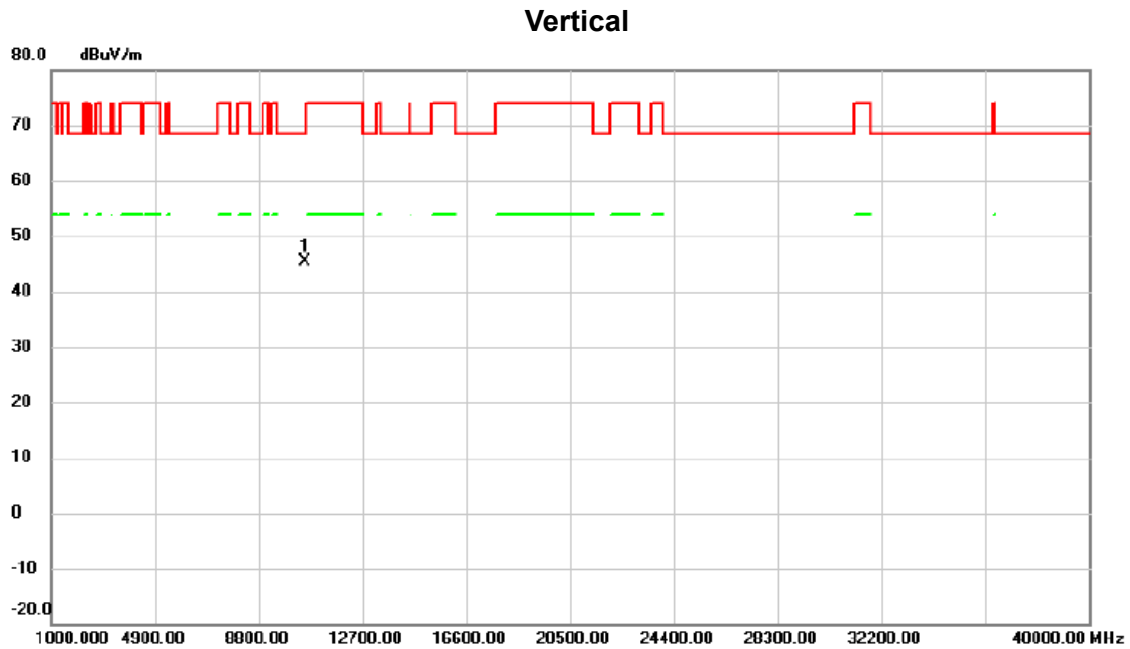


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10520.770	33.91	11.54	45.45	68.30	-22.85	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5260 MHz_Ant.1+Ant.2

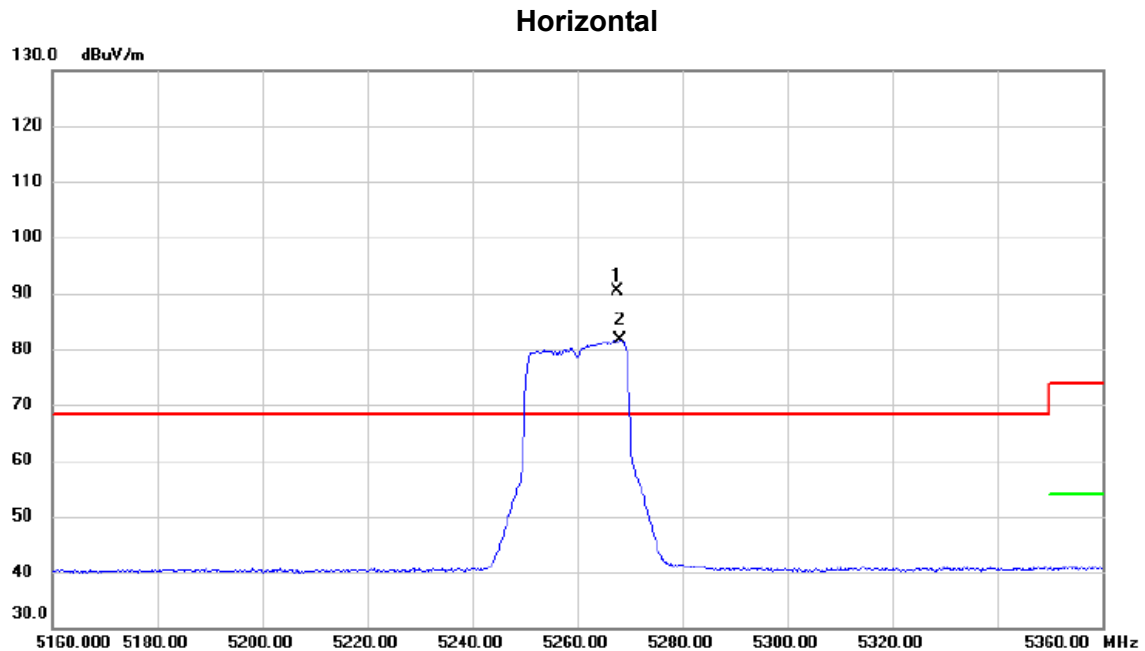


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5267.500	75.87	14.60	90.47	68.30	22.17	peak	No Limit
2	X	5268.000	67.05	14.60	81.65	68.30	13.35	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5260 MHz_Ant.1+Ant.2

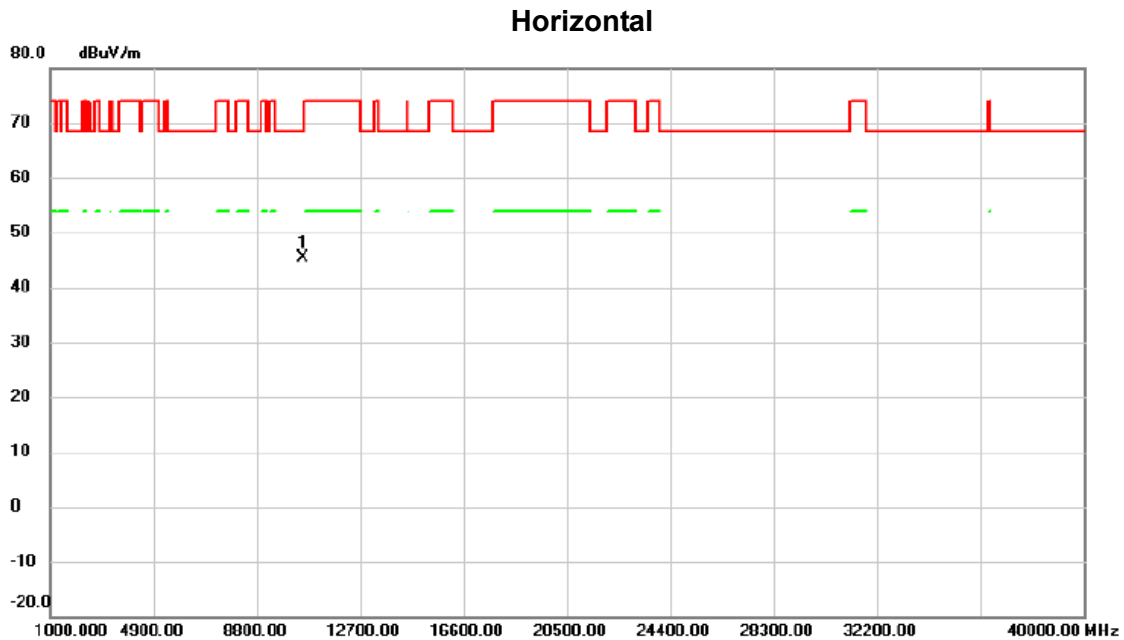


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10516.455	33.77	11.54	45.31	68.30	-22.99	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5300 MHz_Ant.1+Ant.2

Vertical

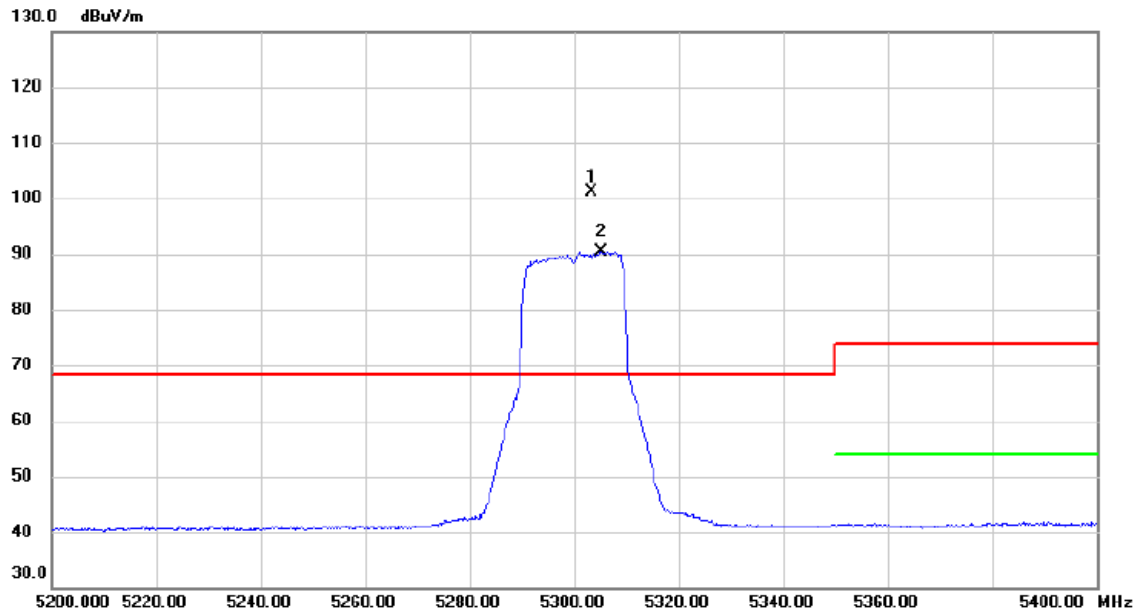


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5303.300	86.49	14.68	101.17	68.30	32.87	peak	No Limit
2	X	5305.300	75.80	14.68	90.48	68.30	22.18	AVG	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5300 MHz_Ant.1+Ant.2

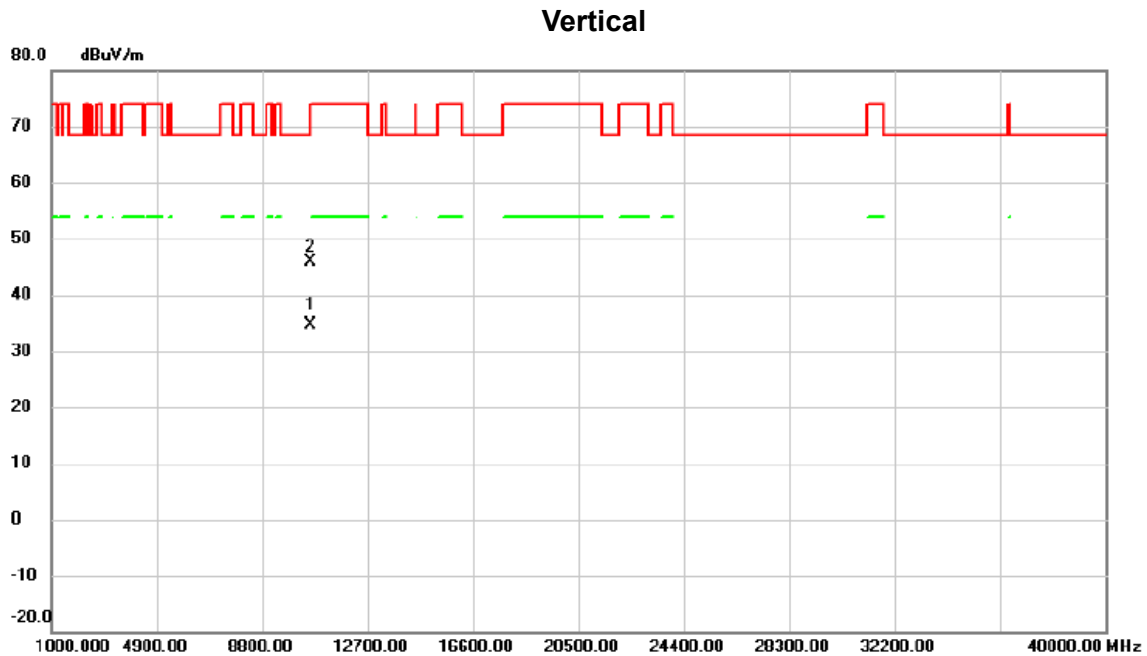


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10600.320	23.14	11.55	34.69	54.00	-19.31	AVG	
2		10600.325	34.36	11.55	45.91	74.00	-28.09	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5300 MHz_Ant.1+Ant.2

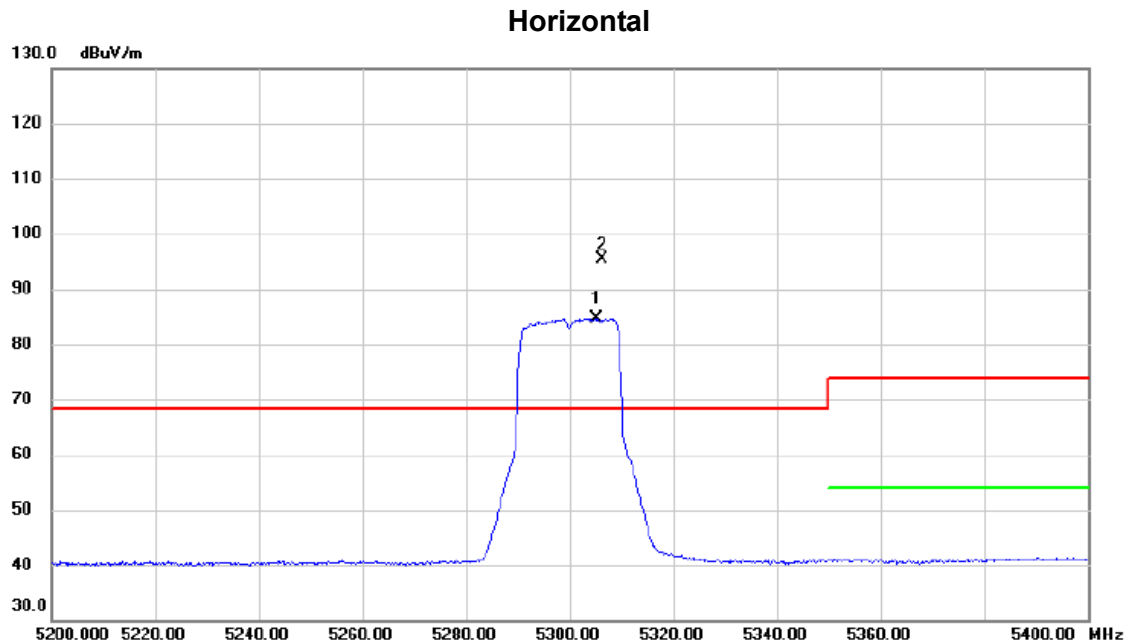


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5305.300	69.99	14.68	84.67	68.30	16.37	AVG	No Limit
2	*	5306.200	80.69	14.68	95.37	68.30	27.07	peak	No Limit

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5300 MHz_Ant.1+Ant.2

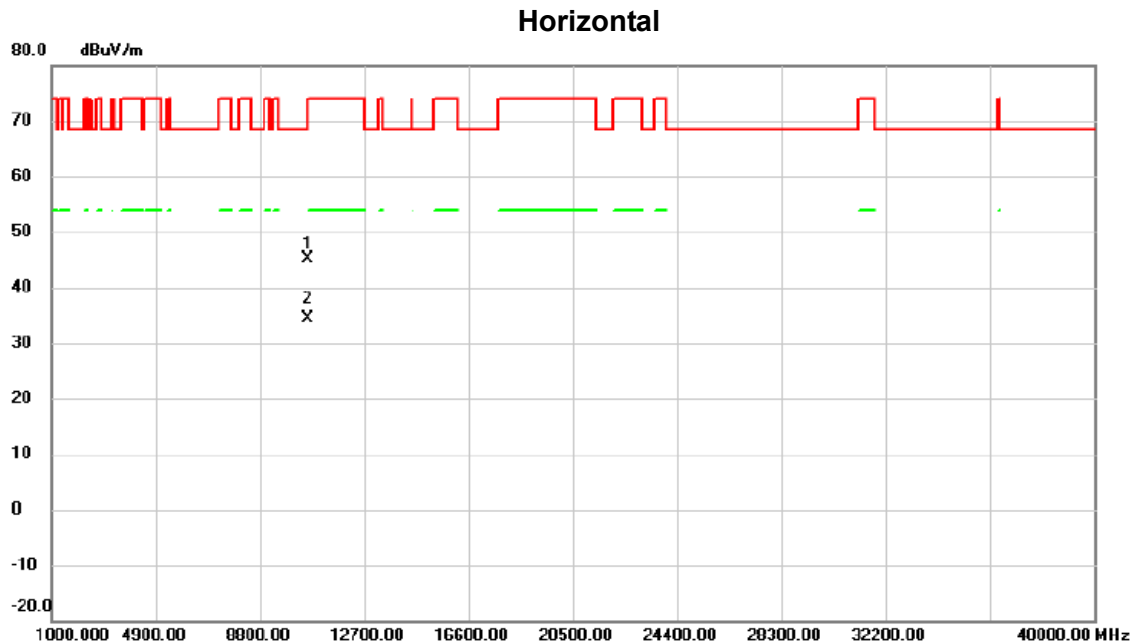


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		10601.875	33.56	11.55	45.11	74.00	-28.89	peak	
2	*	10603.470	22.82	11.55	34.37	54.00	-19.63	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5320 MHz_Ant.1+Ant.2

Vertical

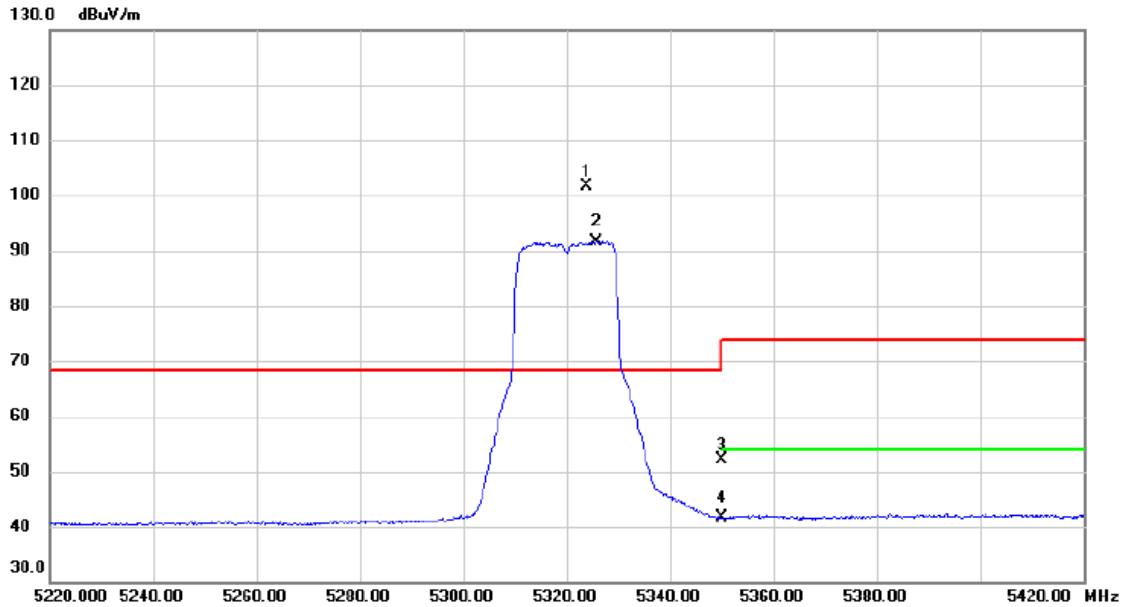


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5323.900	86.86	14.72	101.58	68.30	33.28	peak	No Limit
2	X	5325.700	76.88	14.73	91.61	68.30	23.31	AVG	No Limit
3		5350.000	37.45	14.79	52.24	74.00	-21.76	peak	
4		5350.000	26.73	14.79	41.52	54.00	-12.48	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5320 MHz_Ant.1+Ant.2

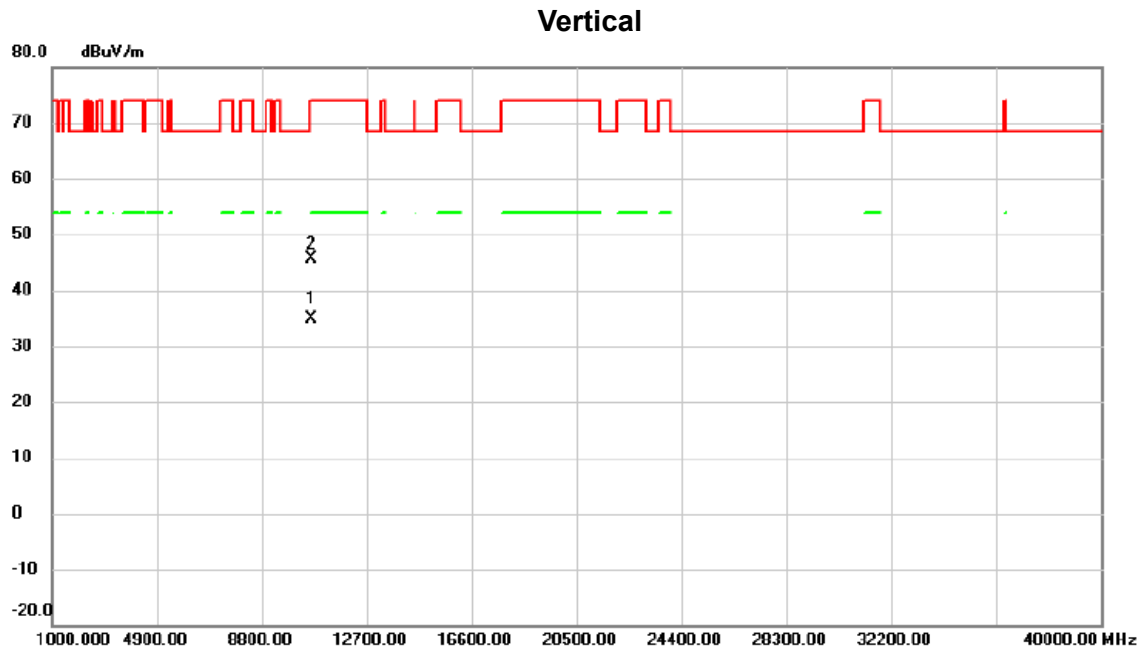


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	10636.935	23.29	11.56	34.85	54.00	-19.15	AVG	
2		10640.095	33.98	11.56	45.54	74.00	-28.46	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5320 MHz_Ant.1+Ant.2

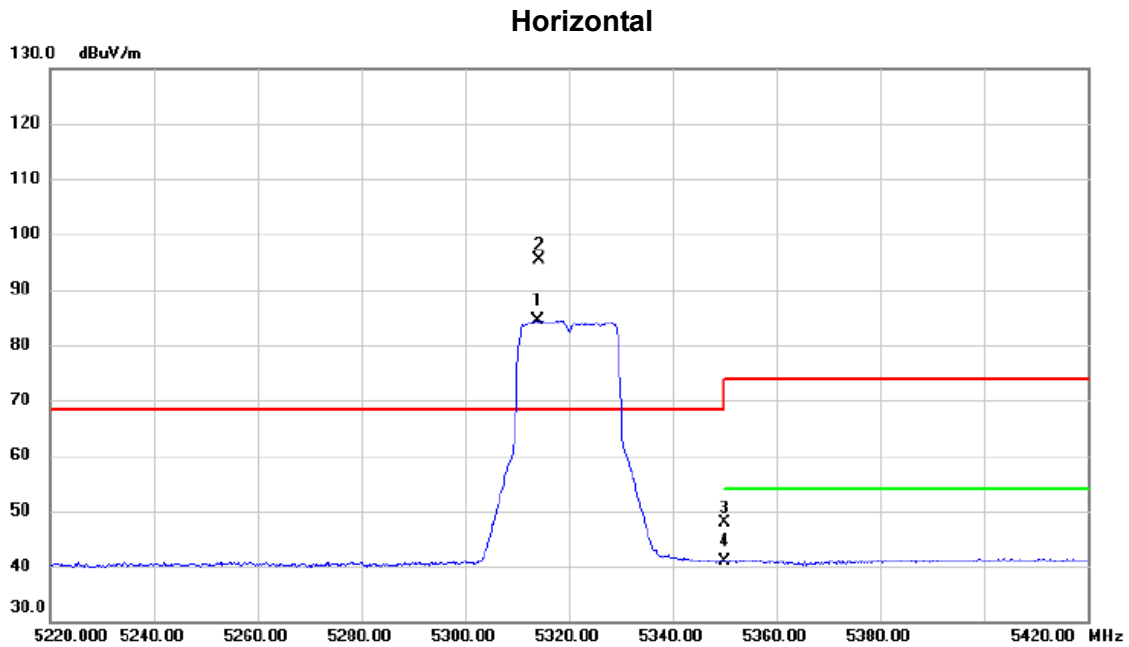


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	5313.900	69.80	14.70	84.50	68.30	16.20	AVG	No Limit
2	*	5314.400	80.65	14.70	95.35	68.30	27.05	peak	No Limit
3		5350.000	33.02	14.79	47.81	74.00	-26.19	peak	
4		5350.000	26.08	14.79	40.87	54.00	-13.13	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE20) Mode 5320 MHz_Ant.1+Ant.2

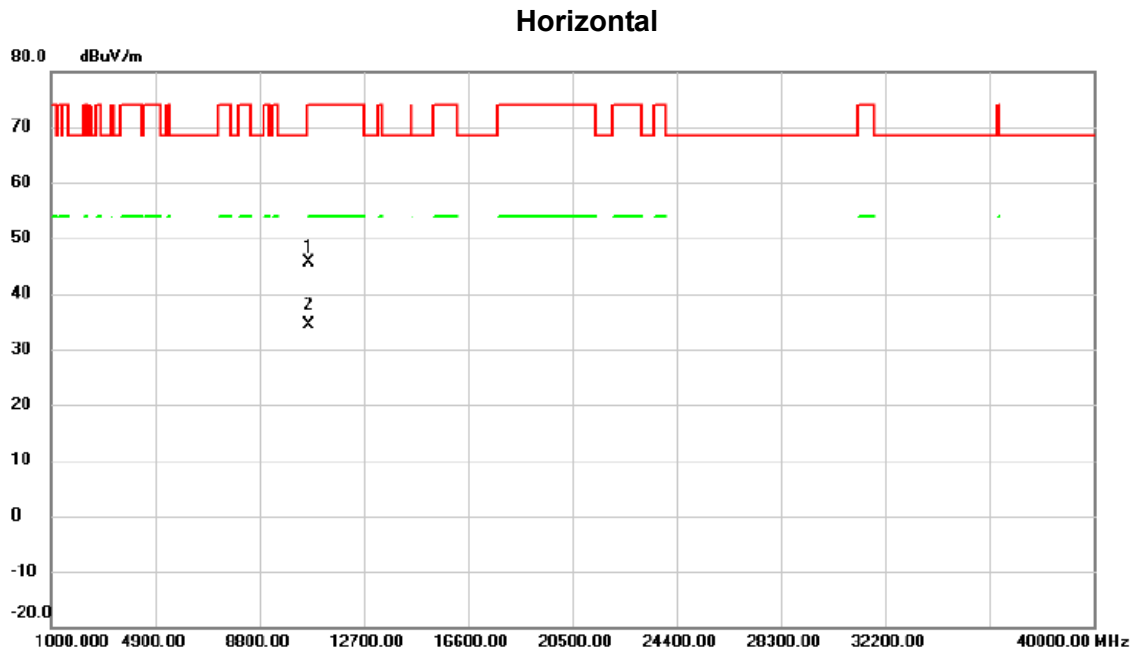


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		10636.635	34.05	11.56	45.61	74.00	-28.39	peak	
2	*	10644.325	22.94	11.56	34.50	54.00	-19.50	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5270 MHz_Ant.1+Ant.2

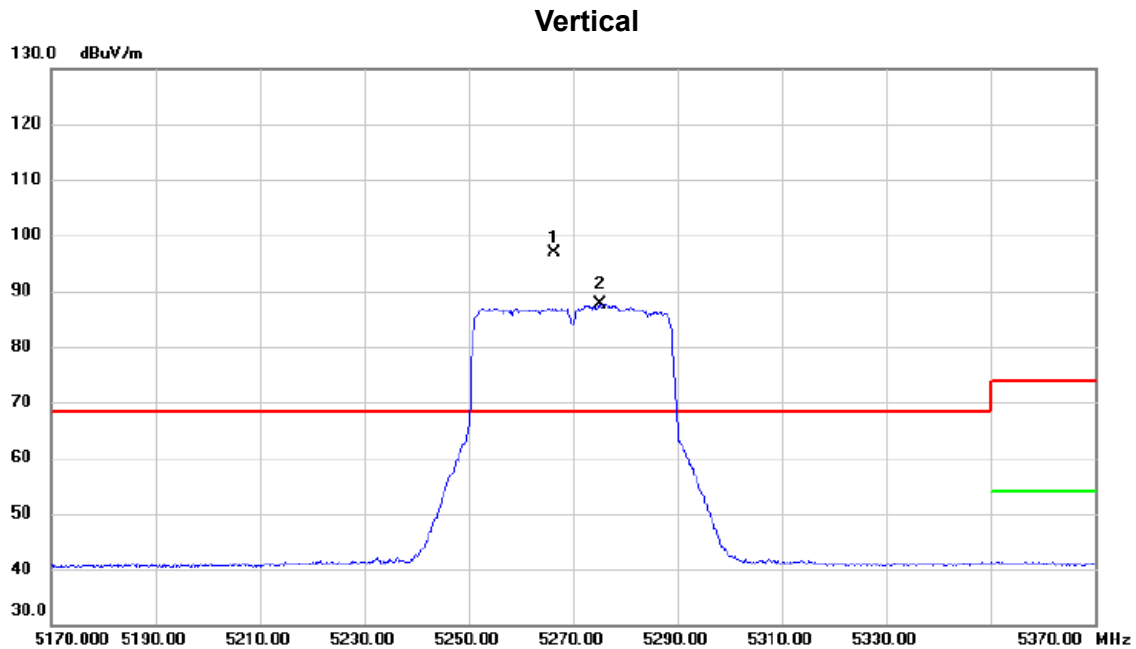


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5266.300	82.34	14.60	96.94	68.30	28.64	peak	No Limit
2	X	5275.200	73.01	14.62	87.63	68.30	19.33	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5270 MHz_Ant.1+Ant.2

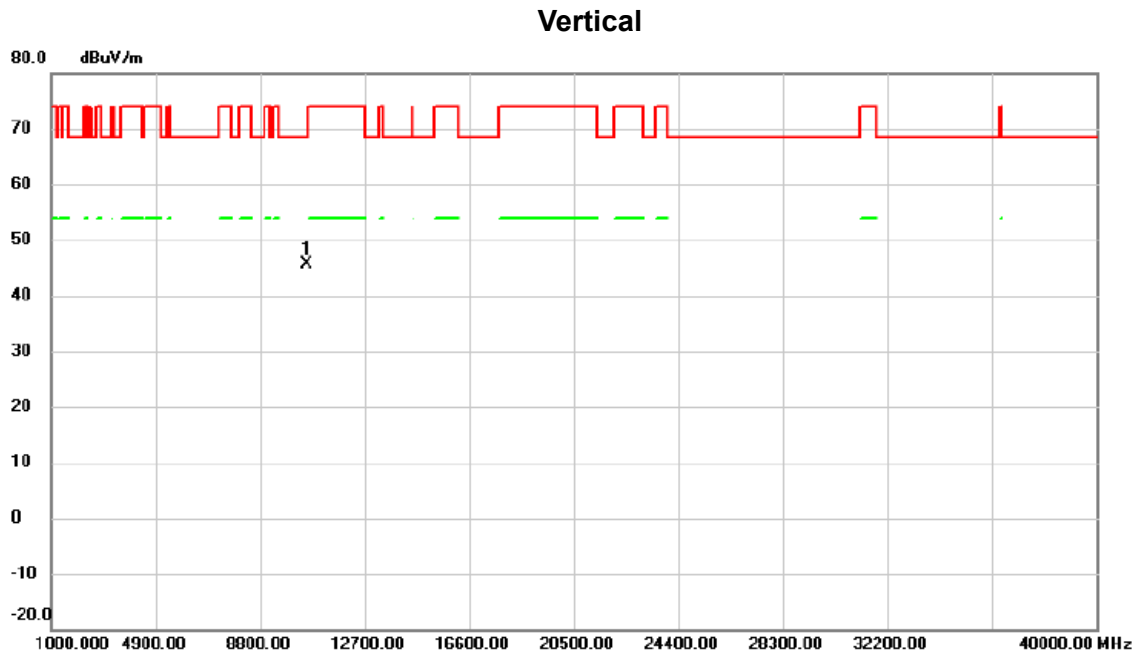


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10536.985	34.17	11.54	45.71	68.30	-22.59	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5270 MHz_Ant.1+Ant.2

Horizontal

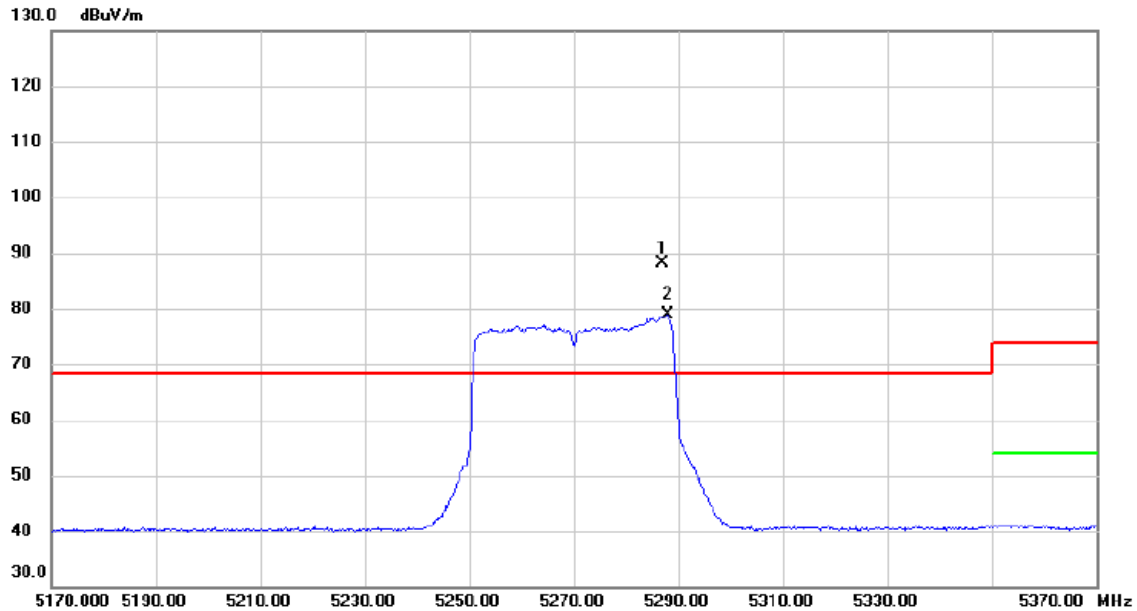


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5286.900	73.40	14.65	88.05	68.30	19.75	peak	No Limit
2	X	5288.000	64.26	14.65	78.91	68.30	10.61	AVG	No Limit

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5270 MHz_Ant.1+Ant.2

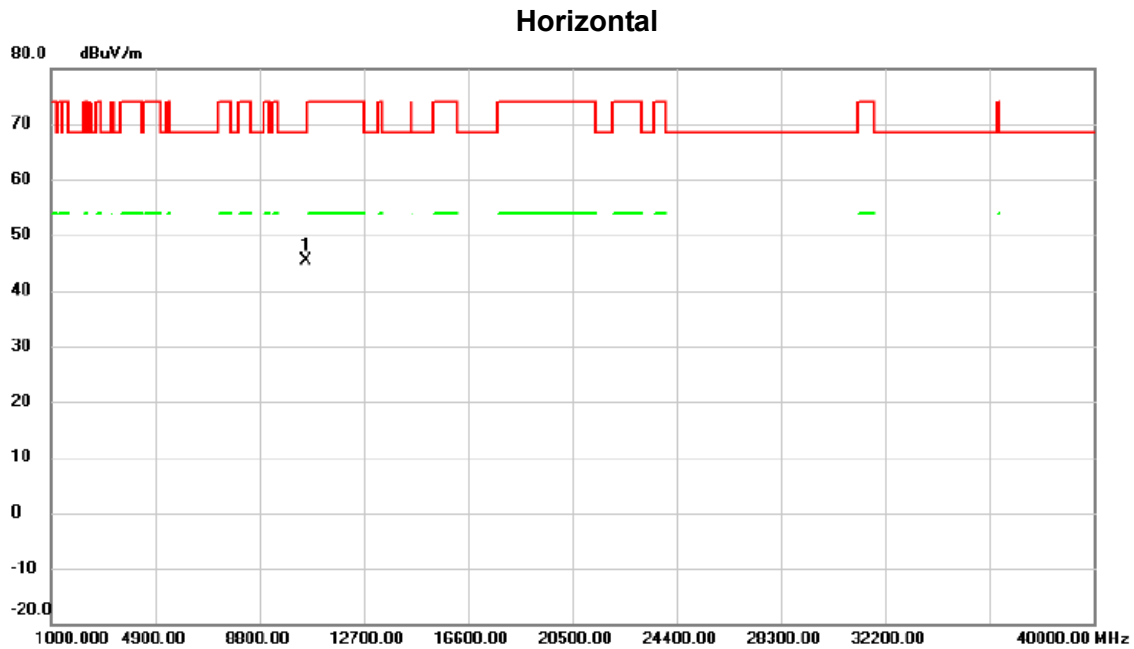


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	10536.810	33.74	11.54	45.28	68.30	-23.02	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5310 MHz_Ant.1+Ant.2

Vertical

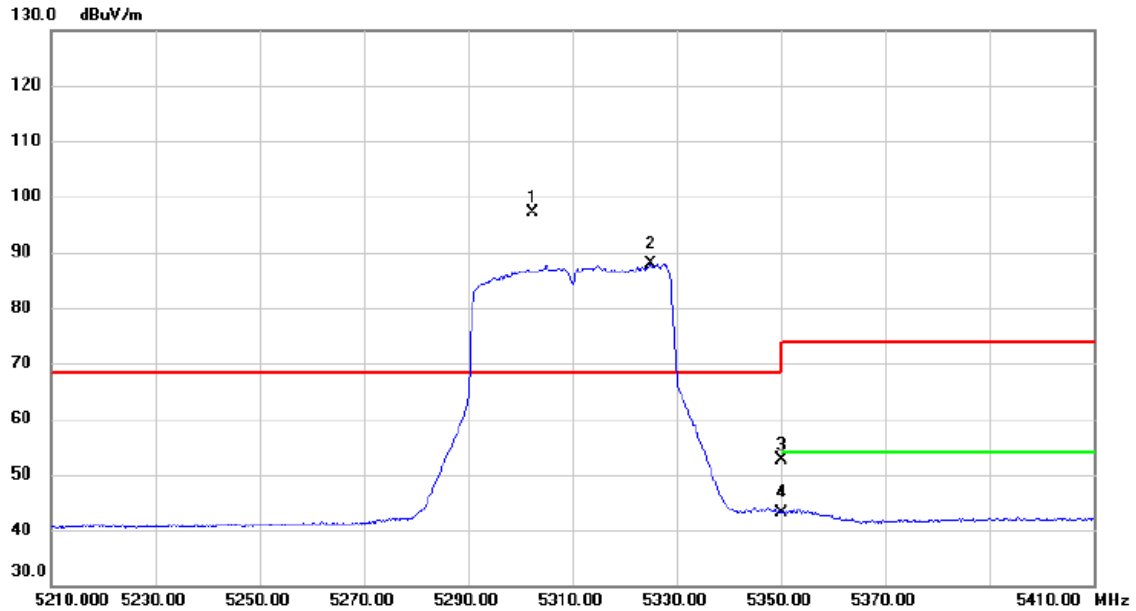


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5302.400	82.49	14.67	97.16	68.30	28.86	peak	No Limit
2	X	5325.000	73.23	14.72	87.95	68.30	19.65	AVG	No Limit
3		5350.000	37.73	14.79	52.52	74.00	-21.48	peak	
4		5350.000	28.40	14.79	43.19	54.00	-10.81	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5310 MHz_Ant.1+Ant.2

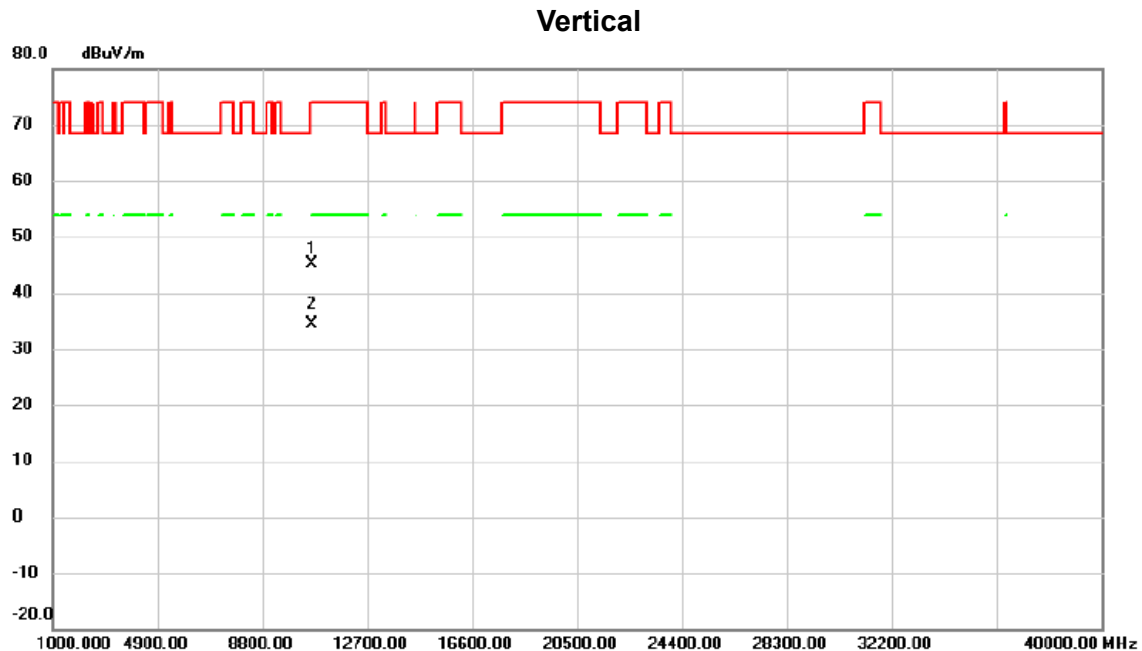


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		10621.920	33.50	11.56	45.06	74.00	-28.94	peak	
2	*	10623.440	22.78	11.56	34.34	54.00	-19.66	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5310 MHz_Ant.1+Ant.2

Horizontal

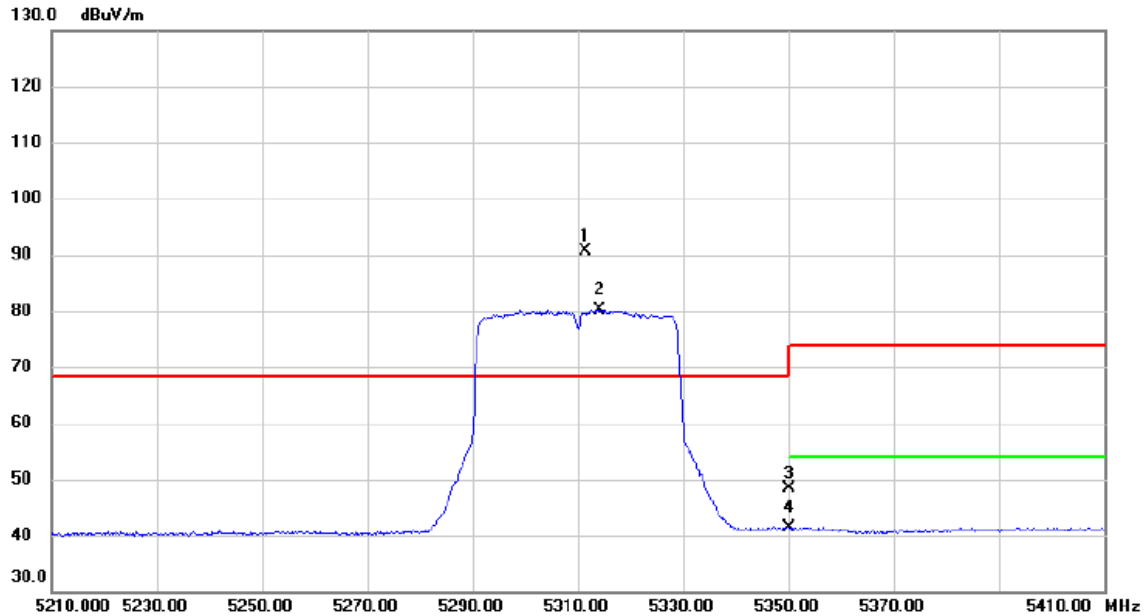


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5311.500	75.97	14.69	90.66	68.30	22.36	peak	No Limit
2	X	5314.000	65.47	14.70	80.17	68.30	11.87	AVG	No Limit
3		5350.000	33.48	14.79	48.27	74.00	-25.73	peak	
4		5350.000	26.54	14.79	41.33	54.00	-12.67	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE40) Mode 5310 MHz_Ant.1+Ant.2

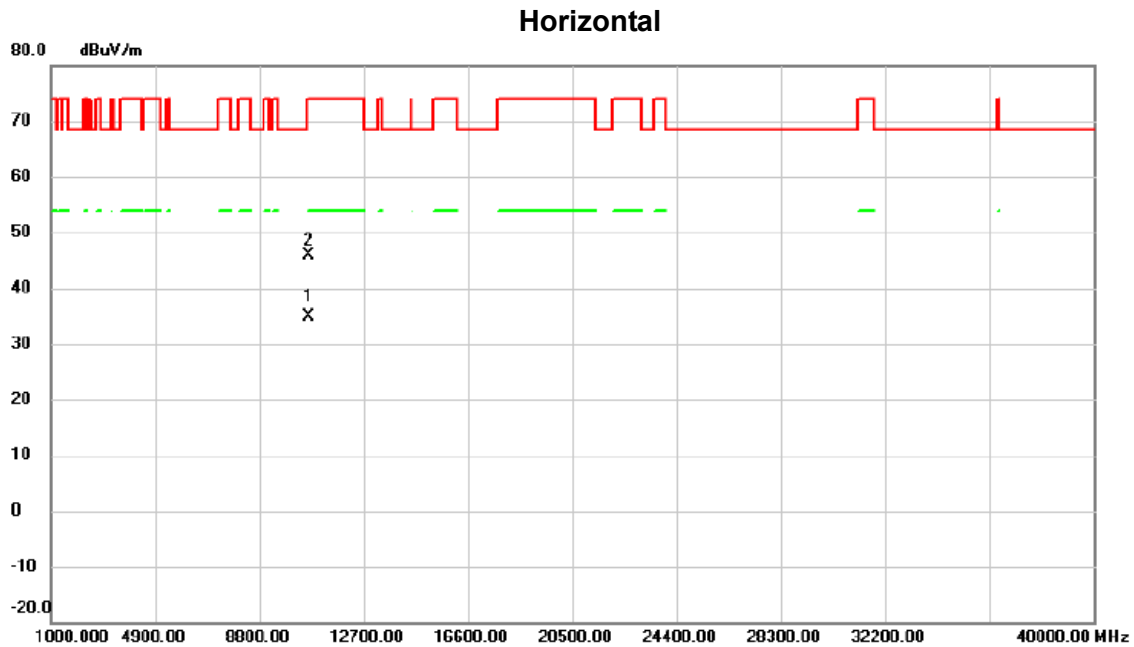


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	10620.680	23.26	11.56	34.82	54.00	-19.18	AVG	
2		10623.630	34.35	11.56	45.91	74.00	-28.09	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE80) Mode 5290 MHz_Ant.1+Ant.2

Vertical

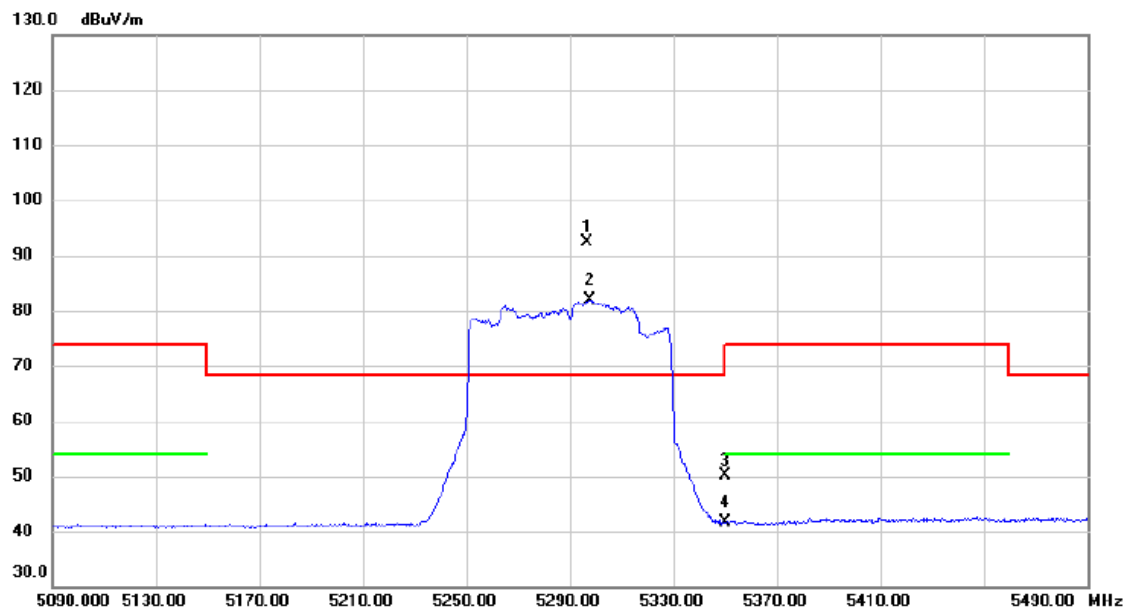


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5296.800	77.65	14.66	92.31	68.30	24.01	peak	No Limit
2	X	5297.600	67.32	14.67	81.99	68.30	13.69	AVG	No Limit
3		5350.000	35.32	14.79	50.11	74.00	-23.89	peak	
4		5350.000	26.95	14.79	41.74	54.00	-12.26	AVG	

REMARKS:

(1) Measurement Value = Reading Level + Correct Factor.

(2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE80) Mode 5290 MHz_Ant.1+Ant.2

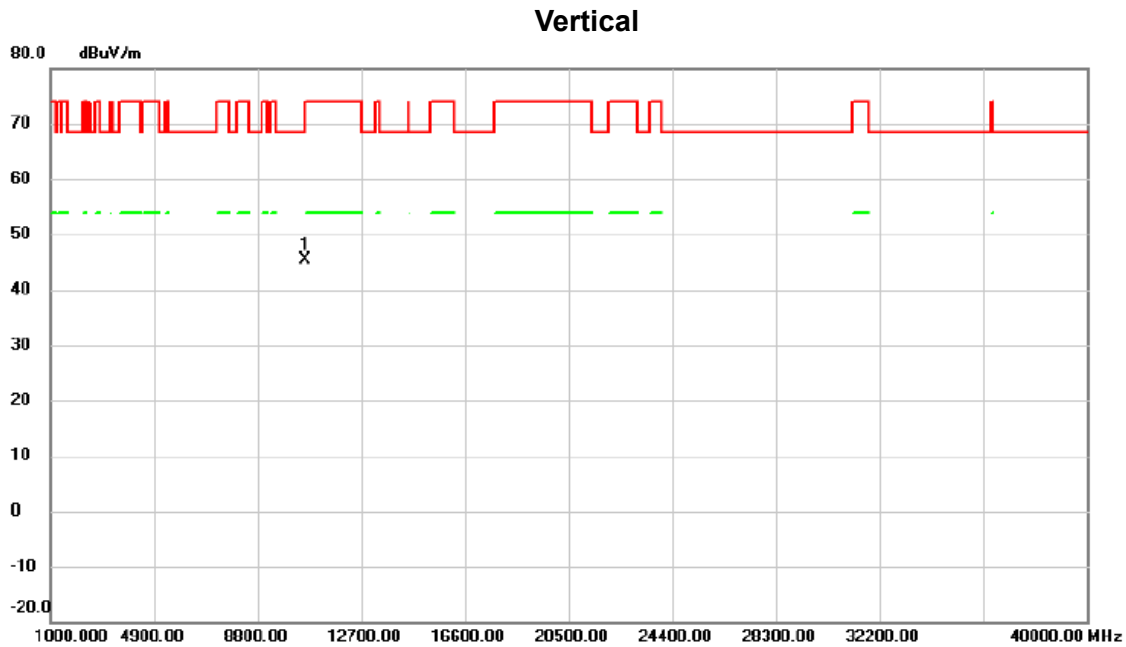


No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	10576.775	33.74	11.55	45.29	68.30	-23.01	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
- (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE80) Mode 5290 MHz_Ant.1+Ant.2

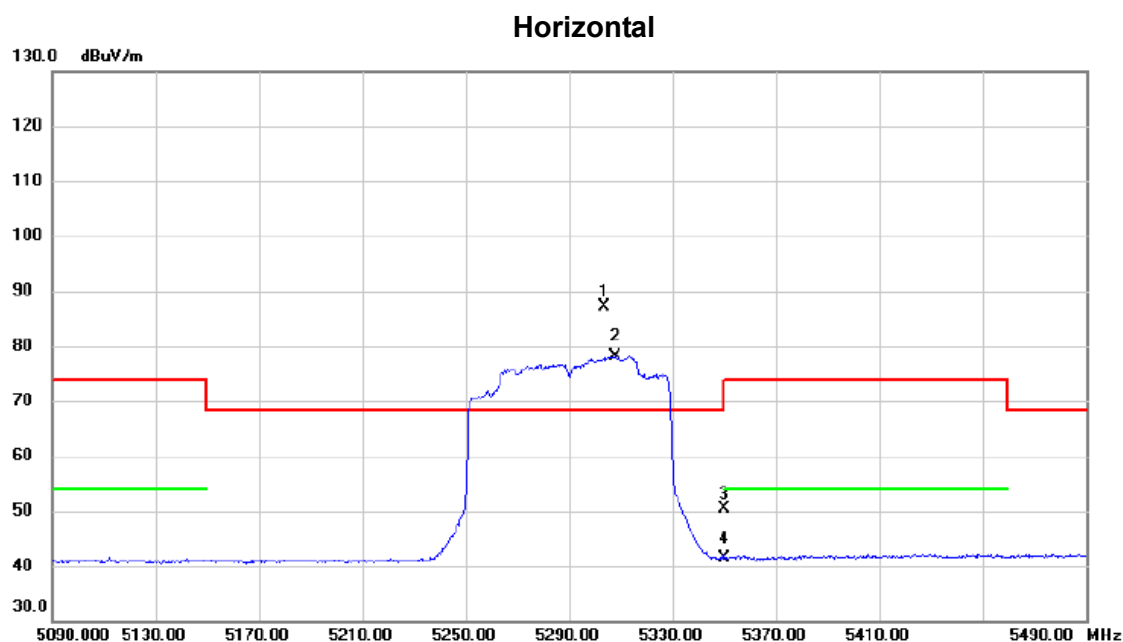


No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	5303.600	72.44	14.68	87.12	68.30	18.82	peak	No Limit
2	X	5307.600	63.41	14.68	78.09	68.30	9.79	AVG	No Limit
3		5350.000	35.55	14.79	50.34	74.00	-23.66	peak	
4		5350.000	26.59	14.79	41.38	54.00	-12.62	AVG	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

Orthogonal Axis	X
Test Mode	UNII-2A_TX AX (HE80) Mode 5290 MHz_Ant.1+Ant.2

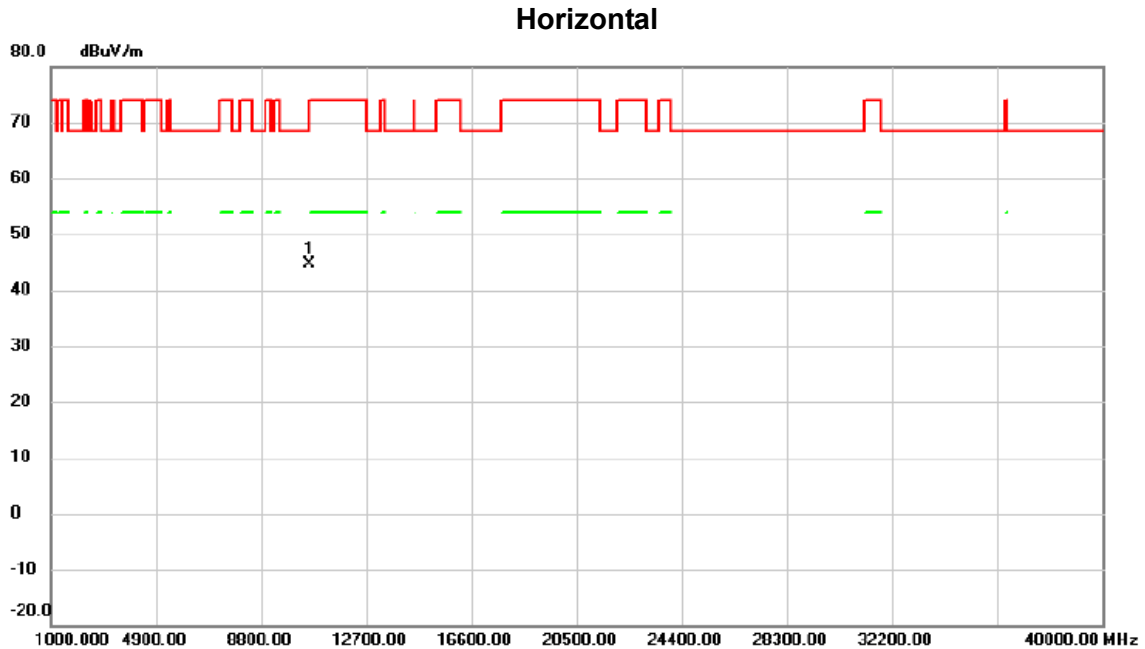

No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	10580.965	33.18	11.55	44.73	68.30	-23.57	peak	

REMARKS:

- (1) Measurement Value = Reading Level + Correct Factor.
 (2) Margin Level = Measurement Value - Limit Value.

End of Test Report