


SISO B

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5180MHz
Test by :nova

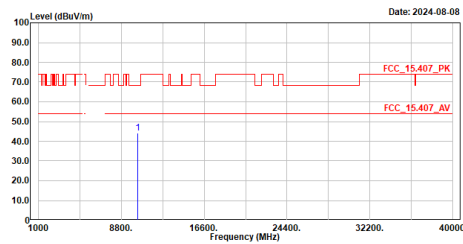


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	44.12	68.22	-24.10	41.34	2.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5180MHz
Test by :nova

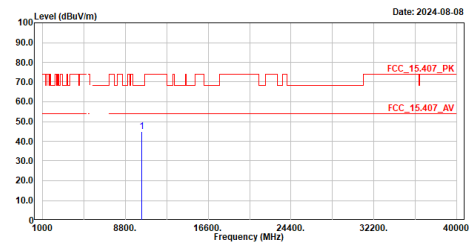


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	45.00	68.22	-23.22	42.22	2.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5200MHz
Test by :nova

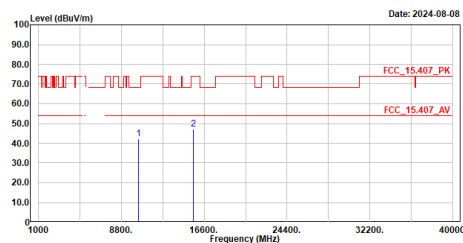


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10400.000	42.12	68.22	-26.10	39.41	2.71	Peak
2	15600.000	47.04	74.00	-26.96	40.25	6.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5200MHz
Test by :nova

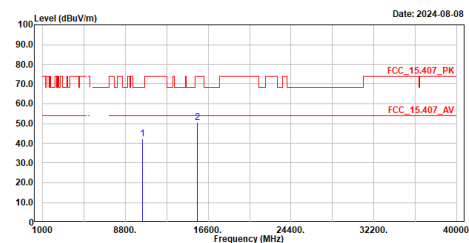


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10400.000	42.26	68.22	-25.96	39.55	2.71	Peak
2	15600.000	50.74	74.00	-23.26	43.95	6.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5240MHz
Test by :nova

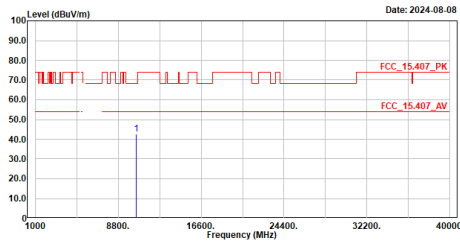


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10480.000	42.72	68.22	-25.50	39.94	2.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5240MHz
Test by :nova

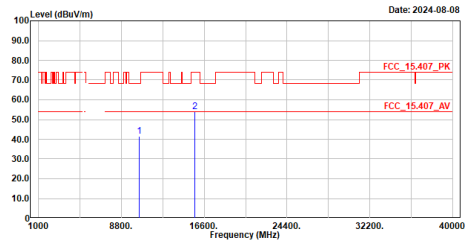


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10480.000	41.67	68.22	-26.55	38.89	2.78	Peak
2	15720.000	53.87	74.00	-20.13	46.99	6.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5260MHz
Test by :nova

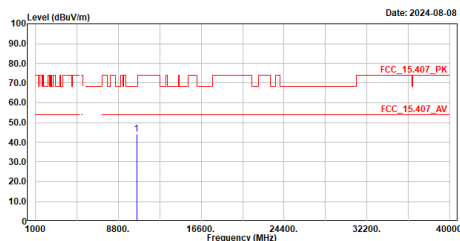


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10520.000	44.11	68.22	-24.11	41.21	2.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5260MHz
Test by :nova

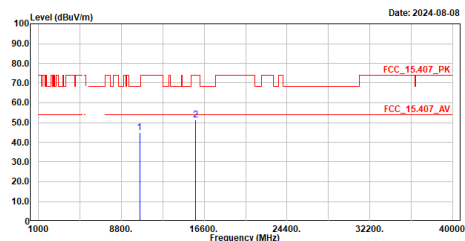


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10520.000	45.00	68.22	-23.22	42.10	2.90	Peak
2	15780.000	51.15	74.00	-22.85	44.03	7.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5280MHz
Test by :nova

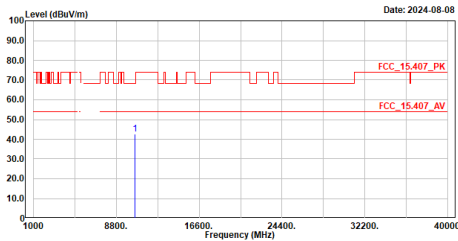

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10560.000	42.80	68.22	-25.42	39.88	2.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5280MHz
Test by :nova

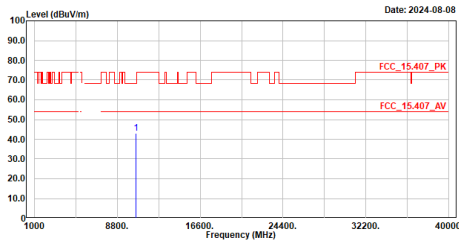

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10560.000	42.98	68.22	-25.24	40.06	2.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5320MHz
Test by :nova

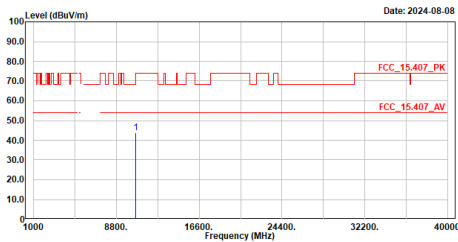

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	43.70	74.00	-30.30	40.63	3.07	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5320MHz
Test by :nova

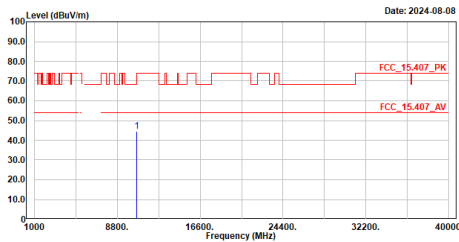

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	44.47	74.00	-29.53	41.40	3.07	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5500MHz
Test by :Rock

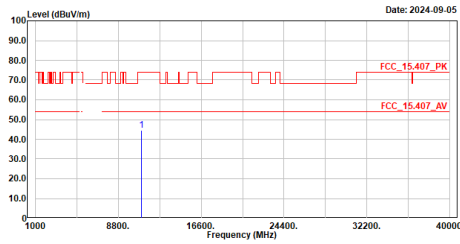


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	44.62	74.00	-29.38	41.33	3.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5500MHz
Test by :Rock

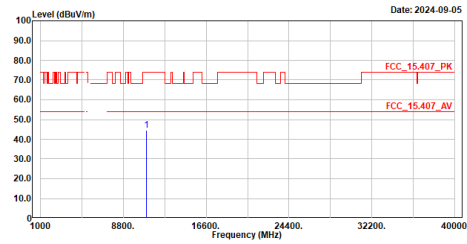


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	44.53	74.00	-29.47	41.24	3.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5600MHz
Test by :Rock

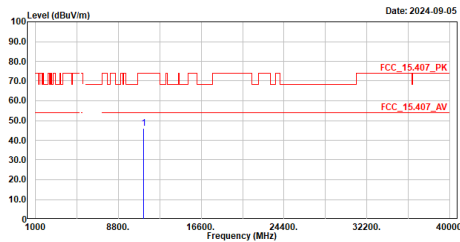


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11200.000	45.93	74.00	-28.07	42.24	3.69	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5600MHz
Test by :Rock

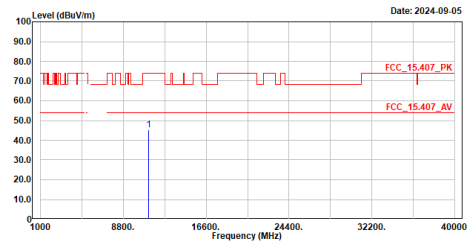


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11200.000	45.22	74.00	-28.78	41.53	3.69	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5700MHz
Test by :Rock

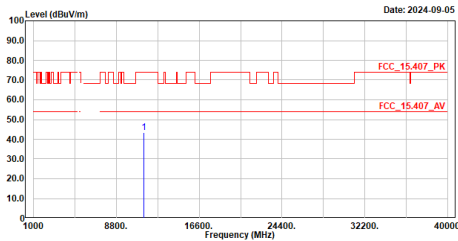

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	43.28	74.00	-30.72	39.16	4.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5700MHz
Test by :Rock

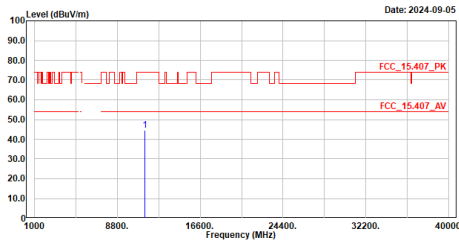

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	44.38	74.00	-29.62	40.26	4.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5745MHz
Test by :Rock

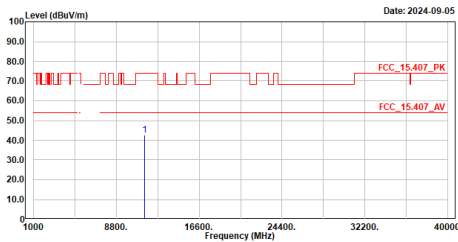

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	42.78	74.00	-31.22	38.59	4.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5745MHz
Test by :Rock

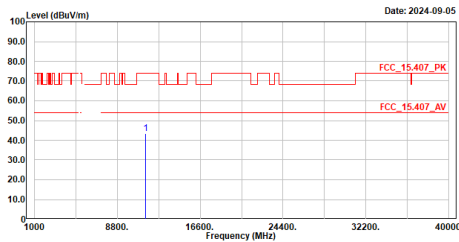

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	43.36	74.00	-30.64	39.17	4.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5785MHz
Test by :Rock

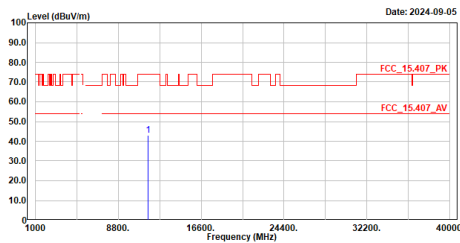


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	43.07	74.00	-30.93	38.83	4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5785MHz
Test by :Rock

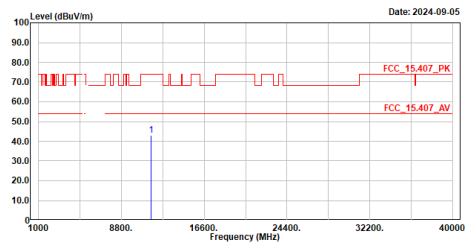


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	43.05	74.00	-30.95	38.81	4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5825MHz
Test by :Rock

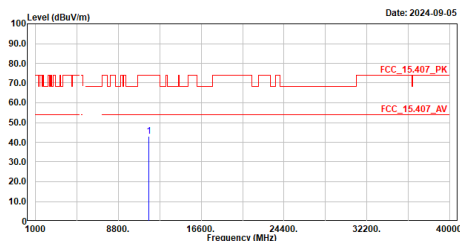


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	42.86	74.00	-31.14	38.68	4.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5825MHz
Test by :Rock

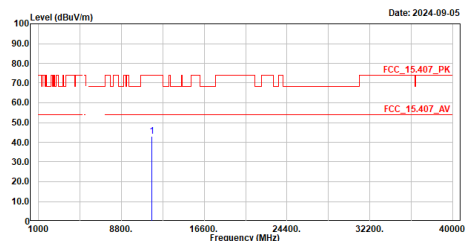


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	42.90	74.00	-31.10	38.72	4.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5180MHz
Test by :Rock

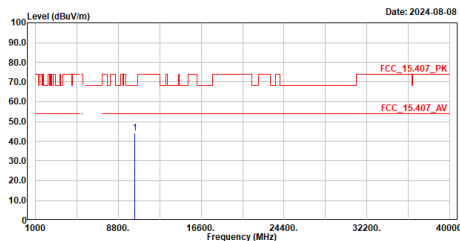

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	44.29	68.22	-23.93	41.51	2.78	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5180MHz
Test by :Rock

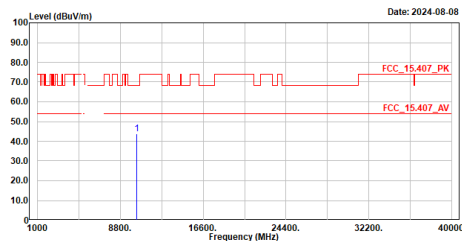

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	43.75	68.22	-24.47	40.97	2.78	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5200MHz
Test by :Rock

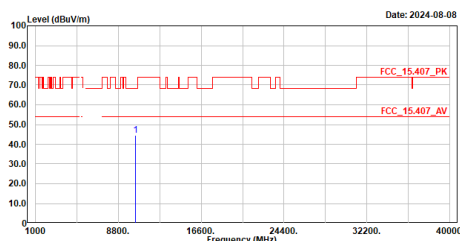

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10400.000	44.59	68.22	-23.63	41.88	2.71	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5200MHz
Test by :Rock

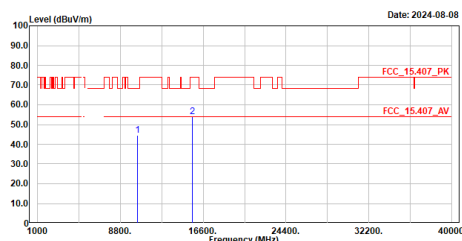

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10400.000	44.56	68.22	-23.66	41.85	2.71	Peak
2	15600.000	53.82	74.00	-20.18	47.03	6.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5240MHz
Test by :Rock

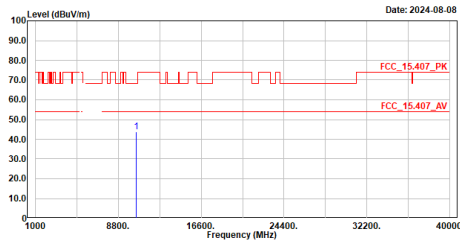


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	43.85	68.22	-24.37	41.07	2.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5240MHz
Test by :Rock

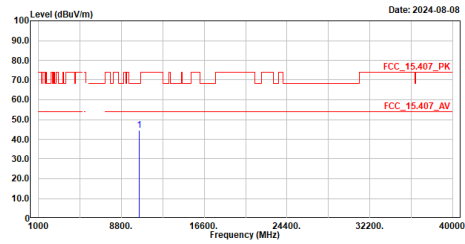


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	44.36	68.22	-23.86	41.58	2.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5260MHz
Test by :Rock

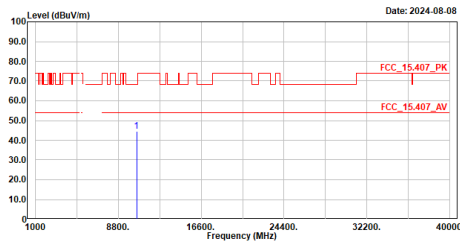


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	44.44	68.22	-23.78	41.54	2.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5260MHz
Test by :Rock

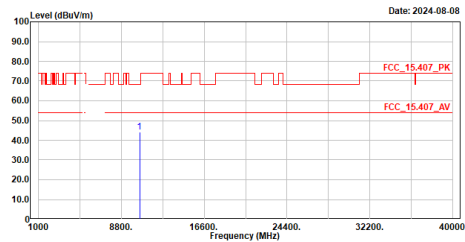


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	43.99	68.22	-24.23	41.09	2.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5280MHz
Test by :Rock

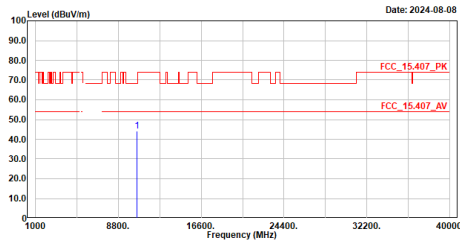


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10560.000	44.28	68.22	-23.94	41.36	2.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5280MHz
Test by :Rock

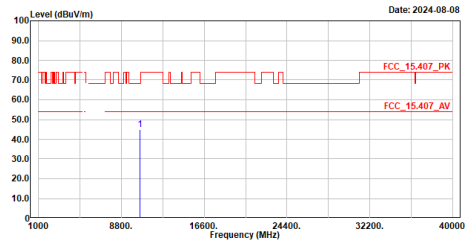


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10560.000	44.92	68.22	-23.30	42.00	2.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5320MHz
Test by :Rock

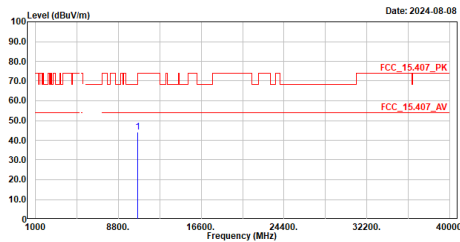


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	44.05	74.00	-29.95	40.98	3.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5320MHz
Test by :Rock

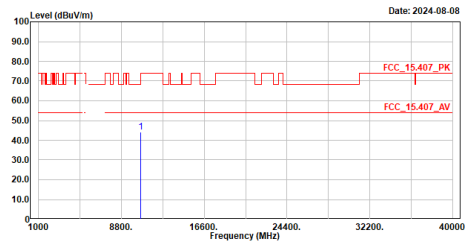


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	44.20	74.00	-29.80	41.13	3.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5500MHz
Test by :Rock

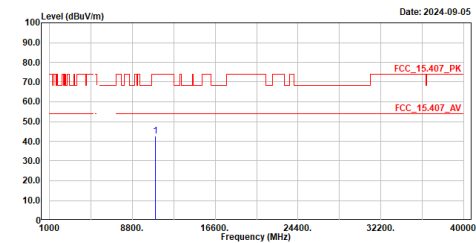

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11000.000	42.73	74.00	-31.27	39.44	3.29	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5500MHz
Test by :Rock

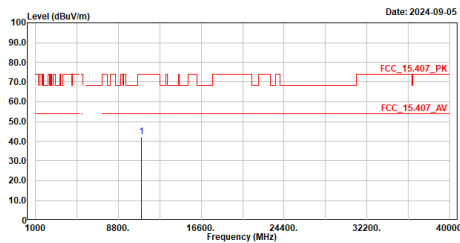

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11000.000	42.21	74.00	-31.79	38.92	3.29	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5600MHz
Test by :Rock

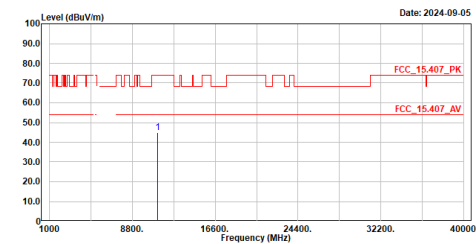

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11200.000	44.72	74.00	-29.28	40.91	3.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5600MHz
Test by :Rock

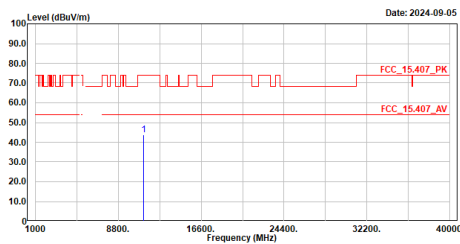

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11200.000	43.90	74.00	-30.10	40.09	3.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5700MHz
Test by :Rock

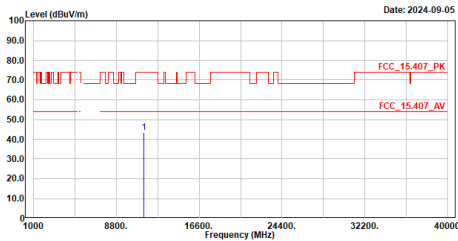

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	43.46	74.00	-30.54	39.34	4.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5700MHz
Test by :Rock

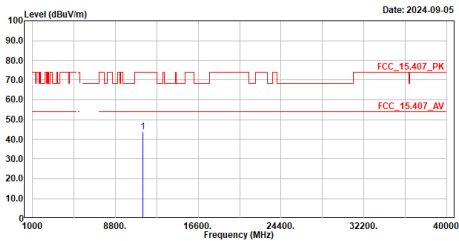

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	43.72	74.00	-30.28	39.60	4.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5720MHz
Test by :Rock

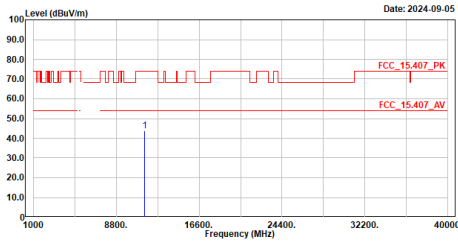

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	43.64	74.00	-30.36	39.41	4.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5720MHz
Test by :Rock

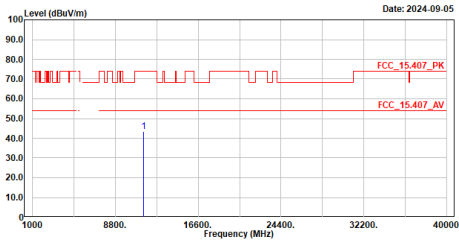

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	43.24	74.00	-30.76	39.01	4.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5745MHz
Test by :Rock

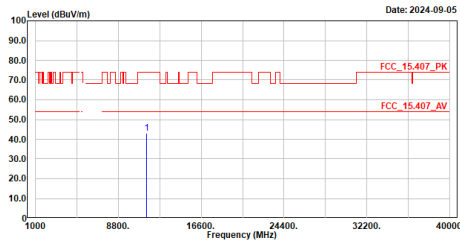


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	43.12	74.00	-30.88	38.93	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5745MHz
Test by :Rock

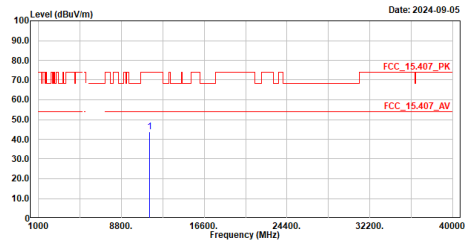


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	43.64	74.00	-30.36	39.45	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5785MHz
Test by :Rock

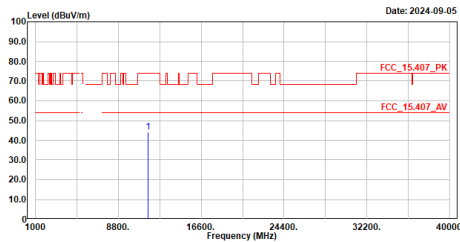


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	44.31	74.00	-29.69	40.07	4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5785MHz
Test by :Rock

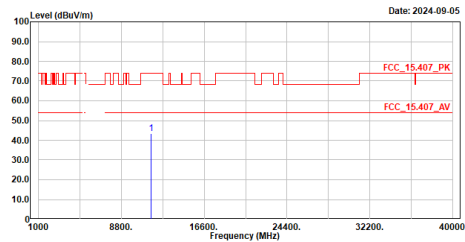


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	43.25	74.00	-30.75	39.01	4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5825MHz
Test by :Rock

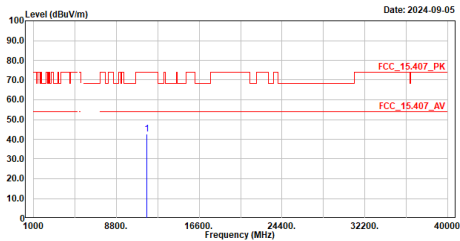

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	42.61	74.00	-31.39	38.43	4.18	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5825MHz
Test by :Rock

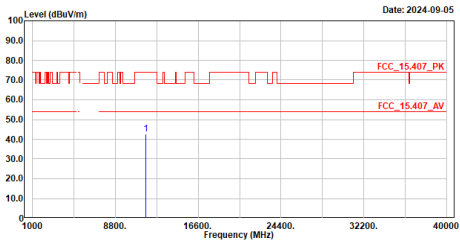

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	42.63	74.00	-31.37	38.45	4.18	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5190MHz
Test by :Rock

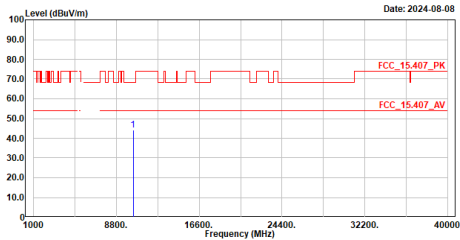

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	44.25	68.22	-23.97	41.51	2.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5190MHz
Test by :Rock

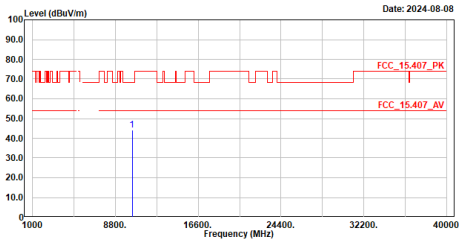

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	44.08	68.22	-24.14	41.34	2.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5230MHz
Test by :Rock

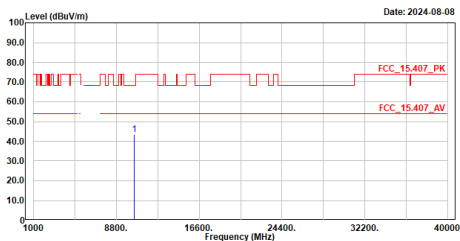

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	43.31	68.22	-24.91	40.61	2.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5230MHz
Test by :Rock

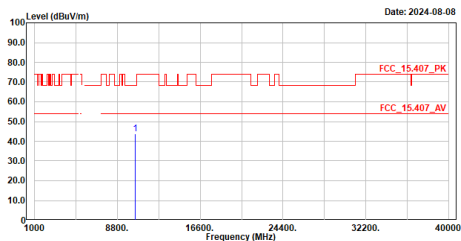

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	43.85	68.22	-24.37	41.15	2.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5270MHz
Test by :Rock

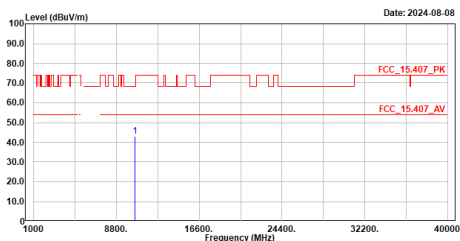

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	43.17	68.22	-25.05	40.27	2.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5270MHz
Test by :Rock

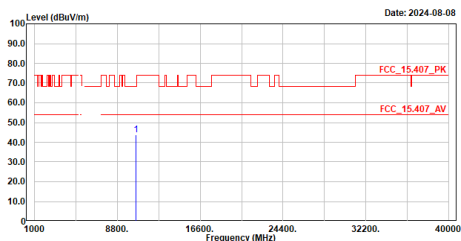

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	43.70	68.22	-24.52	40.80	2.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5310MHz
Test by :Rock

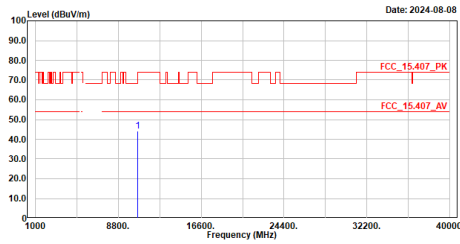


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	44.12	74.00	-29.88	41.08	3.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5310MHz
Test by :Rock

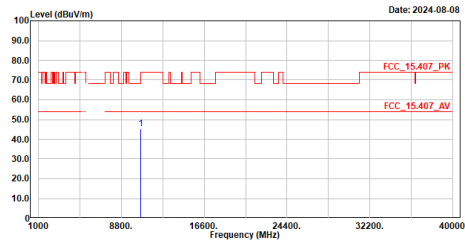


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	45.34	74.00	-28.66	42.30	3.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5510MHz
Test by :Rock

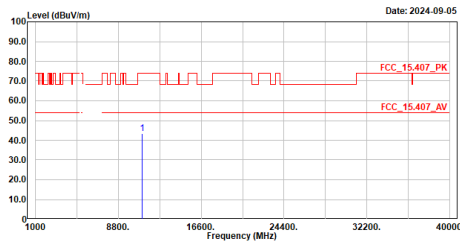


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11020.000	43.32	74.00	-30.68	39.98	3.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5510MHz
Test by :Rock

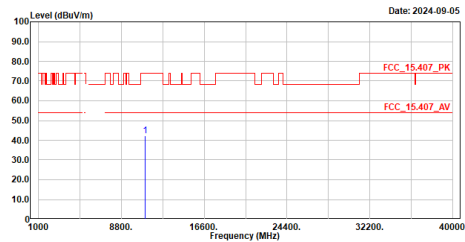


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11020.000	42.08	74.00	-31.92	38.74	3.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5590MHz
Test by :Rock

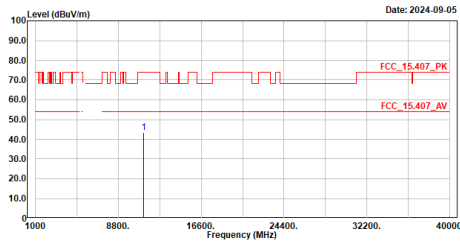


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11180.000	43.34	74.00	-30.66	39.59	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5590MHz
Test by :Rock

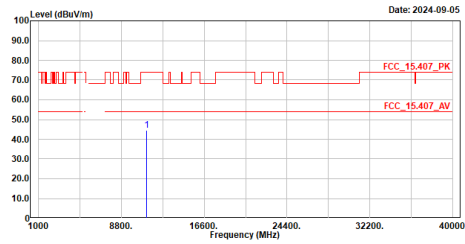


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11180.000	44.37	74.00	-29.63	40.62	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5670MHz
Test by :Rock

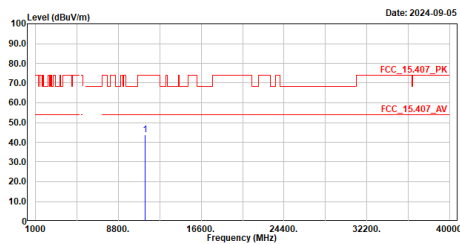


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	43.69	74.00	-30.31	39.58	4.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5670MHz
Test by :Rock

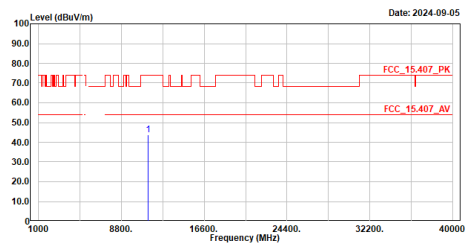


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	43.61	74.00	-30.39	39.50	4.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5710MHz
Test by :Rock

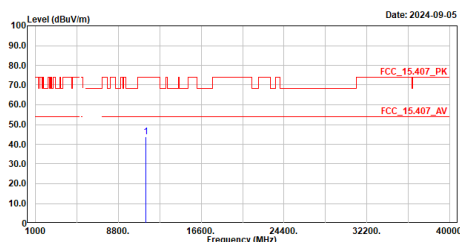


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11420.000	43.59	74.00	-30.41	39.42	4.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5710MHz
Test by :Rock

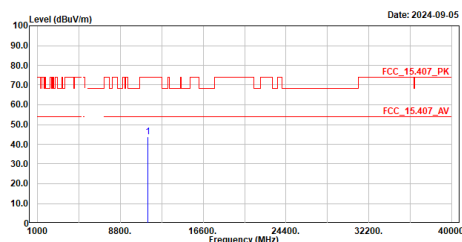


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11420.000	43.83	74.00	-30.17	39.66	4.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5755MHz
Test by :Rock

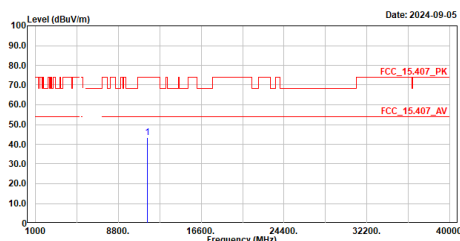


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	43.28	74.00	-30.72	39.09	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5755MHz
Test by :Rock

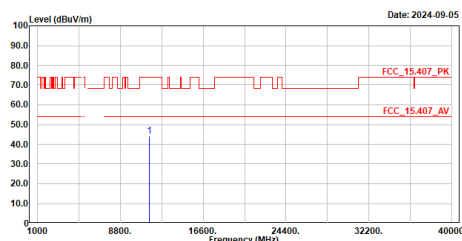


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	44.20	74.00	-29.80	40.01	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5795MHz
Test by :Rock

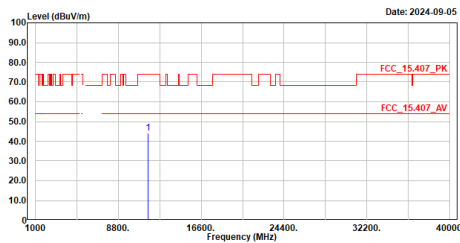


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11590.000	43.97	74.00	-30.03	39.75	4.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5795MHz
Test by :Rock

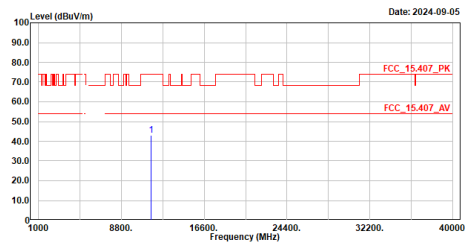


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11590.000	42.86	74.00	-31.14	38.64	4.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5210MHz
Test by :Rock

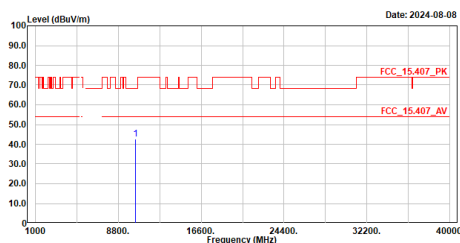


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	42.52	68.22	-25.70	39.86	2.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5210MHz
Test by :Rock

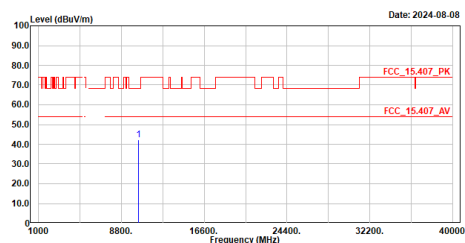


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	42.42	68.22	-25.80	39.76	2.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5290MHz
Test by :Rock

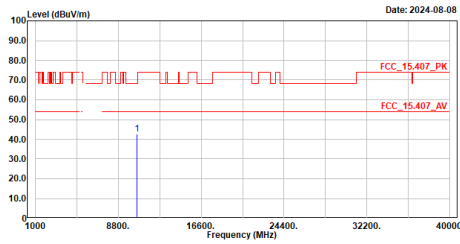


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10580.000	42.70	68.22	-25.52	39.73	2.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5290MHz
Test by :Rock

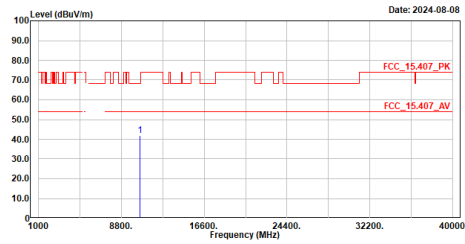


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10580.000	42.05	68.22	-26.17	39.08	2.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Rock

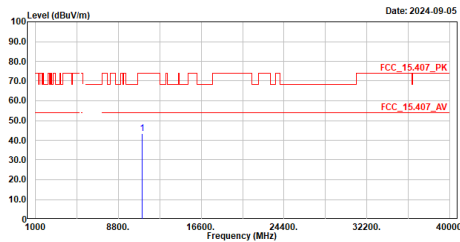


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11060.000	43.31	74.00	-30.69	39.86	3.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5530MHz
Test by :Rock

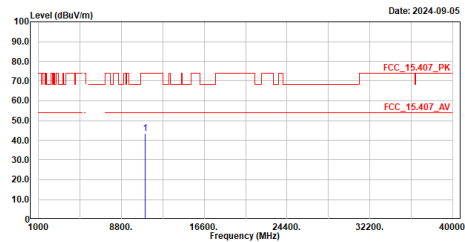


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11060.000	43.46	74.00	-30.54	40.01	3.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5610MHz
Test by :Rock

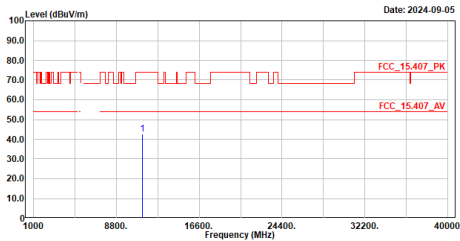

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5610MHz
Test by :Rock

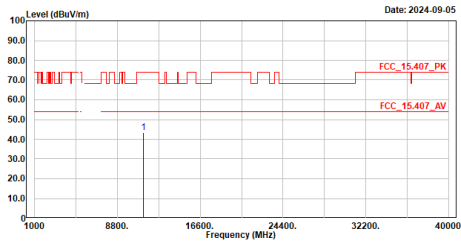

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5690MHz
Test by :Rock

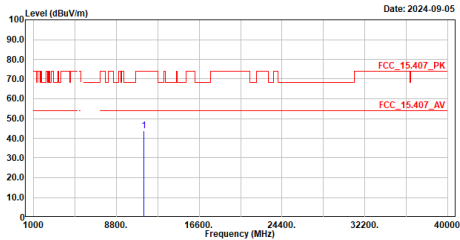

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5690MHz
Test by :Rock

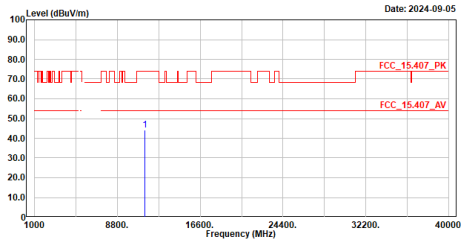

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5775MHz
Test by :Rock

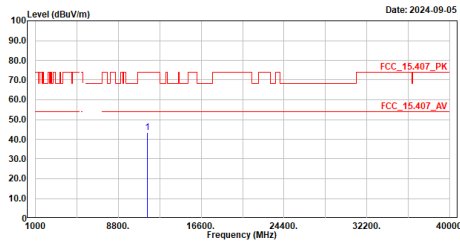


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	43.51	74.00	-30.49	39.25	4.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5775MHz
Test by :Rock

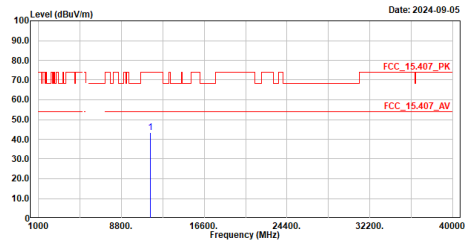


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	43.28	74.00	-30.72	39.02	4.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5250MHz
Test by :Rock

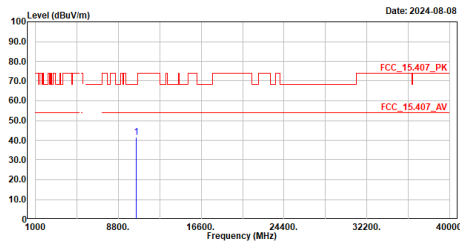


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	41.64	68.22	-26.58	38.76	2.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5250MHz
Test by :Rock

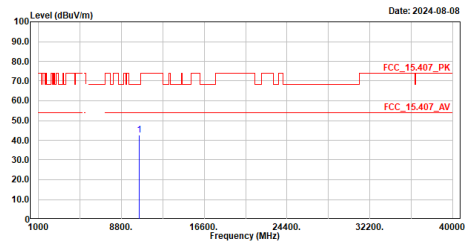


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	42.55	68.22	-25.67	39.67	2.88	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5570MHz
Test by :Rock

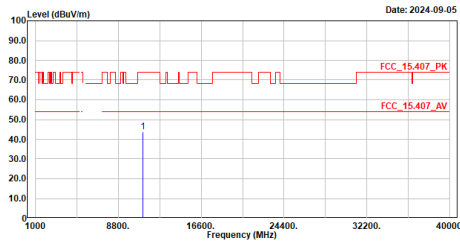


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	43.75	74.00	-30.25	40.11	3.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5570MHz
Test by :Rock

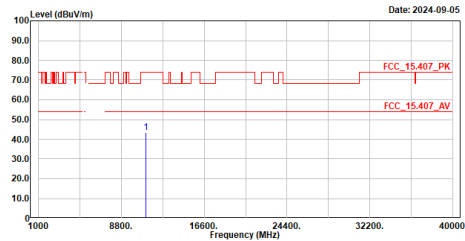


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11140.000	43.46	74.00	-30.54	39.82	3.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5570MHz
Test by :Rock

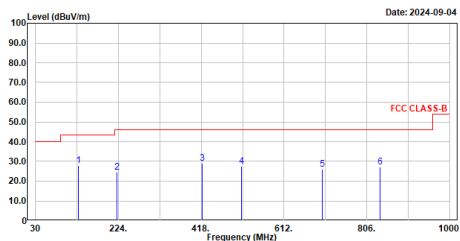


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	130.007	28.09	43.50	-15.41	52.93	-24.84	QP
2	221.284	24.44	46.00	-21.56	50.33	-25.89	QP
3	420.134	29.08	46.00	-16.92	48.61	-19.53	QP
4	513.060	27.72	46.00	-18.28	44.96	-17.24	QP
5	782.210	25.95	46.00	-20.05	39.57	-13.62	QP
6	837.234	27.34	46.00	-18.66	39.03	-11.69	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5570MHz
Test by :Rock

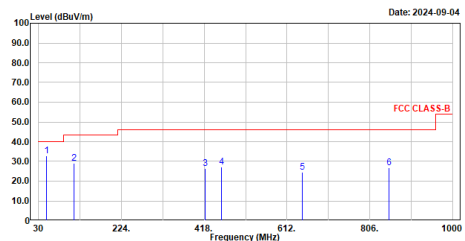


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	48.721	33.00	40.00	-7.00	55.96	-22.96	QP
2	112.450	29.08	43.50	-14.42	55.51	-26.43	QP
3	420.134	26.38	46.00	-19.62	45.91	-19.53	QP
4	459.031	27.08	46.00	-18.92	45.28	-18.20	QP
5	648.084	24.44	46.00	-21.56	38.95	-14.51	QP
6	850.426	26.77	46.00	-19.23	38.17	-11.40	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5180MHz
Test by :Rock

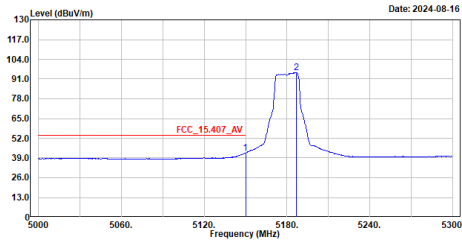

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	42.22	54.00	-11.78	27.76	14.46	Average
2	5186.900	95.15	-----	-----	80.71	14.44	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5180MHz
Test by :Rock

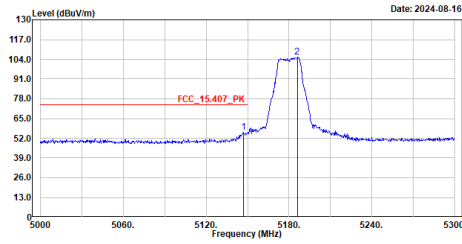

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.300	55.89	74.00	-18.11	41.43	14.46	Peak
2	5186.000	105.27	-----	-----	90.83	14.44	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5180MHz
Test by :Rock

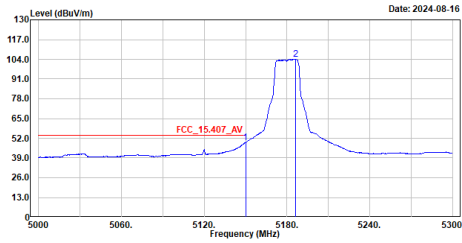

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	49.19	54.00	-4.81	34.73	14.46	Average
2	5186.300	103.89	-----	-----	89.45	14.44	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5180MHz
Test by :Rock

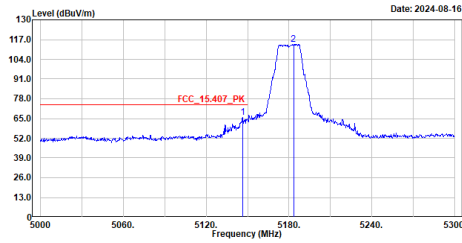

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5146.400	65.86	74.00	-8.14	51.40	14.46	Peak
2	5183.300	113.95	-----	-----	99.51	14.44	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5320MHz
Test by :Rock

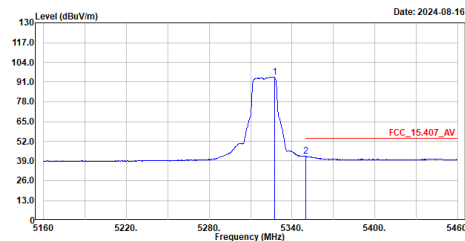

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5327.400	94.42	-----	-----	80.03	14.39	Average
2	5350.200	42.10	54.00	-11.90	27.73	14.37	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5320MHz
Test by :Rock

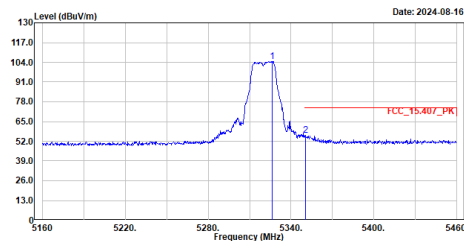

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5326.500	104.54	-----	-----	90.15	14.39	Peak
2	5350.500	56.17	74.00	-17.83	41.80	14.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5320MHz
Test by :Rock

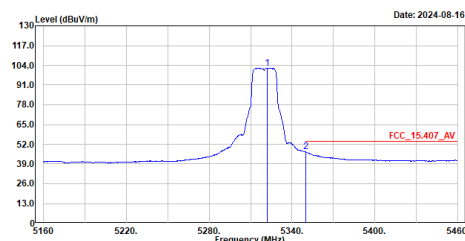

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.000	102.24	-----	-----	87.84	14.40	Average
2	5350.200	46.91	54.00	-7.09	32.54	14.37	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5320MHz
Test by :Rock

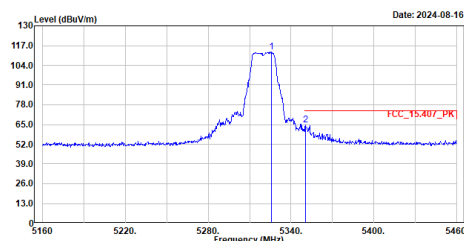

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.600	112.66	-----	-----	98.27	14.39	Peak
2	5350.500	64.85	74.00	-9.15	50.48	14.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5500MHz
Test by :Rock

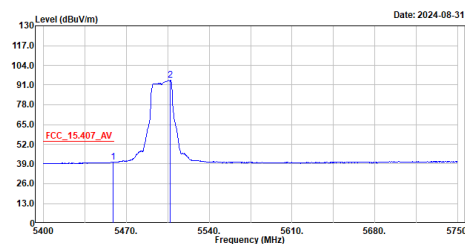


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	40.14	54.00	-13.86	25.46	14.68	Average
2	5507.100	94.10	-----	-----	79.17	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5500MHz
Test by :Rock

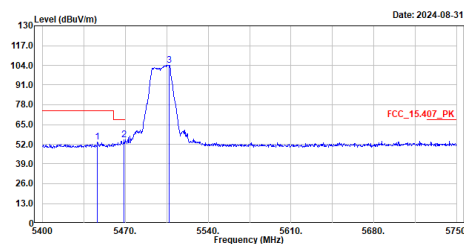


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5446.550	53.50	74.00	-20.50	38.89	14.61	Peak
2	5468.950	54.75	68.22	-13.47	40.02	14.73	Peak
3	5506.750	104.16	-----	-----	89.23	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5500MHz
Test by :Rock

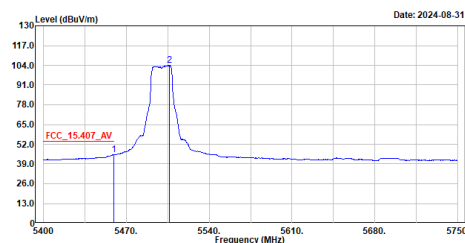


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	44.95	54.00	-9.05	30.27	14.68	Average
2	5506.400	103.95	-----	-----	89.02	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5500MHz
Test by :Rock

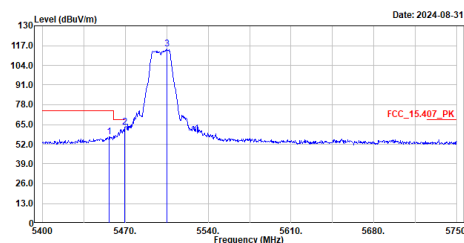


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	57.07	74.00	-16.93	42.40	14.67	Peak
2	5469.300	63.26	68.22	-4.96	48.53	14.73	Peak
3	5505.000	114.76	-----	-----	99.84	14.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5700MHz
Test by :Rock

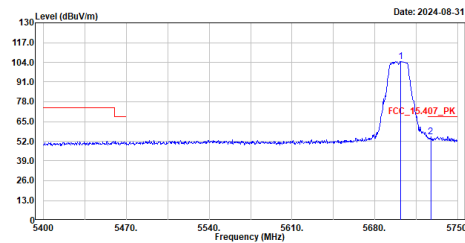


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5701.700	104.63	-----	88.54	16.09		Peak
2	5727.250	55.13	68.22	-13.09	38.92	16.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5700MHz
Test by :Rock

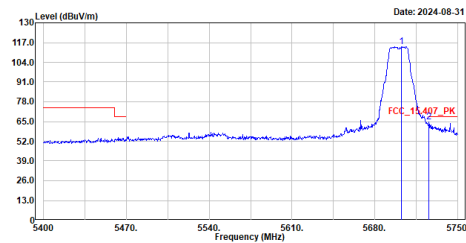


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5702.750	114.19	-----	98.10	16.09		Peak
2	5725.850	64.94	68.22	-3.28	48.74	16.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5745MHz
Test by :Rock

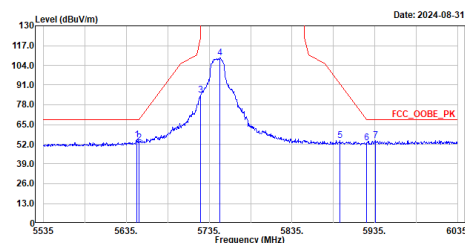


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5648.000	54.77	68.20	-13.43	39.15	15.62	Peak
2	5650.000	53.22	68.21	-14.99	37.58	15.64	Peak
3	5725.000	84.14	122.20	-38.06	67.94	16.20	Peak
4	5748.000	108.82	-----	92.51	16.31		Peak
5	5893.000	54.64	91.88	-37.24	38.26	16.38	Peak
6	5925.000	52.99	68.21	-15.22	36.56	16.43	Peak
7	5935.500	54.57	68.20	-13.63	38.14	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5745MHz
Test by :Rock

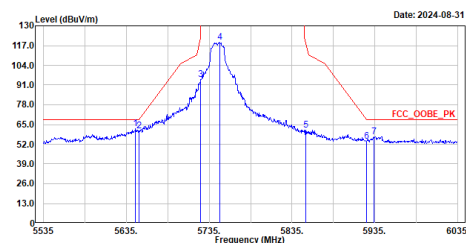


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5646.000	62.24	68.20	-5.96	46.63	15.61	Peak
2	5650.000	60.60	68.21	-7.61	44.96	15.64	Peak
3	5725.000	94.92	122.20	-27.28	78.72	16.20	Peak
4	5747.500	119.09	-----	102.78	16.31		Peak
5	5851.500	61.39	118.78	-57.39	45.06	16.33	Peak
6	5925.000	54.06	68.21	-14.15	37.63	16.43	Peak
7	5934.000	57.04	68.20	-11.16	40.61	16.43	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

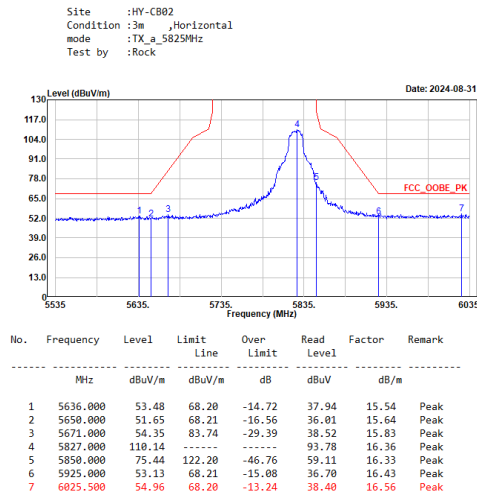


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

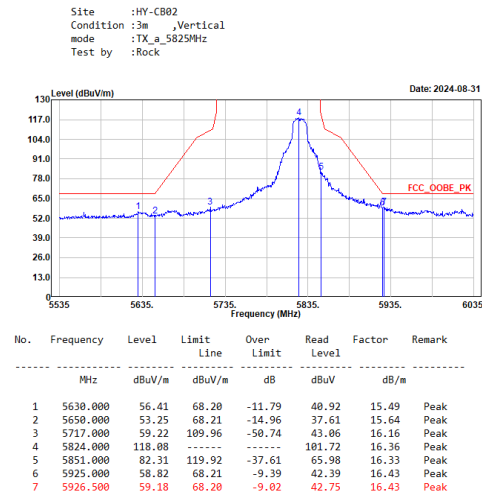

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

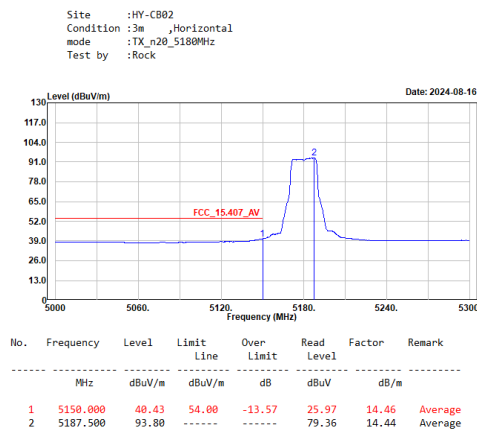


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

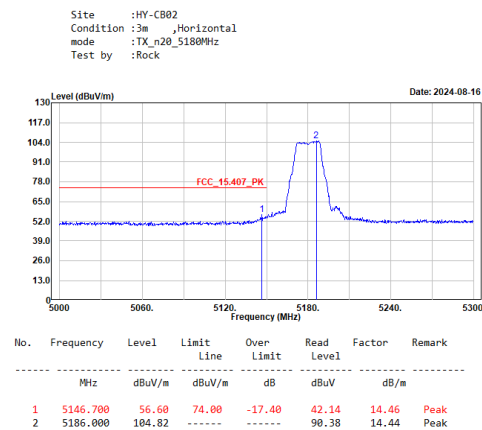

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5180MHz
Test by :Rock

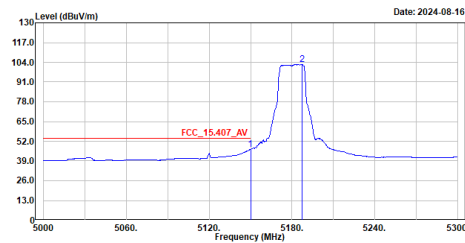


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	46.70	54.00	-7.30	32.24	14.46	Average
2	5187.200	102.64	-----	-----	88.20	14.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5180MHz
Test by :Rock

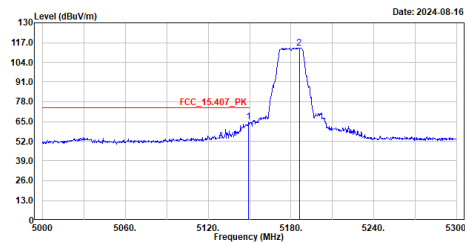


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	64.79	74.00	-9.21	50.33	14.46	Peak
2	5186.000	113.52	-----	-----	99.08	14.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5320MHz
Test by :Rock

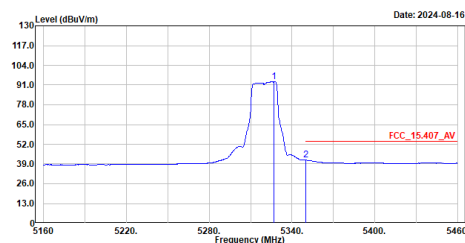


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5326.000	93.24	-----	-----	78.85	14.39	Average
2	5350.200	41.52	54.00	-12.48	27.15	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5320MHz
Test by :Rock

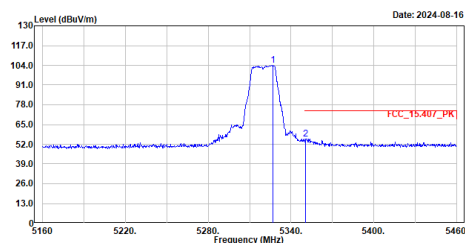


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5327.100	103.95	-----	-----	89.56	14.39	Peak
2	5350.500	55.55	74.00	-18.45	41.18	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5320MHz
Test by :Rock

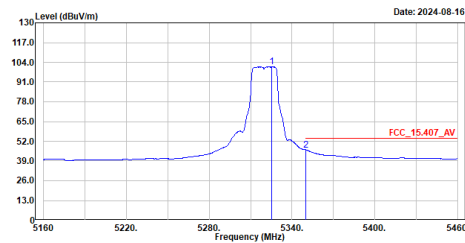


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.300	101.00	-----	-----	86.61	14.39	Average
2	5350.200	46.27	54.00	-7.73	31.90	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5320MHz
Test by :Rock

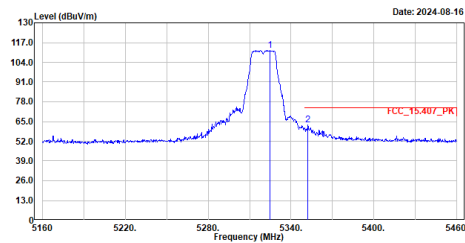


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5324.700	112.06	-----	-----	97.67	14.39	Peak
2	5352.300	62.95	74.00	-11.05	48.58	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5500MHz
Test by :Rock

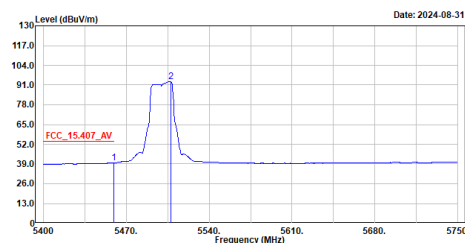


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.150	39.81	54.00	-14.19	25.13	14.68	Average
2	5507.800	93.34	-----	-----	78.41	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5500MHz
Test by :Rock

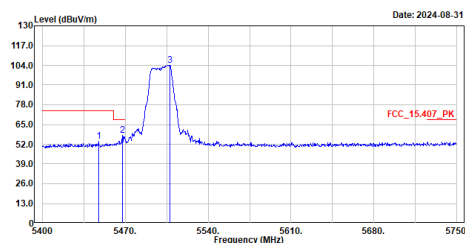


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5447.250	54.04	74.00	-19.96	39.43	14.61	Peak
2	5467.550	57.81	68.22	-10.41	43.09	14.72	Peak
3	5507.800	104.02	-----	-----	89.09	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5500MHz
Test by :Rock

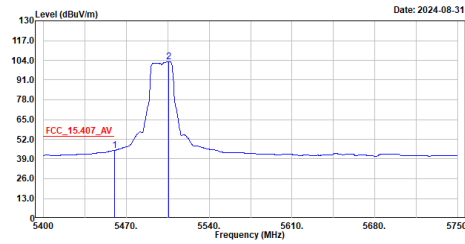


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	44.76	54.00	-9.24	30.08	14.68	Average
2	5505.700	103.12	-----	-----	88.20	14.92	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5500MHz
Test by :Rock

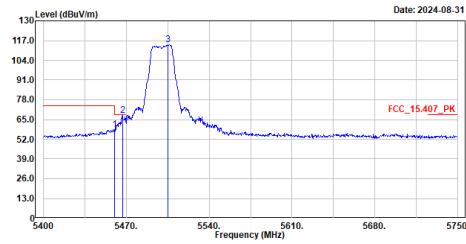


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	58.44	74.00	-15.56	43.76	14.68	Peak
2	5466.850	67.65	68.22	-0.57	52.93	14.72	Peak
3	5505.350	114.20	-----	-----	99.28	14.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5700MHz
Test by :Rock

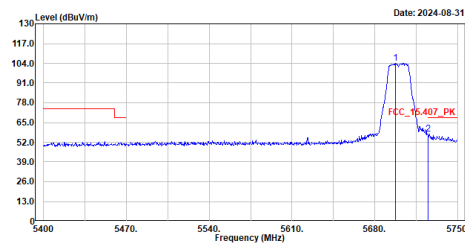


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5697.500	103.90	-----	-----	87.84	16.06	Peak
2	5725.000	57.52	68.22	-10.70	41.32	16.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5700MHz
Test by :Rock

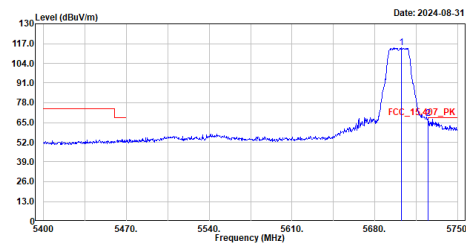

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5702.400	114.21	-----	-----	98.12	16.09	Peak
2	5725.000	67.70	68.22	-0.52	51.50	16.20	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

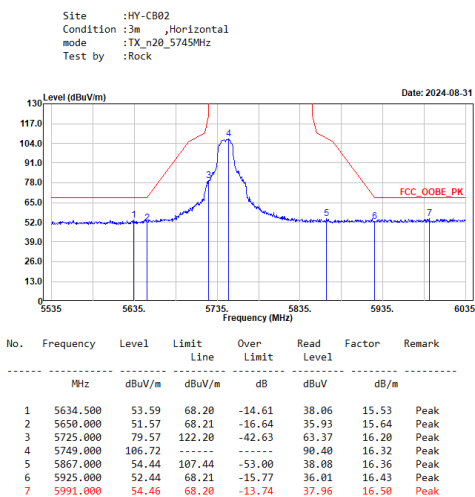


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

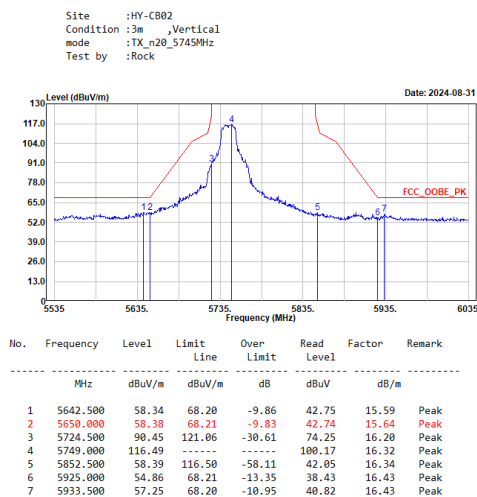


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

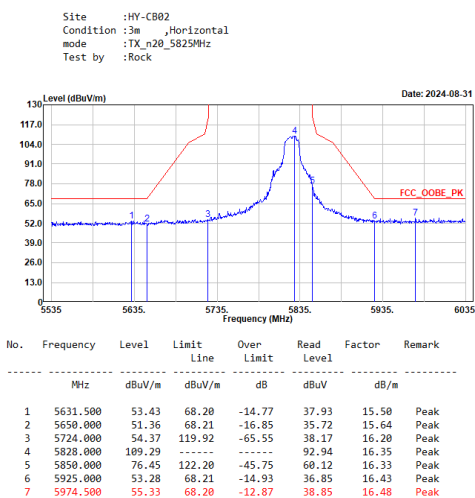

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

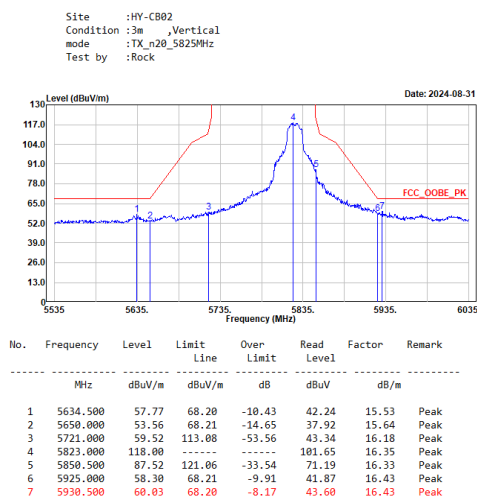

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5190MHz
Test by :Rock

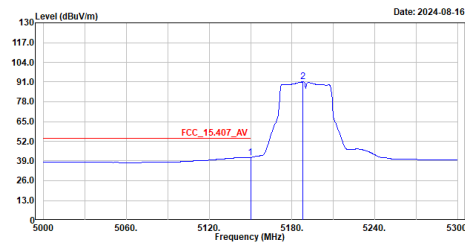


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	41.36	54.00	-12.64	26.90	14.46	Average
2	5187.800	91.05	-----	-----	76.62	14.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5190MHz
Test by :Rock

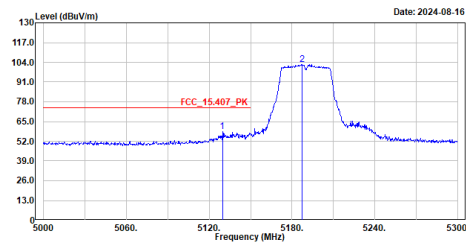


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5129.600	58.39	74.00	-15.61	43.95	14.44	Peak
2	5187.200	102.64	-----	-----	88.20	14.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5190MHz
Test by :Rock

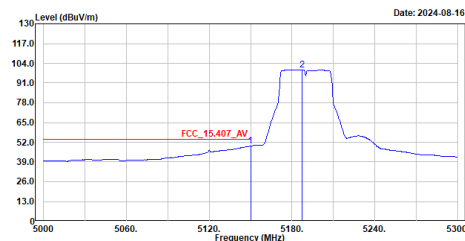


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	49.44	54.00	-4.56	34.98	14.46	Average
2	5187.200	99.60	-----	-----	85.16	14.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5190MHz
Test by :Rock

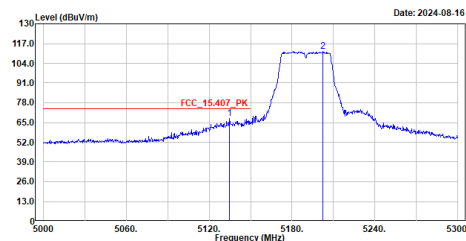


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5134.700	67.91	74.00	-6.09	53.47	14.44	Peak
2	5202.500	111.88	-----	-----	97.46	14.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5310MHz
Test by :Rock

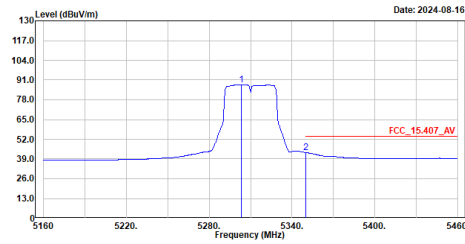


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5303.400	88.05	-----	-----	73.63	14.42	Average
2	5350.200	43.19	54.00	-10.81	28.82	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5310MHz
Test by :Rock

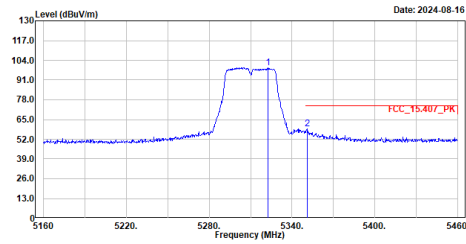


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.600	99.29	-----	-----	84.90	14.39	Peak
2	5351.100	58.85	74.00	-15.15	44.48	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5310MHz
Test by :Rock

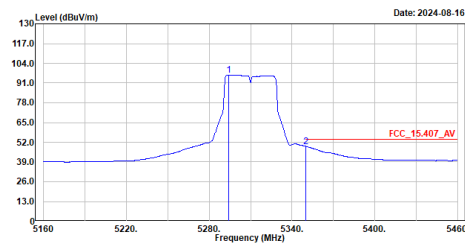


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5294.400	96.31	-----	-----	81.88	14.43	Average
2	5350.200	49.23	54.00	-4.77	34.86	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5310MHz
Test by :Rock

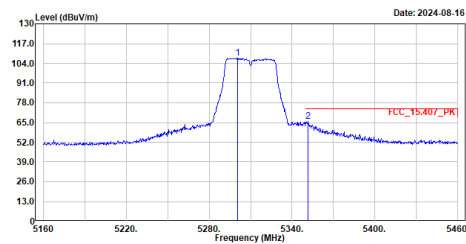


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5300.400	107.57	-----	-----	93.14	14.43	Peak
2	5351.400	65.66	74.00	-8.34	51.29	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5510MHz
Test by :Rock

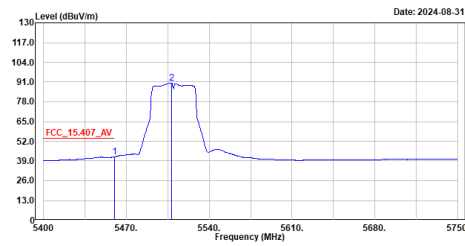


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	41.68	54.00	-12.32	27.00	14.68	Average
2	5508.150	90.29	-----	-----	75.36	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5510MHz
Test by :Rock

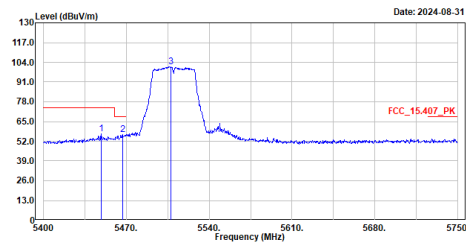


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5448.650	56.81	74.00	-17.19	42.20	14.61	Peak
2	5466.850	56.52	68.22	-11.70	41.80	14.72	Peak
3	5507.800	101.03	-----	-----	86.10	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5510MHz
Test by :Rock

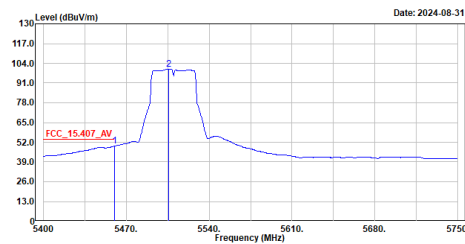


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	49.41	54.00	-4.59	34.73	14.68	Average
2	5506.850	100.22	-----	-----	85.30	14.92	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5510MHz
Test by :Rock

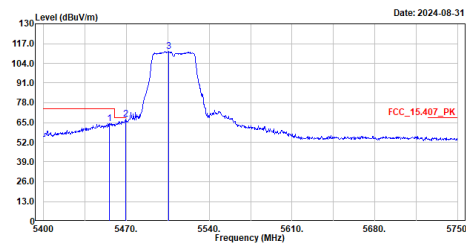


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5455.650	64.40	74.00	-9.60	49.74	14.66	Peak
2	5469.650	67.28	68.22	-0.94	52.54	14.74	Peak
3	5505.700	111.81	-----	-----	96.89	14.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5670MHz
Test by :Rock

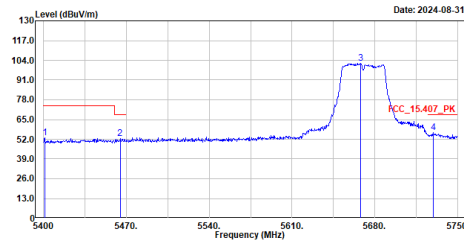


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5401.050	52.86	74.00	-21.14	38.51	14.35	Peak
2	5464.750	52.26	68.22	-15.96	37.56	14.70	Peak
3	5668.100	101.82	-----	86.02	15.80		Peak
4	5729.350	56.43	68.22	-11.79	40.20	16.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5670MHz
Test by :Rock

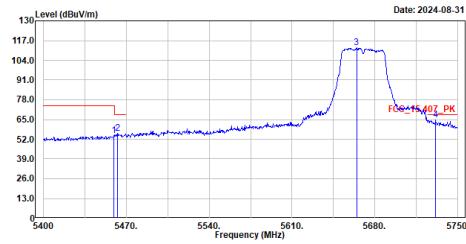


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5459.500	54.32	74.00	-19.68	39.64	14.68	Peak
2	5462.300	55.81	68.22	-12.41	41.12	14.69	Peak
3	5664.600	112.25	-----	96.48	15.77		Peak
4	5731.450	64.62	68.22	-3.60	48.38	16.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5755MHz
Test by :Rock

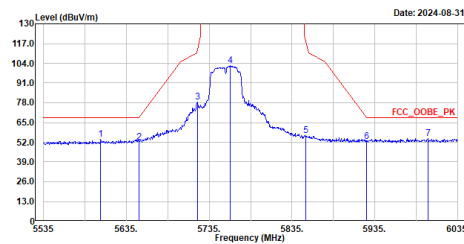


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5604.000	53.77	68.20	-14.43	38.46	15.31	Peak
2	5650.000	52.24	68.21	-15.97	36.69	15.64	Peak
3	5721.000	78.52	113.08	-34.56	62.34	16.18	Peak
4	5760.000	102.32	-----	85.99	16.33		Peak
5	5852.000	56.35	117.64	-61.29	40.02	16.33	Peak
6	5925.000	52.34	68.21	-15.87	35.91	16.43	Peak
7	5999.500	54.49	68.20	-13.71	37.99	16.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5755MHz
Test by :Rock

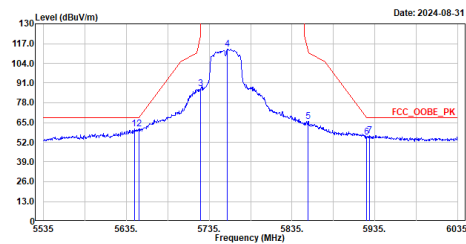


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5644.500	60.74	68.20	-7.46	45.14	15.60	Peak
2	5650.000	60.87	68.21	-7.34	45.23	15.64	Peak
3	5724.500	87.56	121.06	-33.50	71.36	16.20	Peak
4	5757.000	113.15	-----	96.82	16.33		Peak
5	5854.500	65.97	111.94	-45.97	49.63	16.34	Peak
6	5925.000	55.55	68.21	-12.66	39.12	16.43	Peak
7	5928.500	56.45	68.20	-11.75	40.02	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5795MHz
Test by :Rock

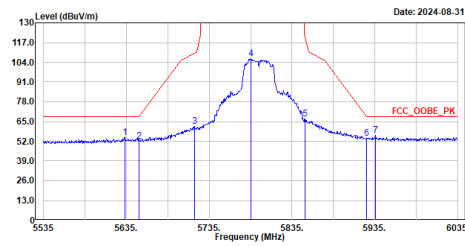


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5633.000	54.26	68.20	-13.94	38.74	15.52	Peak
2	5650.000	51.90	68.21	-16.31	36.26	15.64	Peak
3	5717.500	61.65	110.10	-48.45	45.48	16.17	Peak
4	5785.500	106.40	-----	-----	90.04	16.36	Peak
5	5850.500	66.84	121.06	-54.22	50.51	16.33	Peak
6	5925.000	53.77	68.21	-14.44	37.34	16.43	Peak
7	5935.500	55.73	68.20	-12.47	39.30	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5795MHz
Test by :Rock

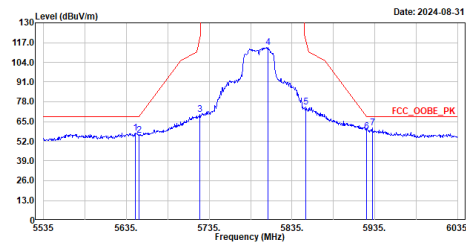


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5645.500	57.39	68.20	-10.81	41.79	15.60	Peak
2	5650.000	55.69	68.21	-12.52	40.05	15.64	Peak
3	5723.500	69.51	118.78	-49.27	53.32	16.19	Peak
4	5806.000	113.69	-----	-----	97.32	16.37	Peak
5	5852.000	74.62	117.64	-43.02	58.29	16.33	Peak
6	5925.000	58.57	68.21	-9.64	42.14	16.43	Peak
7	5932.000	60.97	68.20	-7.23	44.54	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Rock

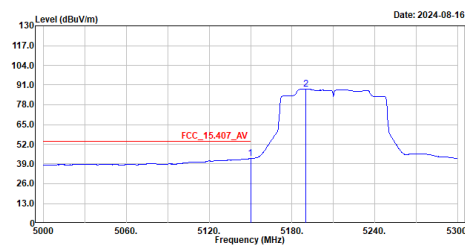


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	42.61	54.00	-11.39	28.15	14.46	Average
2	5189.900	88.47	-----	-----	74.04	14.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Rock

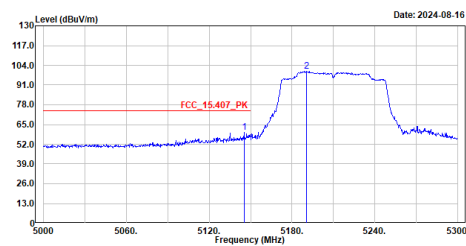


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5145.200	59.99	74.00	-14.01	45.53	14.46	Peak
2	5190.800	99.92	-----	-----	85.49	14.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Rock

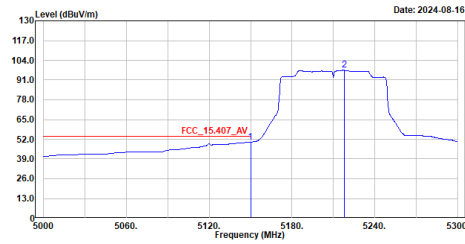


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	50.15	54.00	-3.85	35.69	14.46	Average
2	5217.800	97.47	-----	-----	83.06	14.41	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Rock

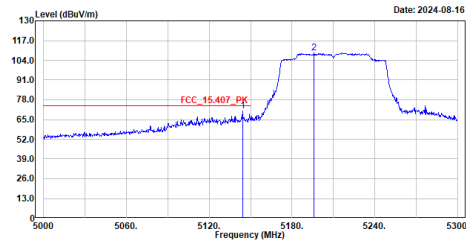


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.300	70.47	74.00	-3.53	56.01	14.46	Peak
2	5195.900	108.81	-----	-----	94.38	14.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Rock

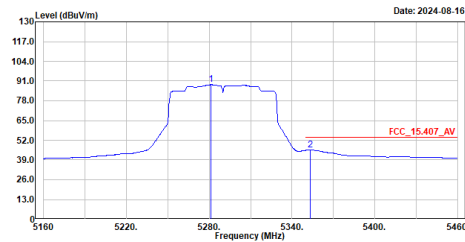


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5281.500	88.60	-----	-----	74.18	14.42	Average
2	5353.200	45.57	54.00	-8.43	31.21	14.36	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Rock

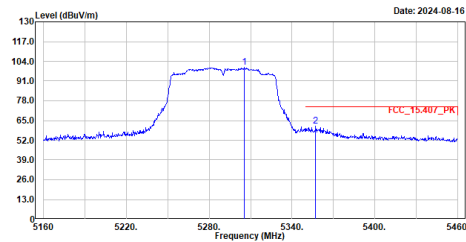


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5305.200	100.07	-----	-----	85.64	14.43	Peak
2	5357.100	61.18	74.00	-12.82	46.81	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Rock

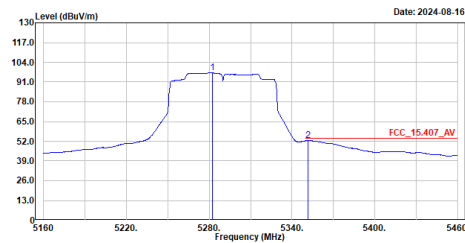


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5282.100	97.01	-----	-----	82.59	14.42	Average
2	5351.400	52.51	54.00	-1.49	38.14	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Rock

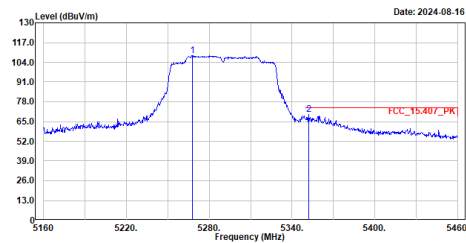


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5267.700	108.49	-----	-----	94.07	14.42	Peak
2	5352.300	69.60	74.00	-4.40	55.23	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Rock

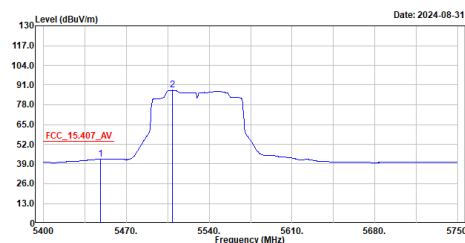


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5447.950	42.32	54.00	-11.68	27.71	14.61	Average
2	5509.200	87.63	-----	-----	72.69	14.94	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Rock

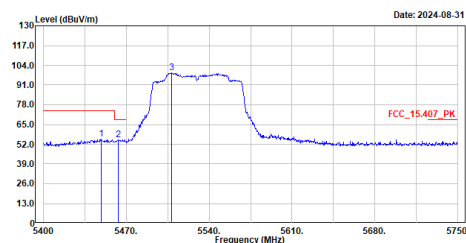


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5448.650	55.27	74.00	-18.73	40.66	14.61	Peak
2	5463.000	54.97	68.22	-13.25	40.28	14.69	Peak
3	5508.150	98.96	-----	-----	84.03	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Rock

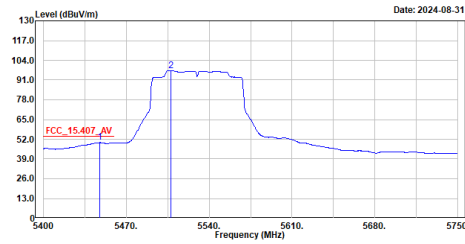


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5447.250	49.82	54.00	-4.18	35.21	14.61	Average
2	5507.450	97.32	-----	-----	82.39	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Rock

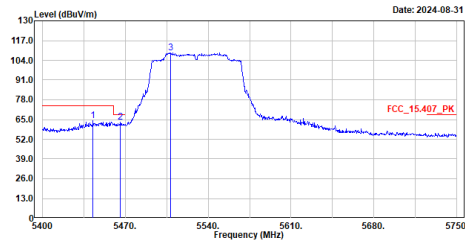


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5442.700	64.04	74.00	-9.96	49.45	14.59	Peak
2	5465.800	63.47	68.22	-4.75	48.77	14.70	Peak
3	5508.150	109.05	-----	-----	94.12	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5775MHz
Test by :Rock

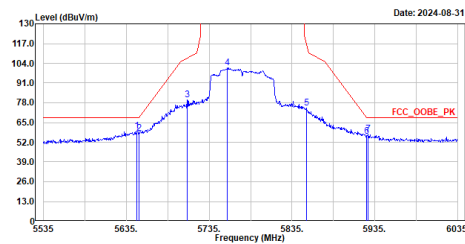


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5648.000	59.19	68.20	-9.01	43.57	15.62	Peak
2	5650.000	57.66	68.21	-10.55	42.02	15.64	Peak
3	5708.500	79.85	107.58	-27.73	63.73	16.12	Peak
4	5757.000	101.05	-----	-----	84.72	16.33	Peak
5	5852.500	74.41	116.50	-42.09	58.07	16.34	Peak
6	5925.000	55.77	68.21	-12.44	39.34	16.43	Peak
7	5927.000	57.19	68.20	-11.01	40.76	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5775MHz
Test by :Rock

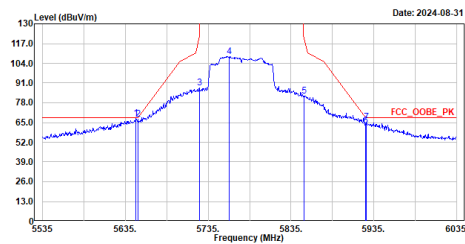


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5648.000	67.63	68.20	-0.57	53.01	15.62	Peak
2	5650.000	67.19	68.21	-1.02	51.55	15.64	Peak
3	5724.500	87.64	121.06	-33.42	71.44	16.20	Peak
4	5760.000	108.61	-----	-----	92.28	16.33	Peak
5	5850.500	82.58	121.06	-38.48	66.25	16.33	Peak
6	5925.000	62.94	68.21	-5.27	46.51	16.43	Peak
7	5926.000	65.14	68.20	-3.06	48.71	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

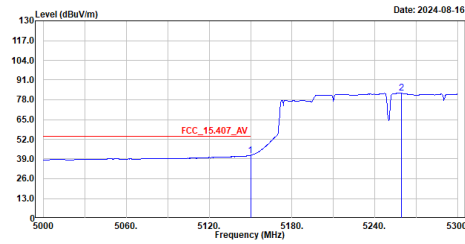


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	41.42	54.00	-12.58	26.96	14.46	Average
2	5259.200	82.43	-----	-----	68.02	14.41	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

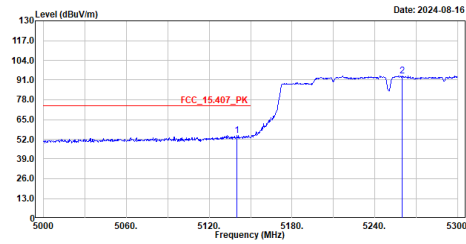


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5140.100	54.68	74.00	-19.32	40.24	14.44	Peak
2	5259.800	93.75	-----	-----	79.34	14.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

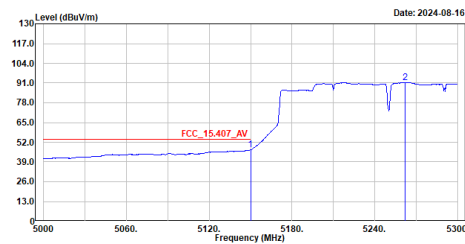


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	47.03	54.00	-6.97	32.57	14.46	Average
2	5261.900	91.29	-----	-----	76.88	14.41	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

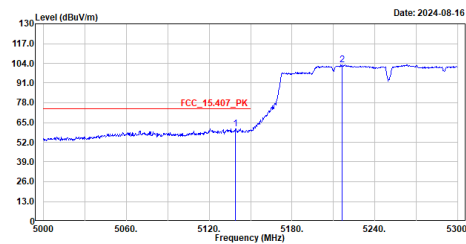


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5139.200	61.03	74.00	-12.97	46.59	14.44	Peak
2	5216.300	102.97	-----	-----	88.55	14.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

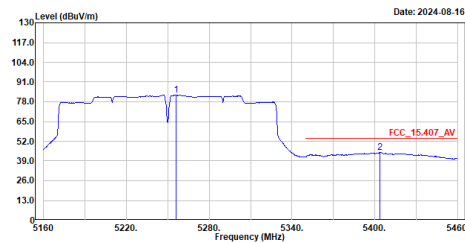


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5256.000	82.34	-----	-----	67.93	14.41	Average
2	5403.600	44.53	54.00	-9.47	30.16	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

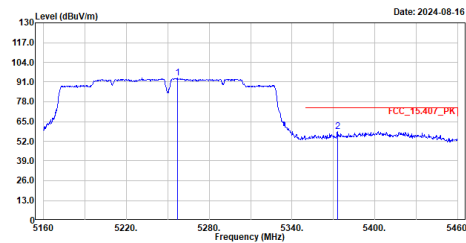


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5256.900	93.65	-----	-----	79.24	14.41	Peak
2	5373.000	58.25	74.00	-15.75	43.89	14.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

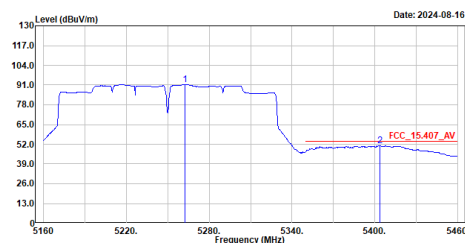


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5262.600	91.32	-----	-----	76.91	14.41	Average
2	5403.600	51.03	54.00	-2.97	36.66	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

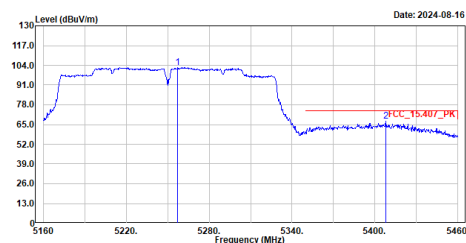


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5257.200	102.64	-----	-----	88.23	14.41	Peak
2	5408.100	67.01	74.00	-6.99	52.62	14.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5570MHz
Test by :Rock

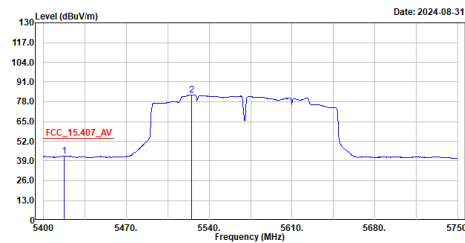


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5417.150	42.24	54.00	-11.76	27.79	14.45	Average
2	5524.950	82.57	-----	-----	67.55	15.02	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5570MHz
Test by :Rock

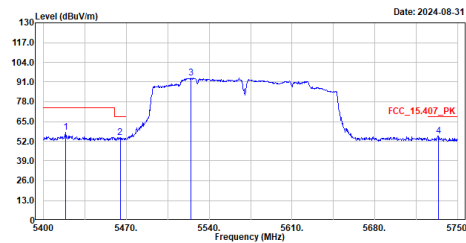


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5418.550	57.97	74.00	-16.03	43.52	14.45	Peak
2	5464.750	54.48	68.22	-13.74	39.78	14.70	Peak
3	5524.600	93.72	-----	-----	78.70	15.02	Peak
4	5733.550	55.36	68.22	-12.86	39.12	16.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5570MHz
Test by :Rock

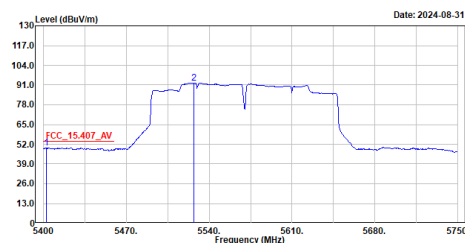


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5402.450	49.48	54.00	-4.52	35.11	14.37	Average
2	5527.050	92.46	-----	-----	77.43	15.03	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5570MHz
Test by :Rock

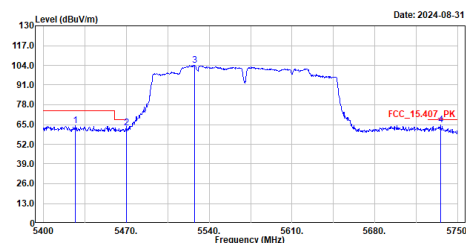


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5426.600	64.12	74.00	-9.88	49.62	14.50	Peak
2	5470.000	62.88	68.22	-5.34	48.14	14.74	Peak
3	5527.750	104.03	-----	-----	89.00	15.03	Peak
4	5735.650	64.89	68.22	-3.33	48.64	16.25	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


MIMO

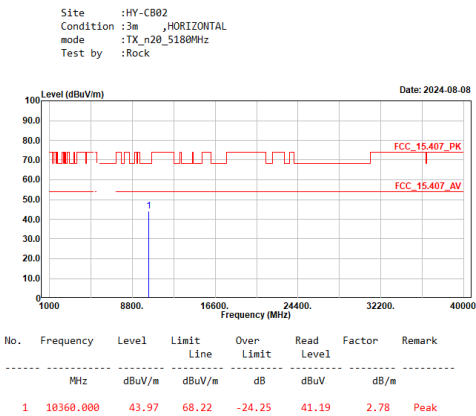


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

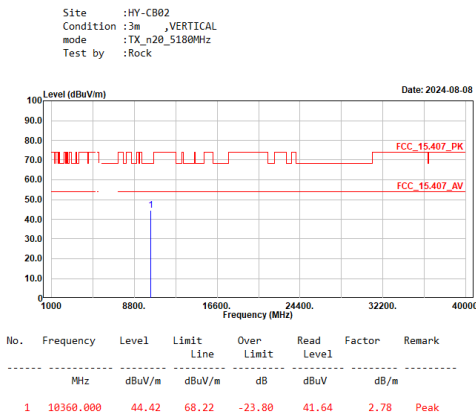

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

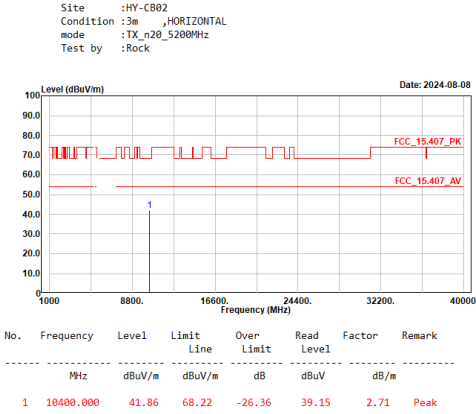


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

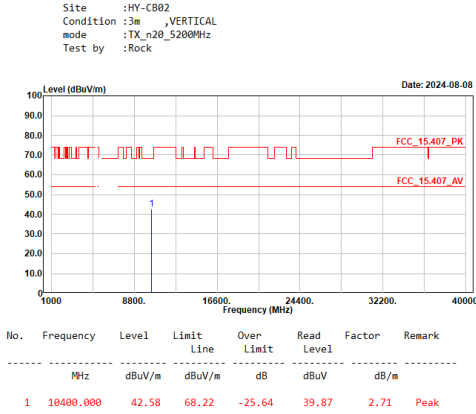

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5240MHz
Test by :Rock

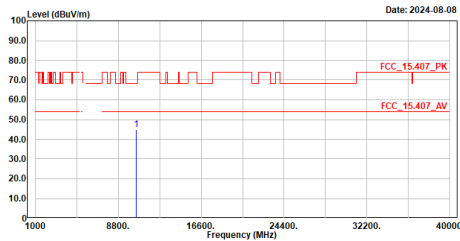


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10480.000	44.92	68.22	-23.30	42.14	2.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5240MHz
Test by :Rock

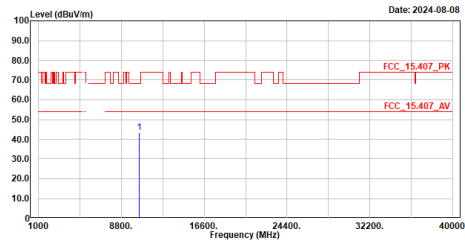


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10480.000	43.51	68.22	-24.71	40.73	2.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5260MHz
Test by :Rock

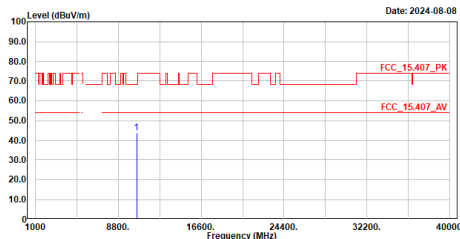


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10520.000	43.74	68.22	-24.48	40.84	2.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5260MHz
Test by :Rock

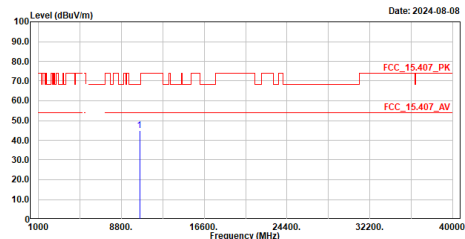


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10520.000	44.74	68.22	-23.48	41.84	2.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5280MHz
Test by :Rock

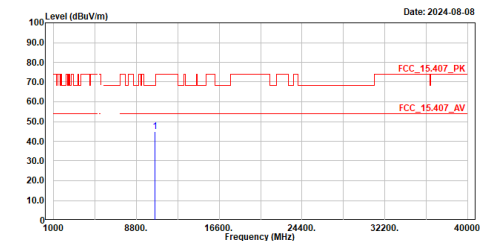

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	45.04	68.22	-23.18	42.12	2.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5280MHz
Test by :Rock

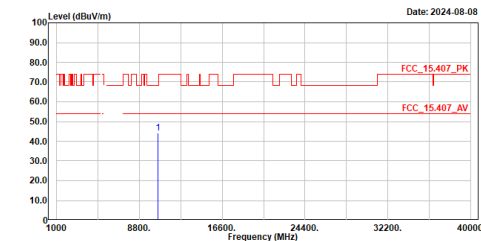

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10560.000	44.28	68.22	-24.02	41.28	2.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5320MHz
Test by :Rock

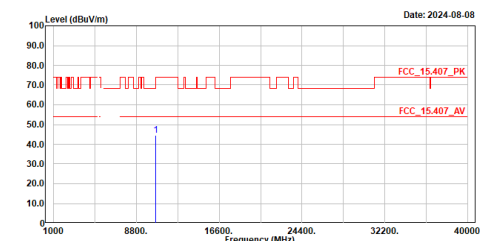

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	44.34	74.00	-29.66	41.27	3.07	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5320MHz
Test by :Rock

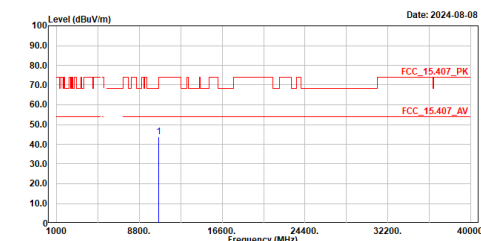

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	43.93	74.00	-30.07	40.86	3.07	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5500MHz
Test by :Rock

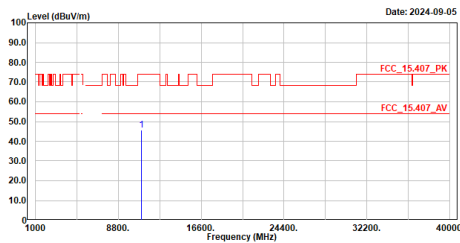

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5500MHz
Test by :Rock

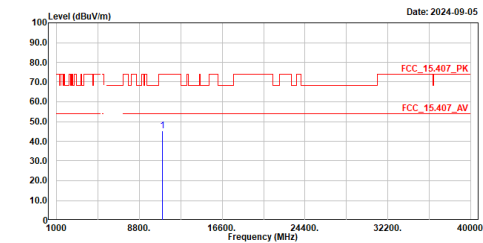

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5600MHz
Test by :Rock

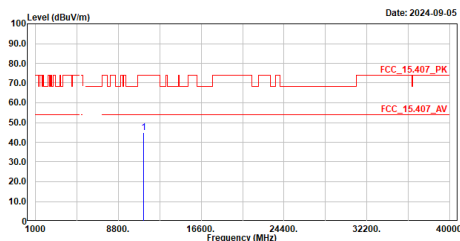

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5600MHz
Test by :Rock

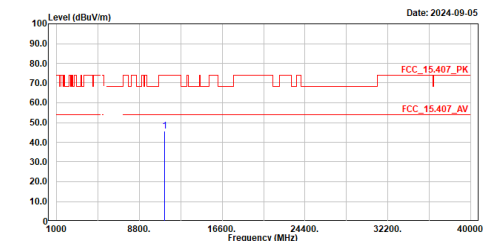

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5700MHz
Test by :Rock

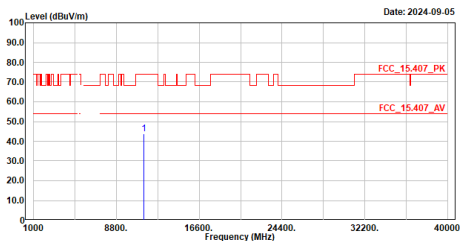

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	43.72	74.00	-30.28	39.60	4.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5700MHz
Test by :Rock

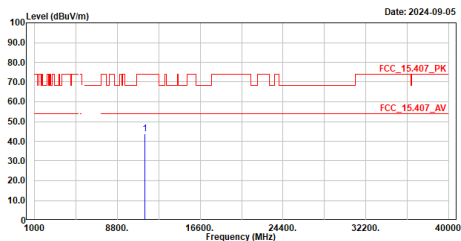

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11400.000	43.66	74.00	-30.34	39.54	4.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5720MHz
Test by :Rock

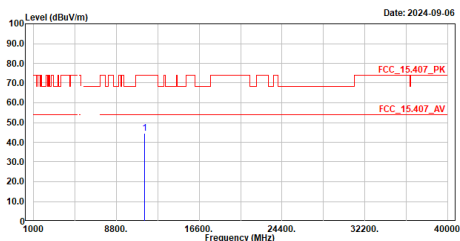

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	44.67	74.00	-29.33	40.44	4.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5720MHz
Test by :Rock

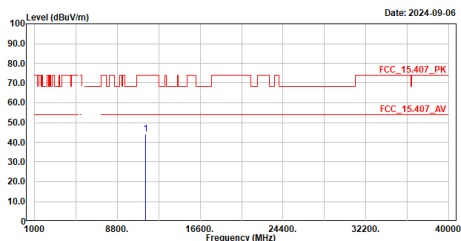

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	44.26	74.00	-29.74	40.03	4.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5745MHz
Test by :Rock

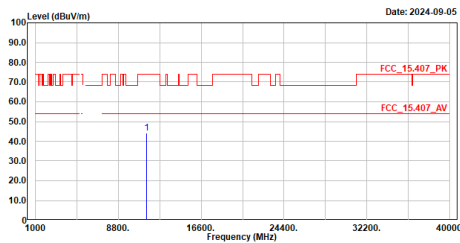


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	44.00	74.00	-30.00	39.81	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5745MHz
Test by :Rock

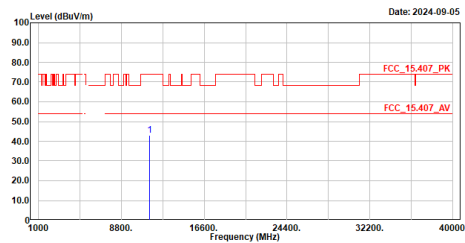


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	43.13	74.00	-30.87	38.94	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5785MHz
Test by :Rock

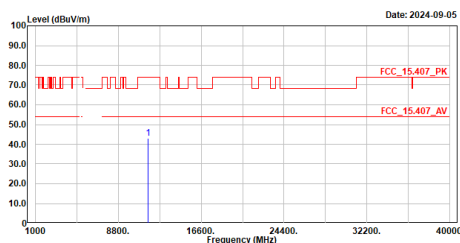


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	43.16	74.00	-30.84	38.92	4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5785MHz
Test by :Rock

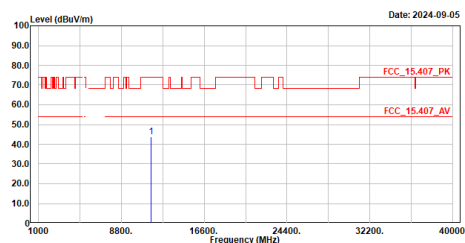


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	43.65	74.00	-30.35	39.41	4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n20_5825MHz
Test by :Rock

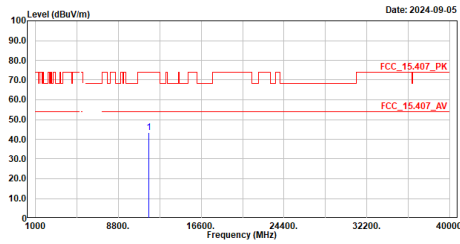


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	43.49	74.00	-30.51	39.31	4.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n20_5825MHz
Test by :Rock

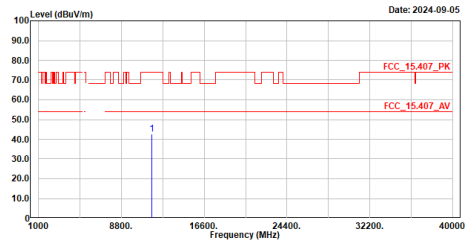


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	42.76	74.00	-31.24	38.58	4.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5190MHz
Test by :Rock

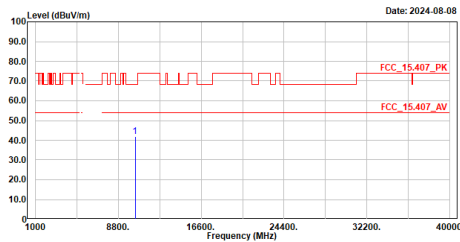


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	41.73	68.22	-26.49	38.99	2.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5190MHz
Test by :Rock

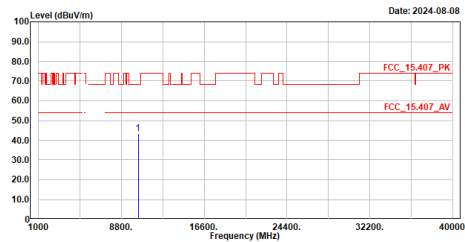


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10380.000	43.42	68.22	-24.80	40.68	2.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5230MHz
Test by :Rock

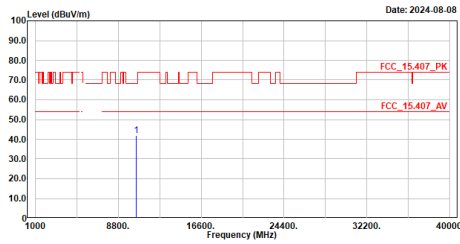


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	41.86	68.22	-26.36	39.16	2.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5230MHz
Test by :Rock

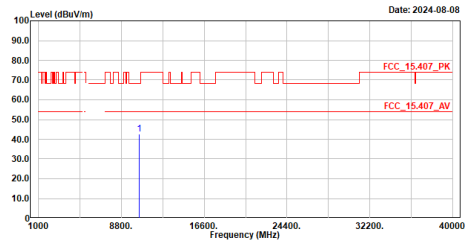


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10460.000	42.50	68.22	-25.72	39.80	2.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5270MHz
Test by :Rock

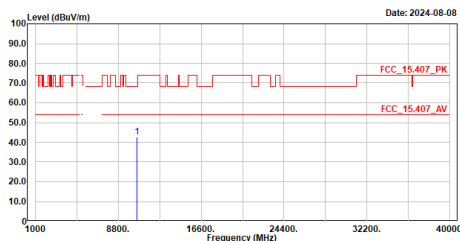


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	42.67	68.22	-25.55	39.77	2.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5270MHz
Test by :Rock

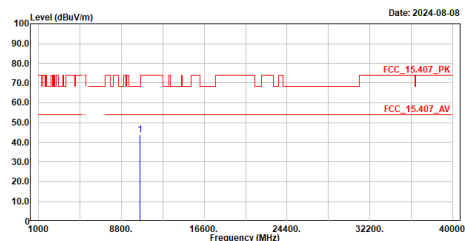


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	43.64	68.22	-24.58	40.74	2.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5310MHz
Test by :Rock

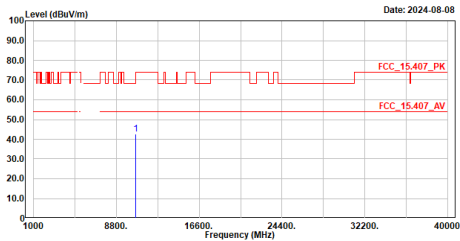

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	42.57	74.00	-31.43	39.53	3.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5310MHz
Test by :Rock

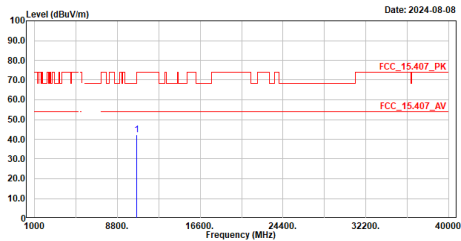

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	42.44	74.00	-31.56	39.40	3.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5510MHz
Test by :Rock

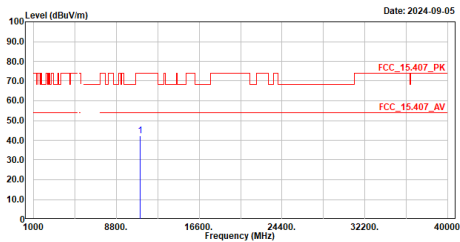

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11020.000	42.35	74.00	-31.65	39.01	3.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5510MHz
Test by :Rock

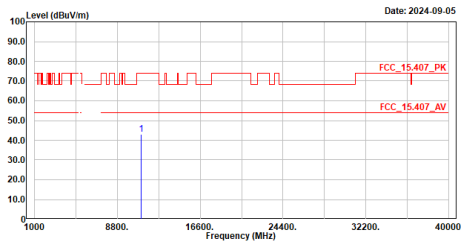

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11020.000	43.08	74.00	-30.92	39.74	3.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5590MHz
Test by :Rock

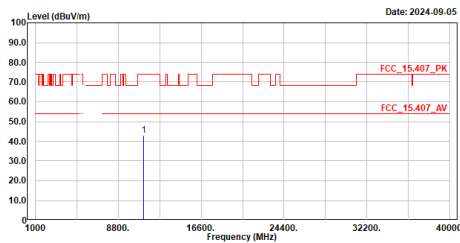


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11180.000	43.13	74.00	-30.87	39.38	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5590MHz
Test by :Rock

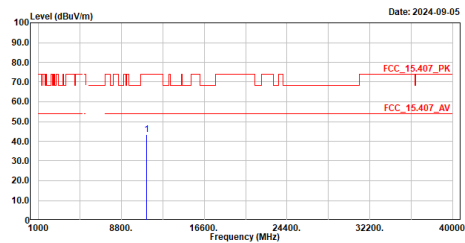


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11180.000	43.51	74.00	-30.49	39.76	3.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5670MHz
Test by :Rock

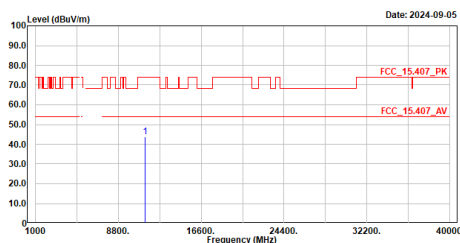


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	43.78	74.00	-30.22	39.67	4.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5670MHz
Test by :Rock

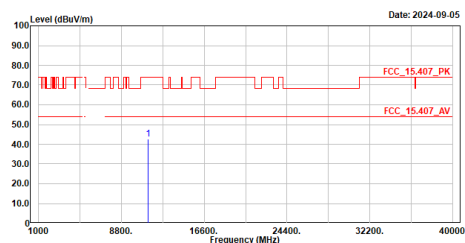


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	42.68	74.00	-31.32	38.57	4.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5710MHz
Test by :Rock

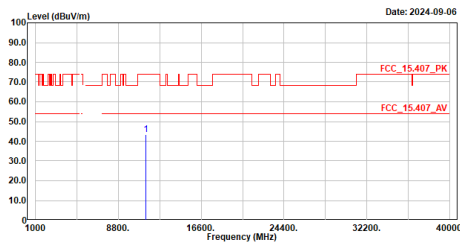


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	43.41	74.00	-30.59	39.24	4.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5710MHz
Test by :Rock

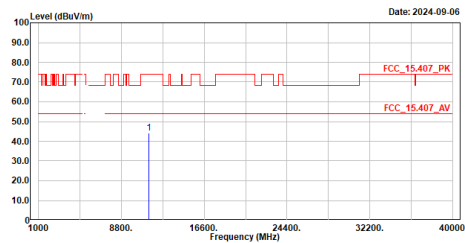


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	44.00	74.00	-30.00	39.83	4.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5755MHz
Test by :Rock

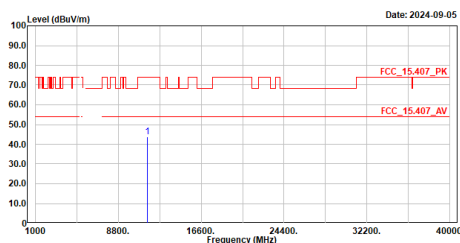


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11510.000	43.96	74.00	-30.04	39.77	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5755MHz
Test by :Rock

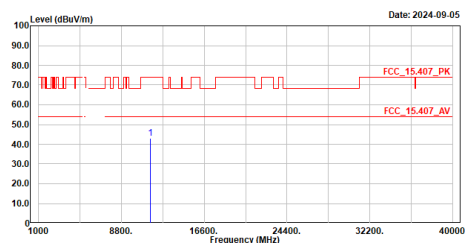


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11510.000	42.96	74.00	-31.04	38.77	4.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_n40_5795MHz
Test by :Rock

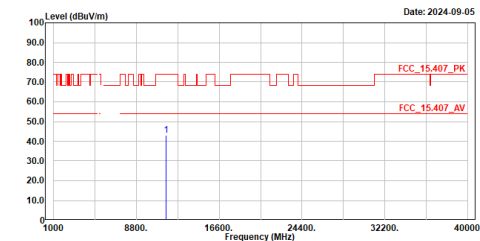

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11590.000	43.16	74.00	-30.84	38.94	4.22	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_n40_5795MHz
Test by :Rock

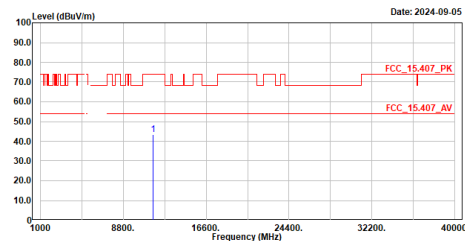

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11590.000	43.39	74.00	-30.61	39.17	4.22	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5210MHz
Test by :Rock

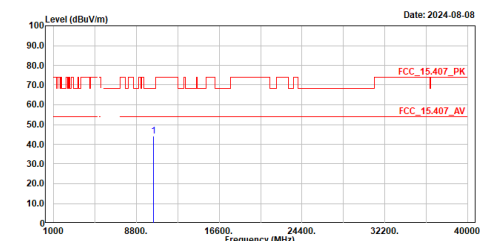

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	44.29	68.22	-23.93	41.63	2.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5210MHz
Test by :Rock

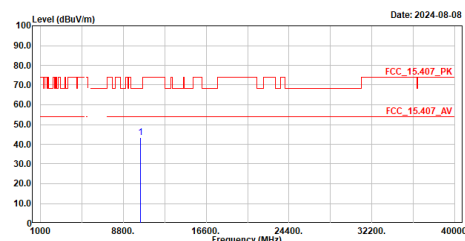

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	43.54	68.22	-24.68	40.88	2.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5290MHz
Test by :Rock

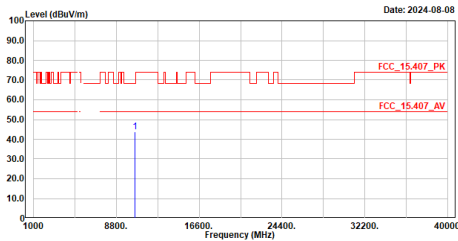

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	43.94	68.22	-24.28	40.97	2.97	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5290MHz
Test by :Rock

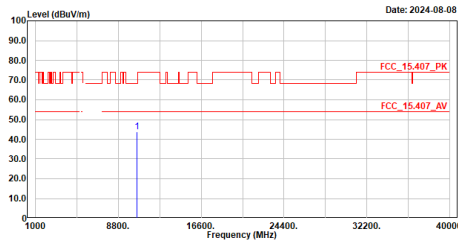

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	43.96	68.22	-24.26	40.99	2.97	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Rock

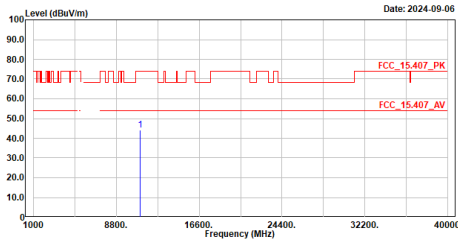

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	44.06	74.00	-29.94	40.61	3.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5530MHz
Test by :Rock

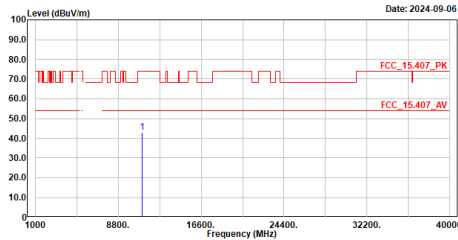

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	43.11	74.00	-30.89	39.66	3.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5610MHz
Test by :Rock

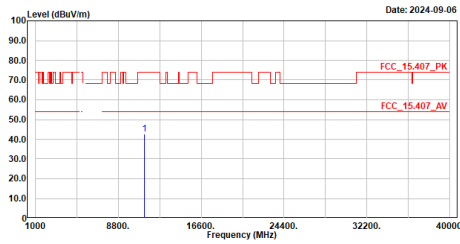


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	42.63	74.00	-31.37	38.74	3.89	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5610MHz
Test by :Rock

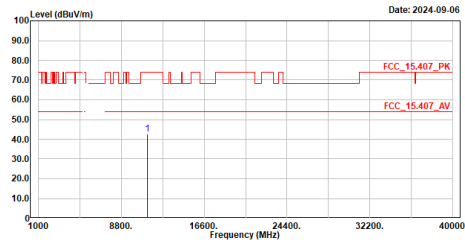


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	42.46	74.00	-31.54	38.57	3.89	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5690MHz
Test by :Rock

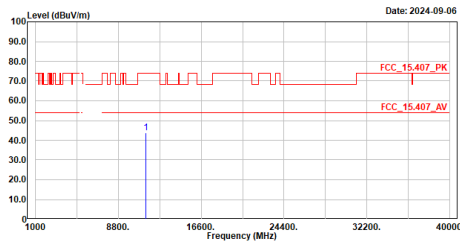


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	43.91	74.00	-30.09	39.80	4.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5690MHz
Test by :Rock

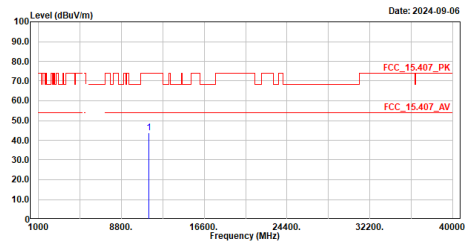


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	43.65	74.00	-30.35	39.54	4.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5775MHz
Test by :Rock

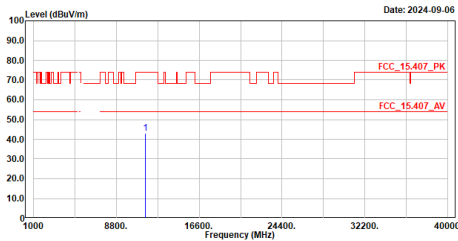

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	42.93	74.00	-31.07	38.67	4.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5775MHz
Test by :Rock

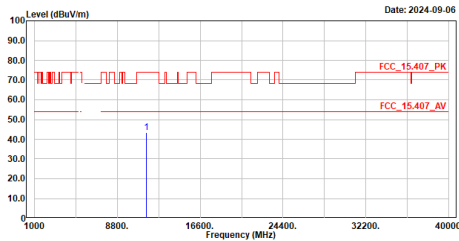

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	43.25	74.00	-30.75	38.99	4.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5250MHz
Test by :Rock

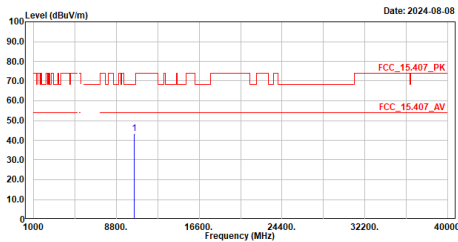

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	43.42	68.22	-24.80	40.54	2.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5250MHz
Test by :Rock

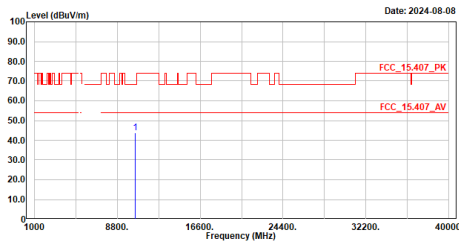

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	43.83	68.22	-24.39	40.95	2.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5570MHz
Test by :Rock

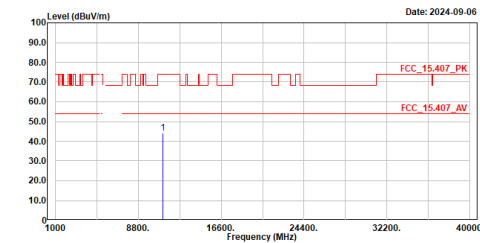


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11140.000	44.28	74.00	-29.72	40.64	3.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5570MHz
Test by :Rock

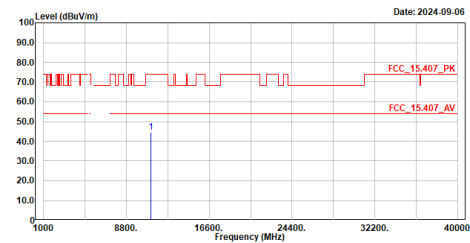


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11140.000	44.67	74.00	-29.33	41.03	3.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5570MHz
Test by :Rock

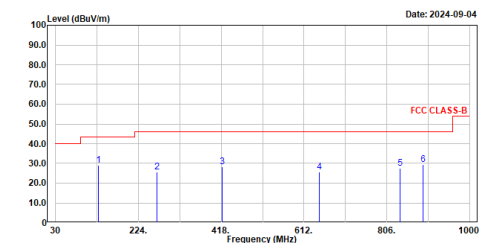


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	129.910	29.04	43.50	-14.46	53.90	-24.86	QP
2	267.359	25.50	46.00	-20.50	49.21	-23.71	QP
3	420.134	28.18	46.00	-17.82	47.71	-19.53	QP
4	648.181	25.56	46.00	-20.44	40.07	-14.51	QP
5	837.234	27.63	46.00	-18.37	39.32	-11.69	QP
6	891.263	29.62	46.00	-16.38	40.76	-11.14	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5570MHz
Test by :Rock

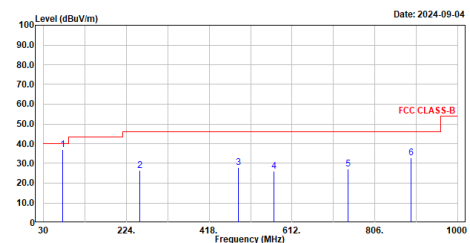


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	74.814	36.87	40.00	-3.13	63.99	-27.12	QP
2	254.749	26.41	46.00	-19.59	50.78	-24.37	QP
3	486.094	28.04	46.00	-17.96	45.87	-17.83	QP
4	569.902	25.98	46.00	-20.02	41.81	-15.83	QP
5	742.562	27.36	46.00	-18.64	40.14	-12.78	QP
6	891.263	32.76	46.00	-13.24	43.90	-11.14	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5180MHz
Test by :Rock

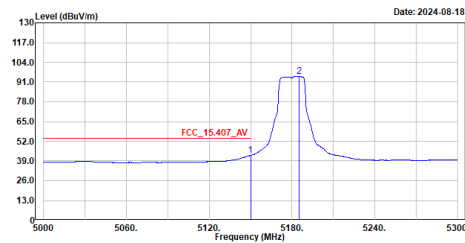


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	42.60	54.00	-11.40	28.14	14.46	Average
2	5185.400	94.63	-----	-----	80.19	14.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5180MHz
Test by :Rock

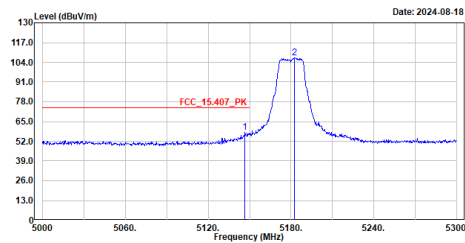


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.700	58.03	74.00	-15.97	43.57	14.46	Peak
2	5182.400	107.06	-----	-----	92.63	14.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5180MHz
Test by :Rock

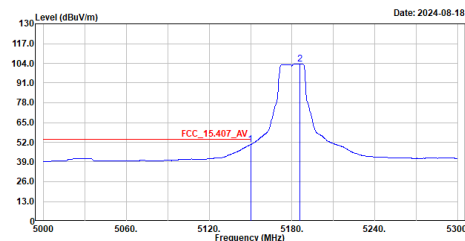


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	50.49	54.00	-3.51	36.03	14.46	Average
2	5185.700	103.64	-----	-----	89.20	14.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5180MHz
Test by :Rock

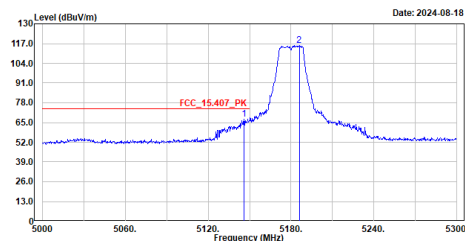


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.100	67.30	74.00	-6.70	52.84	14.46	Peak
2	5186.000	115.85	-----	-----	101.41	14.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5320MHz
Test by :Rock

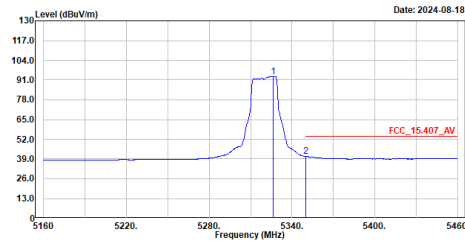


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.000	93.31	-----	-----	78.92	14.39	Average
2	5350.200	40.69	54.00	-13.31	26.32	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5320MHz
Test by :Rock

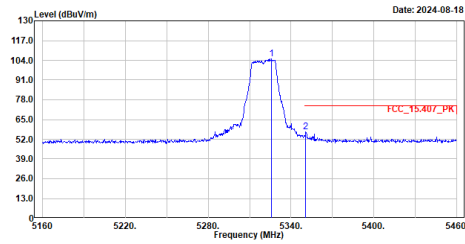


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.000	104.84	-----	-----	90.45	14.39	Peak
2	5350.800	56.95	74.00	-17.05	42.58	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5320MHz
Test by :Rock

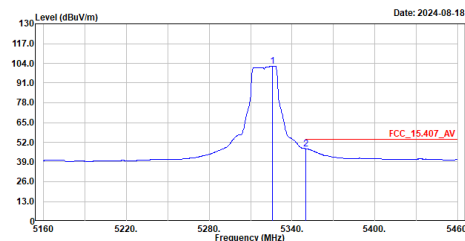


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.600	102.11	-----	-----	87.72	14.39	Average
2	5350.200	47.74	54.00	-6.26	33.37	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5320MHz
Test by :Rock

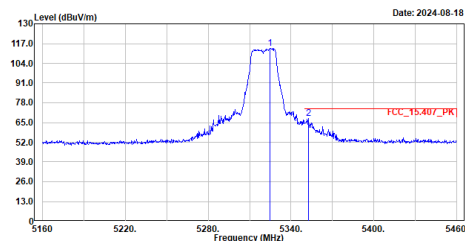


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5325.000	113.96	-----	-----	99.57	14.39	Peak
2	5352.600	67.50	74.00	-6.50	53.14	14.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5500MHz
Test by :Rock

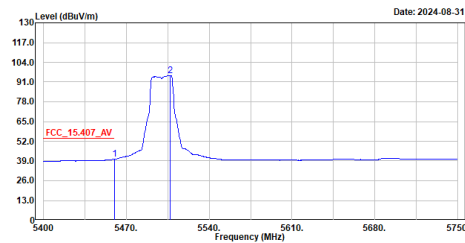


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	40.19	54.00	-13.81	25.51	14.68	Average
2	5507.100	95.31	-----	-----	80.38	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5500MHz
Test by :Rock

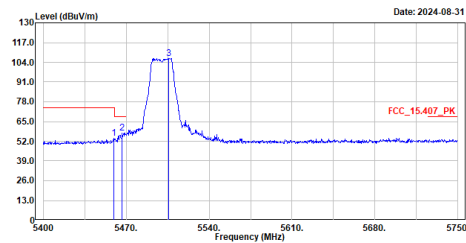


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.150	53.83	74.00	-20.17	39.15	14.68	Peak
2	5466.500	57.60	68.22	-10.62	42.88	14.72	Peak
3	5506.050	106.59	-----	-----	91.67	14.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5500MHz
Test by :Rock

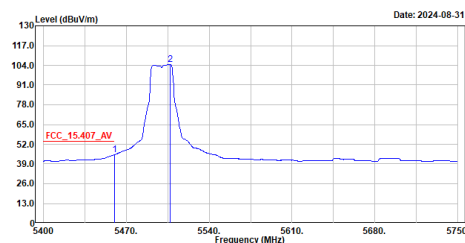


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	45.10	54.00	-8.90	30.42	14.68	Average
2	5507.100	104.53	-----	-----	89.60	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5500MHz
Test by :Rock

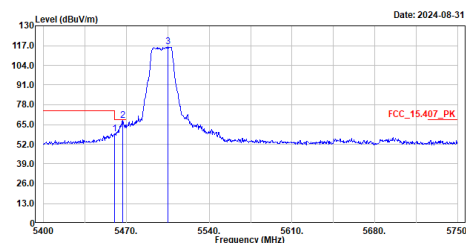


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	50.73	74.00	-15.27	44.05	14.68	Peak
2	5466.850	67.69	68.22	-0.53	52.97	14.72	Peak
3	5505.350	116.31	-----	-----	101.39	14.92	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5700MHz
Test by :Rock

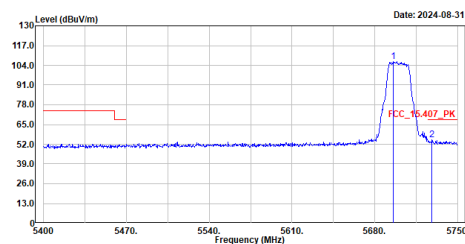


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5695.400	106.60	-----	-----	90.56	16.04	Peak
2	5728.300	54.71	68.22	-13.51	38.49	16.22	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5700MHz
Test by :Rock

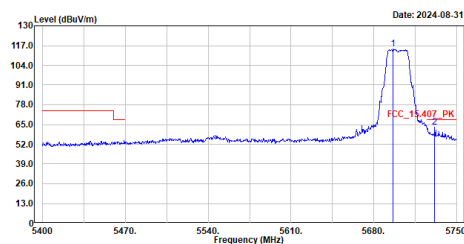


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5696.450	114.75	-----	-----	98.70	16.05	Peak
2	5731.450	63.30	68.22	-4.92	47.06	16.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5745MHz
Test by :Rock

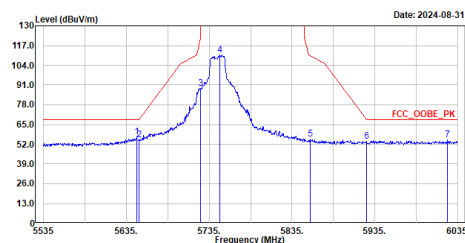


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5647.500	56.06	68.20	-11.34	41.24	15.62	Peak
2	5650.000	54.94	68.21	-13.27	39.30	15.64	Peak
3	5724.500	89.02	121.06	-32.04	72.82	16.20	Peak
4	5747.500	110.95	-----	-----	94.64	16.31	Peak
5	5857.000	55.40	110.24	-54.84	39.06	16.34	Peak
6	5925.000	53.88	68.21	-14.33	37.45	16.43	Peak
7	6023.000	54.87	68.20	-13.33	38.31	16.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5745MHz
Test by :Rock

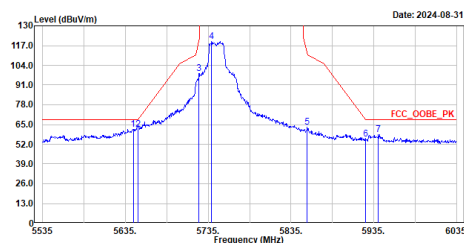


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5644.500	62.00	68.20	-6.20	46.40	15.60	Peak
2	5650.000	61.69	68.21	-6.52	46.05	15.64	Peak
3	5724.000	98.41	119.92	-21.51	82.21	16.20	Peak
4	5739.000	119.55	-----	-----	103.28	16.27	Peak
5	5854.500	63.31	111.94	-48.63	46.97	16.34	Peak
6	5925.000	55.56	68.21	-12.65	39.13	16.43	Peak
7	5940.500	58.32	68.20	-9.88	41.88	16.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n20_5825MHz
Test by :Rock

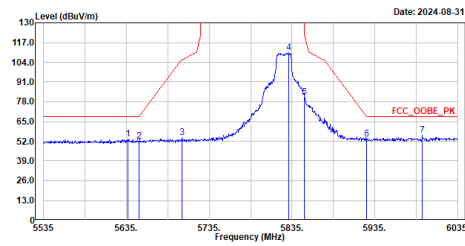


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5636.500	53.51	68.20	-14.69	37.97	15.54	Peak
2	5650.000	51.77	68.21	-16.44	36.13	15.64	Peak
3	5702.500	54.38	105.90	-51.52	38.29	16.09	Peak
4	5831.500	110.24	-----	-----	93.89	16.35	Peak
5	5850.000	80.93	122.20	-41.27	64.60	16.33	Peak
6	5925.000	53.72	68.21	-14.49	37.29	16.43	Peak
7	5992.500	56.00	68.20	-12.20	39.50	16.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n20_5825MHz
Test by :Rock

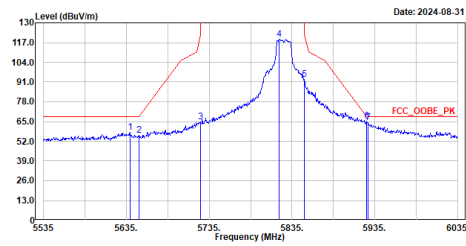


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5639.500	57.78	68.20	-10.42	42.22	15.56	Peak
2	5650.000	55.86	68.21	-12.35	40.22	15.64	Peak
3	5724.500	64.80	121.06	-56.26	48.60	16.20	Peak
4	5819.500	119.23	-----	-----	102.87	16.36	Peak
5	5850.000	92.63	122.20	-29.57	76.30	16.33	Peak
6	5925.000	65.21	68.21	-3.00	48.78	16.43	Peak
7	5926.500	64.41	68.20	-3.79	47.98	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5190MHz
Test by :Rock

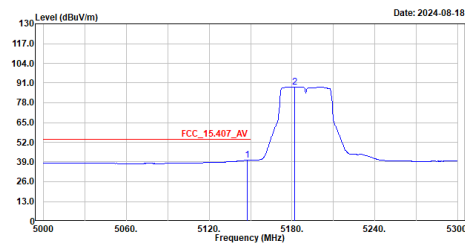


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.600	40.16	54.00	-13.84	25.70	14.46	Average
2	5182.100	88.52	-----	-----	74.09	14.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5190MHz
Test by :Rock

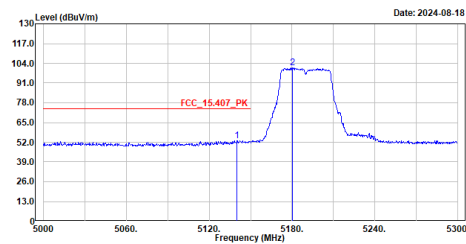


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5140.100	53.15	74.00	-20.85	38.71	14.44	Peak
2	5180.600	101.01	-----	-----	86.58	14.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5190MHz
Test by :Rock

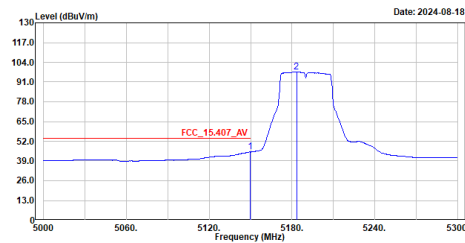


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	44.92	54.00	-9.08	30.46	14.46	Average
2	5183.300	97.60	-----	-----	83.16	14.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5190MHz
Test by :Rock

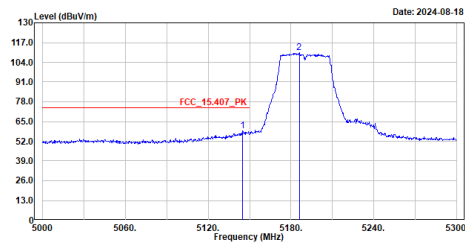


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.900	58.97	74.00	-15.03	44.51	14.46	Peak
2	5186.000	110.15	-----	-----	95.71	14.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5310MHz
Test by :Rock

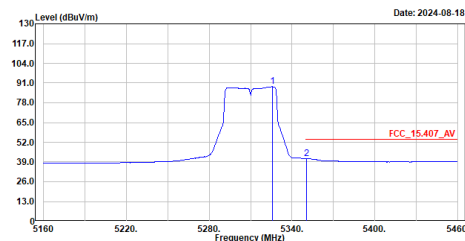


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5325.600	88.57	-----	-----	74.18	14.39	Average
2	5350.800	41.25	54.00	-12.75	26.88	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5310MHz
Test by :Rock

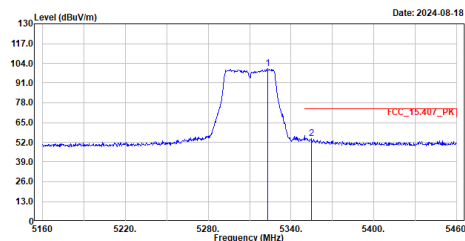


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5323.200	100.44	-----	-----	86.05	14.39	Peak
2	5355.000	54.39	74.00	-19.61	40.02	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5310MHz
Test by :Rock

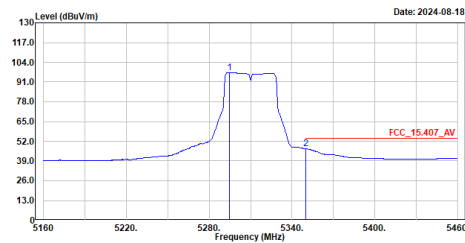


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.700	97.32	-----	-----	82.89	14.43	Average
2	5350.200	46.99	54.00	-7.01	32.62	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5310MHz
Test by :Rock

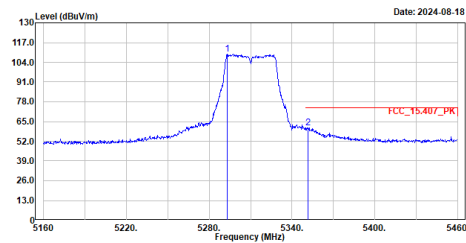


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5292.900	109.37	-----	-----	94.94	14.43	Peak
2	5351.700	60.97	74.00	-13.03	46.60	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5510MHz
Test by :Rock

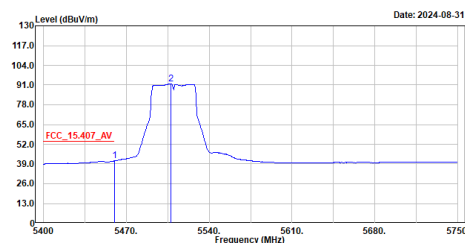


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	41.01	54.00	-12.99	26.33	14.68	Average
2	5507.450	91.75	-----	-----	76.82	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5510MHz
Test by :Rock

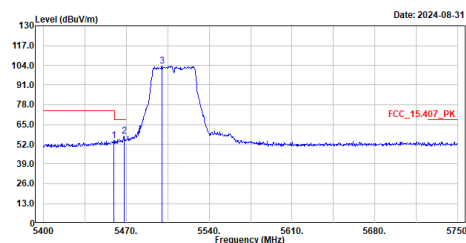


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.500	54.42	74.00	-19.58	39.74	14.68	Peak
2	5467.900	57.22	68.22	-11.00	42.50	14.72	Peak
3	5500.100	103.36	-----	-----	88.46	14.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5510MHz
Test by :Rock

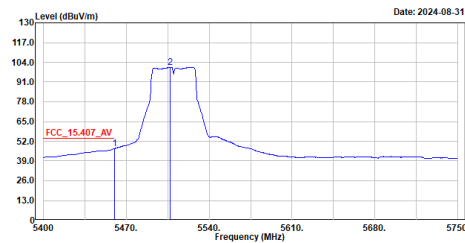


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	47.07	54.00	-6.93	32.39	14.68	Average
2	5507.100	100.60	-----	-----	85.67	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5510MHz
Test by :Rock

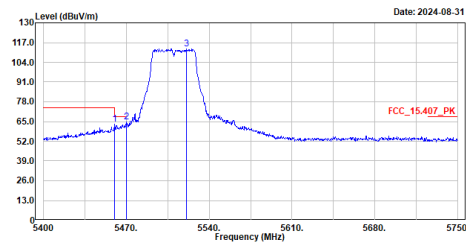


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	63.28	74.00	-10.72	48.60	14.68	Peak
2	5470.000	64.93	68.22	-3.29	50.19	14.74	Peak
3	5521.100	112.70	-----	-----	97.70	15.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_n40_5670MHz
Test by :Rock

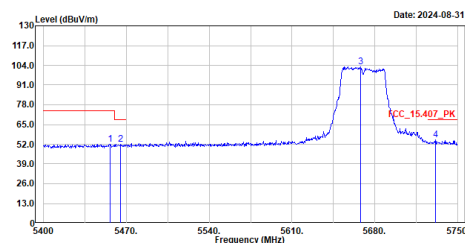


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.000	52.18	74.00	-21.82	37.52	14.66	Peak
2	5465.100	51.98	68.22	-16.24	37.28	14.70	Peak
3	5668.100	103.21	-----	-----	87.41	15.80	Peak
4	5731.100	55.09	68.22	-13.13	38.86	16.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_n40_5670MHz
Test by :Rock

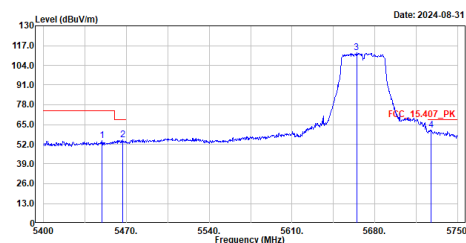


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5449.350	54.30	74.00	-19.70	39.68	14.62	Peak
2	5467.200	54.99	68.22	-13.23	40.27	14.72	Peak
3	5664.600	112.29	-----	-----	96.52	15.77	Peak
4	5727.600	61.24	68.22	-6.98	45.03	16.21	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

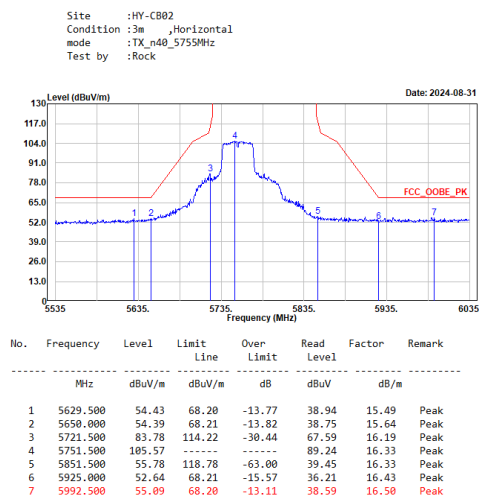


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

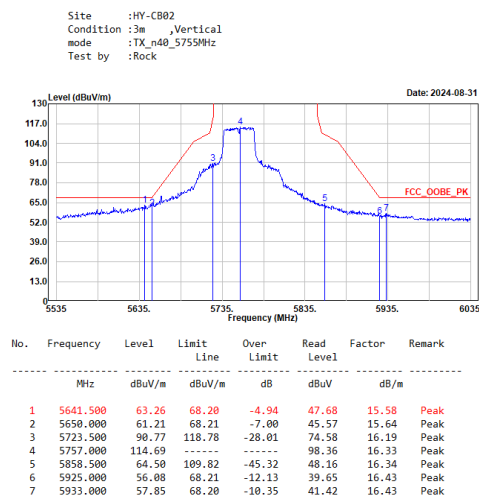

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

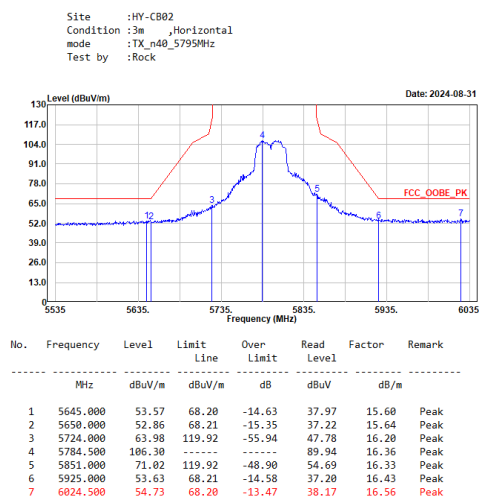


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

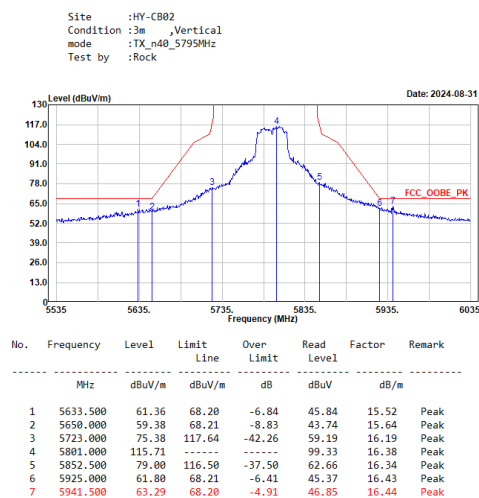

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Rock

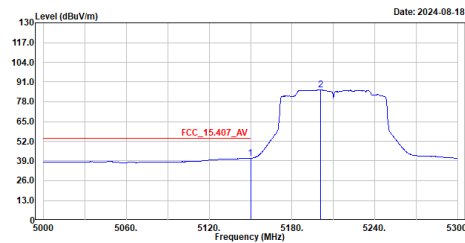


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	40.68	54.00	-13.32	26.22	14.46	Average
2	5200.700	85.79	-----	-----	71.36	14.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Rock

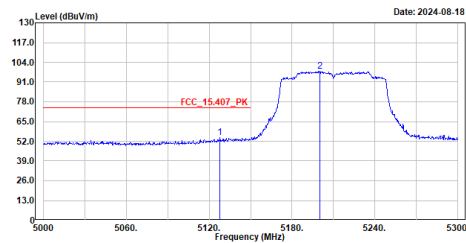


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5127.800	54.28	74.00	-19.72	39.85	14.43	Peak
2	5200.400	97.94	-----	-----	83.51	14.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Rock

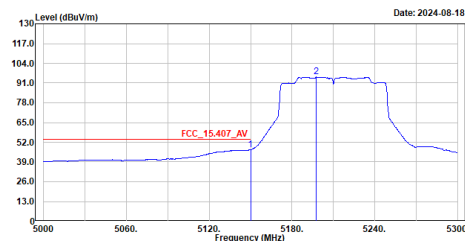


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	47.06	54.00	-6.94	32.60	14.46	Average
2	5197.700	94.95	-----	-----	80.52	14.43	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Rock

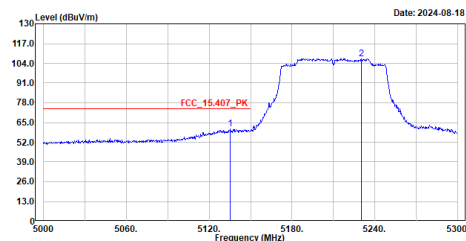


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5135.300	60.88	74.00	-13.12	46.44	14.44	Peak
2	5230.100	107.06	-----	-----	92.65	14.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Rock

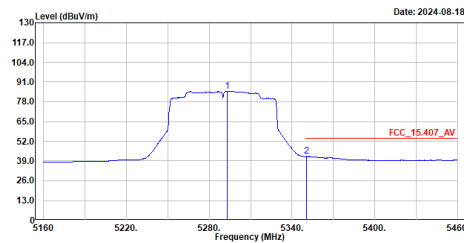


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5293.200	84.96	-----	-----	70.53	14.43	Average
2	5350.500	41.98	54.00	-12.02	27.61	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Rock

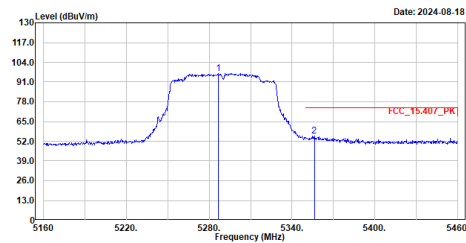


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5286.600	96.76	-----	-----	82.34	14.42	Peak
2	5356.200	55.55	74.00	-18.45	41.18	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Rock

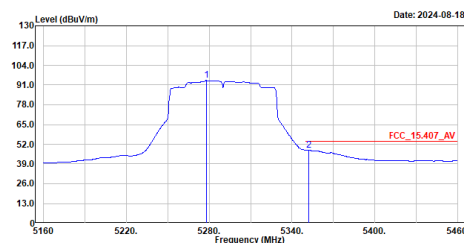


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5277.900	94.28	-----	-----	79.86	14.42	Average
2	5352.000	48.04	54.00	-5.96	33.67	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Rock

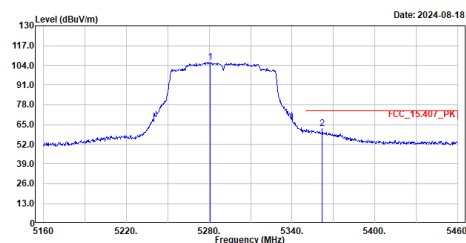


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5280.900	105.98	-----	-----	91.56	14.42	Peak
2	5361.900	62.34	74.00	-11.66	47.97	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Rock

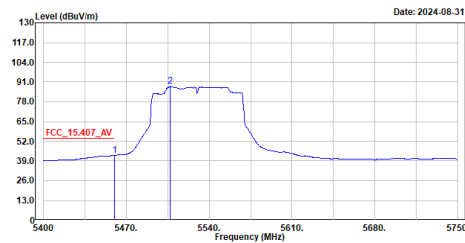


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	42.72	54.00	-11.28	28.04	14.68	Average
2	5507.100	88.08	-----	-----	73.15	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Rock

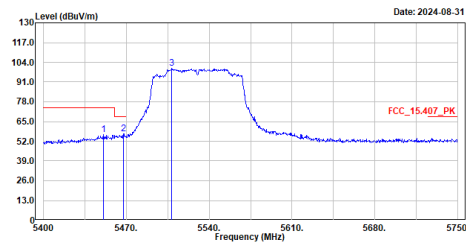


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5450.750	56.44	74.00	-17.56	41.82	14.62	Peak
2	5467.550	56.70	68.22	-11.52	41.98	14.72	Peak
3	5508.500	100.01	-----	-----	85.08	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Rock

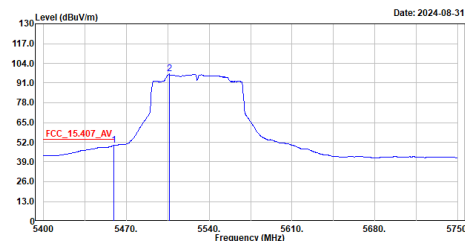


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.150	49.98	54.00	-4.02	35.30	14.68	Average
2	5506.400	97.19	-----	-----	82.26	14.93	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Rock

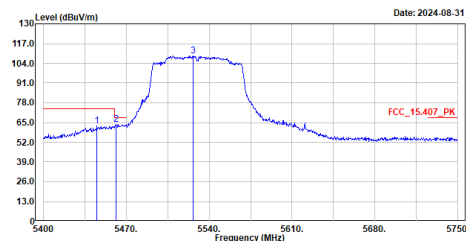


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5445.150	62.80	74.00	-11.20	48.20	14.60	Peak
2	5461.250	63.60	68.22	-4.62	48.91	14.69	Peak
3	5526.700	109.00	-----	-----	93.97	15.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5775MHz
Test by :Rock

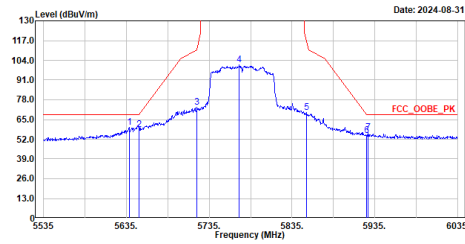


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5638.500	60.01	68.20	-8.19	44.46	15.55	Peak
2	5650.000	58.30	68.21	-9.91	42.66	15.64	Peak
3	5720.500	72.99	111.94	-38.95	56.81	16.18	Peak
4	5771.500	101.27	-----	-----	84.93	16.34	Peak
5	5853.000	69.53	115.36	-45.83	53.19	16.34	Peak
6	5925.000	54.64	68.21	-13.57	38.21	16.43	Peak
7	5927.000	56.41	68.20	-11.79	39.98	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5775MHz
Test by :Rock

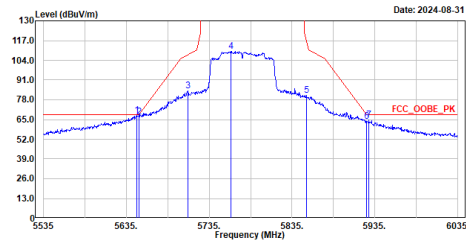


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5647.500	67.65	68.20	-0.55	52.03	15.62	Peak
2	5650.000	66.61	68.21	-1.60	50.97	15.64	Peak
3	5709.000	83.83	107.72	-23.89	67.70	16.13	Peak
4	5761.000	109.92	-----	-----	93.59	16.33	Peak
5	5852.500	80.98	116.50	-35.52	64.64	16.34	Peak
6	5925.000	63.79	68.21	-4.42	47.36	16.43	Peak
7	5928.000	64.90	68.20	-3.30	48.47	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

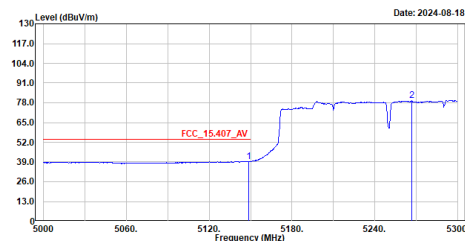


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5148.000	39.38	54.00	-14.62	24.92	14.46	Average
2	5266.700	79.32	-----	-----	64.90	14.42	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

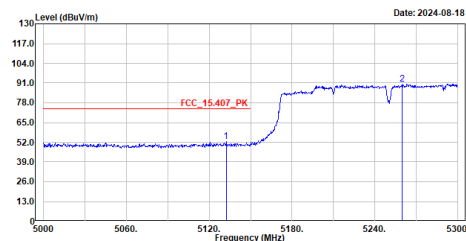


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5132.300	52.37	74.00	-21.63	37.93	14.44	Peak
2	5259.800	90.17	-----	-----	75.76	14.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

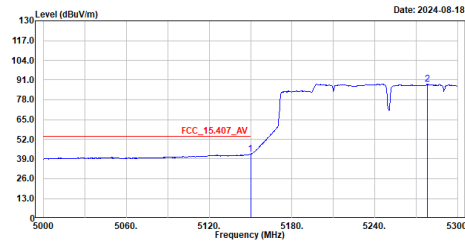


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	42.13	54.00	-11.87	27.67	14.46	Average
2	5278.100	88.33	-----	-----	73.91	14.42	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 1
Test by :Rock

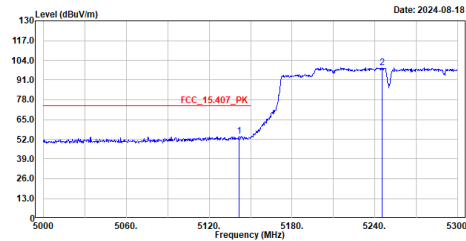


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5141.600	53.89	74.00	-20.11	39.45	14.44	Peak
2	5245.100	99.33	-----	-----	84.92	14.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

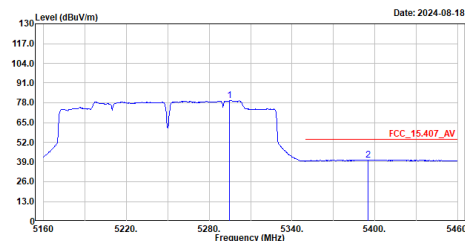


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.700	79.48	-----	-----	65.05	14.43	Average
2	5395.200	48.45	54.00	-13.55	26.10	14.35	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

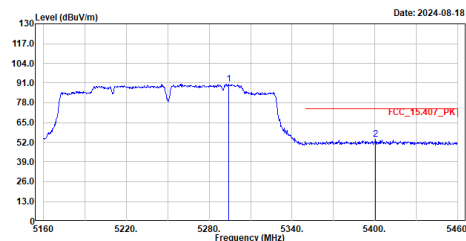


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.400	90.38	-----	-----	75.95	14.43	Peak
2	5400.600	53.80	74.00	-20.20	39.45	14.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

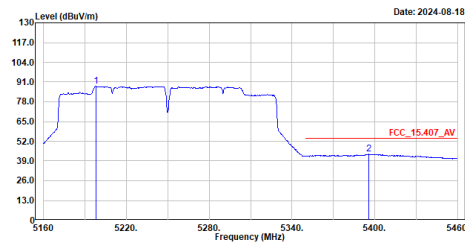


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5197.800	88.47	-----	-----	74.04	14.43	Average
2	5395.500	43.42	54.00	-10.58	29.07	14.35	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5250MHz_Band 2
Test by :Rock

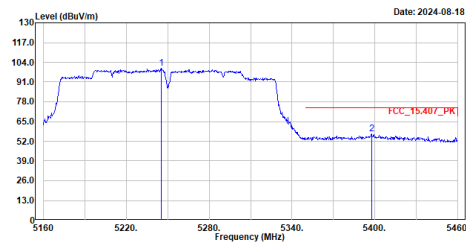


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5245.200	100.15	-----	-----	85.74	14.41	Peak
2	5397.600	56.73	74.00	-17.27	42.39	14.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5570MHz
Test by :Rock

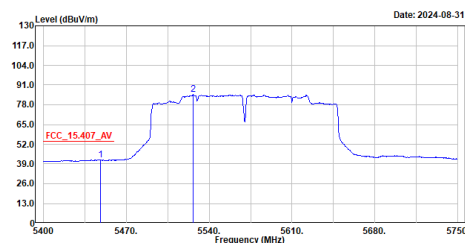


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5447.950	41.74	54.00	-12.26	27.13	14.61	Average
2	5526.700	84.70	-----	-----	69.67	15.03	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5570MHz
Test by :Rock

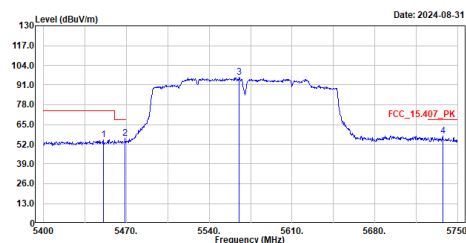


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5450.750	54.78	74.00	-19.22	40.16	14.62	Peak
2	5468.950	55.85	68.22	-12.37	41.12	14.73	Peak
3	5565.550	95.94	-----	-----	80.76	15.18	Peak
4	5737.400	57.29	68.22	-10.93	41.03	16.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5570MHz
Test by :Rock

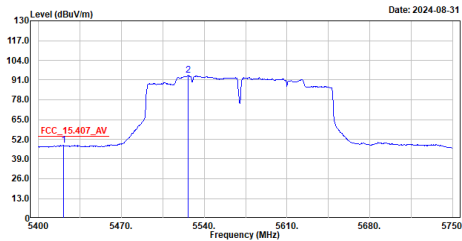

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5421.000	48.18	54.00	-5.82	33.72	14.46	Average
2	5526.350	94.11	-----	-----	79.08	15.03	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5570MHz
Test by :Rock

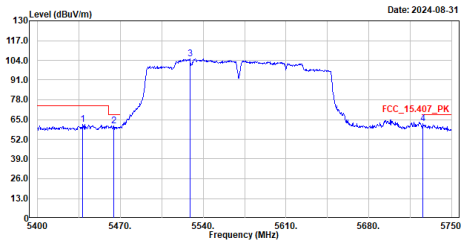

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5438.150	61.73	74.00	-12.27	47.18	14.55	Peak
2	5464.400	60.94	68.22	-7.28	46.24	14.70	Peak
3	5528.800	105.01	-----	-----	89.97	15.04	Peak
4	5725.850	62.50	68.22	-5.72	46.30	16.20	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.