Appendix A. Test Result of Maximum Conducted Output Power

Modulation	Frequency (MHz)	Maximum Conducted Peak Output Power (dBm)	Limit (dBm)	Result
GFSK (1 Mbps)	2402	6.85	30.00	Pass
GFSK (2 Mbps)	2402	6.77	30.00	Pass

Appendix B. Test Result of Radiated Emission

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ble1m_2402MHz
TEST BY :Caster

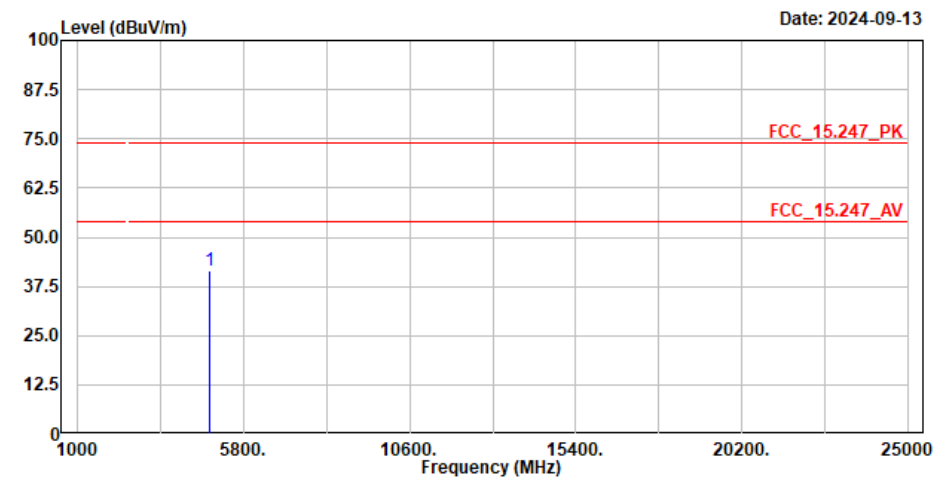

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4804.000	41.52	74.00	-32.48	56.34	-14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ble1m_2402MHz
TEST BY :Caster

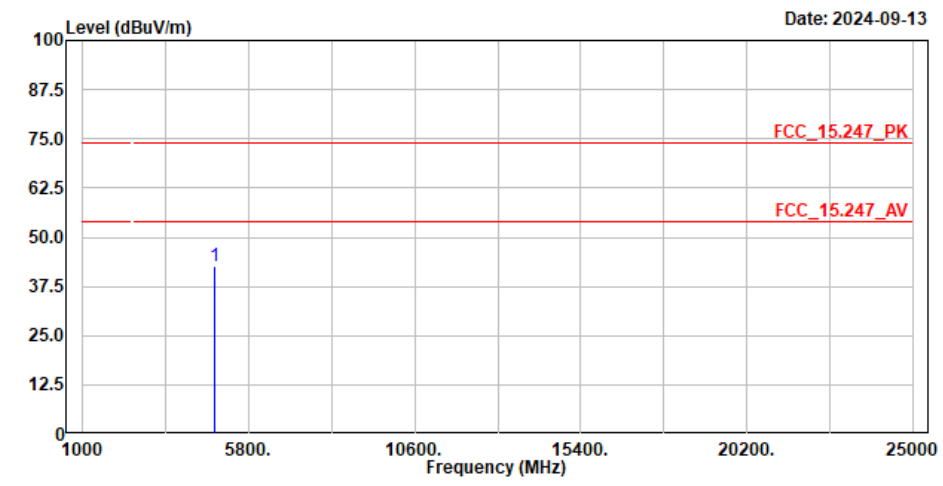

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4804.000	42.63	74.00	-31.37	57.45	-14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ble2m_2402MHz
TEST BY :Caster

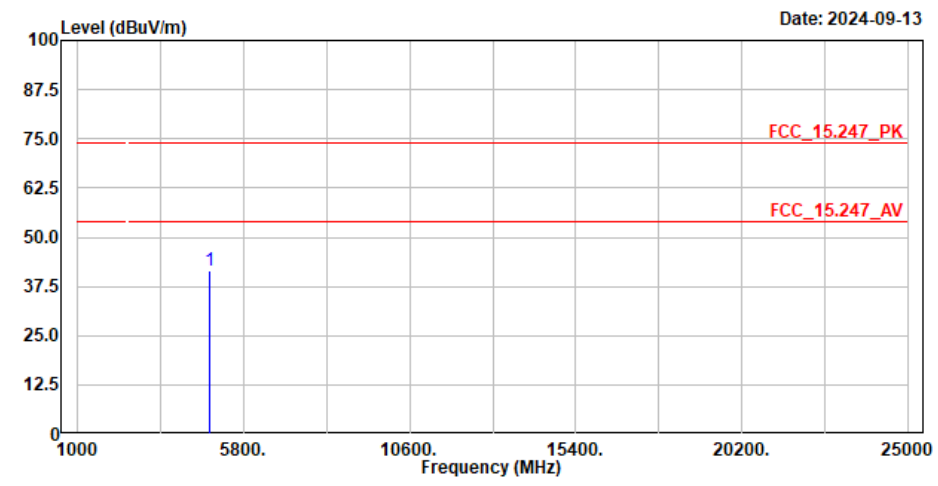

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4804.000	41.40	74.00	-32.60	56.22	-14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ble2m_2402MHz
TEST BY :Caster

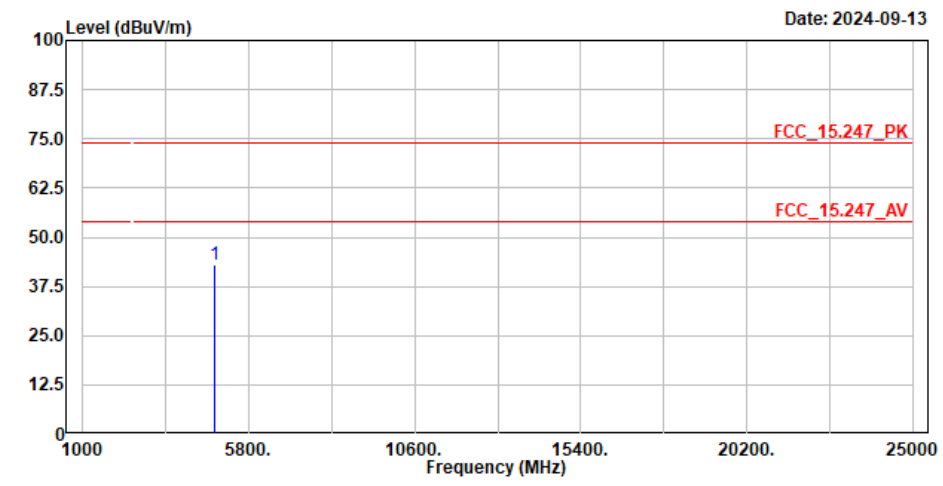

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	4804.000	42.89	74.00	-31.11	57.71	-14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Adapter_DCT36W120300ZZ-D2

```
Site      :HY-CB01
Condition :3m     ,HORIZONTAL
Mode      :TX_BLE2M_2402MHz
TEST BY   :Peter
```

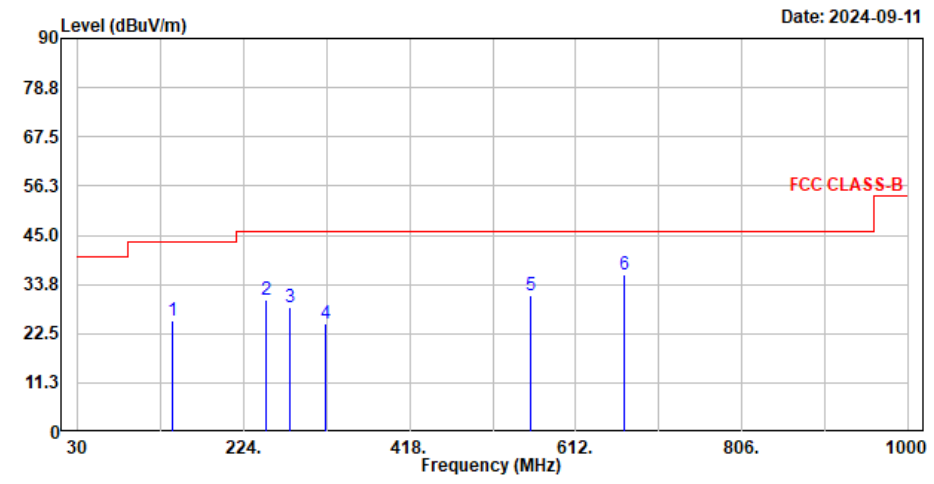

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	141.550	25.49	43.50	-18.01	49.68	-24.19	QP
2	250.190	30.26	46.00	-15.74	55.08	-24.82	QP
3	278.320	28.50	46.00	-17.50	52.05	-23.55	QP
4	320.030	24.73	46.00	-21.27	47.06	-22.33	QP
5	559.620	31.28	46.00	-14.72	47.99	-16.71	QP
6	668.260	35.95	46.00	-10.05	50.54	-14.59	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

```
Site      :HY-CB01
Condition :3m     ,VERTICAL
Mode      :TX_BLE2M_2402MHz
TEST BY   :Peter
```

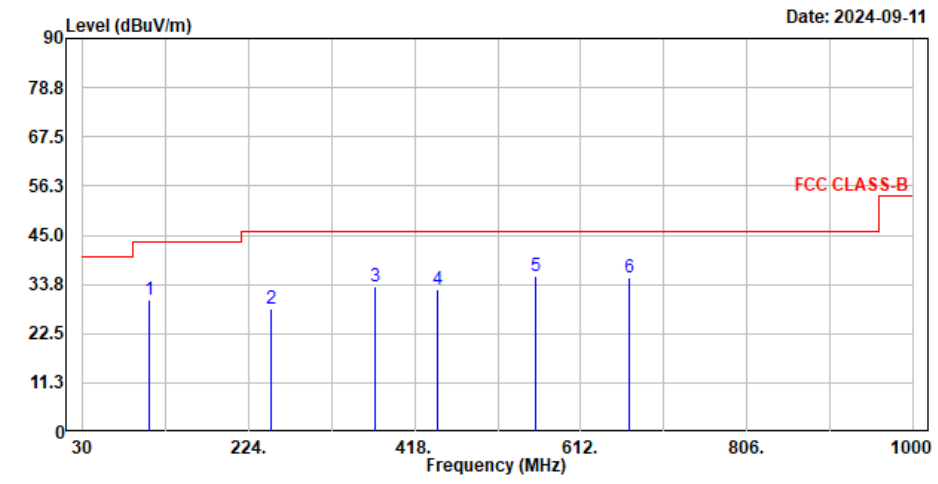

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	108.570	30.16	43.50	-13.34	57.22	-27.06	QP
2	250.190	28.19	46.00	-17.81	53.01	-24.82	QP
3	371.440	33.12	46.00	-12.88	54.19	-21.07	QP
4	445.160	32.60	46.00	-13.40	51.50	-18.90	QP
5	559.620	35.51	46.00	-10.49	52.22	-16.71	QP
6	668.260	35.48	46.00	-10.52	50.07	-14.59	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Adapter_PS36LA120K3000UD

```
Site      :HY-CB01
Condition :3m     ,HORIZONTAL
Mode      :TX_BLE2M_2402MHz
TEST BY   :Peter
```

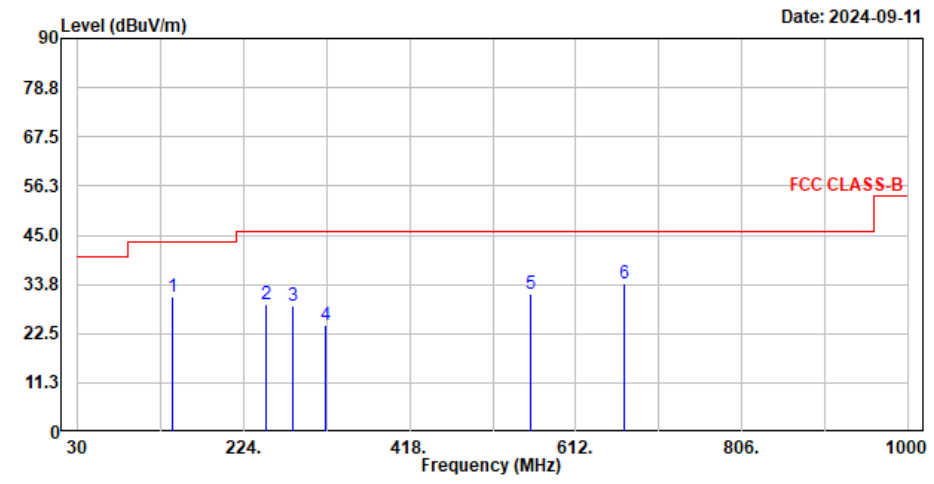

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	141.550	30.88	43.50	-12.62	55.07	-24.19	QP
2	250.190	29.25	46.00	-16.75	54.07	-24.82	QP
3	282.200	28.90	46.00	-17.10	52.27	-23.37	QP
4	320.030	24.38	46.00	-21.62	46.71	-22.33	QP
5	559.620	31.59	46.00	-14.41	48.30	-16.71	QP
6	668.260	33.95	46.00	-12.05	48.54	-14.59	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

```
Site      :HY-CB01
Condition :3m     ,VERTICAL
Mode      :TX_BLE2M_2402MHz
TEST BY   :Peter
```

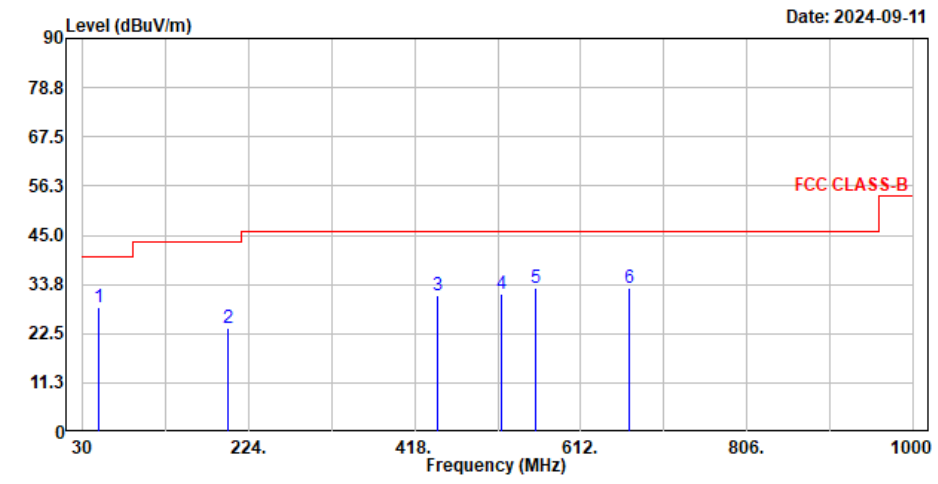

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	48.430	28.51	40.00	-11.49	51.75	-23.24	QP
2	200.720	23.79	43.50	-19.71	50.49	-26.70	QP
3	445.160	31.14	46.00	-14.86	50.04	-18.90	QP
4	519.850	31.53	46.00	-14.47	49.07	-17.54	QP
5	559.620	33.00	46.00	-13.00	49.71	-16.71	QP
6	668.260	32.94	46.00	-13.06	47.53	-14.59	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ble1m_2402MHz
TEST BY :Caster

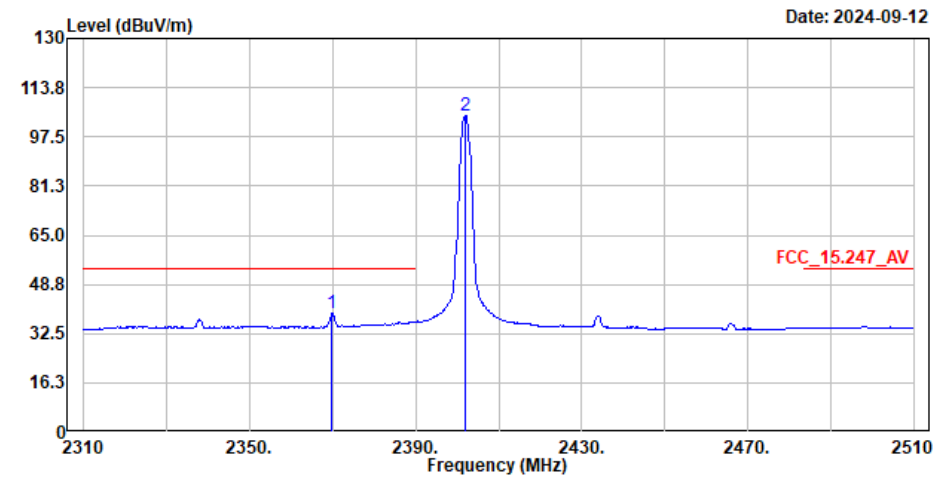

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2369.800	39.23	54.00	-14.77	33.46	5.77	Average
2	2402.000	104.62	------	------	98.82	5.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ble1m_2402MHz
TEST BY :Caster

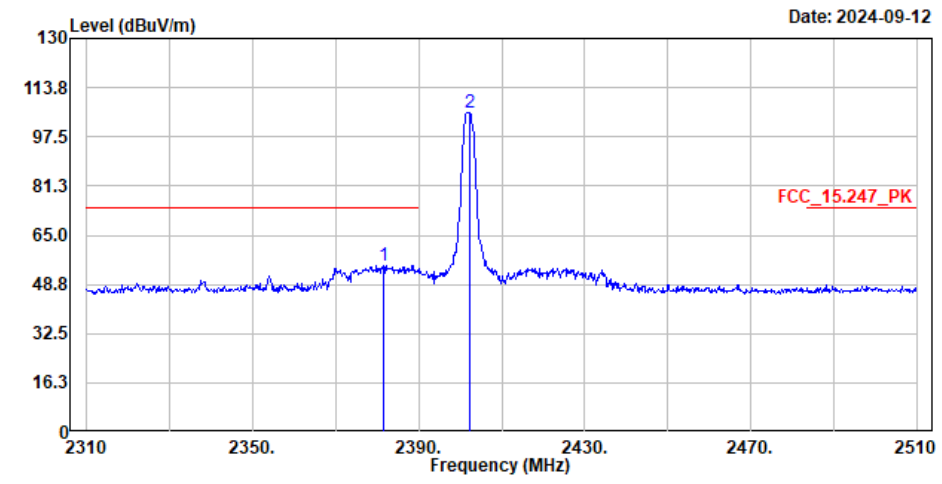

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2381.400	55.13	74.00	-18.87	49.34	5.79	Peak
2	2402.200	105.29	------	------	99.49	5.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ble1m_2402MHz
TEST BY :Caster

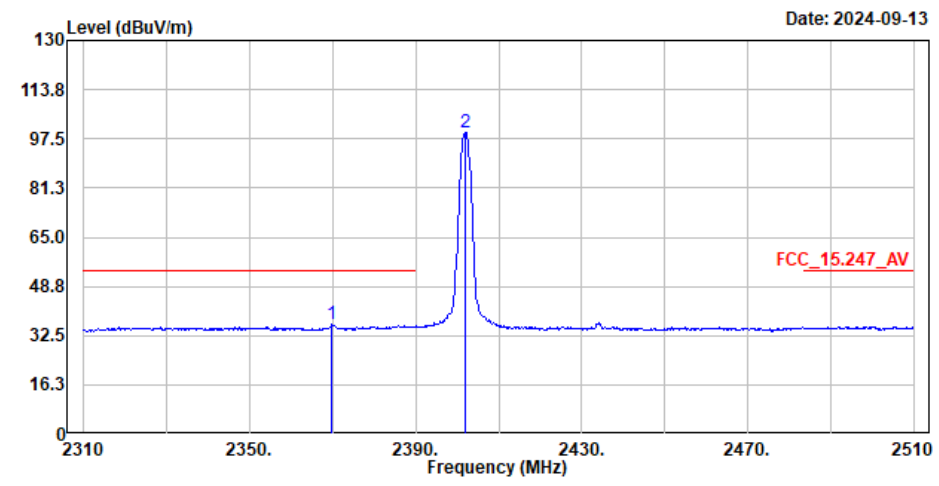

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2369.800	36.08	54.00	-17.92	30.31	5.77	Average
2	2402.000	99.58	------	------	93.78	5.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ble1m_2402MHz
TEST BY :Caster

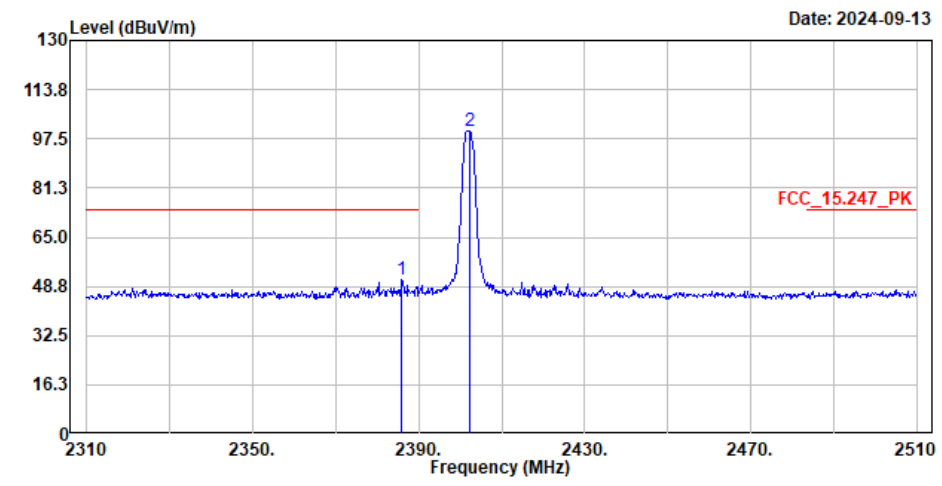

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2386.000	51.07	74.00	-22.93	45.23	5.84	Peak
2	2402.200	100.06	------	------	94.26	5.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ble2m_2402MHz
TEST BY :Caster

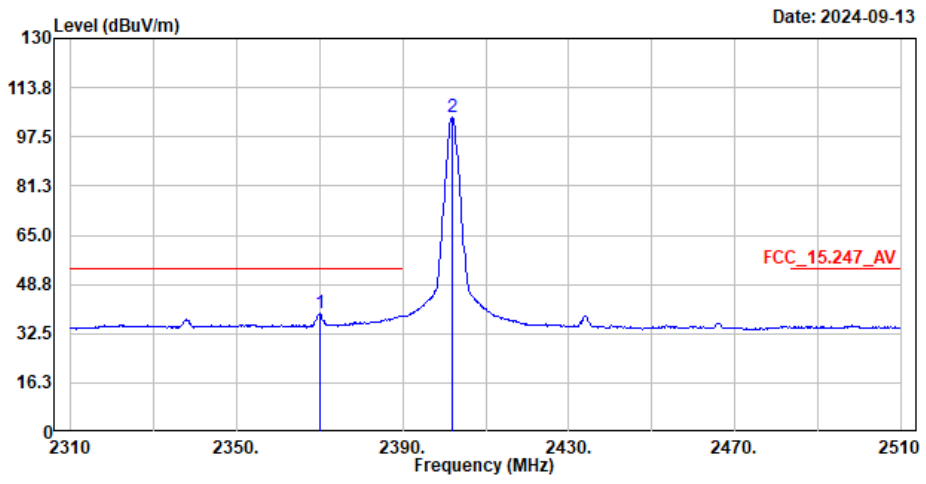

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2370.000	39.44	54.00	-14.56	33.67	5.77	Average
2	2402.000	103.90	------	------	98.10	5.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ble2m_2402MHz
TEST BY :Caster

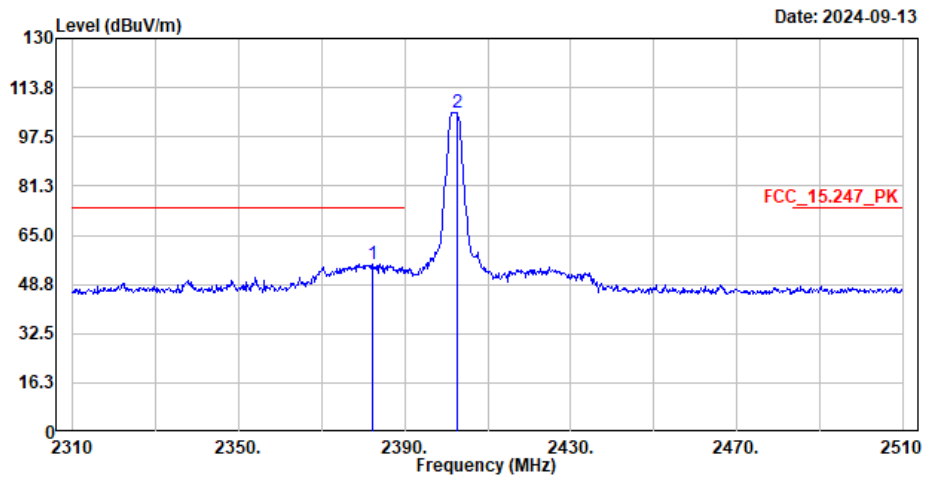

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2382.400	55.66	74.00	-18.34	49.86	5.80	Peak
2	2402.600	105.56	------	------	99.75	5.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ble2m_2402MHz
TEST BY :Caster

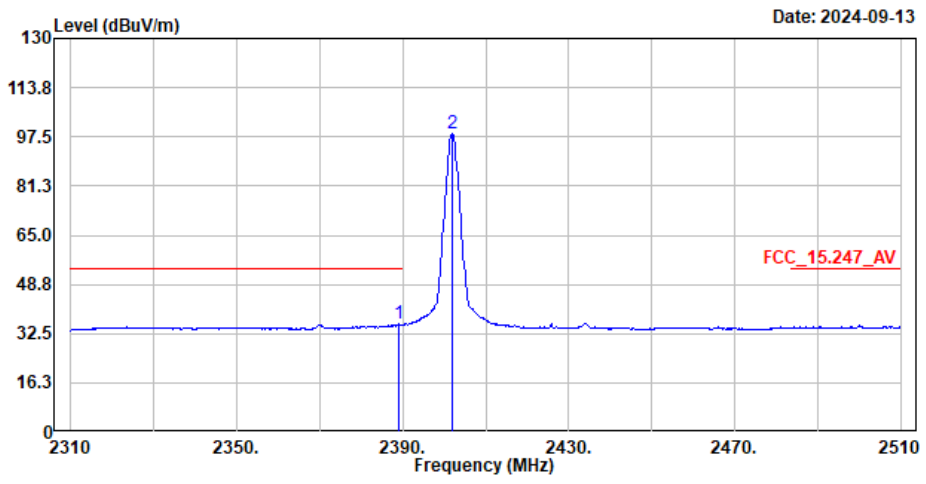

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.000	35.65	54.00	-18.35	29.77	5.88	Average
2	2402.000	98.50	------	------	92.70	5.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ble2m_2402MHz
TEST BY :Caster

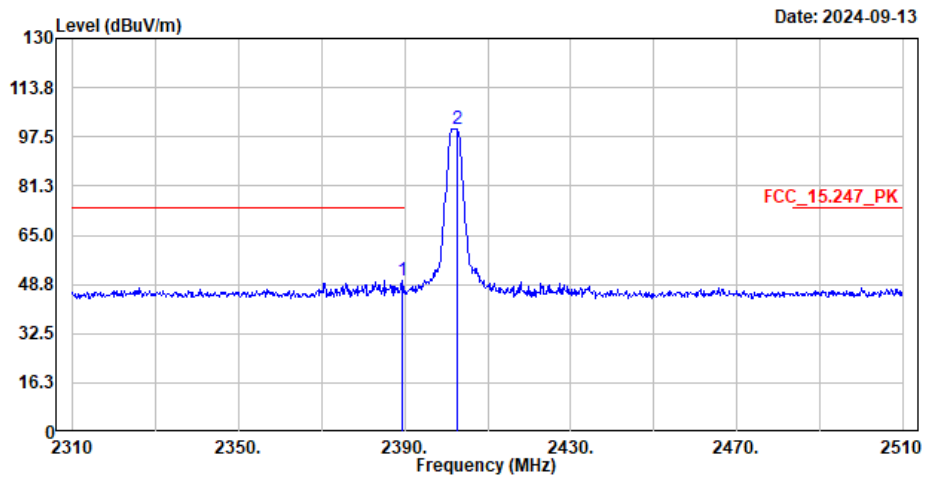

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.400	50.13	74.00	-23.87	44.25	5.88	Peak
2	2402.600	100.21	------	------	94.40	5.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.