




Quick Start Guide

# Parts and control



Power button / Page button



Micro USB port (for charging)

# Connection

Align one side of the iPhone 5 / 5S with one side of the Inkcase i5, then align the other sides and press down until the iphone is seated correctly, as the below figure shown:



## Charging the InkCase i5

- You need to charge the device prior to use it for the first time or when battery power is
- low.

  Charge the device using AC adapter with output 5V, 1A.

  Charging through PC may not be able to fully charge the device due to the low output charging current from PC USB port.

  Please turn the device to standby mode to shorten the charging process.

  It will take about 2 hours to fully charge the device in standby mode (LCD off).

  Press the [Power] button to enter into Standby / Wake up mode.

• The battery status is displayed at the lower right corner. The status is shown as below:







Battery Full

Power On and Off the InkCase i5

- Press and hold the Power / Page button for 3 seconds to turn on InkCase i5.
  It may take a few moments for reader to turn on and load the content.
  If InkCase i5 does not be turn on, charging
- is required.

  To turn off Inkcase i5, press and hold the Power button for 3 seconds again.

# **Getting started**

The operations of Inkcase i5 is based on the Inkcase APPs.



InkCase Photo is a picture sharing app,you can share your pictures to InkCase as the second display of your smart phone.

#### Epireader



**Epireader** is an ebook reading application, it supports a variety of formats, and the page mode is more personalized.

# Downloading InkCase Apps

Choose one of the following ways to download the inkcase apps:

- Download the Inkcase apps by searching for the key word "InkCase" in APP store ( for Iphone 5 user).
   Download InkCase App from InkCase website: www.inkcase.com / app 3. Scan the QR Code shown below:



When you have successfully downloaded the InkCase apps, please install them into your smart phone.

Temporarily, Inkcase i5 only support InkCase Photo, but other InkCase apps will be updated later, you can access the InkCase website to get the information.

# How to use InkCase Photo

Choose one of the below ways to transfer photos via InkCase Photo:

- Using the photo list of InkCase Photo
  1. Press and hold the Power / Page button for
  3 seconds to turn on the InkCase i5.
  2. On your smart phone, tap InkCase Photo
  icon to enter into photo list, then follow the
  below steps to do




① Tap InkCase Photo icon to enter into photo list, tap a desired photo to be transferred.



② Tap "**Send**", then it will appear a Bluetooth connection dialog box.




③ Tap Inkcase i5 to pair with the smart phone, upon successful bluetooth connection, the photo will be automatically sent to Inkcase i5.

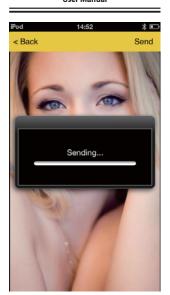

④ The photo is being sent. If the transfer time is more than 15 seconds, tap **Back** and resend it.

### Using the camera to take photos

On your smart phone, tap **InkCase Photo icon**, then follow the below steps to do.

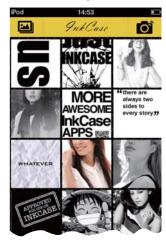





③ The photo is being sent.

# Using the photo list on the local disk of smart phone

From your smart phone, tap **InkCase Photo icon**, then follow the below steps to do.

1. Tap at the top left of the screen.
2. Edit the photo by the onscreen buttons. Tap "Send", then it will appear a Bluetooth connection dialog box, tap InkCase i5
3. The picture is being sent.

### How to use InkCase Epireader


- Press and hold the **Power / Page button** for 3 seconds to turn on the InkCase i5.
   On your smart phone, tap **InkCase Epireader icon**, then follow the below steps to do.



① Tap InkCase Epireader icon and open a ebook, then tap at the center of the reading page to display a option menu, select Share, tap Inkcase I5 to pair with the smart phone, upon successful bluetooth connection, the ebook will be automatically sent to Inkcase i5.



② The ebook is being sent. If the transfer time is more than 15 seconds, tap **any button to cancel it and resend it**.

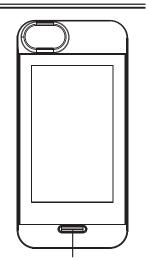

Power button / Page button

③ Press your iphone 5/5S **volume buttons** or the InkCase home/Page button to trun pages.

**Note:** In standby mode, you can still transfer the Photo or ebook into Inkcase i5, and The InkCase i5 will go to wake up mode automatically.

# Troubleshooting

# Tap Send button, but no bluetooth

**connection dialog box appears.** Battery has been fully depleted. Please charge the InkCase i5 via USB or USB AC Adapter.

# The "Sending" is always shown on on the screen during the file transfer.

It will take a few moments to send the picture or ebook, If the transfer time is more than  $15\,$ seconds, tap the return button to cancel it then resend it.

#### Can't turn page during the ebook reading on InkCase i5.

The response time on the E-ink display screen is slightly longer than others, press the  ${\bf Power}$ / Page button, a few moments later , it will turn to the desired reading page. Don't press the Power / Page button

continually.

### **FCC Caution**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,may cause harmful interference to radio communications However, there harmful interference in a residential installation. This is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
   Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver isconnected.
   Consult the dealer or an experienced radio/TV technician for help.

# FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This transmitter must not be co-located or operating in  $conjunction\ with\ any\ other\ antenna\ or\ transmitter.$