

Power Case with Bluetooth Keyboard for iPad mini

Model Number : J-2MK

FCC ID:ZDB-BRK5200B

Package includes:

- 1) iPad mini Case with Built-In Rechargeable Battery and Bluetooth Keyboard
- 2) USB Wall Charger
- 3) USB to Micro-USB Charging Cable
- 4) User Manual

Features:

- 1) Charges and Supports iPad mini.
- 2) Compatible with Windows XP, Windows 7, Vista and Mac OS
- 3) Universal Wireless Bluetooth 3.0 Connectivity.
- 4) Built-in Li-battery charged by USB.

Technical Specifications:

Input:	5V/1A (max)
Output:	5V/2.1A (max)
Capacity:	3.7V/5.800mAh (Li-Po)
Dimensions:	(close): 8.9" x 5.6" x 0.6" (open): 8.9" x 6.6" x 0.6"
Weight:	17.7 ounces (~500 grams)
Operating Temperature:	-4°F to 131°F (-20°C to 55°C)
Operating Humidity:	20% to 50%
Signal Type:	FHSS (Broadcom 20730 Chip)
RF output Power:	Class 2; Maximum output power is 2.5mW (4dBm)
Protocol:	Bluetooth® specification v.3.0 compliant
Typical Battery Life:	Continuous Operation (Bluetooth Keyboard only): 40+ hours Continuous Operation (Bluetooth Keyboard + iPad charging): 1.5+ hours
Working Distance:	>30 feet
Frequency Range:	2.4 - 2.4835GHz

Pairing Bluetooth Keyboard with iPad

Preparation: Please make sure both your iPad and iPad case with bluetooth keyboard are fully charged



prior to proceeding (for first use please charge it with supplied USB cable for at least 8 hours).
Please note: If you're experiencing a "lag" while typing, this is a sign that your battery level is low and must be recharged.


Step 1: Press the Power Button to turn the keyboard ON. The Power and Bluetooth Indicators should be lit for approximately 5 seconds. Keyboard is now in idle mode. Press the Connect Button, The Bluetooth Indicator should be flashing. The keyboard is now in pairing mode.

Step 2: On the iPad, tap Settings. Find the Bluetooth setting. If Bluetooth is turned off, swipe to turn it on. The iPad should now be searching for all Bluetooth devices within range. Wait for Bluetooth Keyboard to appear under Devices.

NOTE: Depending on your operating system, your iPad set-up/screen may differ slightly from what is pictured



Step 3: Tap on Bluetooth Keyboard to connect. You must type in the 4-digit code according to the on-screen instructions. Press the Enter Key on the keyboard. The keyboard should now be connected.

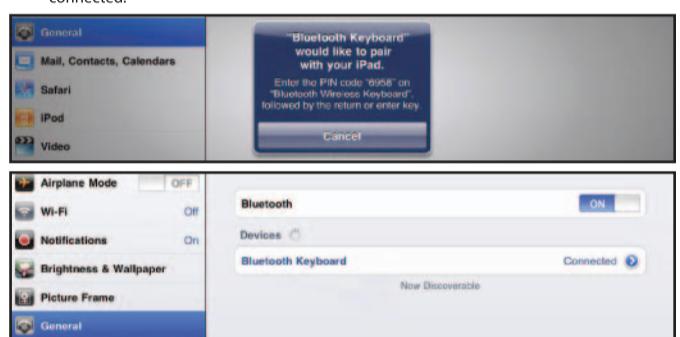


Page 1

Page 2

Using the Keyboard

Use Function Keys at the top of the keyboard to go to the iPad Home screen, show/hide on-screen keyboard, search for content such as pictures, music, messages, contacts and more.

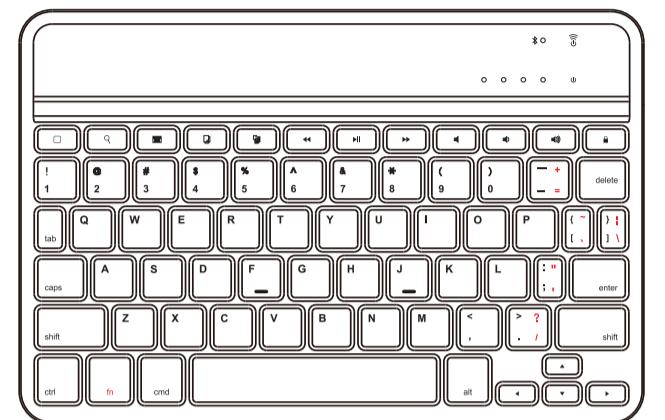

- Go to Home Screen
- Search for Content (Pictures, Music, Messages, Contacts, etc.)
- Show/Hide On-Screen Keyboard
- Copy
- Paste
- Rewind, Play/Pause, Fast-Forward Multimedia
- Mute, Decrease, Increase Sound
- Lock Screen

Page 3

Check the Power Level (LED Indicators)

Press the power bank button, the LED indicator lights will indicate the power level according to the diagram.

When plugged into the USB wall charger, the LED indicator lights will BLINK/FLASH according to the current power level (i.e., if Justin is 40% charged, one LED will be lit and the second LED will be flashing). Once the power bank is fully charged, the indicator lights will STOP FLASHING.

To view the power level while an external device (tablet, smartphone, etc.) is connected, press the Power button. The indicator lights will light up for 3 seconds and then turn OFF.

Please note:
- When connected, your device (tablet, etc.) is still charging even though the LEDs are OFF.
- The LEDs approximately represent the power levels.
- Actual charge may vary slightly.
- If your device (tablet, etc.) is not charging properly and there is one LED lit, this might be a sign that the power level is very low and you need to recharge the keyboard.

LED Power Levels:	
○ ○ ○ ○	Completely Drained
● ○ ○ ○	1 - 25% Charge
○ ● ○ ○	26 - 50% Charge
○ ○ ● ○	51 - 75% Charge
○ ○ ○ ●	76 - 100% Charge

LED Power Levels When Charging Via Wall Adaptor:

○ ○ ○ ○	1 - 25% Charged
○ ○ ○ ○	26 - 50% Charged
○ ○ ○ ○	51 - 75% Charged
○ ○ ○ ○	76 - 99% Charged
○ ○ ○ ○	100% Charged

Page 4

Please Note

- The Power Case comes pre-packaged with a partial charge, NOT a full charge. We recommend fully charging your Power Case before first use for best performance.
- If your device (smartphone, tablet, etc.) is not charging, this may be a sign that the battery level of the Power Case is very low and you need to recharge it.
- Your Power Case includes a special Micro USB to USB cable. Some devices, namely BlackBerry® devices, REQUIRE this cable for charging. If you do not use this cable, your device might not charge.
- Some devices require you to turn OFF the device prior to charging via the Power Case. If the device is left ON and plugged into the Power Case, the tablet will show a small red "X" over the battery icon signifying that the tablet is not charging. There is no need for concern, this will not harm your device. Just turn OFF your device and continue charging.
- It is normal for the Power Case to become slightly warm during use.

Maintenance

In order to keep your Power Case operating at maximum potential, please follow these guidelines:

- Please recharge the Power Case every 2 months when not in use. Charge to at least 40%, as this will extend the battery life.
- Keep your Power Case dry and away from moist and corrosive materials.
- DO NOT get wet. In addition, never expose to high heat environments. Avoid extreme temperatures of hot or cold as it will decrease the overall battery performance.

WARNING: IMPORTANT SAFETY INFORMATION

Read all safety information, instructions, and warnings prior to using this product. Improper use of this product may result in product damage, physical bodily harm, injury, or even death. This document contains important usage and safety information necessary for proper usage. We are not responsible for any damage due to improper use of our power case.

Product Safety & Precautions

- Please read this manual carefully before using the Built-In Battery. Only use product with confirmed power sources that follow device specifications. Do not use questionable third party chargers even though specifications may comply with device. Only use specified charging methods or reputable branded chargers that are compatible with specified device specifications.
- Do not use product beside or in close proximity to a heat source such as a ventilation heat vent, convection heater, burner, etc.

- Do not expose product to any excess moisture and liquids. Avoid using device near faucets, showers, bathtubs, etc.
- Do not use in exposed or unprotected outdoor environments.
- Device is intended to be used with smartphones, tablets and other digital products.
- Avoid dropping or applying excessive shock and force to device.
- Avoid carrying with loose small metallic objects. Unintended metal scraps may enter device and short device.
- Do not use device in a confined space where airflow is restricted. Insufficient airflow will put device at risk of overheating.
- Avoid touching metal prongs when plugging and unplugging device from power source.
- Do not use harsh chemicals to clean device. Use a damp cloth with warm water to wipe off any dirt. Only clean the device when it is unplugged from any power source.
- Do not use damaged cables and wires on device.
- Ensure Charge Port is clear of any foreign objects and debris before using.
- Do not force incompatible connectors into any port.
- Never charge device/unattended.
- Do not attempt to disassemble the device. Any attempts to do so will void all warranties on this product.
- Internal batteries are designed specifically for device only. Do not attempt to salvage batteries for other purposes.
- Upon the event where the device may be broken, shattered, or in any way physically compromised, DO NOT USE DEVICE.

- Avoid using cables or wall adaptors other than supplied for optimal and safe operation. Supplied cables and wall adaptor have gone through rigorous testing to ensure compatibility.
- Please read this manual carefully before using the Bluetooth Keyboard.
- Do not dispose device into standard garbage disposal sites. Dispose of device at available Battery Recycling Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations.

- Dispose of product with lithium battery in accordance with your local battery recycling or disposal laws. NOTE: Opening of product and/or removal of battery will render product inoperative and voids manufacturer warranties, dispose of remaining product components in accordance with local laws.
- Do not dispose of unit with general waste. Return it to a battery recycling center.
- Store device in a cool and dry environment. Do not leave device inside an excessively hot or cold environment.

- Do not leave device in exposed sunlight for a prolonged period of time.
- If unusual expansion is detected, disuse device immediately.
- In case of fire, use lithium approved "Class D Type" Fire Extinguishers on device.
- In the unfortunate case of a leak and electrolyte comes in contact with skin, wash area with water and soap. If electrolyte makes contact with eyes, flush with generous amounts of water for 15 minutes and seek medical attention immediately. Avoid inhaling fumes if applicable. Do not attempt to reuse damaged device.
- Read all instructions and warnings prior to using this product. This device contains a Li-battery. Improper use, storage, and disposal may cause leaks, expansions, and explosions that could lead to fires, health concerns, bodily injury, and property damage.
- Do not expose or dispose of device into fire.

Page 5

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to PART 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: FCC Radiation Exposure Statement

- 1. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.
- 2. This transmitter must not be co-located or operate in conjunction with any other antenna or transmitter.

Prop 65 Statement

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information on these regulations and a list of chemicals, log on to the following website address: <http://www.oehha.ca.gov/prop65.html>

iPad is a trademark of Apple Inc., registered in the U.S. and other countries. iPad NOT included. Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Made In China.

Page 6

Innovative Technology Electronics Corp. Limited Warranty: 90 Days Labor, One Year Parts

Innovative Technology Electronics Corp. (IT) warrants the product to be free from "Defects" in materials under normal use for a period of "One Year" from the date of the original purchase. The Warranty is "Not" transferable, IT agrees, within the initial "90 Day" period, to repair or replace the product if it is determined to be defective at "No Charge". It is further agreed that IT will cover the cost to repair or replace damaged "Parts" only for a total period of "One Year" from the date of the original purchase. The warranty does not cover cosmetic damage, antennas, AC cords, cabinets, headbands, ear-pads, or damage due to line power surges, connection to improper voltage supply or settings, misuse, mishandling, accident, acts of God or attempted repair by an unauthorized service agent.

To obtain service, the purchaser MUST present an original sales receipt / proof of purchase. Please contact us at www.ithomeproducts.com to request an RMA (Return Material Authorization) number to return products for service or replacement. Returns without an RMA number on the package will be refused and returned to sender. Upon receipt of the returning item and our full inspection (IT) may issue a replacement to customer for the same item or one that has equivalent value and features. To return an item, supply full name, return address, phone number, item purchased, receipt of purchase and reason for return to obtain RMA number.

All returns must be in the original packaging or reasonable substitute to prevent damage. Customer "Must" include full name, shipping address and telephone number inside of package. No return will be shipped back to a PO Box or APO address.

- Please include your check or money order in the amount of:
- USD\$5.00 for items \$10.00 to \$39.99 (Price Paid Per Unit)
- USD\$10.00 for items \$40.00 to \$59.99. (Price Paid Per Unit)
- USD\$16.00, for items \$100.00 and up. (Price Paid Per Unit)
- Shipping fees are non-refundable

to be paid to Innovative Technology Electronics Corp. (for handling and return shipping charges) IT will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any / all of the necessary information. Send all inquiries or RMA request via our website www.ithomeproducts.com/support.

Innovative Technology Electronics Corp.

1 Channel Drive

Toll free: 1-877-483-2497

Website for support: www.ithomeproducts.com/support

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. (IT) SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Page 8