

AYANEO Slide 用户说明书 A 20230223

尺寸：308mm x 92mm


正面



AYANEO Slide 用户说明书 A 20230223

尺寸：308mm x 92mm

背面

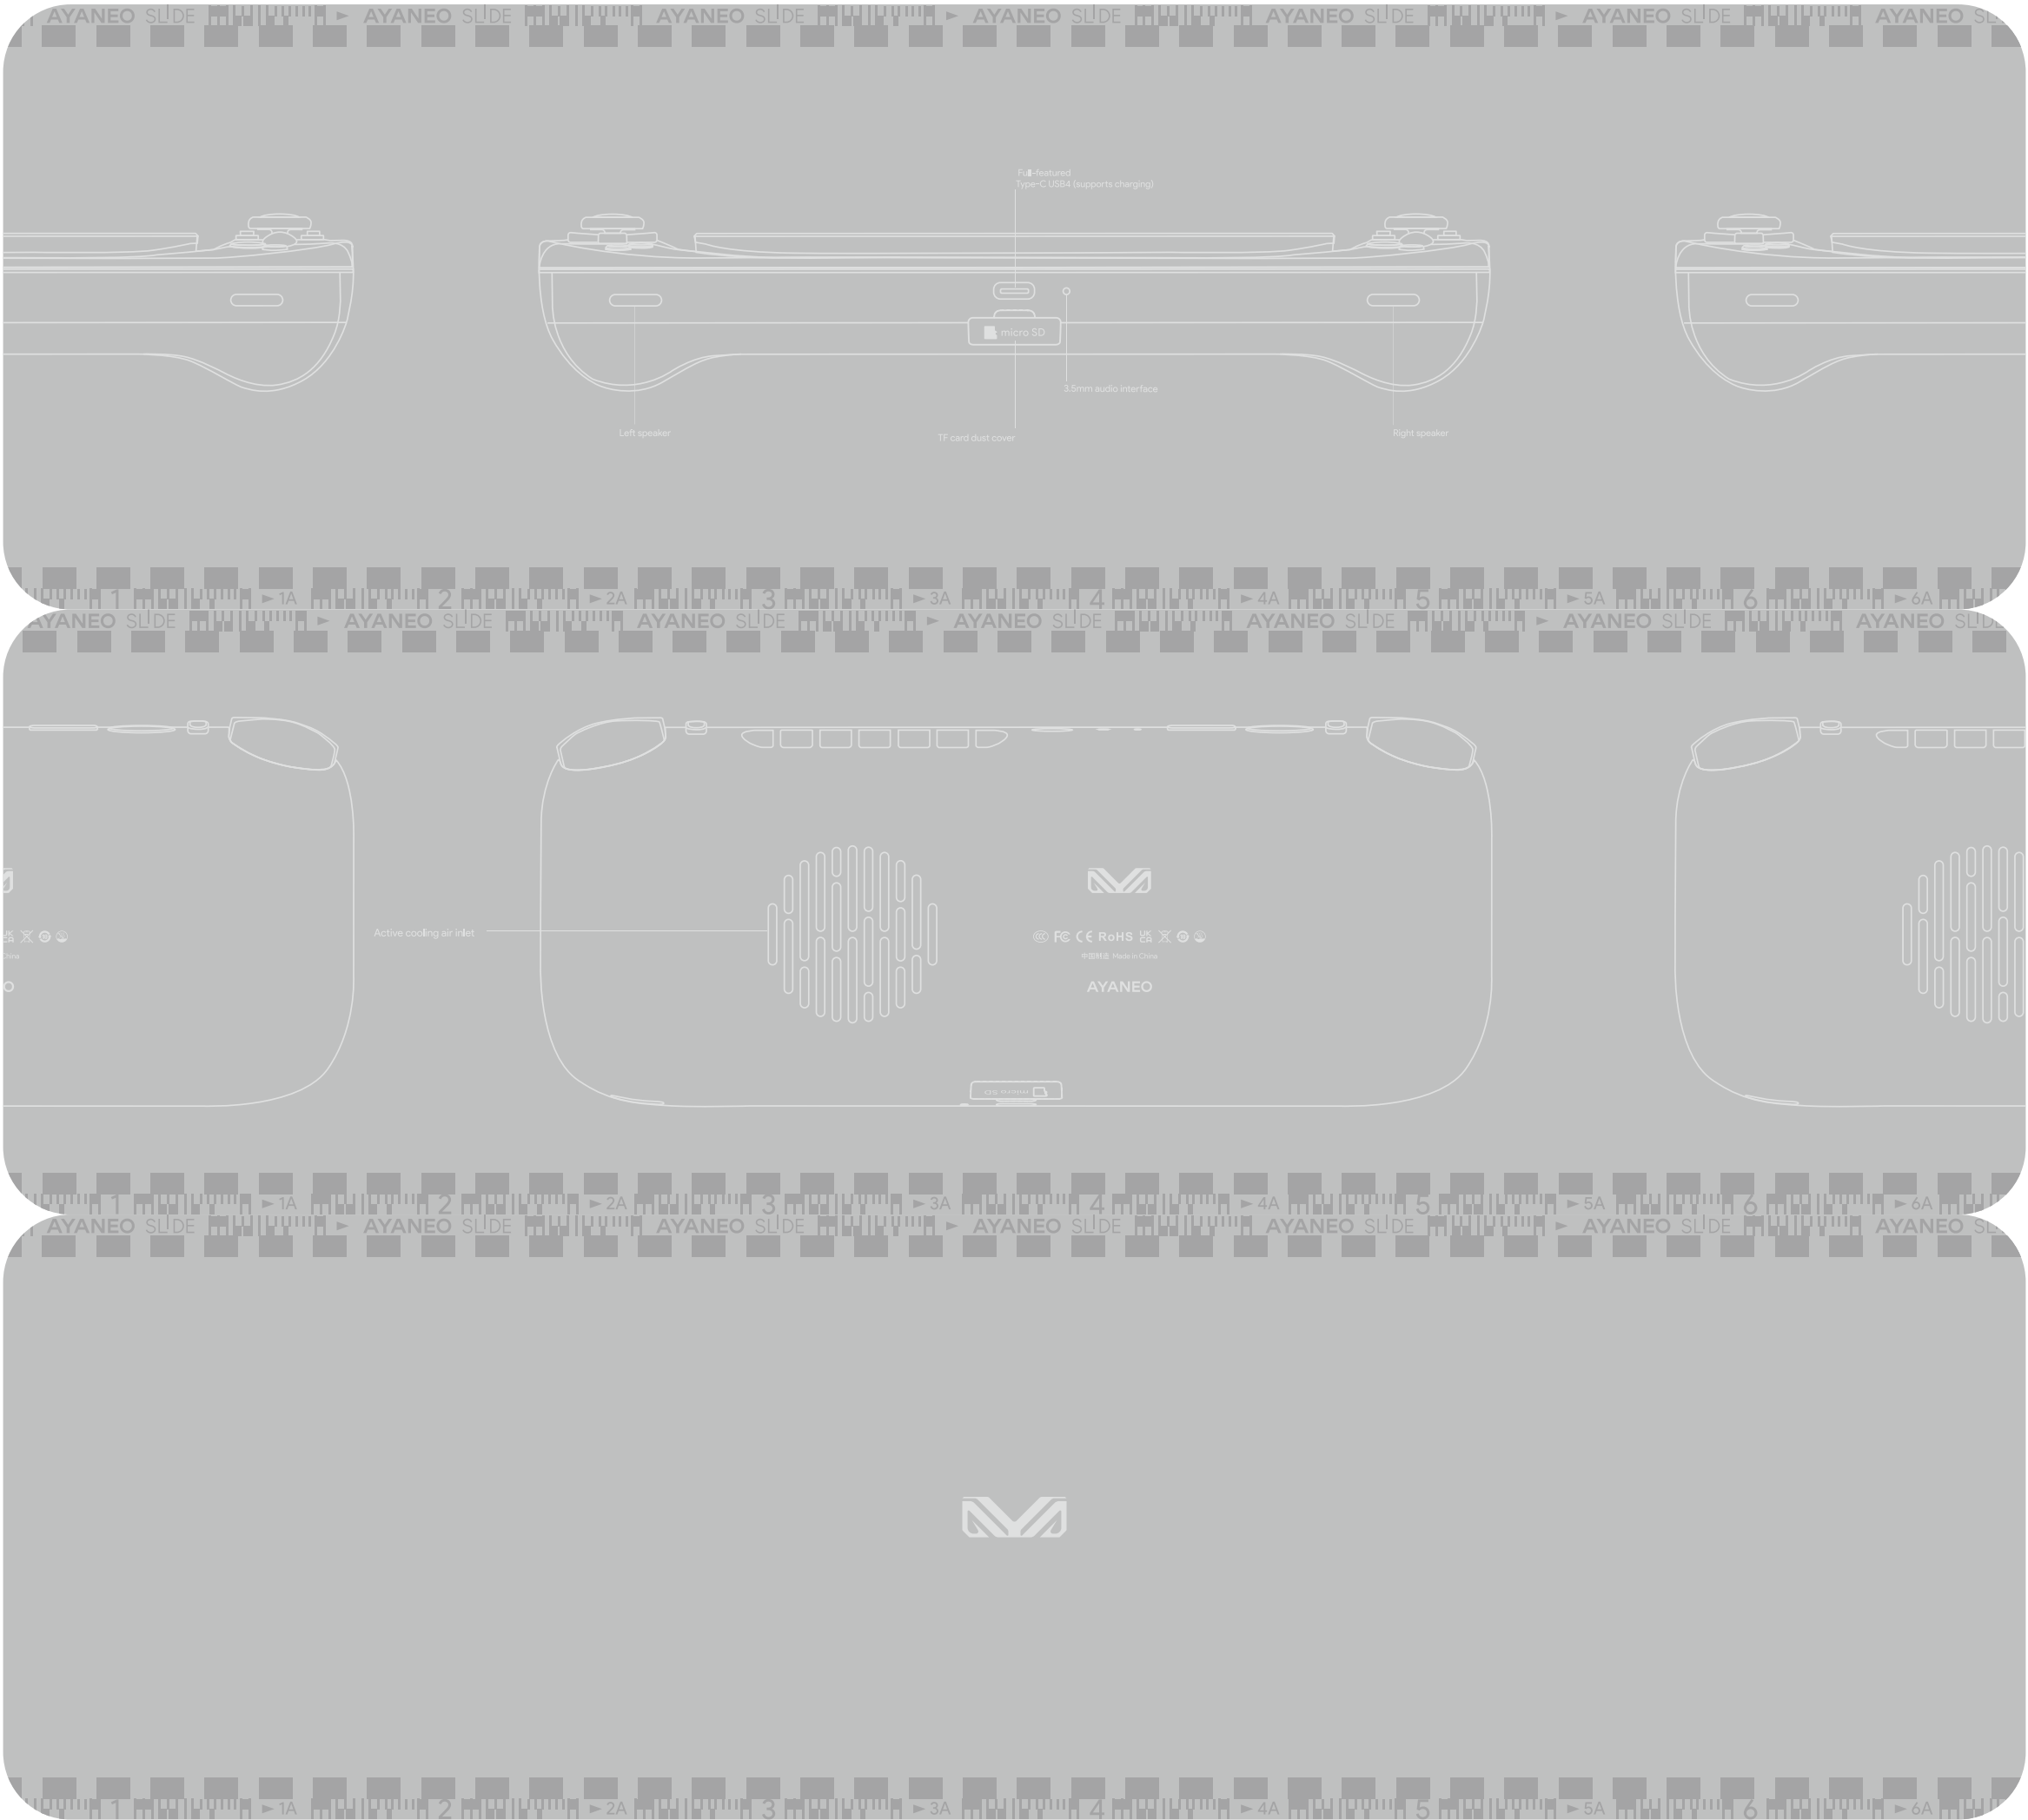

Power On/ Off/ Fingerprint

In the state of power-off, press the power button  1s to turn on the device, and indicator light will flash white.

In the state of power-on, click the screen >Windows  >Power  >Shutdown  Turn the device off

Press and hold the power button for 8s, the device will be forced to shut down.
(Note: It is not recommended to forcibly shut down the device in normal use scenarios because this operation may cause data damage.)

Fingerprint recognition is supported. You need to log in to your Microsoft account or set your own local account and password to enable the Windows Hello biometrics function before you can set up and use the fingerprint recognition function normally.

In the Windows 11 desktop view, Windows  > Settings  > Accounts  > Login Options  > Fingerprint (Windows Hello)  , enter Enable secure fingerprint login. Each account can enter up to ten fingerprints.

Sleep and wake up

While on, click the power button  to make AYANEO device to enter sleep mode, or click Window  > Power  > Sleep  .The cooling fan stops running during the sleep mode, and the indicator light flashes slowly and regularly as a white light.


While in sleeping mode, click the power button  to wake up AYANEO. If Windows Hello is configured to log in securely with a fingerprint, tap the power button to wake up the screen, then tap the fingerprint recognition to enter the OS interface. There is no need to enter a PIN or password to log in. The indicator is always on white, and the cooling fan rotates normally. You need to wait 1 to 3 seconds for the screen to finish waking up on different interfaces.

Volume

Tap the volume + button  to increase the volume step by step, long press to increase the volume continuously. Tap Volume -  to decrease the volume. Or click the volume icon  in the lower right corner of the system desktop interface, and slide the pop-up menu to adjust the volume .

WLAN / Bluetooth

When you need to connect to a Wi-Fi network, click the Wi-Fi icon  in the lower right corner of the desktop > click  > in the pop-up menu, select and enter the name of the network to be connected to, enter the password, and click "Next" to connect to the Wi-Fi network. To connect a Bluetooth device, click the Bluetooth icon  in the lower right corner of the screen > Add a Bluetooth device >  Click to search for the Bluetooth device to be connected.



Text input

When you need to enter text, AYANEO comes with a physical keyboard. Slide up the screen to open the slide cover, and then use the key to enter text and FN combination shortcut key to operate, or click the bottom right corner of the screen. The icon  calls out the touch keyboard and uses the touch to enter text.



Lighting effect

AYANEO lighting effect can be customized with AYA Space in terms of color, brightness and status. The specific settings are subject to the updated version of AYA Space.

Battery and Charging

When AYANEO is charging, the indicator light is always orange-red, and the white light is always on when the battery is full. When the battery level falls below 15% while turned on, the indicator will flash orange-red and flickers regularly. Please use the included adapter to charge AYANEO. Never use an uncertified safety adapter to charge AYANEO, which may cause damage to internal components and unforeseeable hazards.
When Type-C is plugged into a power source, avoid prolonged skin contact with the plug, otherwise it may cause discomfort or injury. Do not attempt to replace AYANEO batteries yourself; AYANEO's lithium-ion batteries shall be serviced or recycled by AYANEO, and they must be recycled separately from household waste. Please dispose of batteries in accordance with local environmental regulations. Batteries can only be replaced by AYANEO or AYANEO authorized service providers. There is a risk of explosion if you replace the battery with the wrong model.



Cleaning

Please use a lint-free cloth to clean AYANEO, never get any openings wet or use aerosol sprays, solvents, or abrasives.

Notice

The operating system of this product is Windows 11 64-bit Home Edition produced by Microsoft Corporation. In desktop mode, the basic operations of Windows can be performed through the touch screen.

In desktop mode, press and hold the screen with three fingers simultaneously for 1 second, then swipe up to bring up the task view to quickly switch between applications and create a new desktop, and swipe down to minimize all applications.
If the application is unresponsive and cannot be turned off normally, long-press the window  and select Task Manager in the pop-up menu, and select the unresponsive process in the task manager to perform the "End Task" operation.

Medical device interference

Some of AYANEO's internal components contain magnets and radio-emitting electromagnetic fields that may interfere with medical devices, pacemakers, defibrillators, or other medical devices. Please maintain a safe distance between medical equipment and AYANEO. Consult your physician and medical device manufacturer for medical device information. Discontinue use of AYANEO if you suspect that AYANEO is interfering with your pacemaker, defibrillator, or other medical device.

AYANEO warrants the included hardware products and accessories for a period of one year from the date of original retail purchase. AYANEO does not warrant normal wear and tear, nor does it warrant damage from accident or abuse. To obtain services, please visit the AYANEO Marketplace or an AYANEO Authorized Service Provider, available service options depend on the country or region in which the service is requested and may be limited to the country of origin of sale. Call charges and international shipping may apply, depending on your location.

AYANEO will repair, replace or refund your AYANEO at its discretion when you submit a valid claim under the Warranty Service Policy. Your warranty rights are in addition to those provided by local consumer laws. Details of proof of purchase may be required when you make a claim under this Warranty Policy.

Warranty and support

You may consult with your local dealer for warranty and support service, and you can get online support from our website (www.ayaneo.com). Or you can contact us by service@ayaneo.com if you have any inquiries.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information: This device meets the government's requirements for exposure to radiowaves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: device has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.