
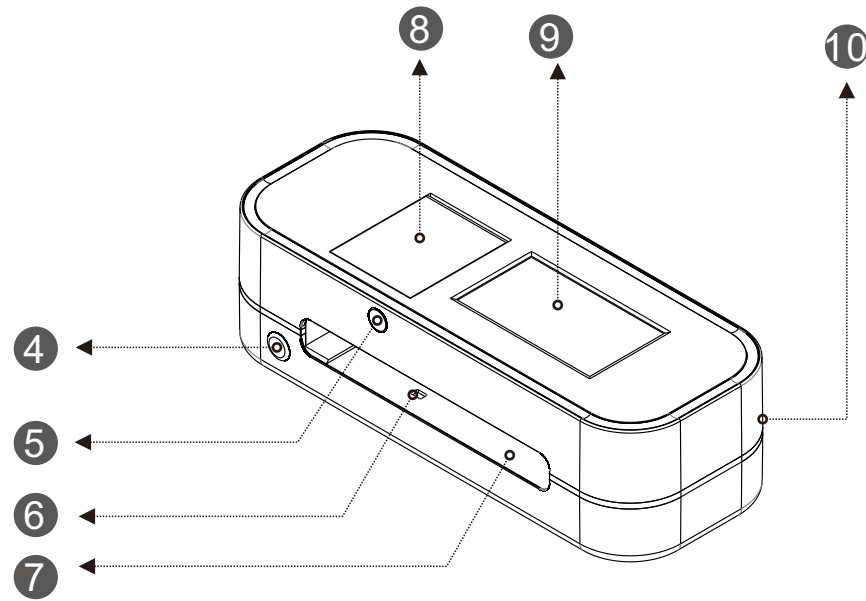


Cutting Plotter

User Manual

# Packing list

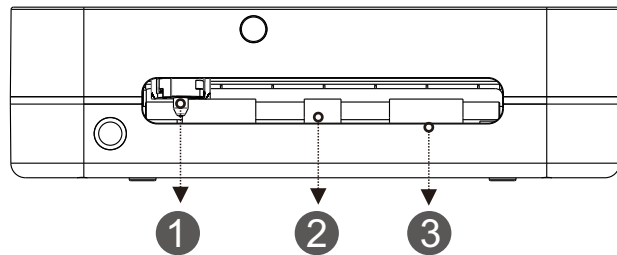


Intelligent cutter




Blade holder




Blade

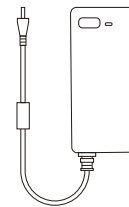


Power adapter  
(With Magnetic Ring)

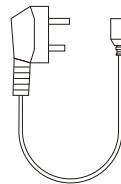

Power cable

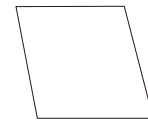


Warranty card

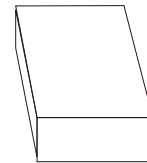

Auxiliary tools

- ① **Cutter carriage**  
Control the knife to cut the film sheet
- ② **Rubber wheels**  
Work with steel axis to keep cutting without slip
- ③ **Steel axis**  
Work with rubber wheels to fix and protect film sheet
- ④ **Power switch**  
Turn on the machine . Press it lightly to turn back the films during stand-by
- ⑤ **Switch for blade holder installation**  
Press lightly to open the cover
- ⑥ **Film feeding sensor**  
Auto feeding the film after detecting it
- ⑦ **Film pasting guide**  
Please paste the films based on the guide
- ⑧ **Blade holder installatin port**  
Open the port to take out or install the blade holder
- ⑨ **High definition screen**  
6 inch touch screen , built in operation system
- ⑩ **Power connection port**  
External 24v power port

## —. Blade installation

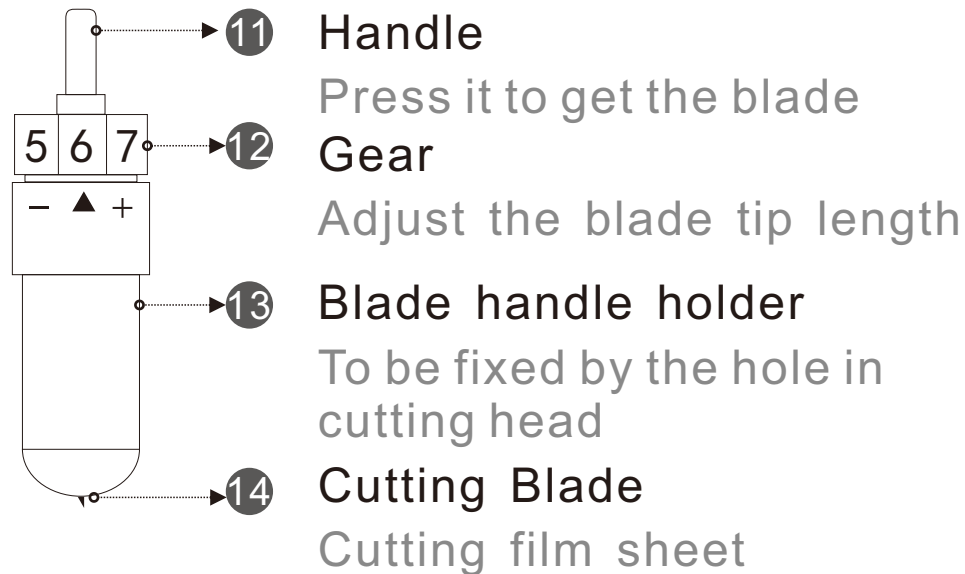

### Notes:

#### Ajust the blade:

Twist the gear to adjust the blade tip

Value bigger, tip longer

Value smaller, tip shorter

Factory setting is gear 6

#### Change blade:

Press handle


take out the old blade

put a new one in it


## 二. Blade holder installation

Intelligent cutter


### 二. Install the blade holder

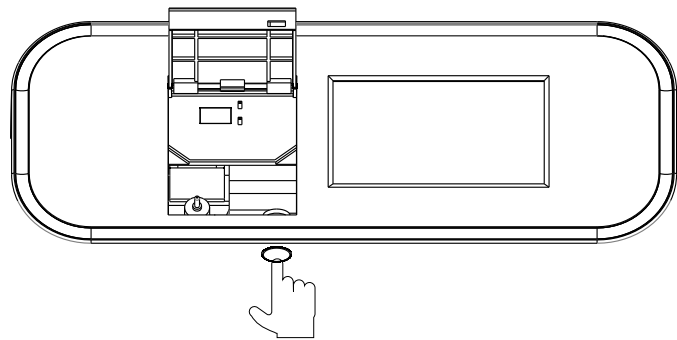


Press the button to  
open the entrance

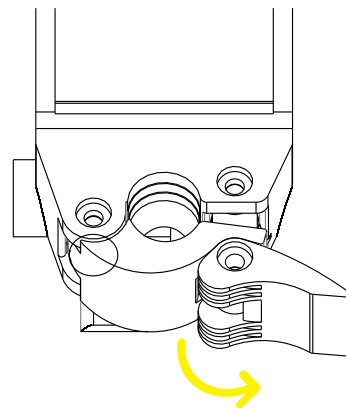

Open the fixed handle

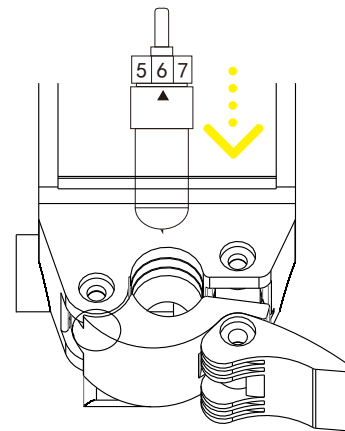


Insert the holder  
to hole straightly

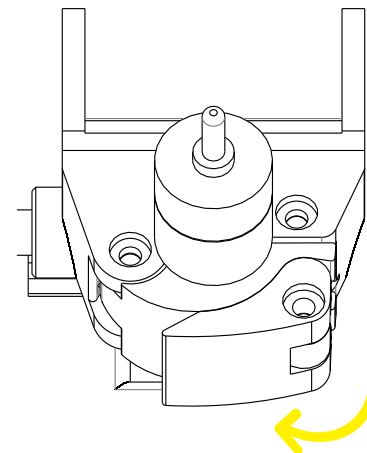

Fix the handle


### ≡. Power on / off

Intelligent cutter

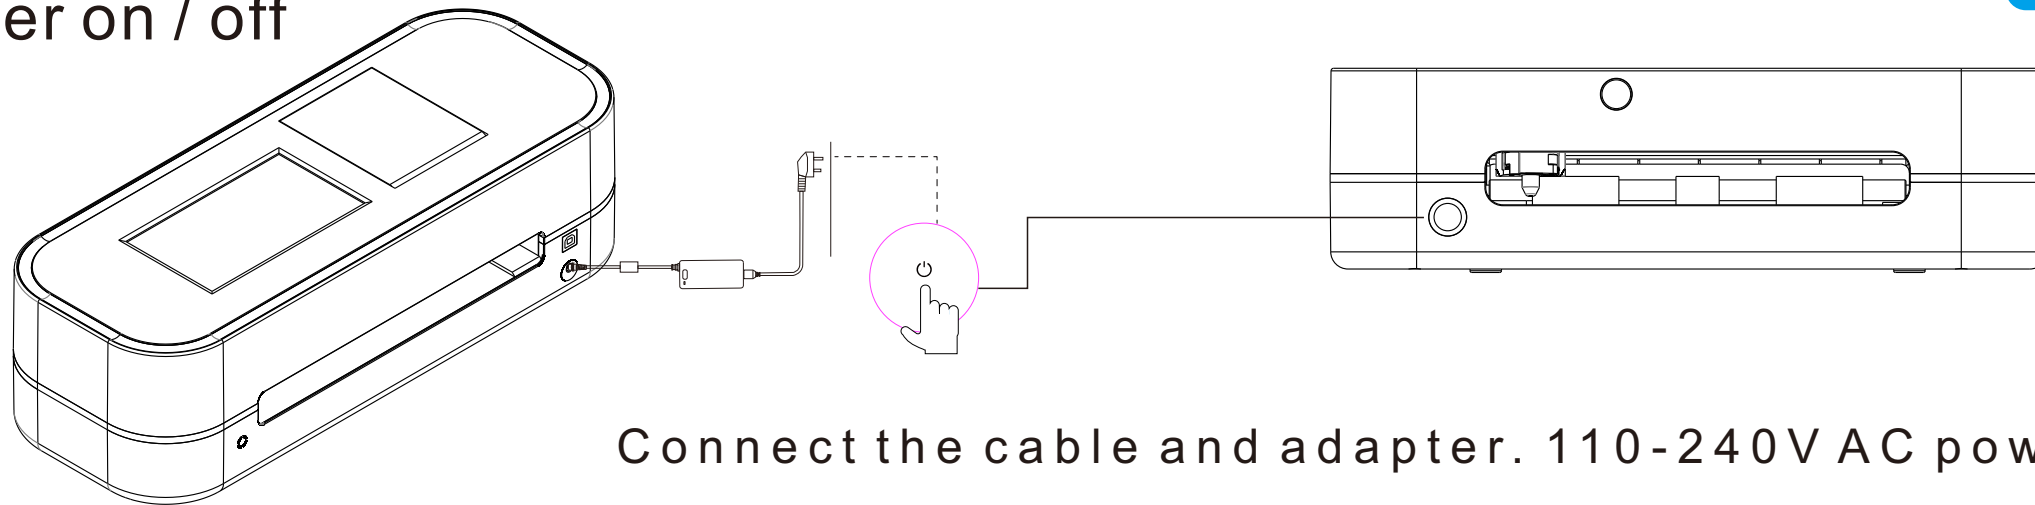

Connect the cable and adapter. 110-240V AC power for the plug connection. The adapter connects the machine. Press the power button, machine power on. It takes 30s for starting.

## 四. Material installation

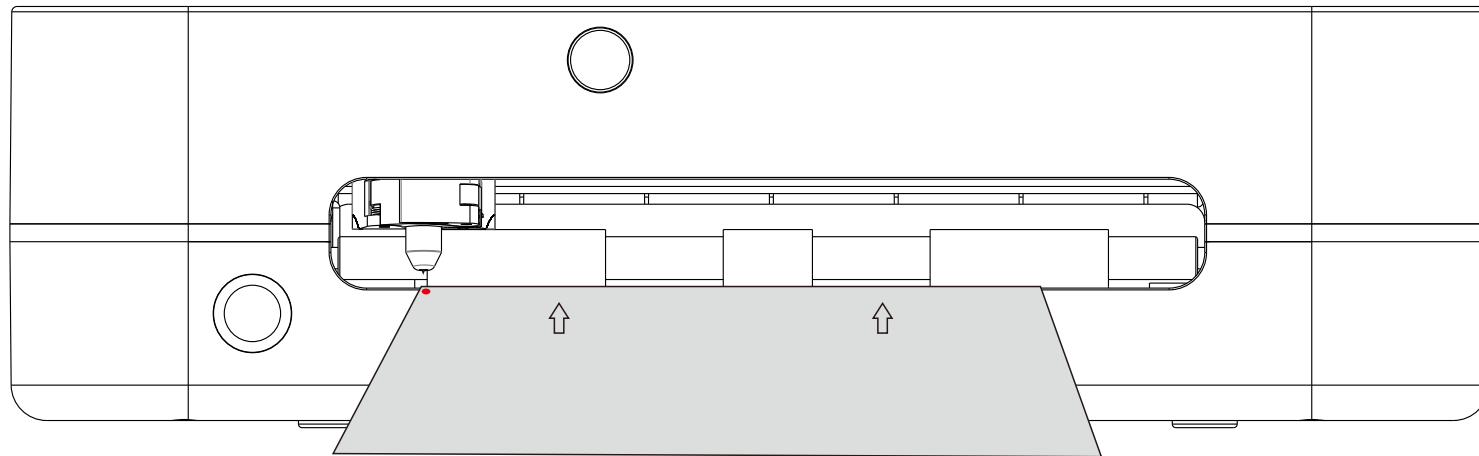



Put the material on the table flatly and align left based on the feeding guide


The material will be feed automatically after the cutter detect it. .

( If the film shift, press the switch in 1 second and the film will be returned back automatically )

## 四. WIFI Connction

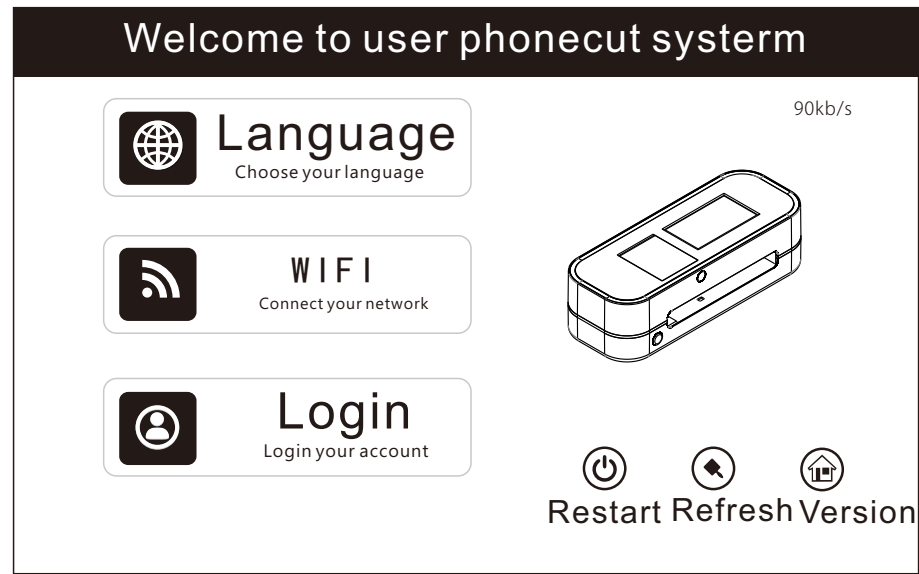

After turn on the  cutter, click and choose a wifi to connect .

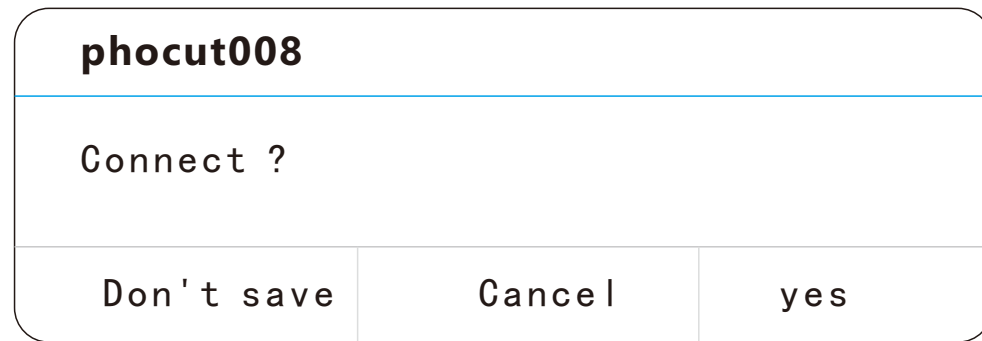

Note: Conncting succeed, the wifi ID will be showed below , if not, you may need insert the correct password and connect. .




## 五. Login account


### Login

Account:

Version:



Password:



☒ Auto login

Register

Clear account

Login

Return


After connecting wifi, choose login and insert the account and choose version , then insert your password to login the data page..

Account and password may paste on the bottom of the cutter or you can get from your supplier

## 五. Choose Cutting Data



Main categories



Brands

## Choose a cutting data

Front film

Back film

防爆膜

全屏膜

IPHONE 13 PRO-A

IPHONE 13 PRO

« IPHONE 13


search

Record

<input type="checkbox"/> 180 center cut	<input checked="" type="checkbox"/> Y mirror	<< IPHONE 13 PRO	
IPHONE 13 PRO		search 	
		Force	
<div>定制背膜</div>		- 300 + Test	
		Cut	

# Cutting finished

Intelligent cutter

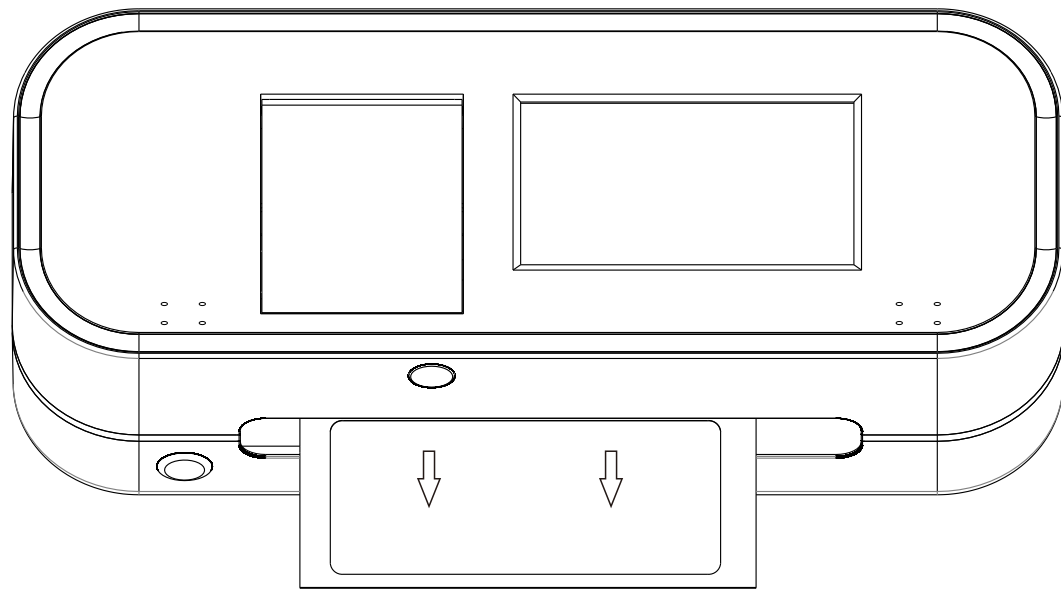

The sheet will be dropped out automatically after cutting finished, please take out the finished parts and paste on the phone.

## 六. Parameters and precautions

Parameters	
Connection	wifi or Bluetooth
Internal Power	DC24V 1.75A
Machine size	420*123*163mm
Machine weight	4.3kg

### **Don't touch the knife tip by finger**

The finger may be hurt by the knife tip

### **Don't seep into liquid**

This may cause fire or electric shock

### **Don't use non-original power supply**

This may damage the circuit or electric shock





### **Don't use in thunderstorm days**

This may damage the machine

### **Don't use the non-standard materials**

Please cut the standard size of material to reach the perfect result

## Product parameters and precautions

-  Press power switch for emergency stop during working.
-  Forbid moving the carriage by hand after connecting the power to avoid machine damage.
-  Knife is a consumable part, please change to a new one if it is dull.
-  Press the power switch in 3 seconds continually to turn off the cutter, forbid taking out the power cable directly to turn off the machine because it will damage the mainboard

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

# FCC Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.