HelloClick Workflow


HelloClick Workflow



Device Registration



1 Press and hold button 5 on the device for more than 2 seconds!

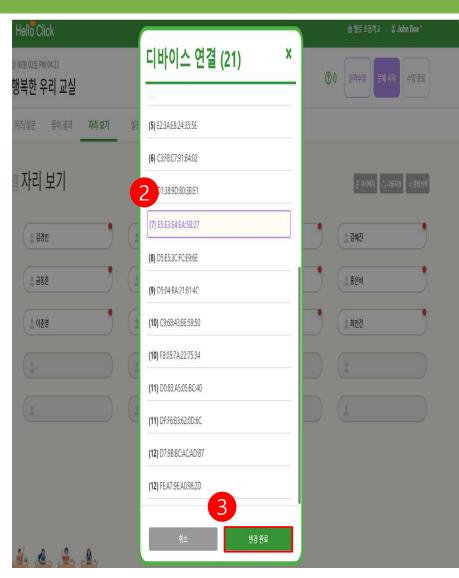

- Press and hold and you will see a button that turns purple! Find the button and double click it
- Finally, click Update complete to complete the connection between the HelloClick device and the student!

(Register all students in the same way !)

Note

- If you don't see the purple button, please scroll down to find it!

Battery Replacement




① Grip E100's back in your palm

2 Place your finger on the– on the back of E100 toremove the cover andslightly pull it off

3 Once the cover is removed, replace AAA battery pack and insert it into the mold

X Battery lasts up to 2 years

E100 Button Intrduction

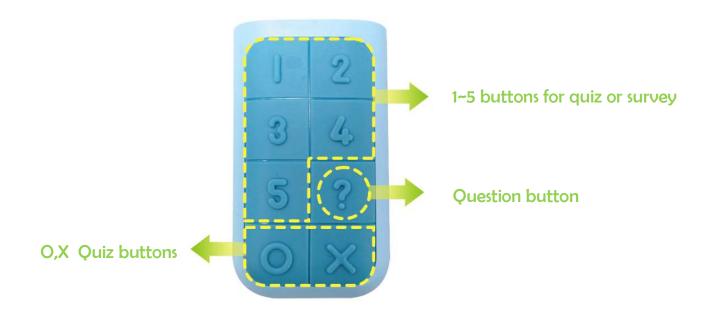

- 1 to 5: Multiple choices for quiz or survey
 ? Button: When students want to ask a question, press long
 0/X Button: For 0/X quiz, survey or vote

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0.5 cm between the radiator & your body.

part 06

E100 SPEC

Model: HFB-E100

Material: TPU + PC

Power: Alkaline Battery(AAA) X 2, 3V

Weight: 55g

Dimensions: 57.8 X 98.6 X 19.43

Led: Red

Bluetooth 4.2 / BLE 2.4 GHz

Manufacture: Made in korea