



Seguro 120

Temperature Data Logger

Quick Start Guide

For more detailed information on using the app, go to:

sensified.io/120qs

Getting the App

The Seguro app is available free of charge in the Google Play Store and the Apple App Store. Scan the barcode with your phone to start:



This device complies with Part 15 of the FCC Rules (FCC ID: 2A3LI-PM05). The full FCC compliance statement can be found under “Regulatory” in the Seguro app.


Setting Up an Account

1. Tap the “Cloud Account” button on the home screen, which will display a browser window with the Seguro authentication site.
2. Tap the “Sign up” link (under the Continue button).
3. page, you can choose between using your Google or Apple ID to log in, or creating a sensified.io account with a new email and password. If you choose to use a third-party identity provider (Apple or Google), only your basic profile information (name, email, language preference and picture) are used.



Note: A cloud account is not needed to use the Seguro 120 temperature data logger.

Connecting to the Device

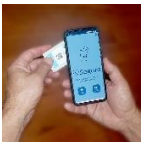

For Android Devices:

Once the Seguro app is installed, simply touch the Seguro device to the back of the phone (usually near the top of the phone) and the app will open automatically, then the device screen will open.

For Apple (iOS) Devices:

Open the Seguro app, and tap the **Connect to Device** button on the home screen. A “Ready to Scan” window

will appear at the bottom of the screen. Hold the Seguro device next to the back of the phone until the phone beeps and/or vibrates. The exact location of the NFC reader in the phone may vary somewhat, but it is usually near the top of the phone. Once the app recognizes the device, the Device screen will open.