

User 's manual

instructions for use



V 1.0

I. Product safety information


(1) This device does not come with a power adapter, when you need to charge, please use a power adapter that has been awarded the CCC certificate and meets the relevant standards. (2)Please use the device in the temperature range of 0°C-35°C, and store the device and accessories in the temperature range of -20°C- +45°C, when the ambient temperature is too high or too low, it may cause equipment failure. (3)Do not expose the device to high temperatures or around heat generating equipment, such as sunlight, heaters, microwave ovens, ovens or water heaters. (4)When charging is finished or not charged, disconnect the charger from the device and unplug the charger from the power outlet. (5)The device is equipped with a non-removable built-in battery, please do not replace the battery by yourself to avoid damaging the device. (6)Please dispose of the device, battery and related accessories in accordance with local regulations, and do not dispose of them as household garbage.

(7) This machine is not waterproof and should not be subjected to water drops or splashes.

WARNING: Batteries (packs or combinations) should not be exposed to environments such as sunlight, fire or similar excessive heat.

CAUTION: There is a risk of explosion if the battery is not replaced correctly and should only be replaced with the same or equivalent type of battery.

II. The external graphic illustration describes that the

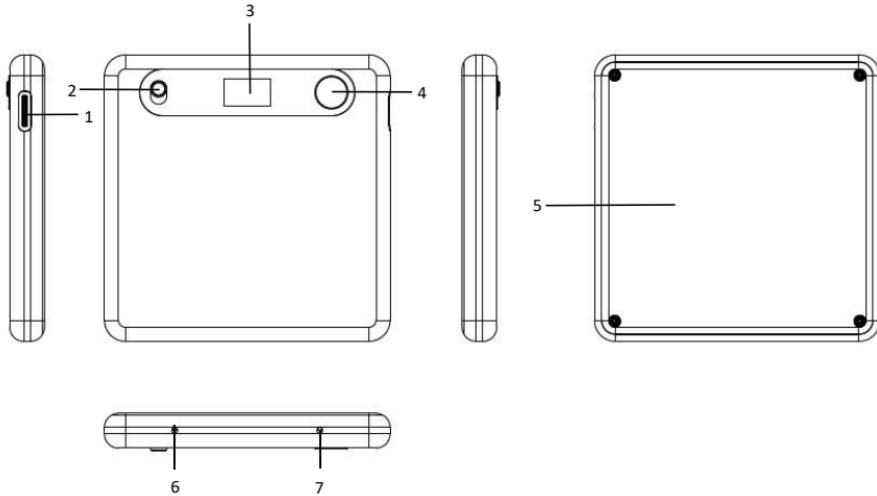


Note: The appearance of the picture to prevail in kind!

III. key functions

- (1) USB port
- (2) Recording mode toggle switch
- (3) Display
- (4) power/record switch
- (5) Magnetic rings
- (6) Microphone
- (7) Microphone
- (8)

iv. A description of the status of the recorder's display, the

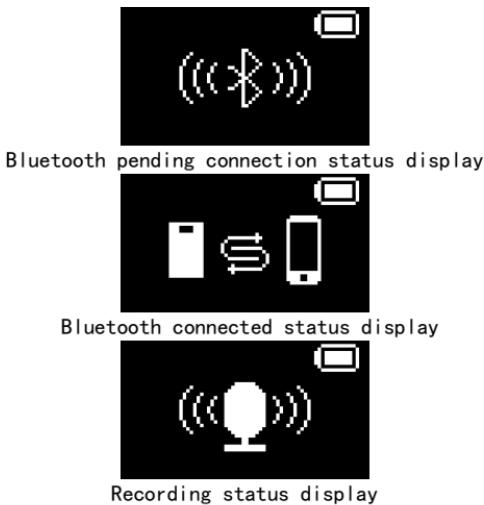

五. basic operations

- Power on: Long press the power/record on/off button for 3 seconds, the recorder will turn on after the power on screen appears and vibrates. Press and hold the power/record button for 3 seconds
- Power off: Long press the power/record button for 3 seconds when the recorder is on, the recorder will turn off.

- Recording/Saving: the recorder in standby mode short press the recording key to enter the recording state, this time the recorder vibrates a little and enter the recording state, the display will appear in the recording state display; in the recording process again short press the recording key to stop and save the current recording.

- recording mode switching

This recorder has two recording modes, namely: environment recording mode and call recording mode. The recording mode can be switched by the recording mode switch.

1、Call Sound Pressure Conduction Recording Mode: After the recording mode switch is pushed up, the recording mode toggle switch will be red, at this time the recorder will be in call recording mode, the recorder will enable the built-in sound pressure conduction microphone for recording, you need to adsorb the recorder on the back of the cell phone case to make call conduction recording.

2、Ambient Recording Mode: After the recording mode switch is pushed down, the recording mode toggle switch is grayed out, at this time, the recorder will be in ambient microphone recording mode, and the recorder will enable the ambient silicon microphone for recording.

- System reset

If the system is dead or inoperable, you can force the system to reset by long-pressing the power/record on/off button for 13 seconds.

● Charge

Insert the TYPE C plug of the supplied USB cable into the USB port of the recorder, and the big end into the USB port of the computer or charger, the recorder will show the charging status when charging, and the battery will be full in about 4 hours.

Note: The specification of the selected charger must be in accordance with the following requirements, otherwise accidents or failures will be regarded as man-made damage by our company.

Input:AC 110–240V 50/60Hz Max:150mA

Output:DC 5V/1A

● Connecting the computer

Use the magnetic USB cable supplied with the device, insert the big end of the USB cable into the USB port of the computer, and the small end of the TYPE C USB cable into the USB port of the device, then the computer will read the memory information of the device and enter into the USB flash drive mode.

VI. APP Operating Instructions

● APP download and installation

This recorder can be used alone or connected to "Mecho" APP using Bluetooth. Download "Mecho" APP by WeChat, QQ or scanning the QR code below and follow the instructions to install. Note: Currently, only IOS system is supported, Android system is not supported for the time being.



Supporting IOS

● Bluetooth connectivity



After the recorder is turned on, it will directly enter the Bluetooth pending connection state. After logging in the "Mecho" APP, click the "+ Connect Device" menu button in the upper left corner of the APP to find the device for Bluetooth connection, after the recorder is successfully connected to the APP, the APP will pop up the "Mecho Note" connected prompt box. After the recorder is successfully connected to APP, APP will pop up a prompt box that "Mecho Note" is connected. And the recorder shows the status of Bluetooth connection.

● voice recording

- 1) Recording: When the recorder is connected to the APP, short press the recording key of the recorder, the recorder will enter the recording mode, and the APP will also enter the recording state synchronously.
- 2) APP side to initiate recording: the recorder and APP connection state, click the APP bottom menu bar in the "🎙"button, the recorder enters the recording mode, and the APP enters the recording state at the same time.
- 3) End Recording: Short press the record button on the recorder to end and save the recording. You can also directly touch the "Save" menu button on the top right corner of the app to end and save the recording.
- 4) Synchronized uploading of recording files after recording: the

recording files when the recorder and APP are not connected, after the recorder and APP are connected, under the file page, pull and slide down a bit will automatically detect the files stored in the pen end of the recorder that have not yet been transferred to the APP, and when the recording files to be transferred are detected, the system will automatically upload them to the APP.

5) WiFi fast transfer: This machine supports WiFi fast transfer function, offline larger recording files can choose fast transfer mode, the recorder and APP connection, in the file page, pull and slide down a bit will automatically detect the recorder pen end storage has not been transferred to the APP file, when the detection of recording files to be transferred, the system will automatically upload, at this time you can click on the APP transfer progress bar on the right side of the "fast transfer" menu button, to connect the machine and mobile phone WiFi hotspot, after a successful connection, you can fast transfer mode. At this time, you can click on the right side of the APP transfer progress bar "fast transfer" menu button, for the machine and cell phone WiFi hotspot connection, after the connection is successful, you can carry out the fast transfer mode.

● audio file playback and management

1) Recording file playback: the saved recording file can be played directly on the APP, click to open the saved audio file on the APP, click on the play button below the file to start the playback of the current recording file.

2) Audio file transcription: click to open the APP saved audio files, click on the "immediate transcription" button, the system will be the current audio file text transcription; transcription can also be generated after the completion of the summary, mind map.

3) File Sharing: Click to open the audio file saved on the APP, then click the "..." menu button in the menu bar at the top right corner of the APP, select the sharing menu, you can share the current audio file, transcription, summarization, brain map with your friends via WeChat, QQ or email and other mainstream media.

- Document deletion

You can directly delete the local recording files as well as the recording files of the recorder in the APP terminal, find the file you want to delete, slide to the left and then the pop-up menu will appear, select Delete, then you can delete the current file.

- Settings

Click "Connected Devices" on the APP to enter the settings menu, which allows you to check the power and memory usage status of the recorder and the firmware version in real time.

Private Settings: You can set this machine to disable the USB flash disk mode, after clicking open this item, this machine will not be able to connect with the computer.

Advanced Settings: There are several setting menus, such as Record Original WAV File Switch, Idle Shutdown Time Setting, Restore Initial Settings, and Firmware Upgrade.

1) Record Original WAV File Switch: When this switch is turned on, the recorder will automatically generate the original WAV file.

2) Idle shutdown: you can set the shutdown time of the machine in the idle state, there are 15 minutes, 30 minutes, 1 hour, 5 hours and never shutdown options, you can set according to need.

3) Restore Initial Settings: Allows you to restore the unit to its initial settings.

4) Firmware Upgrade: This machine supports OTA online upgrade, when there is the latest firmware release, click on the firmware version to detect whether the machine's firmware is the latest, if there is the latest machine will automatically connect to the WiFi hotspot for firmware upgrade and update.

VII. Annexes

This product includes the following main unit and accessories, please contact your local distributor if you are missing at the time of purchase.

1. Mainframe	1 pcs
2. user manual and warranty card	1 pcs
3. USB cable	1 pcs

Note: If there is any change in the above accessories, please refer to the actual product in the box!

VIII. Technical specifications

Product Name	Smart voice recorder
Product Model	M2
Overall dimensions	61mm×61mm×7.4mm
Display	0.42" OLED display
Microphone	Built-in two arrayed silicon microphones
Microphone (Call)	A built-in acoustic pressure-conducting
Bluetooth	BLE Bluetooth 5.0
WiFi	2.4G
cellular systems	Andriod 9.0+/IOS 10.0+
APK language support	Multi-language (with mobile system) defaults to Chinese

APK	Support speech transcription, AI literate heart big model, intelligent meeting summary
Supports magnetic attraction for	Support Iphone 12 and above with magnetic suction attachment
USB port	TYPE C data interface
storage media	Internal memory 16G and above
Batteries	3.7V/800mAh polymer battery
continuous	Approximately 48 hours
Charge time	Approx. 4 hours (using 5V 1A charger)
recording format	WAV/OPUS
recording quality	WAV:256kbps OPUS: 32Kbps
Operating	-10°C → 55°C
supporting operating systems	WINDOWS XP/VISTA/WINDOWS 10/Windows 11 and above

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.