




## FOAM TIP FITTING PROCEDURE

**ALWAYS FIT AND SECURE EARTIPS WITH THE UNIT TURNED OFF**

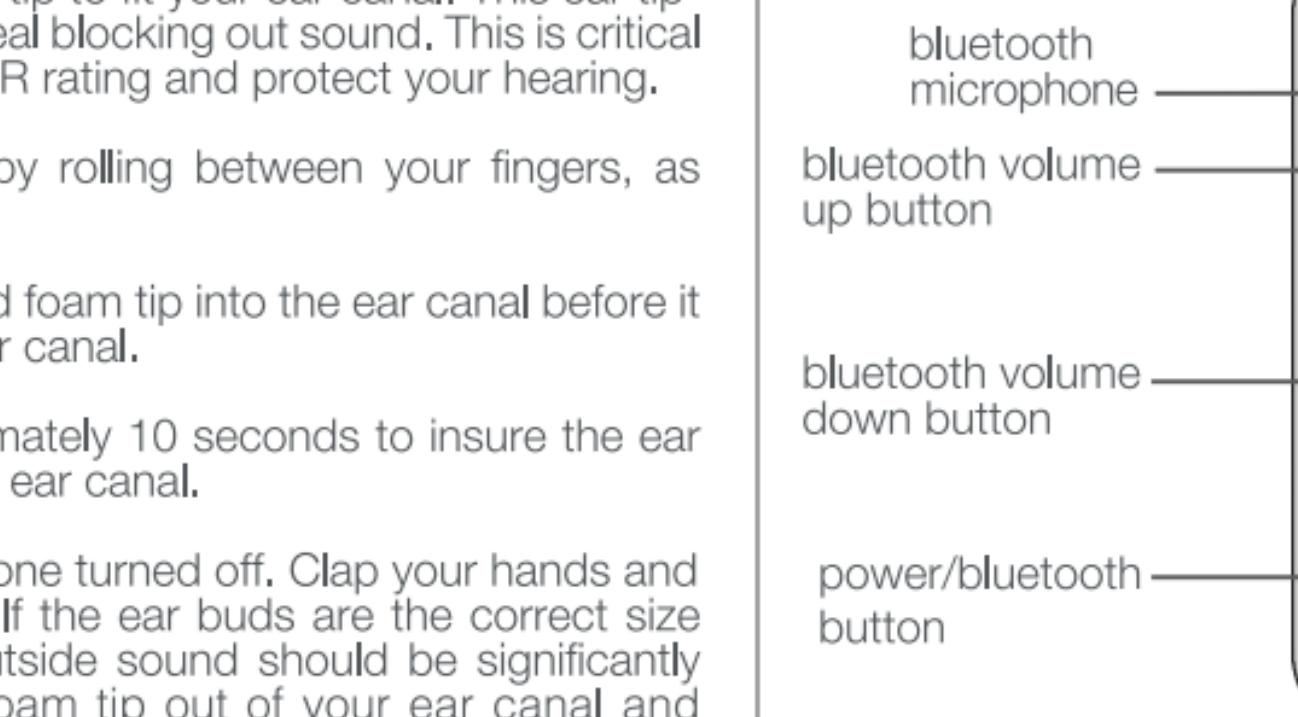

**FOAM TIP FITTING PROCEDURE**

- Mould the soft earhook to fit around your ear as shown.
- Select the proper size ear tip to fit your ear canal. This ear tip should form a complete seal blocking out sound. This is critical to achieve the highest NRR rating and protect your hearing.
- Compress the foam tip by rolling between your fingers, as much as possible.
- Quickly insert compressed foam tip into the ear canal before it expands and seals the ear canal.
- Hold in place for approximately 10 seconds to insure the ear tip expands and seals the ear canal.
- Test this with the headphone turned off. Clap your hands and listen to the sound level. If the ear buds are the correct size and properly inserted, outside sound should be significantly muted. If not, take the foam tip out of your ear canal and repeat step 2 - 3.

**HEARTHROUGH INSTRUCTIONS**

- Mould the soft earhook to fit around your ear as shown.
- Select the proper size ear tip to fit your ear canal. This ear tip should form a complete seal blocking out sound. This is critical to achieve the highest NRR rating and protect your hearing.
- Compress the foam tip by rolling between your fingers, as much as possible.
- Quickly insert compressed foam tip into the ear canal before it expands and seals the ear canal.
- Hold in place for approximately 10 seconds to insure the ear tip expands and seals the ear canal.
- Test this with the headphone turned off. Clap your hands and listen to the sound level. If the ear buds are the correct size and properly inserted, outside sound should be significantly muted. If not, take the foam tip out of your ear canal and repeat step 2 - 3.

**POWERING ON/OFF**



**WHILE IN USE**

- Press and hold the POWER/BLUETOOTH BUTTON for two seconds and the INDICATOR LIGHT will flash GREEN three times. At this stage, the earphone is powered on.
- Tap the POWER/BLUETOOTH BUTTON once to pickup or end calls.
- While the earphone is powered on, press and hold the HEARTHROUGH/OFF button for two seconds to turn the Bluetooth device again, double-tap the POWER/BLUETOOTH BUTTON to re-activate pairing search.
- Tap the BLUETOOTH BUTTON once to turn up music. The earphone will then enter automatic pairing and the INDICATOR LIGHT will flash RED and GREEN alternately.
- Quickly insert compressed foam tip into the ear canal before it expands and seals the ear canal.
- Hold in place for approximately 10 seconds to insure the ear tip expands and seals the ear canal.
- Test this with the headphone turned off. Clap your hands and listen to the sound level. If the ear buds are the correct size and properly inserted, outside sound should be significantly muted. If not, take the foam tip out of your ear canal and repeat step 2 - 3.

**HEARTHROUGH INSTRUCTIONS**

- Press and hold the POWER/BLUETOOTH BUTTON for two seconds and the INDICATOR LIGHT will flash GREEN three times. At this stage, the earphone is in "hearthrough only" state. In this state, hearthrough is still active and if you want to connect to a bluetooth device again, double-tap the POWER/BLUETOOTH BUTTON to re-activate pairing search.
- Tap the POWER/BLUETOOTH BUTTON once to turn up music. The earphone will then enter automatic pairing and the INDICATOR LIGHT will flash RED and GREEN alternately.
- Quickly insert compressed foam tip into the ear canal before it expands and seals the ear canal.
- Hold in place for approximately 10 seconds to insure the ear tip expands and seals the ear canal.
- Test this with the headphone turned off. Clap your hands and listen to the sound level. If the ear buds are the correct size and properly inserted, outside sound should be significantly muted. If not, take the foam tip out of your ear canal and repeat step 2 - 3.