


Welcome to use voice translator. In order to better help you quickly understand and use the product, it is recommended that you carefully read the manual before using the voice translator.

Introduction to Buttons

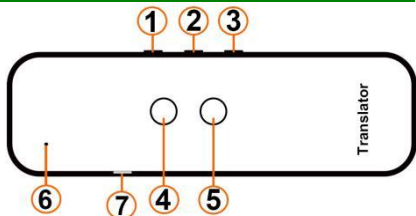

1-Power button	2-Volume +
3-Volume -	4-Translation A button
5-Translation B button	6-indicator light
7-Type-C charging port	

Charging instructions

Input voltage DC 5V/1A, charging time approximately 3 hours. When charging, the red light will always light up.

Instructions for use & Bluetooth connection method

1. Scan the QR code or download the app from the app store.




Google Store



Apple iOS

You can search for "One Click" in the Google Store&IOS Store to download,Huawei users can search "One-click translate" in Huawei App Market.

2. Press and hold the power button of the translator to turn it on (with a prompt sound). After turning on, the blue light flashes and waits for Bluetooth pairing to connect.
3. After turning on the app, click on the homepage to select **"translation Stick "**.

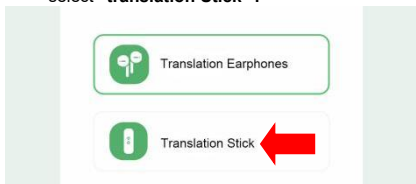

4. Click on **"Connect device"** in the yellow box. Follow the instructions to connect the device via Bluetooth.



5. Open the Bluetooth of your phone to find and connect to the **"Translator"** device. After successful connection, there will be a prompt sound.



6. Returning to the app will display "Connection successful" and jump to the translation interface.

If the connection is unsuccessful or unauthorized is displayed

- Please close the app and repeat the above steps to try to reconnect.
- Has the device connected to other nearby Bluetooth devices? Please delete the translation device on the other device, then reconnect again and restart the app.

Dialogue Translation

1. On the translation interface, select the translation language corresponding to the A and B keys on the translator.



2. For more accurate speech recognition, after pressing the translation button (A or B) on the translator, please hear a drop sound before speaking. Please try to speak with a clear, loud, and standard voice, which will improve recognition accuracy. (Please ensure to release the button after each sentence is completed, otherwise incomplete recognition may occur, and the duration should be controlled within 15 seconds as much as possible)
3. After releasing the button, it will automatically translate and broadcast the translation results (translation speed is related to the network, please ensure that the network is smooth)
4. Click on the translation dialogue record in the translation interface and the result will be read again.
5. The volume level can be adjusted through the volume keys on your phone and translator (there will be a prompt sound when the translator reaches its maximum volume, but there will be no prompt sound when the minimum volume is reached.)

Photo Translation

Select the language you want to translate, take a photo of the target with your phone, and the translation result will be displayed.

Offline Translation

Before using "offline mode", you need to purchase and **download the offline translation package** on the APP page in advance, so that you can translate in real time even if there is no network on your cell phone.

Frequently Asked Questions

- **The device cannot be turned on**
(1) Please try charging and check if the charging indicator light is red.

(2) Press and hold the power button for 10 seconds to reset the translator.

● **Can't the APP application connect to the translator?**

(1) Please ensure that the connection is made correctly according to the operation.

(2) Please ensure that the translator is not connected to other phones, and if so, disconnect it; If there is no other phone connection, please click on the paired device in the Bluetooth menu of the phone's settings, cancel pairing, delete the Bluetooth name, and reconnect according to the instructions.

(3) Try restarting the app or restarting your phone.

● **Didn't broadcast the translation results?**

(1) When the network signal is poor, translation may not be smooth. It is recommended to turn on flight mode and restart the network.

● **Cannot download app!**

Android user locations that can't download the app, please check if Google Apps is available in your current region. If Google is not available, please contact your dealer for a browser installation package.

Product Specifications

Bluetooth	BT4.2
Charge	TYPE-C DC5V/1A
Duration	About 4-6H
Range	Within 10 meters
Type	Translation Stick
power	2.5W-4W

We will continue to add languages and optimize the translation experience!
Please keep an eye on the app updates!

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.