


Welcome

Welcome to your new Flytta smartwatch. In this quick start guide you will find information explaining; how to get started with your new watch, as well as other useful features.

How to turn on the watch

The watch turns on as soon as it is charged. There is no separate on/off button on the wristwatch.

To monitor the device status, go to the “device” section of the settings menu in the Flytta App.

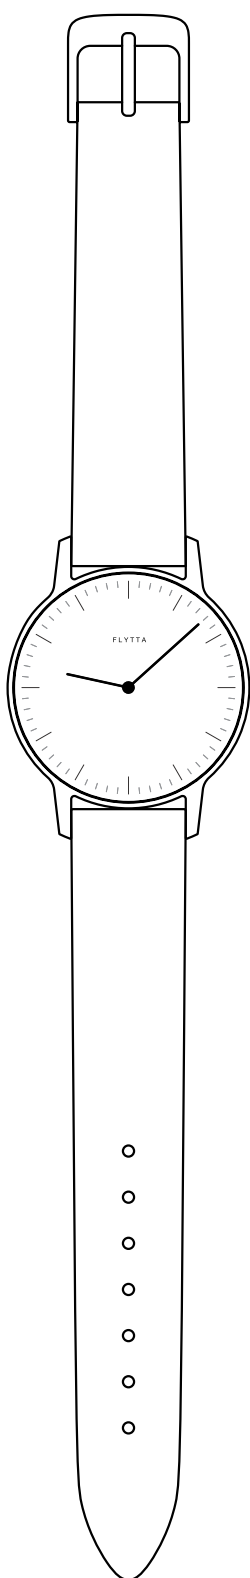

Watch will automatically
turn on when charged


How to charge the watch

To charge the watch, simply lineup the round section of the charger with the underside of your Fytta watch. We recommend charging the watch at the end of every day, which should only take around 1 hour.


To monitor the charge level of your device, go to the “device” section of the settings menu in the Flytta App.

Charging will be indicated by a blue battery symbol on the watch face.


Low charge will be indicated by a red battery symbol on the watch face.

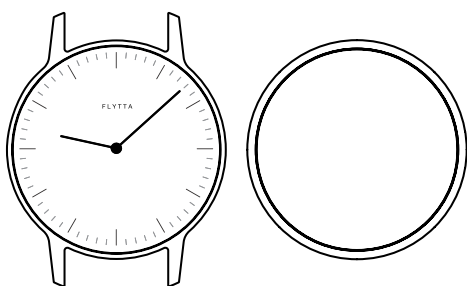

Lineup charger and
Fytta watch to charge

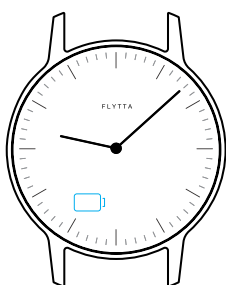

Charging will be indicated by a
blue battery symbol on the watch face.


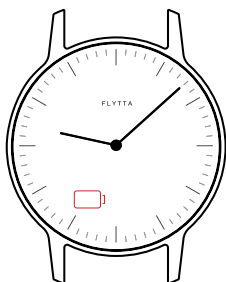


Low charge will be indicated by
a red battery symbol on the watch face.

How to connect the watch to smartphone

When you first log in to your Flytta smartphone app, you will be prompted to pair your Flytta watch. If you are setting up both devices at the same time, simply follow the instructions in the app.

If you have already been using the Flytta app, you can find the section on pairing your new Flytta watch in the settings page.

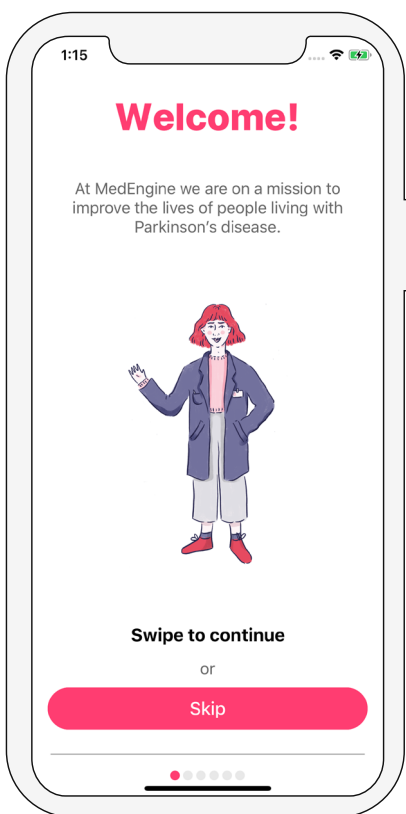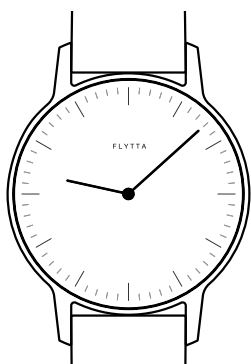


Log in to your Flytta smartphone app, you will be prompted to pair your Flytta watch.


Notifications

A medication reminder will be shown to you by a white notification symbol on the watch face. When this light turns on it will be accompanied by a haptic vibration.

Any other type of reminder that you have set within the Flytta app will illuminate a blue notification symbol on the watch face.

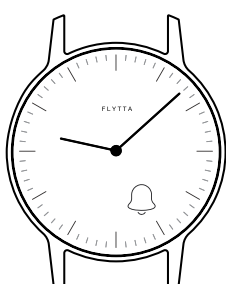

A white notification symbol
will indicate a medication reminder.

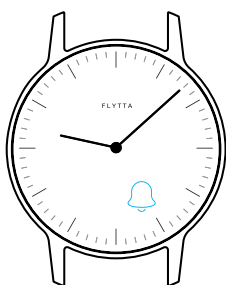


A blue notification symbol will
indicate any other type of reminder.

How to change your watch strap

The watch strap is attached to the watch with a standard 18mm watch strap fixture. This means that the watch strap can easily be replaced or customised if desired.

To remove the standard watch strap simply unhinge it using the quick release fixtures as seen on the images.

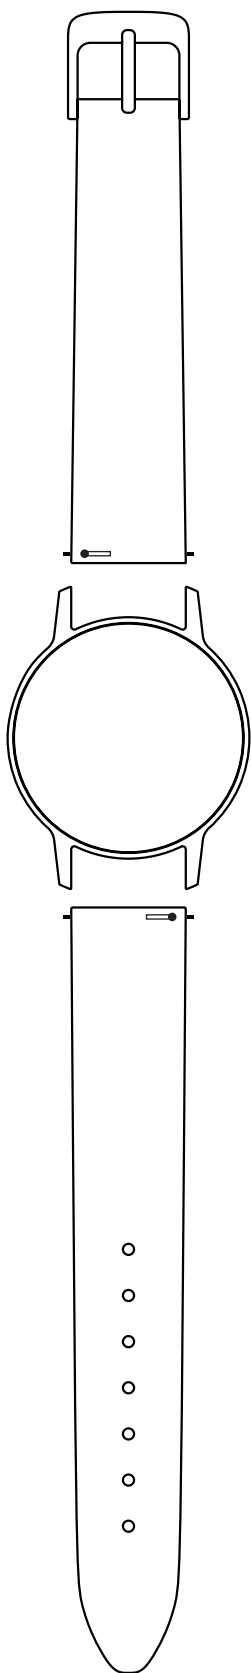


Remove the standard watch straps, unhinge it using the quick release fixtures on the underside.

Flytta App

Download and Login / Signup


The Flytta App can be downloaded from the Apple App Store as well as the Google Play Store. Please follow the instructions in the app in order to sign up and log in.

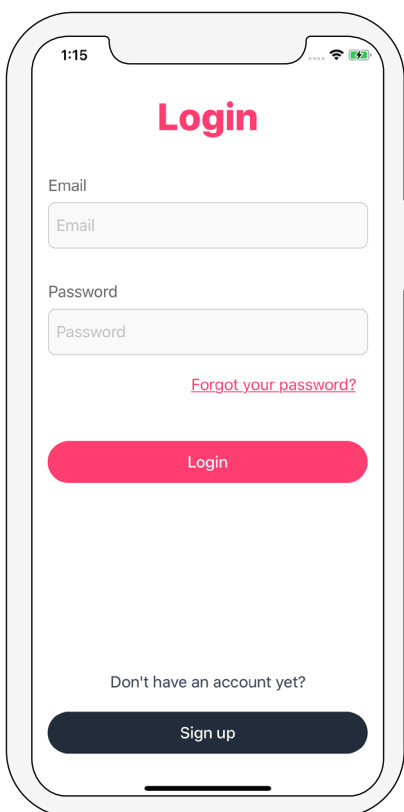

Login / Sign Up

'Home'

Home page: keep track of remaining medication and obtain an overview of the main information regarding medication reminders, steps count and sleep.

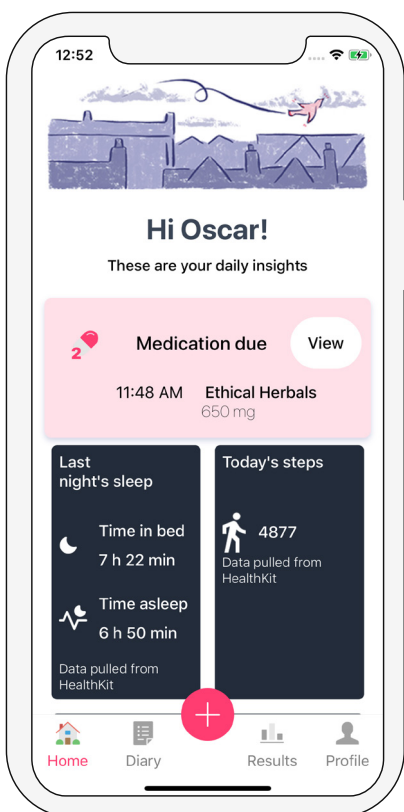


Home

Flytta App

'Add new entry'


Add a new entry: Flytta works like a journal, you'll be able to add entries involving, exercise, symptoms, sleeping hours and mood.

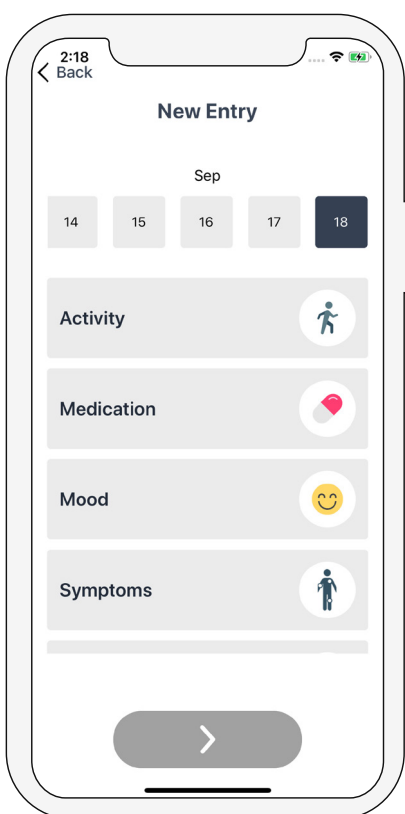

Add new entry

‘Diary’

Diary: a list of your calendar-based entries.

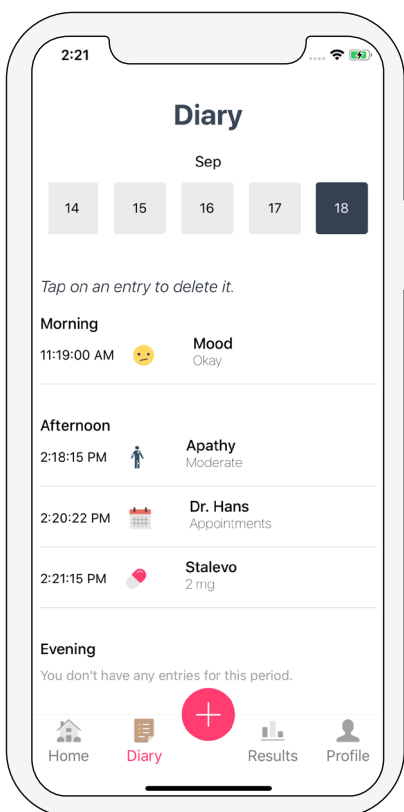


Diary

Flytta App

'Schedule a medication reminder.'


Schedule a medication reminder: Flytta can send you notifications to remind you to take your medication and keeps track of how many you take on time.

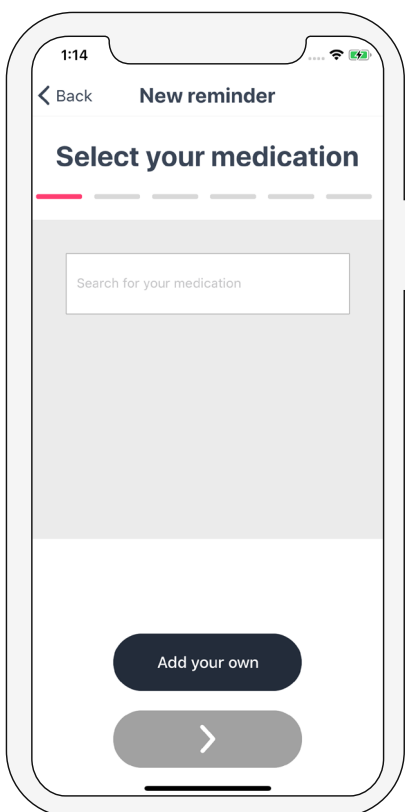

Schedule a medication reminder

'Results'

Results: a way for you to compare daily, weekly and monthly views of your most relevant data.

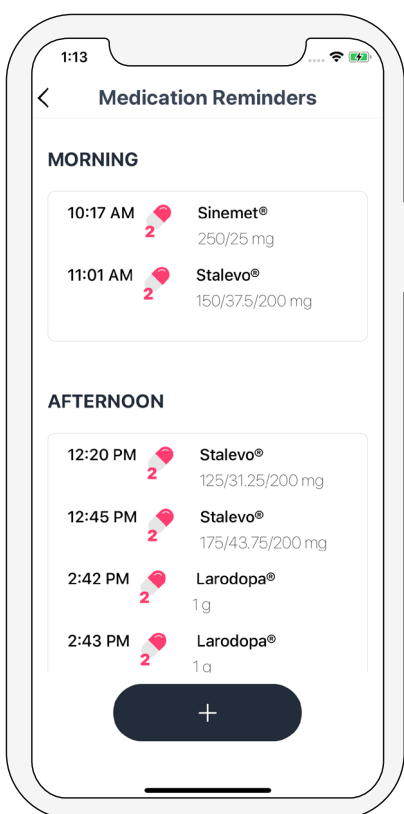


Results

Flytta App

'Device Status and Overview'


Device Status: This tab will contain the current charge level and other information about your Flytta watch.

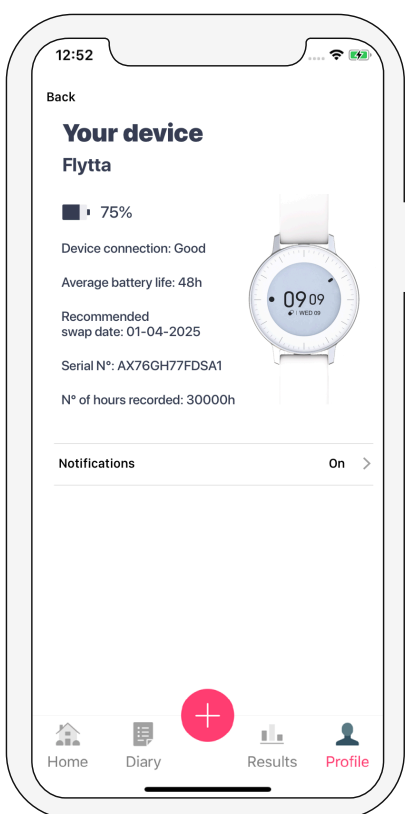

Device Status and Overview

'Profile'

Profile: your personal space to modify medication reminders, language preferences or contact information.

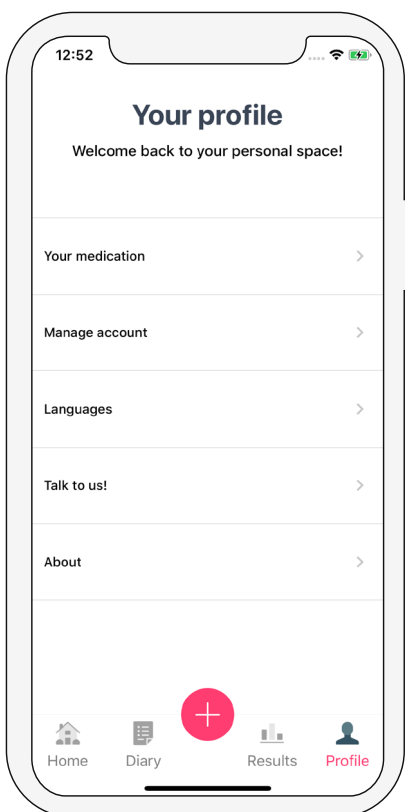

Profile

FCC Warning

FCC ID: 2A6KGFLYTTA-1

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.