


Mini Label Printer User Manual

Specifications

Product Model	L12
Size	92x74x38mm
Weight	128.3g
Resolution	203dpi
Interface	USB-C
Battery Capacity	1200mAh
Input	5V  1A
Effective printing width(Max)	15mm
Printing Method	Thermal

Packing list



Printer(1 unit)



Data cable




User Manual(1 book)



Label paper (1 roll)

Product diagram

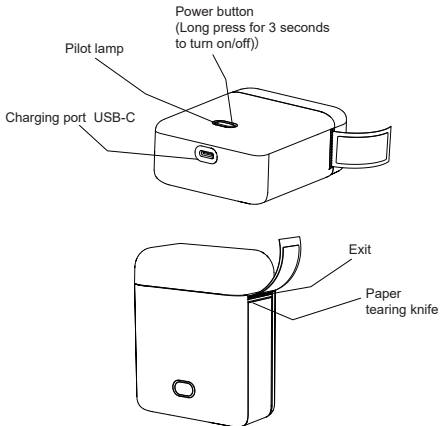

Indicator Description

index	State	illustrate
green	Light	The printer is in normal condition: Power on and charge, fully charged; Shut down and charge, fully charged;
green	Flicker	Power on charging (not fully charged);
red	Light	Fault status, including but not limited to print head overheating and paper shortage
red	Flicker	Shut down and charge (not fully charged);
blue	Light	The printer is in normal condition and Bluetooth is connected;

Basic usage and settings

1. Turn on the printer by pressing and holding down the power/button for 3 seconds.

2. Paper feeding

Press the power/settings button, and the paper will be output by double clicking.

Label paper: A label paper can be printed from the machine, located between

two label papers, and can be torn off along the gap

Black label paper: Tear open the label along the black mark. Continuous paper: Send 10mm paper.

3. The printer can detect a "paper shortage" status.

In this case, the printer does not respond.

4. Insufficient battery power The printer has a low battery detection function, and when the printer's battery is low, the indicator light flashes red and alarms.

5.BT connection

When connected via BT, the mobile app will display corresponding instructions.



6. When the printer is plugged into the power adapter,the red light is on.

7. Cancel printing by long pressing the power button.

Installation of consumables

Please open the paper compartment cover and put the printing paper on top of the printer. After closing the paper compartment cover, the printing paper will expose a short section of the printer, as shown in the figure:

Note: If the paper is laid in reverse, the printer will print a blank space.

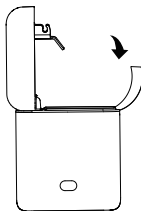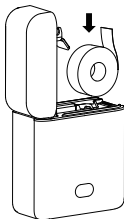

App download and settings

Mobile Download

Search "Luck Jingle" in the App Store

Download on the
App Store

Get it on
Google Play



iOS



Android

Set up

Double-click the power button, the printer will print out the QR code of the bound device; add a device through the App, scan the QR code to connect the printer (Note: Do not search for BT printer connection in the BT settings of the mobile phone.)

Safety and precautions

1. There is a built-in lithium battery, please do not use it in the environment with temperature higher than 40°C ; keep away from fire and other heat sources, and do not place it in the hot sun, such as closed car;
2. Children should be charged and used under the supervision of adults. After full charge, please make sure to pull out the charging cable in time to prevent overheating, short circuit or fire;
3. Do not put the product in fire or water to avoid battery short circuit or fire or burn;
4. The operating temperature range is 0°C to 40°C, please do not exceed the recommended temperature range;

Power on status, continuously press the power button 6 times, calibrate the label paper

Trouble shooting guide

1.If there is no content on the paper when printing Check the paper is loaded

in right direction;If it is in the right direction, print the self-test page and check;

If the self-test page cannot be printed, the printer is malfunctioning;If the self-check page is correct, check the paper or App;

2.Print blurry

Check the default print density for the best print results;Check if there are horizontal lines or only part of the content can be printed;Check to see if the print

head is blocked and clean it with alcohol;if the print quality is not good, please

use the original paper series;

3.A paper shortage error message is displayedCheck whether the printer is out

of paper;if not, make sure the cover is locked correctly (loose pages may cause the printout to shift or Paper test failed);

4.Printing stops unexpectedly

In order to ensure the reliability of the printer, multiple protection instructions are designed;The printer will stop working due to lack of paper, data errors, excessive temperature, or low battery power; Follow the prompts on the application to analyze the problem.

△ Only one side of the printing paper can be printed. Please place the printing paper in the correct direction.

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.