




# Colorful Rhythm Bone-conduction BT Speaker

## 1. Product introduction

Resonant Horn Product Diagram

The diagram illustrates the Resonant Horn product, showing its top and bottom views. Key features labeled include:

- Light mode switch key** and **Light color switch key** on the top view.
- Rhythm light** and **Type-C Charge** on the bottom view.
- On/Off key Play/Pause** on the bottom view.
- Sound collecting Mic** on the bottom view.
- Resonant contact surface of resonant horn Washable reusable nano glue** on the bottom view.

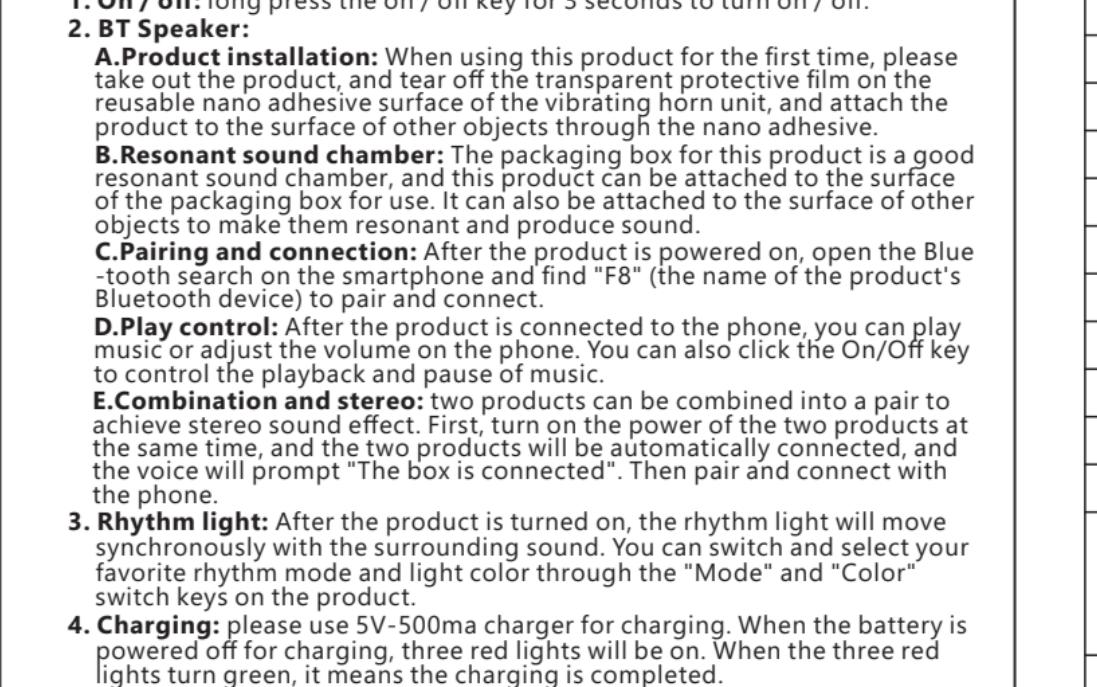

## 2. Parts list

Rhythm light BT speaker — 1 set	Operating instructions — 1 pcs
Package cover (can be used as resonance cavity) — 1 set	
Type-C charging cable — 1 pcs	Spare nanogel — 2 pcs

- 1. On / off:** long press the on / off key for 3 seconds to turn on / off.
- 2. BT Speaker:**  
**A. Product installation:** When using this product for the first time, please take out the product, and tear off the transparent protective film on the reusable nano adhesive surface of the vibrating horn unit, and attach the product to the surface of other objects through the nano adhesive.

**B.Resonant sound chamber:** The packaging box for this product is a good resonant sound chamber, and this product can be attached to the surface of the packaging box for use. It can also be attached to the surface of other objects to make them resonant and produce sound.

**C.Pairing and connection:** After the product is powered on, open the Blue-tooth search on the smartphone and find "F8" (the name of the product's Bluetooth device) to pair and connect.

**D. Play control:** After the product is connected to the phone, you can play music or adjust the volume on the phone. You can also click the On/Off key to control the playback and pause of music.

**E. Combination and stereo:** two products can be combined into a pair to achieve stereo sound effect. First, turn on the power of the two products at the same time, then connect the two products to the same phone.

the same time, and the two products will be automatically connected, and the voice will prompt "The box is connected". Then pair and connect with the phone.

synchronously with the surrounding sound. You can switch and select your favorite rhythm mode and light color through the "Mode" and "Color" switch keys on the product.

**4. Charging:** please use 5V-500ma charger for charging. When the battery is powered off for charging, three red lights will be on. When the three red lights turn green, it means the charging is completed.

## **ficatio**

Product Name	Colorful Rhythm Bone-conduction BT Speaker
Model No.	FS

dict Mode

weight 48g

weight 48g

Capacity Polymer Li-ion 400 mAh

Capacity	Polymer 2.4V 1000 mAh
Software Version	V5.0
Transmission Distance	10 Metre
Speaker Type	3W Strong magnetic resonance horn
LED Type	RGB LED

D Qty 24 Pcs

Waterproof Grade:	Not waterproof
Power Input	Type-C / 5V-0.3A
Working Time	2 Hours and 40 Minutes
Charging Time	About 1 hour (Sound pickup light + BT speaker)
	About 1.5 hours (BT Speaker mode)
	> 3 hours (Pickup light mode)
	BT is not connected / Non sound collecting.
1 - if the product has non-human quality problems within 7 days from the date of sale, the product can be returned / replaced or free of charge. Repair, return / exchange must keep the original package and accessories intact and the product appearance intact.	
2 - if the product has non-human quality problems within 15 days from the date of sale, the product can be replaced or guaranteed free of charge.	
3 - if the product has non-human quality problems within one year from the date of sale, the product can be guaranteed free of charge. Accessories are not available Within the warranty period.	
4 - please install, use and charge according to the instructions.	
5 - this product is not waterproof / fire resistant, please do not put it in water / fire.	
6 - during the warranty period, man-made damage, self disassembly, improper use, misuse or abuse are not covered by this warranty.	
7 - if maintenance is required after the warranty period, a certain maintenance fee should be paid.	

100

<b>Customer information</b>			
Customer Name:		Contact number:	
Contact address:			

## Product in

Information

## ter sales

Maintenance Center	Fault and handling	Completion