

## Shower alarm USER'S MANUAL

1、 Hold left side battery check button for 4s,  
device to say "Power on".

2、 Press left side battery check button within  
1 second, device to say "battery ok". Front  
LED light green .If device to say " Please  
change battery" " Front LED light will light  
red ,please replace new battery. If LED is not  
on, please recheck position of batteries.

3、 Press the CALL button(front RED button  
with white plus +), backlight light up, short  
press again to light off, no operation, the  
default light for 3 minutes, then  
automatically light off.

4、 To call Mark server, press and hold (> 4 seconds) the CALL button (front RED button with white plus +)until you  
hear the Device to say "Activating emergency alert" and the LED light are always on. The device will call and send  
data to Mark server. If call fails to go through, you will hear DISCONNECTED, REDIAL and device will retry calling  
until Mark server answer.

5、 To disconnect, press left side CANCEL button or wait for operator to hand up.

6. Data to server example:

(call:5162011116 IP:34.208.55.110 port 7600)

U1{864394040034003|460010859218526|||210402004430|SOS/E/100}

U1{864394040034003|460010859218526|||210402004430|Cancel by button/E/406}

U1{864394040034003|460010859218526|||210402004836|Low Battery/E384}

U1{864394040034003|460010859218526|||210402005052|Timer Test/E/602}

Notes:

\*This device is designed to call Server when SIM card can be detect inside and available, will call 911 when SIM  
card undetectable .


\*It is recommended to check battery power every 2 weeks. Right button LED lights up red if batteries need to be  
replaced. Replace with AAA alkaline batteries.

The three white LED Light=Call in progress

Green LED Light=Battery good and device in standby mode for calling

Red LED Light=less than 10minutes of talk time left, replace batteries.

\*This device is designed to Quickly and Easily summon emergency services, family and caregivers, in case of a slip  
and fall in the shower or bathtub, please stick device on the wall with the sucking cup attached.

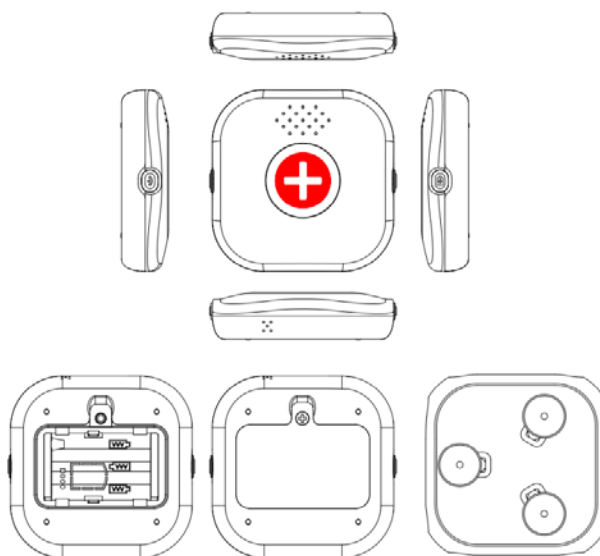

**FCC Statement:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 10cm between the radiator& your body.