


Smart Watch

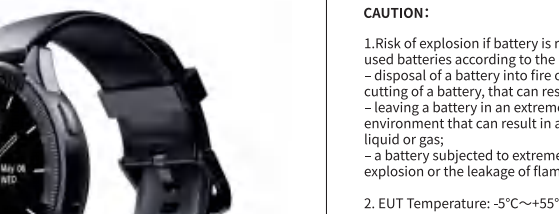

User Manual

Hereby, Shenzhen FreeYond Technology Co.,Ltd. Declares that this Smart Watch is in compliance with the essential requirements and other relevant provisions of directive 2014/53/EU.

CAUTION:

1. Risk of explosion if battery is replaced by an incorrect type, dispose of used batteries according to the instructions.
 - disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
 - leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas;
 - a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
2. EUT Temperature: -5°C~+55°C (Standalone).

Frequency Range (RF):
BT: 2400-2480MHz (TX/RX);

FCC ID: 2A8FE-WS1

PRODUCT NAME: SMART WATCH
MODEL: 2303008W
COLOR: CLASSIC BLACK
INPUT: 5V=0.2A
MONTH AND YEAR OF MANUFACTURE: MARCH-2023
RECHARGEABLE LI-ION POLYMER BATTERY: 0.30Ah/3.7V

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Description of Appearance

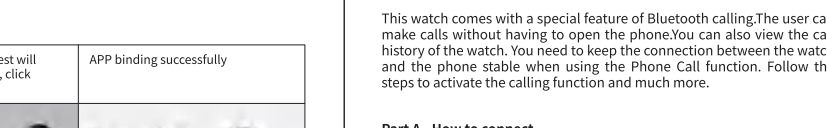

Note: Please consult the product material in detail before purchase to avoid allergies to the material. Due to individual differences, if you encounter skin discomfort when wearing it, please stop wearing it and consult a doctor.

Download the APP and bind the watch


Note: The mobile phone system must support Android 5.0 or iOS 9.0 and above, and Bluetooth 4.0 and above.

- (1) Download the APP
Scan the QR code and download the FY Watch application.



- (2) Connect smart watch with FY Watch APP
After turning on the watch, please complete the pairing of the device and the phone through the FY Watch APP before it can be used normally.

APP Binding Steps:

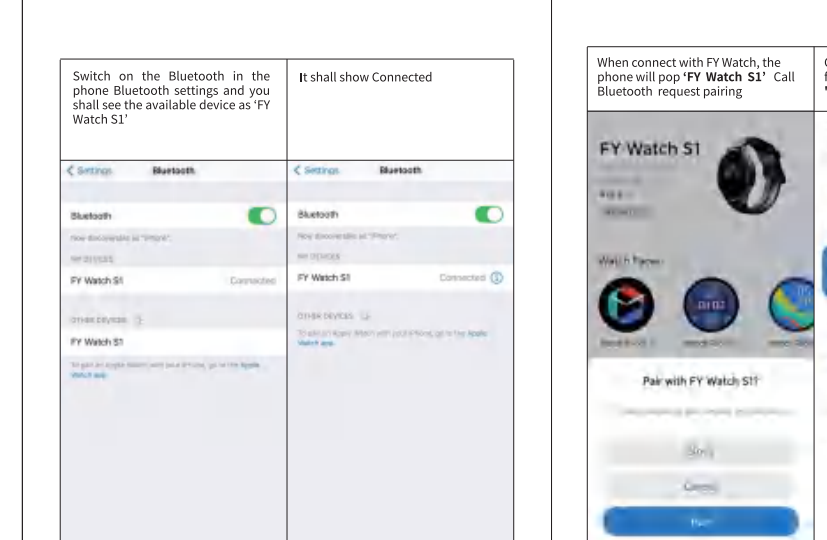

Bluetooth Calling Function


This watch comes with a special feature of Bluetooth calling. The user can make calls without having to open the phone. You can also view the call history of the watch. You need to keep the connection between the watch and the phone stable when using the Phone Call function. Follow the steps to activate the calling function and much more.

Part A - How to connect

- Step 1:
After connecting the watch to the FY Watch App, you need to go to the Bluetooth settings of the phone and pair the watch there as shown below.

Note 1

- ① The call option needs to be turned on before the APP binds the device, as shown in the figure below;
- ② When the call option is turned on, the sound of the phone will be on the watch. If you don't want the sound of the phone to be on the watch, please turn off this option;
- ③ Turn on this option and the watch battery life will be shorter. When you don't use the call or watch to sing, try to turn off this option;

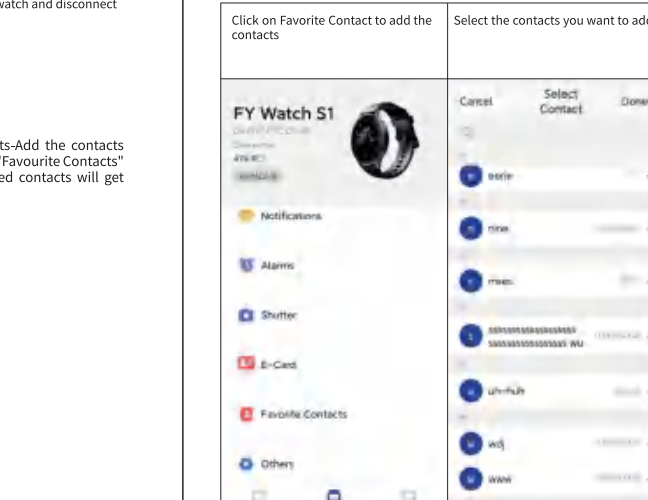

For iOS

Switch on the Bluetooth in the phone Bluetooth settings and you shall see the available device as 'FY Watch S1'. It shall show Connected.

For Android


When connect with FY Watch, the phone will pop 'FY Watch S1' Call Bluetooth request pairing. Once accepted you can see the following screens saying "Connected".

Charging

1. Plug the charger's USB port into a mobile phone charger or a computer USB port to charge the watch.
2. Attach the charging pin to charge the smart watch.
3. The charging icon will appear on the screen, indicating that the watch is being charged.
4. It is recommended to use computer USB ports or brand mobile phone chargers to charge the watch.

Functions Navigation

The screen can be navigated by sliding left /right/up/down

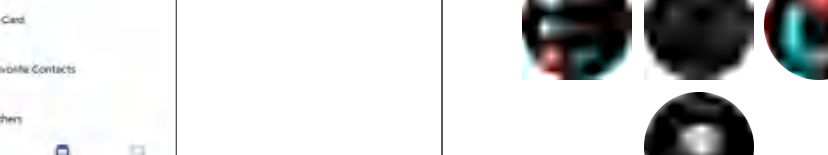

Part B - Add contacts

Through the microphone available in the watch you can talk through the watch and adjust the speaker volume by the right icon on the watch and disconnect the call.

Part C - Listen to Music

Listen to Music-You can Listen to Music on your Watch, when it is connected to your Phone Via Bluetooth Mode.

Part D - Battery Advisory

1. The battery lasts for 6 hours with Bluetooth calling mode enabled
2. If the Bluetooth calling mode is disabled then the battery can last for 7 days.
3. On standby the battery can stay for as long as 60 days.
4. Advisory- To conserve battery, It is advised to turn off the Bluetooth when not in use.

Watch Wearing and Charging

It is recommended to wear the watch with a moderate tightness at a distance two fingers far from your wrist to ensure that heart rate monitor works properly.

Use Of Functions

The smart watch will automatically track the step taken on the screen. Note: Your movement stats reset to 0 at midnight.

Messages Reminder

The device can sync incoming notify from Twitter, Facebook, Instagram etc. Recently 5 messages can be stored. Note: You can switch on/off the incoming notification in the APP.

Shutter

Once the device is connected, you can remotely control your phone's camera to take photos by shaking your watch or touching the photo icon. Note: This function needs to enter the camera interface in the FY Watch APP.

Player

After connecting the device, you can remote control the music player on your phone.

Stop Watch

Choose to upload business card QR code, collection code, etc. through the FY Watch APP operation, and then they will be displayed in the E-Card of the watch.

Alarms

Set up the alarm on the watch, the device will vibrate to remind on time.

Find Phone

After the watch is successfully connected to the APP, the watch can initiate the function of finding a mobile phone, and the mobile phone will ring or vibrate. Note: You can switch on/off the feature in the APP.

Calculator

A tool that can perform simple arithmetic calculations.

AI voice

Before using this function, you need to connect to the watch. After tapping, click 'Talk after tap' to start speaking and the mobile phone will perform operations according to the voice commands received. Note: Please pronounce it accurately.

E-Card

The Smart watch could record your heart rate all day. You also could tap on the page to start measuring heart rate.

Weather

It could show the weather info of current and tomorrow on the weather page. Weather info is synced after connecting with the APP, it will not be updated after a long disconnected.

Exercise

Tap the training icon on the menu to start a new training measure recording, there are 123 sport modes to be chosen. Note: The watch currently only displays 20 sports types, for more sports, please scroll down to the bottom to add the desired type, the new sports will cover the first one.

SpO2 Test

Tap the SpO2 page to start measuring your SpO2. On the SpO2 page, it can show the SpO2 measured data of the last times.

Stress

This function helps you to do breathing activity and ensure great health.

Remind to Move

The device will vibrate to remind you to make a relax after 1 hour sitting. Note: You can switch on/off the feature in the APP.

Remind to Drink Water

The smart watch will remind you "Time to Drink Water" at the planned drinking time. Note: You can set the feature in the APP.

Goal Notifications

When the number of steps reaches the set goal, the watch will vibrate to remind you. Before using this function, you need to enable Goal notifications by tapping "Profile" -> "My devices" and turning on Goal notifications on the FY Watch App.

Period

After setting the period management and reminder mode through the APP, the watch displays relevant information about physiological health management.

Game

This is a feature that allows users to play games on their wrist, there are 2 games in total.

Daily Maintenance of the Watch

1. The watch is not resistant to erosive liquid such as seawater, acidic and alkaline solutions and chemical reagents. Damages or defects caused by misuse or improper use are not covered under warranty.

EU Declaration of Conformity

In accordance with EU Directives and Regulations
Company name: Shenzhen FreeYond Technology Co., Ltd.
Address: Unit 203, Block A, Tengefei Industrial Building, No. 6 Taohua Road, Futian Bonded Area

as the manufacturer hereby declares under our sole responsibility that the Product(s): Smart Watch

Model name: 2303008W

is in conformity with the essential requirements of the RE Directive 2014/53/EU:

Radio Article 3(2) ETSI EN 300 328 V2.2.2 (2019-07)

EMC Article 3.1(b) ETSI EN 301 489-1 V2.2.3 (2019-11)

Safety Article 3.1(a) EN IEC 62368-1:2014+A11:2017

Health Article 3.1(a) EN 50663:2017, EN 62479:2010

WARNING

Warning: This product is not a medical device. The smart watch and its applications should not be used in diagnosis, treatment or as a preventive treatment for diseases and sickness. Please consult medical professionals before changing exercise habit or sleep habit to avoid serious injuries. The manufacturer reserves the right to modify and improve any functions description in this user guide and continuous update of the new content without further notice. This user guide is for reference only, the smart watch for selling is subject to the final product.

Signed on behalf of Shenzhen FreeYond Technology Co., Ltd.

(Signature of authorized person)

JianJun Xue

Signature:

Manager

Date: 2023-2-16