


2 Follow mounting
steps in-app &
Enjoy.



Soothing with
SoundZzz™

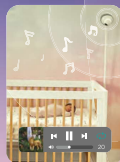

Personalized
Playlist



Soothe
Remotely




Two-Way
Talk



**High Definition
Day & Night Vision**

Aura shows you crystal clear video
of your baby around the clock.

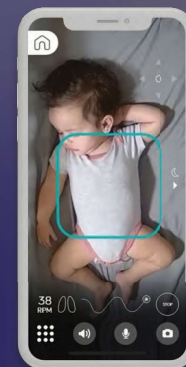

◀ **In-App Tilt + Pan
Controls**

Easily adjust your camera
viewing angle from the
app for the best view of
your little one.




Non-Wearable Breathing Motion Monitoring

Hassle-free breathing detection uses 2 million pixels to recognize your baby's breathing rate and rhythm, without the need for wearables.

Early Detection

Your baby's health and sleep is most quickly and accurately determined by breathing rate. Aura's Computer Vision technology gives you this peace of mind without the use of harmful sensors.

Monitor Dashboard ▶

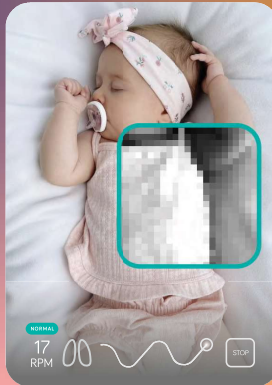

Safety & Compliance

▲ CAUTION
Adult assembly required.
While assembling keep small parts away from children.

Non-Medical Devices Warning
Nanobébe Aura is not a medical device. Nanobébe Aura does not and is not intended to diagnose, treat, prevent, or cure any disease or other condition, including but not limited to, Sudden Infant Death Syndrome (SIDS). Nanobébe Aura is solely intended to help you track your baby's well-being and is not intended to replace you as a caregiver. Do not replace a doctor recommended hospital pulse oximeter with the Nanobébe Aura device.

Internet Security Warning
This baby monitor allows users to hear or view activity via the internet. Use the security features of your wireless network router to protect against unwanted internet viewership.



▲ Warning

Strangulation Hazard



Children have STRANGLED with cords. Always use protective covering when used within 3 feet of crib. Check before each use to ensure that the cord is not exposed to your child. Immediately discontinue use if protective covering is damaged or broken. Do not remove warning tags from cords or protective coverings.

Nanobébe logo® and Nanobébe Icon® are registered trademarks of Nutritis Ltd.



1

Download the **nanobébé** app & get connected.



FCC warning statements:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.