



USER'S MANUAL

Smart Steam Eye Massager

ECP-04

NOTICE FOR USE

1. In order to make you use this product correctly and safely, please be sure to read the "instruction manual". We will not bear any legal responsibility and related expenses for the consequences caused by not using this product according to the relevant instructions.
2. This product is a personal care massage product and cannot be used for diagnosis, treatment and other commercial purposes.
3. If discomfort occurs around the eyes and eyes during the use of the product, please stop using it immediately and consult a doctor.
4. Please remove glasses, contact lenses and headgear before using the product.
5. Please keep your eyes closed when using the product.
6. This product is not waterproof. Please do not use it in high-temperature and humid environment such as bathroom, and keep away from fire source and corrosive environment.
7. Please use the charging cable equipped with this product. This product cannot use PD charging cable (both sides are Type-C), and the power supply used should meet the national standard.
8. As we are constantly improving our products, please understand that we will not inform you again if there are any changes in the parameters.

Matters need attention:

1. Do not touch the product with sharp objects, and do not hit or beat the product.
2. Do not use it while driving or taking a bath.
3. Do not use this product after makeup to avoid damaging your makeup.
4. Do not massage in places other than the eyes.
5. If you have used eye drops, you should wait at least 30 minutes before using this product.
6. This product has a hot compress function and a hot surface. People who are not sensitive to heat should not use it for a long time to avoid cryogenic burns.
7. Do not use it in the following situations:

-Feeling unwell and having a fever -Skin damage, redness, inflammation, eczema or excessive sunburn

8. The following people should consult a doctor before using this product:

-Myopia over 800 degrees -Just had laser eye surgery. -floaters

9. The following people should not use this product:

-Allergic constitution -Skin diseases or atopic dermatitis

-Pregnant women (skin discomfort and other problems may be caused by hormonal imbalance)

10. The following people are forbidden to use this product:


-Facial nerve disorder, skin sensory disturbance, skin can't perceive heat

-Eye bleeding, retinal detachment, severe eye inflammation, severe cataract, severe glaucoma

PRODUCT DESCRIPTION

Host

ON/OFF and
Mode switch

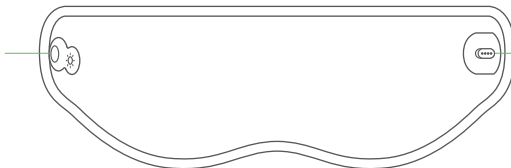

Battery joint

Fitting



Atomization
plant



Battery



Charging
line



Manual

HOW TO USE

Preparation before use


1. In order to make this product light and thin, an external power supply and an independent and detachable steam spraying device are adopted. Therefore, [Battery] and [Atomization plant] should be installed before use, so that it can be turned on and used with "steam function".
2. Please use [Fruit Eye Care Soulution] or mineral water, other liquids may cause product damage.
3. Please take off contact lenses, glasses, etc. before use.

Frequency of use

The host will automatically shut down after 12 minutes of single operation. It is recommended to use it once or twice a day. If continuous use is required, the interval should be more than 30 minutes.

After use


1. During the atomization process of this product, steam will condense in the closed cavity space to form water droplets, which is not a product defect, but a normal phenomenon. Please feel free to use it.
2. This product atomizes the eye care liquid by ultrasonic atomization technology, so fine bubbles will be formed in the eye liquid bottle during the process, which is a normal phenomenon. Please feel free to use it.
3. After the eye care solution is inserted into the atomization device, if the liquid in the bottle is turbid or left for more than 1 week, please don't continue to use it. You should pour it out as soon as possible, clean it and dry it before using it.
4. Keep your skin moisturized after use, such as applying eye cream and eye care products.

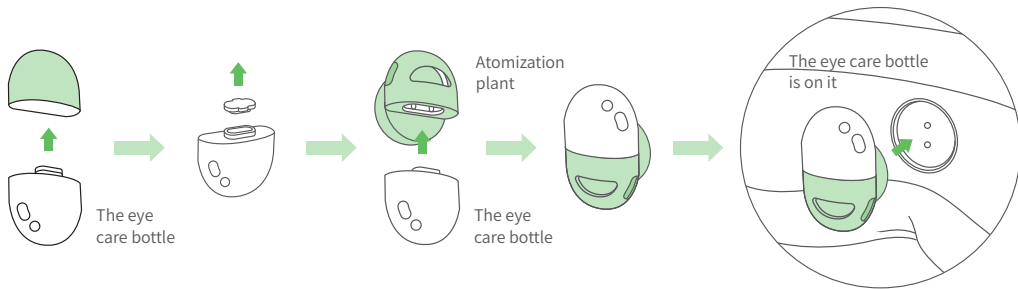

Step 1: Install the eye care solution & atomization device.


Take out the [Atomization plant] from the accessory box and take one [fruit eye care solution]; Pull off the upper cover of care solution, open the bottle cap of care solution, install the care solution on the Atomization plant and insert them tightly (be careful not to turn the bottle mouth of nursing solution upside down during installation); Install the atomization plant with care solution vertically on the host, The eye care bottle is on it, and there is obvious magnetic attraction for correct installation.

* After the eye care solution is used up, you can refer to Step 6 to replace it, or you can use it by cleaning the empty bottle and adding mineral water. Please be careful not to add other liquids to avoid equipment damage.

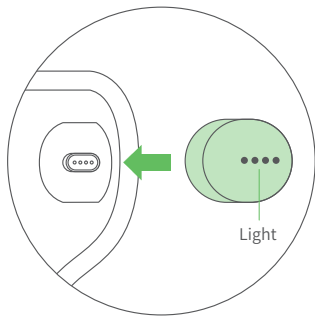

Step 2: Install Battery

Take out the [battery] from the accessory box and install it at the battery interface of the host computer. If there is obvious magnetic attraction, the installation is correct.

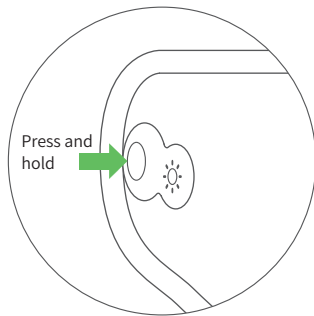

Step 3: Power-on

Press and hold the “○” for 3 seconds, and the voice prompt will sound. Please refer to step 5 for details.



Step 4: Intelligent Service

Download App, more services, Personalized Customization

[Boot]

After installing the battery , press and hold "  "for 3 seconds, and the product will be turned on.

[Mode switching]

Click "  "to switch modes, They are "eye protection mode, soothing mode and sleeping mode".

There is no massage in sleeping mode.

[Atomization]

Install the eye care solution and Atomization plant, and the atomization will be turned on automatically after startup, and the "Steam quantity" will be adjusted in the App.

[Massage]

Double-click "  "to turn on/off massage; Adjust the "massage intensity" in the App.

[Hot compress temperature]

Click "  "to switch the temperature, followed by "no heating, low , medium, high ".

[Music]

Built-in music:

Double-click "  "to turn on/off the built-in background music, and adjust the "volume" in the App.

Bluetooth:

Search and connect to the host computer by using Bluetooth. After connection, the host computer plays mobile music, and the mobile phone adjusts the volume.


[Shutdown]


Automatic shutdown:

After 12 minutes of use, the product automatically shuts down.

Manual shutdown:

long press "  "to shut down the product.

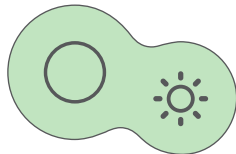

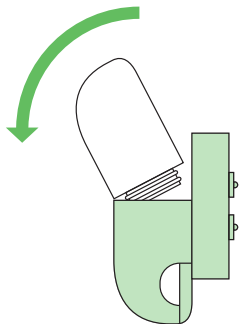

Step 6: Change eye care solution

After using the empty bottle of eye care solution, you can break it in the direction shown in the figure and change the care solution.

CHARGING

1. This product uses a rechargeable lithium battery. Please use the equipped charging cable to charge it. The selected power adapter shall conform to the national standard.

Rated voltage: 5V

Rated power: 5W

Charging time: about 1.5 hour

2. When using the product for the first time or for long-term reuse, the battery should be fully charged before use.

3. It is normal for the battery and adapter to heat up slightly during charging.

4. Do not place the battery in the ambient temperature $<+0^{\circ}\text{C}$ or $>+45^{\circ}\text{C}$ for charging.

5. Do not put the product into the fire or heat it. (Otherwise, there may be the risk of liquid leakage in the battery, battery overheating or explosion.)

6. Before discarding this product, according to the requirements of laws and regulations, the battery must be taken out and safely disposed of according to local laws and regulations. Non-professionals are not allowed to disassemble it by themselves!

CLEANING

1. If you need to clean the product, wipe it with a clean dry cloth. The product is not waterproof, and it is forbidden to immerse it in water or rinse it with water.

2. Before cleaning, please take down the atomizing device and battery and keep them properly.

3. It is forbidden to use microwave ovens, ovens, hair dryers and other drying host and accessories.

Host clean

Clean soft cloth can be used, which can be soaked in clean water, wrung out and then wiped; Do not use alcohol, paint thinner, gasoline or nail polish remover for cleaning.

Atomization plant cleaning

1. The Atomization plant can be removed and washed separately.
2. If there is scale, pour lemon juice into the Atomization plant, soak it until the scale disappears, and then wash it repeatedly with water.
3. Please completely dry in the shade before assembling.

STORAGE

1. The cleaned host should be thoroughly dried and stored in an environment that meets the storage conditions.
Storage conditions: temperature $+5^{\circ}\text{C} \sim +45^{\circ}\text{C}$; Relative humidity $\leq 80\% \text{RH}$. Keep away from light, well ventilated, no corrosive gas and away from heating devices and open flames.
2. During storage, the host should be prevented from falling and bumping, and the host should be prevented from bending for a long time.
3. Do not wrap the power cord around the host during storage.
4. If you don't use it for a long time, it is recommended to remove the eye care solution from the atomizing device, clean it and store it again to avoid bacteria.
5. The battery should be charged regularly after long-term storage to avoid shortening the service life of the battery; When using again, charge the battery first, and clean the atomizing device before using.

Matters need attention

1. Please store it out of the reach of children.
2. Do not store or use the product in the bathroom or shower room or other high-temperature and humid environment.
3. In case of abnormal phenomenon or failure, please stop using it immediately, disconnect the power supply and contact the after-sales service. Do not modify or repair it without permission.

Or abnormal condition:

Equipment, adapter or charging cable is deformed or abnormally hot.

Burning smell from equipment, adapter or charging cable.

The equipment, adapter or charging cable makes abnormal sound during use or charging.

4. In case of any abnormal phenomenon during use, please follow the "Troubleshooting Table" to solve it first. If it still can't work, please contact the after-sales unit.

TROUBLESHOOTING GUIDE

Keep shut down the power off	Low battery: Reminder for charging.
	Others: Please contact after-sales.
No charging	Incorrect charging line or poor contact: Please check the connection of charging cable and power supply.
	Adapter mismatch: check whether the adapter meets the requirements of the manual.
	Others: Please contact after-sales.
No spray	Wrong assembly of water tank: please check the installation direction of water tank.
	Calcium in the water clogs the spray nozzle: 1. Pour lemon juice into the water tank and wait for 3 minutes. 2. Please power on the host, and open mode key, and pour lemon juice out if the host could spray normally. 3. Use the host after cleaning and keep cleaning of the water tank.
	There are bubbles in the water: Pour out and add eye care solution again.
	Others: Please contact after-sales.

RECYCLING INSTRUCTIONS

Please discard it according to local environmental laws and guidelines, and take care of the environment; Be sure to take the battery out of the product before it is discarded. The lithium battery used in this product is an important resource that can be recycled. When it is discarded, it can't be disassembled, discarded or burned at will. Please give it to the garbage recycling station or a professional organization for treatment.



PRODUCT PARAMETER

Product Name: Smart Steam Eye Massager Air

Model: ECP-04

Host Size: 325×90×30mm

Weight: 133g (Comprising an atomizing device and a battery)

Rated voltage: 5V 

Rated power: 5W

Applicable Standard: GB 4706.1-2005, GB 4706.10-2008

Communications: BLE4.2 and above

FCC ID: 2A9N6-ECP-04

Temperature usage: Under control +18°C ~ +40°C for use it

Storage method: Temperature +5°C ~ +45°C

Relative humidity ≤ 80%RH

Working hours: 12 Minure/time

Charging Time: About 1.5 hour

SUPPORT

The final interpretation right belongs to Tianjin Fruitech Technology Co., Ltd.

If you have any questions, please contact us

(Email) hipee@fruitech.cn

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

©2022 Tianjin Fruitech Technology Co.,Ltd. All rights reserved.
Tianjin Huayuan Industrial Park,the 6 th Haitai Development Street,
Haitai Green Industrial Base G-1101-15 to G-1101-32.
Tianjin, 300384
Made in China
www.fruitech.cn
(E-mail) hipee@fruitech.cn