## Mombrush

## Users manual

Ver 1.1



810 Tower-dong, 13, Heungdeok 1-ro, Giheung-gu, Yongin-si, Gyeonggi-do, 446-908, Korea

## Table of Contents

1. Musts to remember in use	
1. Notice	3
2.Contents of Mombrush	
1. Contents of Mombrush and name of the part	4
3. How to use Mombrush	
1. Mombrush management	5
2. The Use of Mombrush	5
. Power on	5
. App installation in smart device & connecting Avisor	-mom
to the smart device	6
. Attaching method the Mombrush to the toothbrush	6
4. Other Information	
1. Product specifications	7
2. Warranty	7

## 1. Musts to remember in use



- 1. Inform children of the risk of electrocution.
- 2. Do not touch an inner power switch, USB slot or inner part with wet hands.
- 3. Do not use while taking a shower.
- 4. Place the body out of reach by water or other liquid.
- 5. When the liquid like water permeates inner body, separate battery immediately.
- 6. When the body has fallen into water, use it after making it dry in a breezy place.





Notice

- 7. If this product does not operate, do not disassemble it and please contact a service center or the shop that you bought it at.
- 8. Keep this product away from fire or heat.
- 9. Do not drop or disassemble this product
- 10. Place a body on flat place out of reach by water.
- 13. If the power USB cable is damaged, you should replace it by the manufacturer, its agency, or qualified technician in order to avoid the risk.

## 2. Contents of Mombrush


## 1. Contents of Mombrush and name of the part

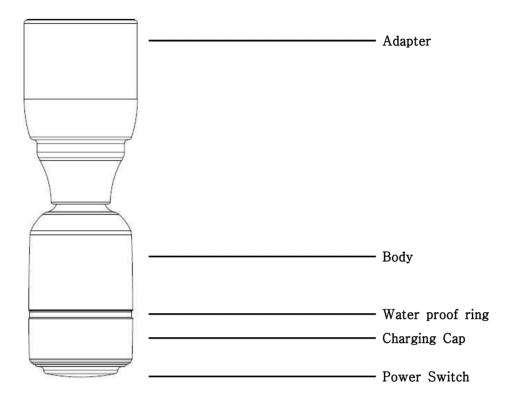

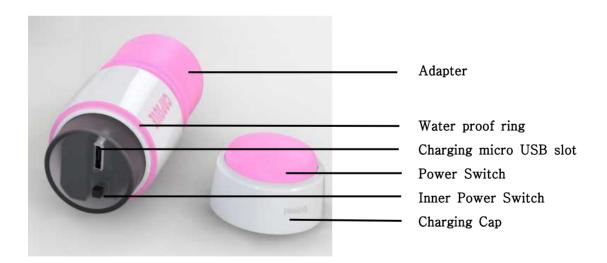

### 3. How to use Mombrush

#### 1. Mombrush Management



Please power off the Mombrush after use.


★ Wash the body and adapter after brushing. Remove toothbrush from the adapter and wash inside of the adapter in running water. Wash the body also in order to remove toothpaste clearly.

- ★Remove dregs at the connection part of toothbrush and body for sanitation at all times.
- ★Please make the body dry before opening the charging cap, after then open the charging cap. Finally, connect the power USB cable to the USB slot in order to charging.


#### 2. The Use of Mombrush

#### [1] Power on

• Please push the power switch and check the LED is on



2. Please push the power switch during the LED blink(Power on), then the power is off and LED is off.

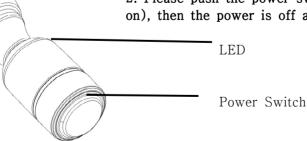

# [2] App installation in smart device and connecting Mombrush to the smart device.




- 1. Download and install Mom brush App from the App store (The Kinds of Mom brush App: Fones(Stages 1)
  - 2. Activate the Bluetooth of smart device.
  - 3. Turn on the power of Advisor mom.
  - 4. Select " new connection" after scrolling down the screen that store User registration.
  - 5. Select "device search"
  - 6. Select the device named "xiu...." after the screen shows all Bluetooth device nearby as searched result.
  - 7. Please enter the PIN no. as [0000], then select [Confirm].

    Not necessary
  - 8. First connected Mombrush is automatically connected to the smart device until another Mombrush is connected. At this time, the status of bluetooth of the smart device must be activated.

#### [3] Attaching method the Mombrush to the toothbrush.

- 1. Please put the toothbrush insert the adapter of Adviser mom. Because the material of the adapter is elastic, you can put the toothbrush insert the adapter of Adviser mom easily.
- 2. When you put the toothbrush insert the adapter, you have to make an array of the bristle of toothbrush and the logo of the Advisor mom.

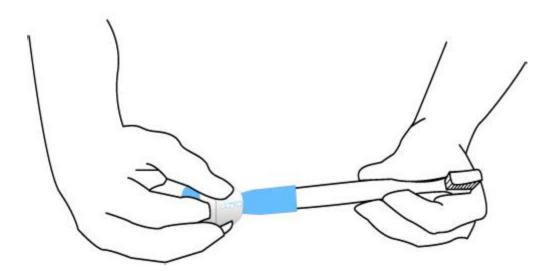

## 📭 4. Other Information

#### 1. Product specifications

Product name	Advisor	
Model name	Mombrush	
Rated voltage	5 V	
Rated input	3 W	
IP Rating	IPX7	
Size(w/o Bristle)	29*29*91.3(mm)	
Weight	g	
Manufacturer	Xiusolution Co., Ltd	
Manufacturer Country	Korea	
The date of manufacture	20	
Seller	Xiusolution Co., Ltd	
Customer Care Center	070-8730-8775	
It might can be some	interference when this	
wireless equipment in use.		

#### 2. Warranty

#### LETTER OF DESIGNATION AS QUALITY-ASSURED COMPANY

We warrant our goods as follows:

Please have the date of purchase written on the warranty card and keep it in a secure place as you have to present the card to get good service from us when asking for repair.

- 1. This product is manufactured under strict quality control and inspection processes.
- 2. When this product goes out of order under the normal use of customer, we will repair it free of charge
- 2. during the warranty period.
- 3. Even during the warranty period, we will provide repair services for problems not covered under this
- 3. warranty with reasonable charges.
- 4. Please show us the warranty card when you ask for repair service.
- 5. Please keep the warranty card securely as it is not reissued.

Product name	Advisor	Term of Validity
Model name	Mombrush	
Serial number		One year from the date of purchase
The date purchased	1 1	To / /
Purchaser Address		
Purchaser Name		Tel

- : This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

This appliance and its antenna must not be co-located or operation in conjunction with any other antenna or transmitter.

Name of Company: Xlusolution Co., Ltd

Representative: Jinsang Hwang

Address: 303 Dongsuwon Bd, #549, Gyeongsu-daero, Paldal-gu, Suwon-si, Gyeonggi-do, 442-832,

Korea

Please contact us for further questions of Xiu Oralcare Dual Program. You may find a distributer in your area on the distribution list at <a href="https://www.xiusolution.com">www.xiusolution.com</a> or send email to the <a href="mailto:admin@xiusolution.com">admin@xiusolution.com</a>