61P Quick USER GUIDE

Please fully charge 61P before start using it.

Charging

Important: Make sure the two charging contacts on the back of the 61P are clean and dry. If they are wet, pat them gently with a dry towel.

The battery level is displayed in Accurofit app when 61P is connected. 61P will display the following light indicator to display its battery status: The red light will flash twice.




1. Plug the USB charger into the USB port of your computer or USB chargers



2. Align the two charging contacts on the back of the SLICE to the two charging pins on the USB charger. The magnets in the charger will help the two pieces lock into place.



3. The screen will display a pulsing yellow light every few seconds to indicate that the battery is charging.

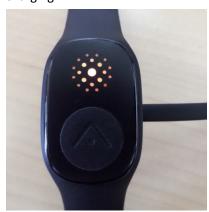

4. It will take approximately 2 hours to fully charge. When the 61P has charged completely, a green indicator light will pulse. Each full charge will provide up to 5-7 days of normal use.



Light Indicators Definition:

#	Function	Indicator color	Indicator flash
1	Turn on	Cyan	1
2	Turn off	Cyan	3
3	Set to work out mode	Cyan + Pink or current heart	1+3
		rate zone color	

4	Set to all-day mode	Pink or current activity zone color + cyan	2+2
5	low battery	Red	2
6	Charging	Yellow	pulse
7	Full charge	Green	pulse
8	Reset/ enter pairing status	Red	3+2+1
9	Ready for pairing	Red	Flash 30s
10	Pairing confirmation (needs to press button)	Blue	Flash 50s
11	Easy Heart Rate Zone	Blue	5
12	Light Heart Rate Zone	Green	5
13	Moderate Heart Rate Zone	Yellow	5
14	Intense Heart Rate Zone	Orange	5
15	Vigorous Heart Rate Zone	Red	5
16	Check current Heart Rate Zone (Press the button)	current Heart Rate zone color	2

Getting started

61P's default state is set as turned off when delivered. In order to turn on 61P, please triple click the button. When 61P is turned on, it will vibrate and a cyan light indicator will flash.



Set Up

Accurofit app is available at Apple store and Google Play

Open the Accurofit app on your smartphone and follow the prompts:

- 1. Create a new account, or sign in if you already have an Accurofit account
- 2. Complete your user profile
- 3. The app will now guide you to pair 61P to your phone


Pairing 61P to Your Smart phone

1. When 61P is charging, hold the button to allow 61P to enter reset/paring mode. After entering paring mode, 61P will be vibrating 3 times and a red light will be flashing, Now


61P could be removed from the charger.



2. Open Accurofit app, go to settings page - add heart rate device, then select 61P, the App will start searching for Bluetooth discoverable devices. Be sure to keep 61P as close as possible to your phone.

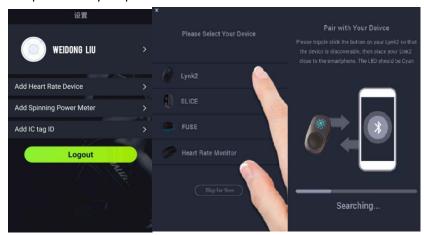

3. In the app, select the 61P that appears in the list. If multiple devices appear, bring your 61P as close as possible to your phone. Tap [Try again] to refresh the list, then select the one at the top of the list. If no device was shown, check whether 61P is still blinking red light, if not, please hold the button until the red light starts to flash. When 61P is flashing red light, it means the device is ready for paring.

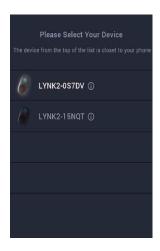

4. When 61P flashes blue light, please press button to confirm pairing.



5. Your 61P is now paired to your phone and will reconnect automatically when it is within range. Your 61P cannot be connected to another phone unless being reset.

Power off

In order to turn on 61P, please triple click the button. When 61P is turned on, it will vibrate and a cyan light indicator will fade out.



Workout Mode

61P has 2 modes, all-day mode and work out mode.

- 1. 61P automatically tracks your heart rate, PAI score, active calories, steps, distance, and sleep data in All-Day Mode
- 2. To record an activity, put 61P into Workout Mode by pressing down the button for 2 seconds. 61P will vibrate 3 times and flash the indicator, then enter the workout mode. In Workout Mode, 61P uses high intensity sampling rate, capturing your heart rate every second.
- 3. To end and save the activity session, press down the button for 2 seconds. 61P will exit Workout Mode and return to All-Day Mode. 61P will vibrate 2 times and flash the indicator.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RF exposure statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

l'appareil ne doit pas produire de brouillage, et

l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement. Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour fac un autre environnement. Ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.