



inWatch π
User Manual

People say timing is everything

π Hello

Thanks for purchasing the inWatch π smart watch. We hope you'll enjoy using it!

inWatch π is a very different device from our past offerings. The product's concept stems from the well-known infinite non-repeating decimal, Pi. The value of Pi describes the ratio between the radius and circumference of a circle, and π is the first inWatch device featuring a circular form factor. We also love the infinite nature of Pi, encapsulated in a simple and elegant symbol. This befits the simple classic design of inWatch π , with its round dial, beneath the surface of which you will find sophisticated technology.

By selecting inWatch π , you not only possess a smart watch made by inWatch, celebrated for its high quality since the release of our first product, but will also enjoy the benefits of the inHealth mobile application. This application, which draws on the expertise of a number of professional health organizations, enables you to monitor daily routine and receive health plans and daily reminders, tailored to your lifestyle and activity.

inWatch π , with its simple appearance and rich inspiration, will help you make every day a healthy and fashionable one.

π Contents

- 1 x inWatch π wrist watch
- 2 x #2032 standard button cell battery
- 1 x Screwdriver for replacing cell and strap

Note: The inWatch π has been loaded with one cell prior to delivery from factory.


To replace the strap, purchase a new one from our website: www.inWatch.cc.

π Button Cell Replacement

1. Unscrew 4 screws from the back cover with the screwdriver provided.
2. Gently remove the back cover and the button cell.
3. Place the button cell into the watch with the negative electrode facing main board, as shown below.
4. Screw the back cover into place.
5. Re-connect the inWatch π with the App inHealth to complete the change of the cell.

Tip: inHealth App will inform you of low battery at less than 20%.

inHealth App can be downloaded at www.inWatch.cc.

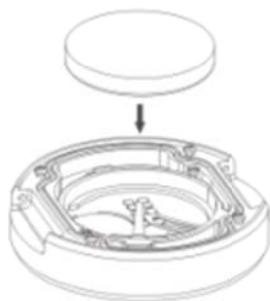

3

π Time Display

Display the time:

Raise your wrist and time lights up in two second.

Tell the time:

- Time of Hour: lights up for 3 seconds
- Time of Minute: blinks for 3 times
- Minute 1, 2 - to be rounded down
- Minute 3, 4 - to be rounded up

Examples:

at 08:10

- the hour hand lights up at '8' position for 3 seconds
- the minute hand blink at '2' position (minute 10) for 3 times

at 08:11

- the hour hand lights up at '8' position for 3 seconds
- the minute hand blinks at '2' position (minute 10) for 3 times

at 08:14

- the hour hand lights up at '8' position for 3 seconds
- the minute hand blinks at '3' position (minute 15) for 3 times

at 08:40

- the hour hand lights up at '8' position for 3 seconds and then the minute hand blinks at '8' position for 3 times

Tip: Time displayed on inWatch π is synchronized with inHealth app, with difference no more than 2 minutes.

4

π Compatible OS and Device

inWatch π is compatible with device which supports Bluetooth version 4.0. Before pairing with your mobile phone, please make sure you've downloaded our app inHealth at www.inWatch.cc.

Compatible OS:

- iOS 7.0 and above version
- Android 4.3 and above version

Compatible Device:

- iOS platform: iPhone 4s/5/5S/6/6Plus
- Android platform: Meizu MX3/4, SAMSUNG 4/S5, Xiaomi M3/M4, Smartisan T1, OnePlus, etc

For more information, please visit our website at www.inWatch.cc.

π inHealth Installation

inHealth is phone management application of inWatch π , which helps you manage your watch, view real-time report and analysis of movement and health data, and even get your exclusive personalized health recommendations and reminders notification after the inHealth is connected to inWatch π .

You can get the free "inHealth" app at:

1. iOS App store
2. Google Play store
3. Other application store
4. Scan below two-dimensional code

Tip: To install app on iPad, please search and download from the iPhone option.



π Pairing and Sync with inHealth

Pairing

1. First time use: Launch the inHealth app, and follow the steps to register and pair your inWatch π .
2. Registered already: Log in your existing account and pair.

Synchronization

- Manual Synchronization:
 1. Launch inHealth app;
 2. At the home page, tap "Shark It Off" or click on the "Sync" button.
- Automatic synchronization
 1. Keep Bluetooth and network on;
 2. App running in the background;
 3. the system will automatically synchronize data every 20 minutes.
 4. To turn off the automatic synchronization, go to "My watch" page and reduce the power consumption.

π Health Tracking

Movement Steps Tracking

Trackable Movement:

- Walking steps tracking
- Running steps tracking
- Mileage
- Calories

When the goal of health plan is achieved, there will be vibration and marquee on inWatch π to inform and encourage you to stay in a healthy lifestyle.

Sleep Tracking

Smart recognition for your sleep state:

- Go to sleep
- Deep sleep
- Light sleep
- Tracking your sleeping conditions

Help you understand your sleep quality, intelligently planning your wake-up time.

π Mode and Notification

Standby Mode

- Standard Mode: vibration + indicator
- Power-saving mode: indicator or vibration only. You can choose either one.
- Do not disturb mode (sleep mode): no vibration and indicator.
Only with time display and background data synchronization, you can set the time period for this mode.

Notification

inWatch π , based on the related settings on inHealth, by means of 12 LED indicators on the dial and built-in vibration motor to enable:

- Connection notification
- Call notification
- SMS notification
- Health plan notification
- Exercise plan notification.

See the correspondence between mode and notification in different scenarios next page.

π Mode and Notification

Notification	Standard Mode	Power saving Mode	No disturb
Bluetooth on & notification off	Short vibration once + blink once	Blink or vibration once	None
Incoming call notification	Short vibration 5 times + blink 5 times	Blink or vibration 5 times	None
Message notification	Short vibration 2 times + blink 2 times	Blink or vibration 2 times	None
Movement goal achieved notification	Continuous vibration once + marquee	Marquee effect once	None

inWatch π and inHealth App updates constantly, keep track of more notification functions in the form of software and firmware.

For detailed information, please visit our user forum at: www.inwatch.cc.

π Specification

Category	Items	Configuration Parameters	Remark
Data upload	Data sync with smart phone app	Connect with smart phone app through Bluetooth to download or upload connection commands	
System configuration	Screen	Sapphire glass	
	Display	None	Twelve LED
	Bluetooth 4.0	Supported	
	Strap	Replaceable leather strap	Purchase on website
	Shell	316 medical class stainless steel	
Hardware configuration	CPU	CC2540/CC2541	
	G-Sensor	Support(steps, calories, km, sleep monitoring)	Save 7-day exercise data
	Motor	Supported	
	Indicator	Twelve LED (white)	
	Charging interface	Not supported	
Software configuration	Health data sync	Connect with smart phone app through Bluetooth to download or upload connection commands	Android 4.3 and above and IOS.7
	Call/message/ alarm clock	Supported	Android 4.3 and above and IOS.7
Accessory configuration	Battery	Battery type: button cell capacity: 210MA	

inWatch Family

If you have any questions about inWatch π or any of our other wearable devices, please contact us at: support@inwatch.cc

Thank you for your support and trust.

inWatch

Website: www.inwatch.cc

Email: CustomerService@inwatch.cc

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.