

MANUAL

Packing List

- | | | |
|-----------------------|----|----|
| 1.Anti-lost wristband | x1 | |
| 2.MANUAL | x1 | |
| 3.USB CABLE | | x1 |

LED indicator

- Orange LED blink: wristband working
- Yellow LED on: wristband charging
- Yellow LED on: wristband full power

Alarm Level Description:

In the wide case:

Personal care alarm: about 5 meters

General Care Alarm: about 10 meters


The alarm distance may decrease due to the obstacle, or environmental factors !

Procedures

Step1: Download the app “aideguard”



Step 2: Turn on the Bluetooth

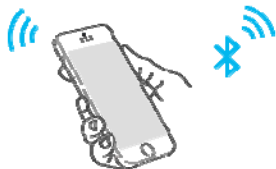

Step 3: Turn on the location services



Step 4: Wear the Anti-lost wristband. The orange LED blinking indicates it working.



Step 5: Pairing Please scan this QR code

Slaver



Master




***This QR code is the unique identification for the wristband, please take it for safekeeping**

Step 6: Working Interface



Step 7:Charging

Plug the wristband into the USB socket .The yellow LED shows charging and the green LED shows the full power.

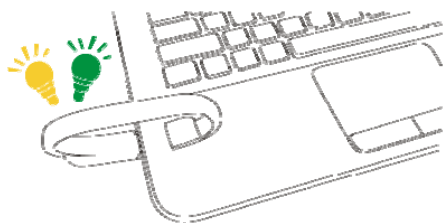

*The USB port is only used for charging, cannot transfer and sync data via USB port.

Technical Specification

Product name : Anti-lost wristband

MODEL: AD-AL-I

Slaver size: 14.5*12.5*150/160MM

Master size: 14.5*12.5*170/190MM

Weight: 13g

Battery : 60mah

Operating Voltage : DC3.3V

Operation conditions

Temperature: 5℃ - 40℃

Humidity: 15% - 85%

Compatibility :

SAMSUNG: Galaxy S3、S4、Note2、Note3 or later

APPLE: iphone4S/5/5S/5C/6/6 plus、iPad 3/4, ipad Mini/Mini2

OTHER: Android 4.3 or advanced with Bluetooth 4.0

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Attention:

Before charging, make sure the USB interface contacts at no water residues!

Guangzhou Aide medical technology Co.,Ltd

www.aideguard.com

TEL: 020-84112035

Disclaimer: Do not change the user equipment without permission.