


# 720 Airbank User Guide

The Best Present for Life


# 1. Packing List

- (1) Air Bank
- (2) USB Cable
- (3) User Manual

## 2. Hardware Description

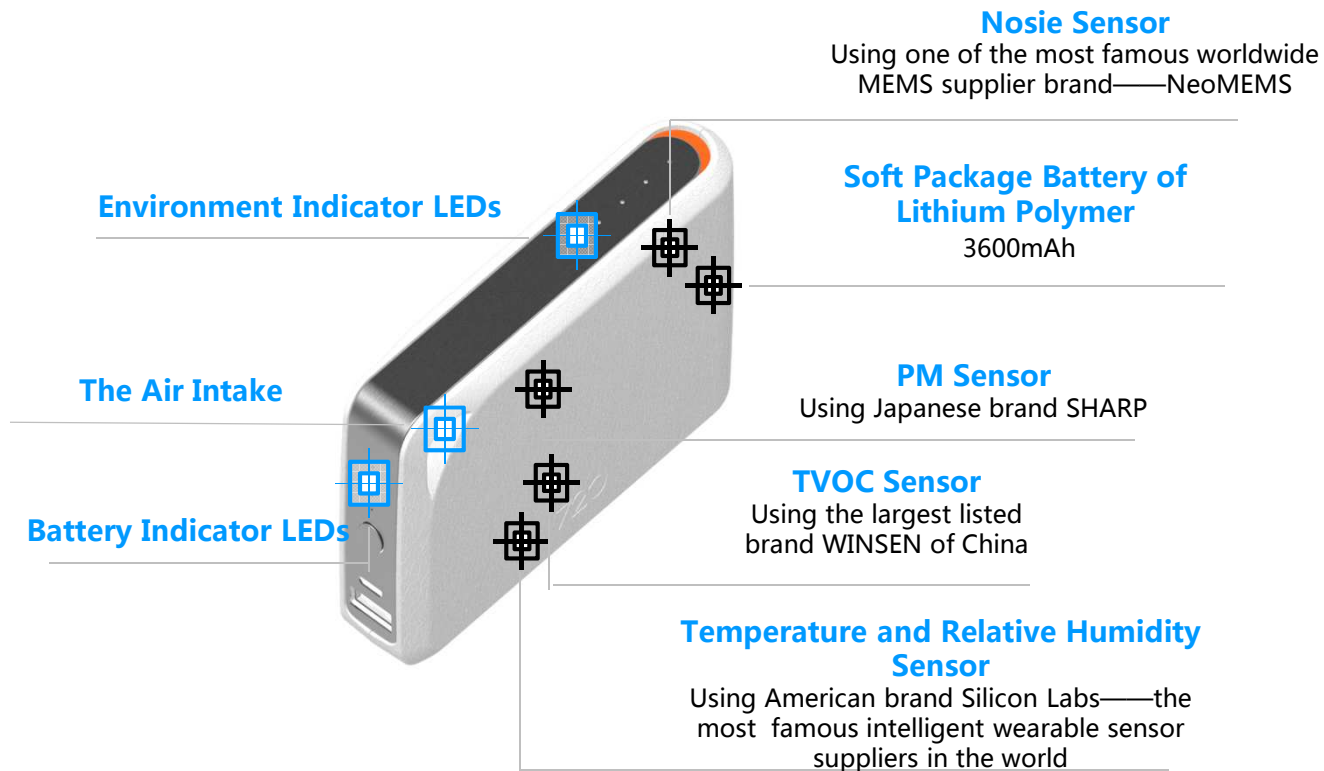

### 3. Use Step for the First Time

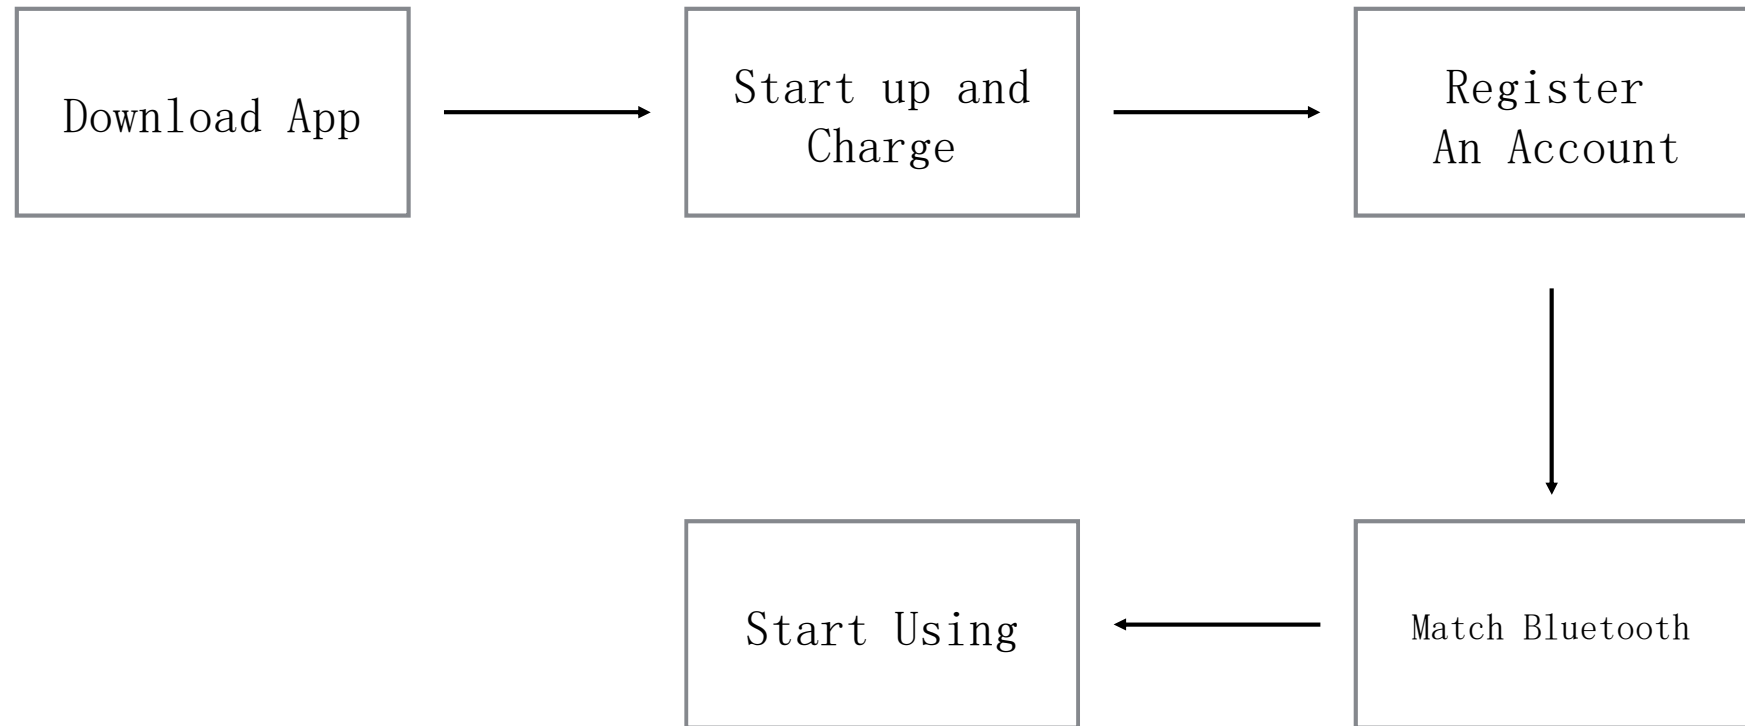


## Download App



Please scan the 2D barcode to download the App. You also can download the App from App store or Android Apps platforms.

## Start up and Charge for the First time

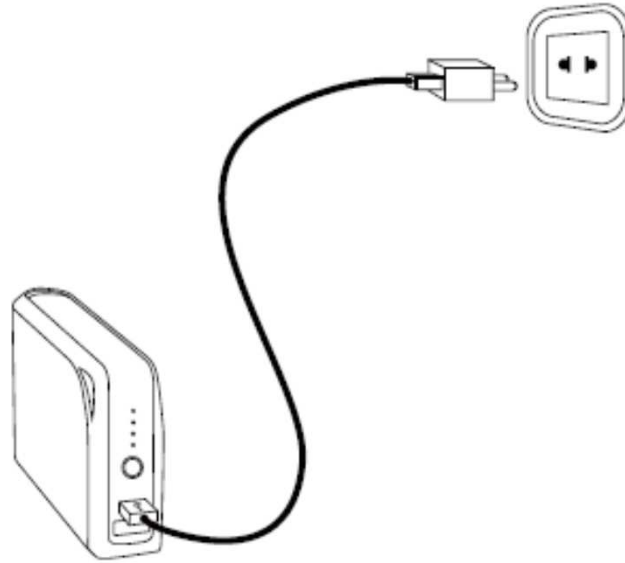

Please connect the USB cable to the Airbank with Micro USB plug and to the Charger with USB plug. When the power indicator LEDs lighten on and the enviroment indicator LEDs rotate, then you can hear a buzzer. After that you will have finished the activation.

AirBank connect to the computer with USB cable(Shown as above picture).

## 4. Power Supply and Charge

### (1) Power Indicators

Press the power button, and the power indicators will lighten on and tell you how much power left. If the 4 indicators all lighten on, it means that the power is full. If the last indicator lighten on, please charge immediately. When the charged power reach 100 percent, the indicators will lighten on 3 seconds and then go off.

### (2) Charging Method

Connect the USB cable to the Airbank with micro USB plug and connect the USB cable to the charger with USB plug. When the charged power reach 100 percent, the indicators will lighten on 3 seconds and then go off.

## 5. Mobile Power Supply

Airbank can work as a powerbank recharge to other devices. Connect the USB cable to the Airbank with USB plug and connect the USB cable to other devices with Micro USB plug. Then the Airbank can start to recharge to other devices.

### **Note:**

1. If the Airbank cannot recharge to other devices at first, please press the button quickly.
2. When the Airbank is charging or recharging, there is some heat release, maybe will effect on the Temperature measuring. So please don' t start the measure when the Airbank is charging or recharging.
3. The USB port only used for charging and recharging.



## 6. Safty Consideration

1. Please don' t let Children to charge to Airbank or tuch the power socket alone to avoid getting an electric shock.
2. Please don' t use the Airbank and the App when you are driving.
3. Don' t treat the Airbank as an ordinary household waste. Please observe the local laws and regulations of electronic products and the accessories handling and support recycle activities.
4. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1)This device may not cause harmful interference, and
  - (2)This device must accept any interference received, including interference that may cause undesired operation.

Attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

## 7. Maintenance and Servicing

1. Normal use temperature range: -10 °C to 45°C, Charging and Recharging temperature range: 0 °C to 45°C.
2. Please keep the Airbank away from fire, high temperature, heat and other extreme environments.
3. Do not strike and extruded the products.
4. Please keep the Airbank away from water.
5. Please charge the Airbank once a month at least if you don' t use it for a long time to prevent battery aging.
6. Do not disassemble or modify the Airbank and do not attempt to replace the internal battery. Please contact our customer service e-mail when your equipment malfunctions:  
[services@720health.com](mailto:services@720health.com).

# 8. Product Specifications

Size	L: 117mm, W: 70mm, H: 27mm
Weight	175g
Battery Type	Polymer lithium-ion rechargeable battery
Input Voltage	DC 5V
Output Voltage	DC 5V
Input Current	1.0A
Output Current	1.0A
Rated Capacity	3.7V / 3600mAh

## 9. The Measurement Parameters

Noise Measurement Range	35-99dB
Noise Measurement Accuracy	$\pm 2$ dB
Temperature Measurement Range	-10 °C 至85 °C
Temperature Measurement Accuracy	$\pm 0.4$ °C
RH Measurement Range	0-80%RH
RH Measurement Accuracy	$\pm 3$ %RH
Respirable Dust Measurement Range	0~2000 $\mu$ g/m <sup>3</sup>
Respirable Dust Measurement Accuracy	1 $\mu$ g/m <sup>3</sup>
TVOC	Formaldehyde, benzene, alcohol, cigarette smoke, perfume

## 10. Toxic and hazardous substances or elements declaration

Parts	Toxic and hazardous substances or elements declaration					
	Pb	Hg	Cd	Cr (VI)	PPB	PBDE
Body Shell	○	○	○	○	○	○
PCB and Electronic Components	○	○	○	○	○	○
Battery	○	○	○	○	○	○

**○:** It indicates that the toxic or hazardous substance contained in all homogeneous materials that are under the limit requirement in SJ / T11363-2006.

**×**: It indicates that hazardous substance contained in at least one of the homogeneous materials for this part is exceed the limit requirement in SJ / T11363-2006.

## 11. After-Sales Services

If the product is not artificial damage failure of performance, you are entitled to free warranty service from the date of order. The warranty period of Airbank is 12 months and the warranty period of USB cable 6 months.

If there is one of the following circumstances, you will not enjoy free warranty rights, we or an authorized service center will implement a reasonable service charge.

1. Human error damages
2. Expiration for the warranty period
3. No warranty card and valid invoice, except it can prove that the product is in the warranty period.
4. Product and invoice or sales voucher inconsistent.
5. Product and "Warranty Card" inconsistent or warranty card is altered.
6. Did not follow the instructions requirements to use, maintenance and service caused damage to the product.
7. Disassemble or repair product by yourself, resulting in damage to the product.
8. Other damage caused by force majeure.

## Contact Us

Any questions or suggestions, please contact us immediately.

Official Website: [WWW.720health.com](http://WWW.720health.com)

After-Sales E-MAIL: [services@720health.com](mailto:services@720health.com)