


www.innowear.hk


Printed in China
© 2015 3 N Half Limited

**Wrist: band Activity
Tracker with BLE**


innoBand-D

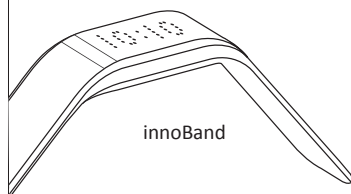

innoBand

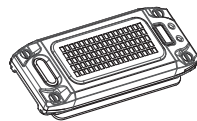

Module

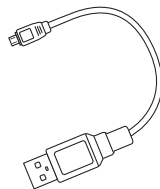

Micro USB Cable


Welcome to your **innoBand-D**, a simple and stylish activity-tracking device that monitors your daily activity around the clock. It tracks the **STEPS** you take and the physical **DISTANCE** you travel, as well as calculates the **CALORIES** you burn through your activities. It also has a **SLEEP-QUALITY** monitoring function, ensuring that you can follow your regular sleeping patterns and work on improving them for optimal health benefits.

Synchronize your module with your innoBand mobile application, set your targets, and focus on achieving them. If you're up for a challenge, challenge yourself by setting higher targets each day through your mobile application, and focus on completing them.

The world of improved fitness and health is always in your hands. Or in the case of an innoBand, supporting you all the way on your wrist or body.



innoBand app

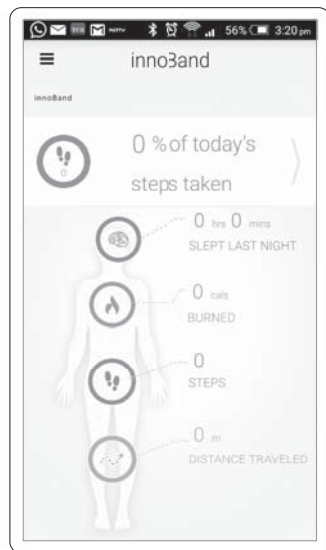

Before you can start using your innoBand-D, you must download an **innoBand app** on a compatible mobile device, and pair the module with the mobile app.


1) Go to www.innowear.hk/software or scan the following QR code :



2) Download the correct app for your compatible mobile device (iOS / Android)

3) Launch the app and follow the instructions on the mobile device screen. The app will scan for your innoBand-D module via Bluetooth automatically.

NOTE: Until you pair your mobile device and complete the setup process, the module will have limited functionality.

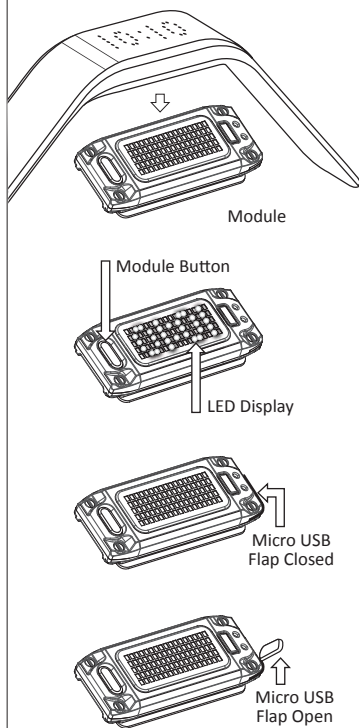**A. Charging**

To check your battery charge, hold onto the module button until the BATT screen appears, or view it directly from your compatible mobile device app.

To recharge your module battery, push the module out from the band, and lift the Micro-USB flap. Plug in the Micro-USB cable to the module and recharge through any suitable USB adaptor or port.

B. Custom Fit

Your module comes with at least one colored band in a Smaller or Larger size.

Purchase new bands or clip-on module casings through the innoWear online store or authorized distributors to always stay ahead in fashion and stylishness.

QUESTIONS?

For service and support, visit www.innowear.hk

Download the full manual at www.innowear.hk/innoBand-D/manual

8	9
<p>FCC NOTE :</p> <p>This device complies with Part 15 of the FCC Rules.</p> <p>Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.</p>	