

HOOLUX

## **WELCOME**

Follow these instructions to setup your Hoolux Medical Device.

#### **CONTENTS**

#### **DEVICE SETUP**

- 04 Check Contents
- 05 Attaching the Device
- 07 Connect to Power
- 08 Connect to Display
- 09 Connect to LAN

#### **HM PLAYER SETUP**

- 10 Switching On
- 11 Loading the App
- 12 WiFi Setup
- 13 Pairing Key
- 14 Login
- 15 Device Registration

#### **OTHER**

- 20 Help & Support
- 21 Device Ports
- 22 The Remote
- 23 FCC Guarantee

## **CHECK CONTENTS**

Ensure that you have received all contents. Please refer to the **Help & Support** section on page 20 if an item is missing.





2. Remote





4. HDMI Cable



#### ATTACHING THE DEVICE

Place the Hoolux device on top of the TV monitor as shown in the illustration.


Use the bottom clip to attach the device on top of the display. Please remove the adhesive film from the inside of the bottom clip.


Please ensure the device is centered and attached securely.

The device can be tilted up and down from the bottom clip to ensure a better angle facing the patients in the waiting room.

# ATTACHING THE DEVICE (CONTINUED)

It is very important that the device and TV monitor are facing the area of your waiting room which faces the majority of your patients. See the illustrations on the right to guide you.

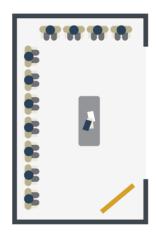

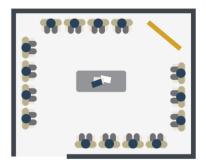



## **CONNECT TO POWER**

Connect the device to a power outlet as shown in the illustrations.

# CONNECT TO DISPLAY THROUGH HDMI

Connect the device to the display using the HDMI cable provided.






## **CONNECT TO LAN** (OPTIONAL)

We strongly advice you to use an Ethernet cable to connect the device to your router. While the device can connect using WiFi, lower speeds and connectivity issues may compromise performance.

### **SWITCHING ON**

Switch On the device.

While the device powers up, the monitor will display a loading animation. When the device finishes loading the monitor will display your Home Screen with the Hoolux Medical Icon.

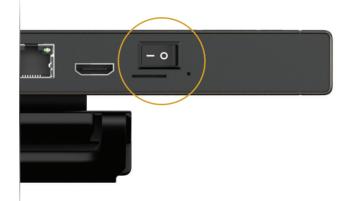



## **LOADING THE APP**

Select the Hoolux Player App from the Home Screen.

Press OK on the remote to launch it.

# WIFI SETUP (OPTIONAL)

## This step is only necessary if you are connecting through WiFi.

Use the remote (arrows and OK button) to select the your WiFi network from the drop-down menu.

Enter your WPA (WiFi password) in the box provided.

Once the network is selected and the password is entered, click the NEXT button.





#### **PAIRING KEY**

Please take note of your **Pairing Key.** 

This key consists of 3 short words inside a dark gray box which will be required to login into your Hoolux Medical account from your computer.

As soon as you complete your registration the player will automatically connect to the Hoolux network and finish the device setup.


#### LOGIN

From your personal computer, please visit **dr.hooluxmedical.com** and login to the Hoolux Medical Portal. At this stage, you will have received a welcome email from Hoolux Medical containing your details for accessing the portal.

Please refer to the **Help & Support** section on page 20 if you experience any problems.

On successful login please follow the instructions in order to complete your device registration. These steps will include entering your Pairing Key (see page 13) and completing a form with information about your practice.



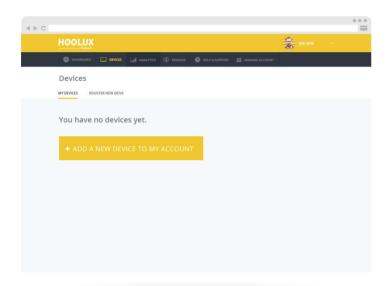

# DEVICE ONLINE REGISTRATION

#### STAGE 1


Once you have logged into the Hoolux Medical portal, select DEVICES in the main navigation bar.


Here you will see a large yellow button that reads: ADD A NEW DEVICE TO MY ACCOUNT. Click on the button to proceed to the next stage.

#### STAGE 2

Here you will have to enter your **Pairing Key** (see page 13). This unique code is used to pair the device in your waiting room to your Hoolux Medical account.

Once completed, click CONTINUE.

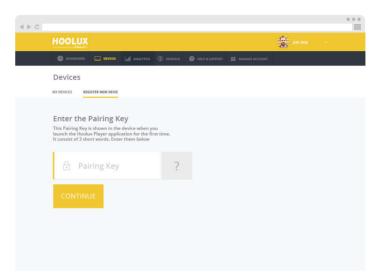

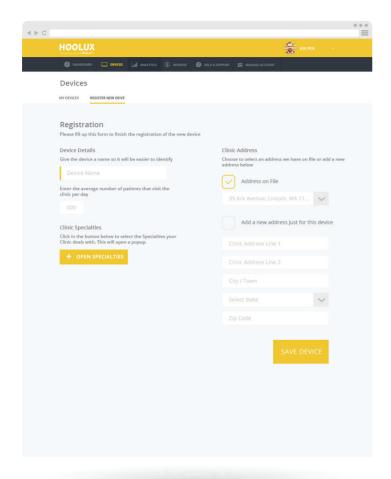

#### STAGE 3

In order to complete your registration process you are required to complete all fields in the form.


Begin by entering a **Device Name** (a name chosen by you).
The Device Name will help with identifying your device and can be used if you require any support.


After entering a Device Name we require you to provide us with an **Average Number of Patients** that visit the clinic per day. Please round this figure to the nearest whole number.

#### **STAGE 3 (continued)**

Now we require you to provide your **Medical Specialties**; areas of medicine that your practice specializes in. Click on the button that says "Open Specialties", from the pop up please check the boxes that are relevant to your practice and when complete please click the SAVE button.

Finally you will need to register the **Address** at which the Device is housed. Once your address is provided click the SAVE DEVICE button and return to where the physical device is set up in your waiting room..

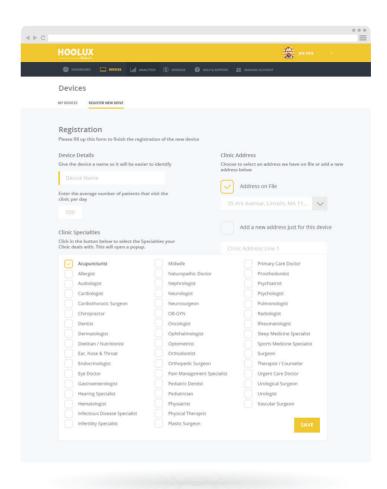

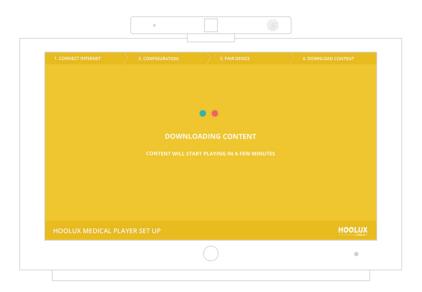

#### **FINISH**

Once the registration is completed the device will automatically connect to the network, and will download and start playing the videos.

## **HELP & SUPPORT**

Should you encounter any issues during your Setup and Registration process please don't hesitate to contact our support team by email or phone.



### **Support Availability:**

Monday to Friday from 7.00am to 4.00pm EST



#### **Support Email:**


device.support@hooluxmedical.com



#### **Support Phone:**

+1 844 44 66 589

## **DEVICE PORTS**

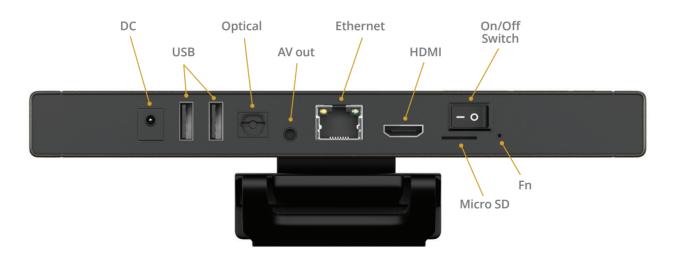

### THE REMOTE

Select this button to show or hide the **Mouse Arrow.** 

**Up / Down / Left / Right.** Use the buttons in the wheel to select and navigate through the home screen and application. When the **Mouse Arrow** is shown, use the buttons to move the cursor around the display.

Press **OK** to select.

Press this button to load the

Home Screen.

HOOLUX HLX-1



#### **FCC GUARANTEE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- · Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm



Model No: HLX-1 FCC ID: 2AGBF-HLX1 WWW.HOOLUXMEDICAL.COM



HOOLUX