


Thanks for choosing Susee SPA Spray Device (SPA device as follow), it can help you moisturize skin by evenly spray millions of a millimeter atomizing essence onto skin. Meanwhile, it helps monitor your skin condition whenever, collects your skin data by two bottom test points, and synchronizes data to your mobile device by wireless Bluetooth 4.0 technology. Brand new smart skin protection technology will bring you new enjoyment you've never had before.

Please read this instruction book carefully before start using, it will help you understand the function and usage of Susee SPA Device quickly and comprehensively.


Susee SPA Device Accessories:

1. Susee SPA Device x1
2. USB cable x1
3. Instruction book x1


### **Susee SPA Device Appearance and Function Introduction**

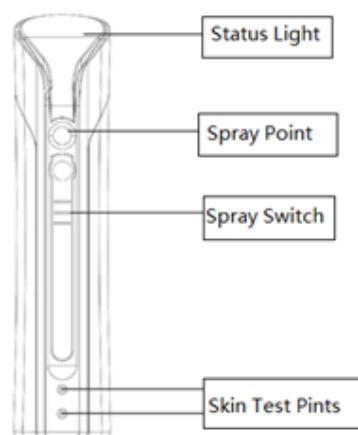

Front View

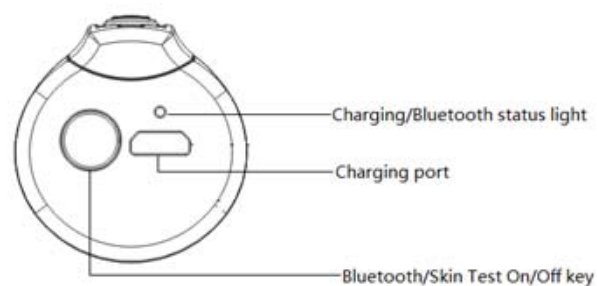

Bottom View

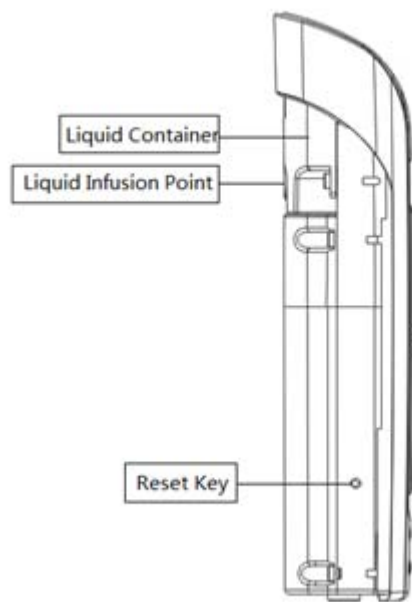

Internal Structure

#### **SPA Device Specification**

Size: 140\*32mm


Function: Nano Spray, Spray reminder, Skin Test

Volume: 10ML

Input Voltage: DC 5V/500mA


#### **SPA Device Operating Instructions**

**Attention: Shortly press the round to start the device**

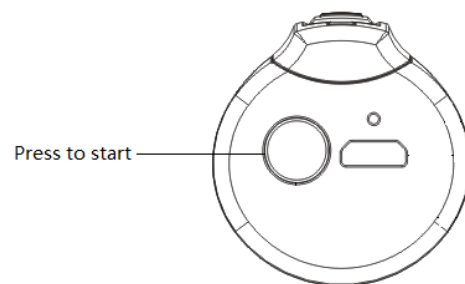


### Essence Infusion Instruction

- A. Take out one essence, break off the bottle cap as picture 1.

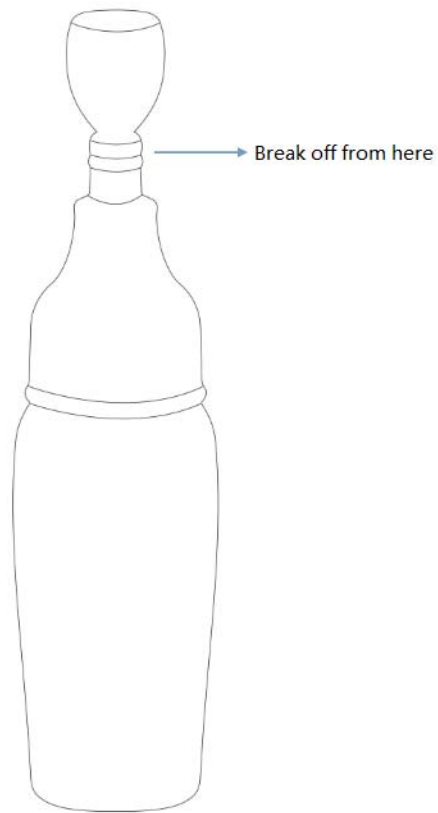


Picture 1

- B. Bottom up the device, hold the device body, slide down the bottom golden area with thumb to open the housing as picture 2

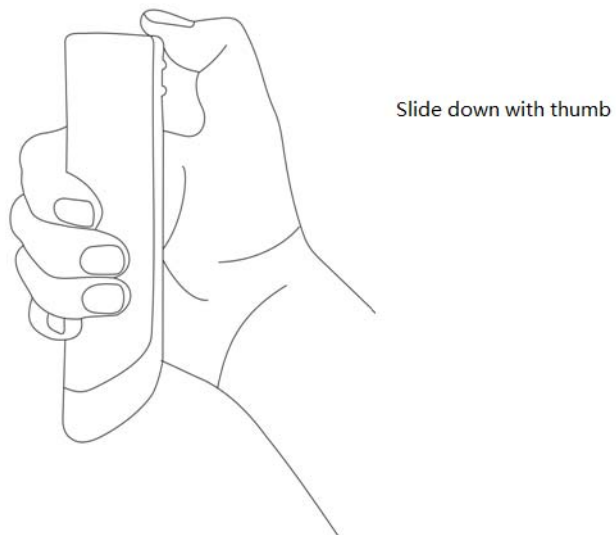

Picture 2

C. Hold the device horizontal, open the infusion cap, infuse essence as picture 3

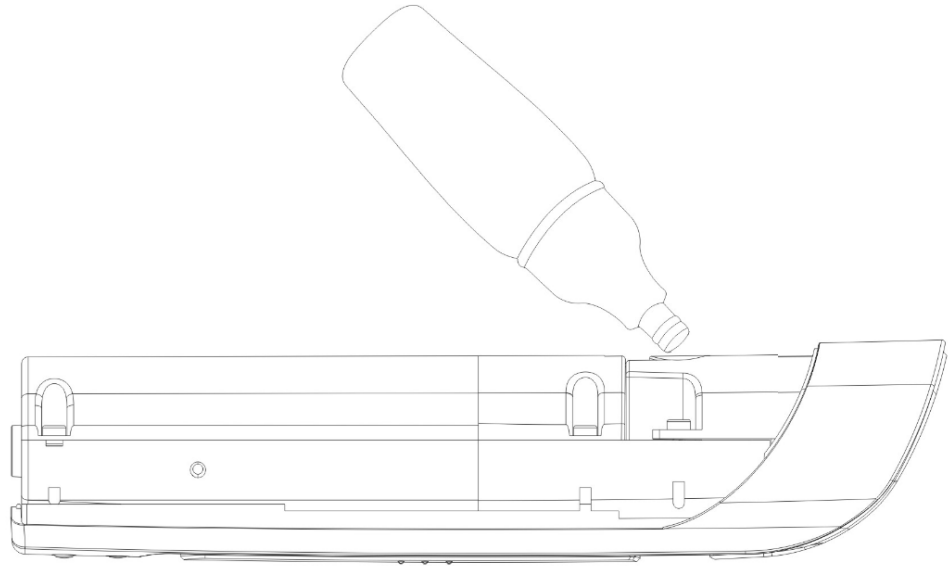


Picture 3

D. Close the infusion cap, slide up SPA device housing.

## **2、 Spray Operating Instruction**

After infusing essence, slide down spray on/off key to spray, automatically stop after 30 seconds.

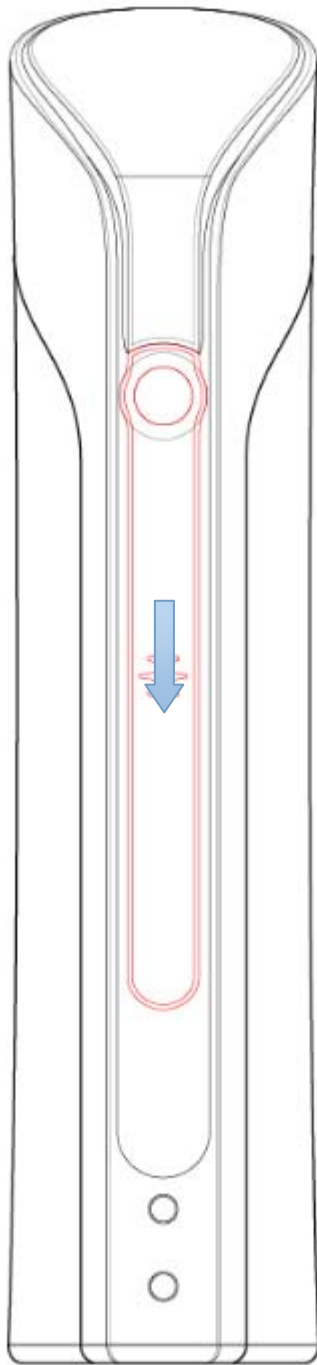

Note:


1. Before turn on spray key, shake SPA device gently to make spray evenly.
2. The device has low power if spray key on but cannot spray or top red light keeps flash, so please get device fully charged.
3. It's time to moisturizing when top red light flashes slowly every three hours after last use.

#### **4. Skin Test Instruction**


##### **A、Device Skin Test**

Long press the bottom key until top green light flash, then stick two test points to skin to

ensure the contact between test points and skin.

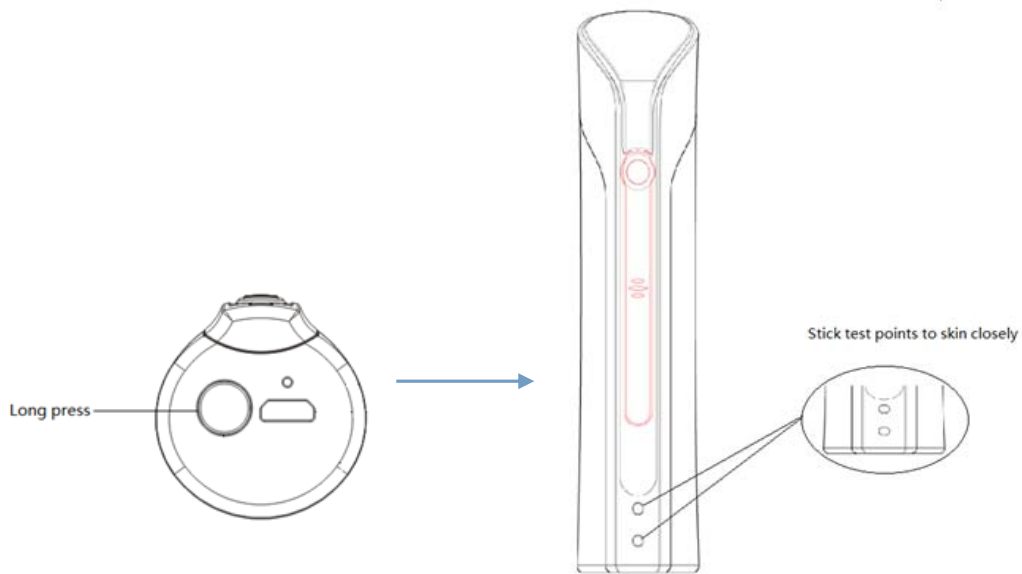

Top light keeps on indicates test success

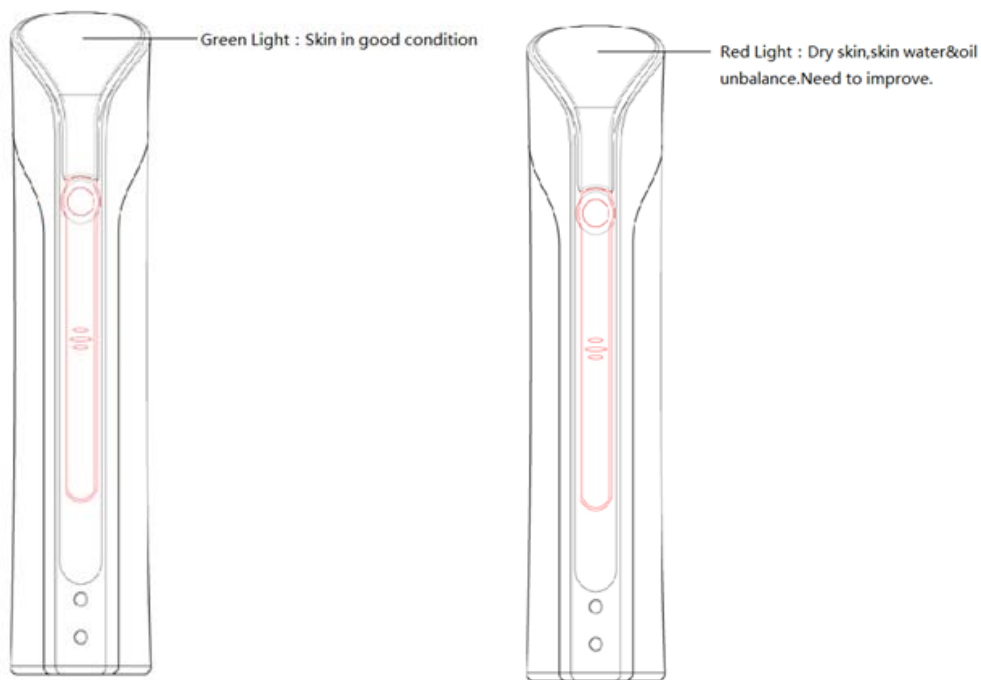

## **B.APP Skin Test**


Install APP

Search "Susee" from Apple store or Android Market to download and install.

Note: Apple IOS7 or above, Android 4.3 or above, Bluetooth 4.0 required.

Bluetooth Connection

Step 1: Turn on Bluetooth of SPA device. Turn on device, short press bottom key to turn on Bluetooth, bottom green flashing quickly means Bluetooth start working.

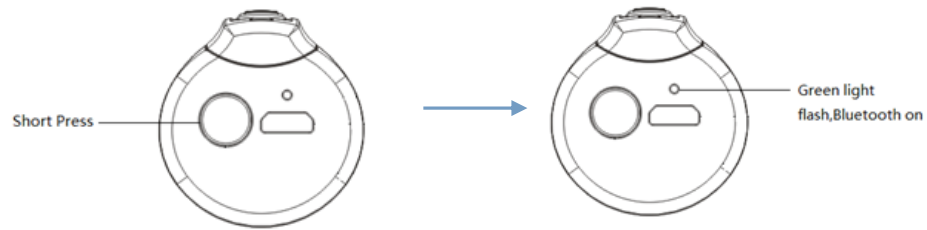

Step 2: Turn on mobile Bluetooth.

Step 3: go to Susee APP, connect APP with SPA device.

A. Open Susee APP, login in as notified.

B. Click "me" at right hand corner, go to "setting" page

C. Click My Susee- Add Susee, starting searching, click Bluetooth named Susee to connect.

**Use shortcut to add SPA Device at the first use. Click "add" at APP left hand corner to enter connection page.**


### 3. APP Skin Test

After Bluetooth connected successfully, go back to home page, choose test area, click Start. Stick test points to skin and start test when SPA device top light start flashing.

Attention: do not remove the device until test data shows on APP.

### 4. Charging Instruction

USB charger can be used for Susee SPA device. Battery is low when spray function doesn't work and top red light starts flashing, or APP test results remain unchanged. Please charge SPA device ASAP. Short press the bottom key to turn on device when charge complete.

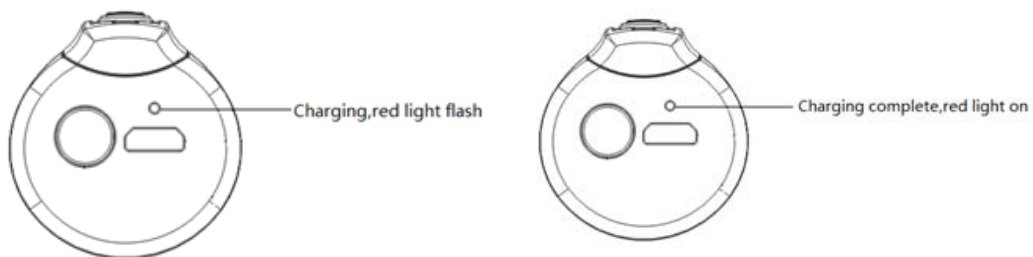

#### Tips:

1. It is easier to add essence or open device housing if you bottom up the device, hold the body, slide down the bottom golden area with thumb;
2. If spray volume become smaller, please shake the device and check the following status:
  - A. Does the spray point have drops while using, if yes, clean the drops;
  - B. Is the battery low, if yes, please charge;
  - C. Does the liquid contain impurities, if yes, please clean the liquid container and spray point
3. The liquid infused to the device better be Essences made by Susee, please do not add

liquid with viscosity or impurities to our device;

4. Please be careful with infusion essence to the device, do not overflow the liquid container, and do not add the liquid inside the device body as this may cause malfunction.

4. SPA device need to use 5V 500mA charger

5. Please do not disassemble the device as this may cause malfunction.

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.