User Guide

Wearable Fitness Tracker for Companion Animal





CONTENTS

What's in the Ani Fit box

Ani Fit tracker overview

Ani Fit service overview

Basic Setup

How Pre-Test works

Activity Log

Weight Log

Specification


Compatibility

Regulatory Statements



What's in the Ani Fit box





A. Ani Fit Tracker

Tracks and transmits your pet's activity when attached to his collar.






B. Double Layer Collar Strapping Band

Attaches the tracker on your pet's collar.





C. USB Cable

Connects the tracker to an AC adapter or PC for charging.



Ani Fit tracker overview



A Power & Status check button

Turns the tracker on/off. Checks turn-on/off status.

B Status indicator

Tells you when the tracker is on/off. Shows you the battery level of the tracker.

C USB charging port

Connects USB cable plugged in AC adapter or PC for charging.



Ani Fit tracker overview

About the Status indicator

The status indicator tells you when the tracker is on/off and more. To conserve battery life, the status indicator won't illuminate except when performing the actions listed below.

Action	Tracker Status indicator state	What it means
Turn tracker on or off: Press and hold the power & status check button for 3 seconds*	Flashing BLUE twice	Tracker is powering on
	Flashing RED twice	Tracker is powering off
Check if tracker is on or off: Press and release the power & status check button (for less than 3 seconds)	Flashing BLUE once	Tracker is on
	Flashing RED once	Tracker is off
Charge tracker: Connect it to the USB cable	Flashing BLUE	Tracker is fully charged
	Flashing RED	Tracker is charging
Automatic alert: while the tracker is on	Flashing continuous RED blinking.	With low battery, the tracker needed to be charged.

^{*}If the status indicator does not light up when you press the Power & Status check button, the tracker may need to be charged.

Connect it to the USB cable until the status indicator is BLUE.



Ani Fit service overview

Pre-Test is that you must go through on the Ani Fit app.

Activity Log and Weight Log are areas that you'll use often on the Ani Fit app.

- **Pre-Test**: Ani Fit offers the tailor-made activity tracking service. In order to fulfill this customized service, it is required that Ani Fit needs to have your dog's calorie burning reference value. Before you use main services, you need to wait a week while Ani Fit is calculating your dog's calorie burning reference value. To learn more, see

 How Pre-Test works on page 9~10.
- · **Activity Log**: Ani Fit tracks and calculates your dog's activity level and it shows results by daily, weekly and monthly-base.
- Weight Log: Ani Fit guides weight loss or maintenance. With posting updated
 weight figure and photos, you can track your dog's weight trends. With feed
 calculator, you will easily find out recommended amount of food for your dog.



Basic Setup

Before you use Ani Fit main service, there're six simple stages to complete:

- · Stage #1. Charge the Ani Fit Tracker
- · Stage #2. Download the app
- · Stage #3. Personalize your and your pet's profile
- · Stage #4. Turn on the Tracker and pair with the app
- · Stage #5. Attach the Ani Fit tracker to your pet's collar
- · Stage #6. Start Pre-Test

Stage #1. Charge the Ani Fit Tracker

- 1. Attach the AC adapter (not included) to the USB cable and plug the USB cable into the Ani Fit USB charging port.
- 2. Plug the AC adapter into an electrical outlet.

 Note: It can be powered through your computer's USB port.
- 3. The status indicator will be BLUE when the device is fully charged. It will take up to two hours to charge (in case of charging via AC adapter).

Stage #2. Download the app

- 1. Go to App Store for iOS or Android Market for Android
- 2. Search "AniFit"
- 3. Download and install the app

Stage #3. Personalize your and your pet's profile

- 1. Activate AniFit app
- 2. You can login with Facebook or Sign up with your photo, your name, your email account and password
- 3. Fill out your pet's profile providing the following information
 - your pet's photo
 - gender, birthday, country, breed, intact or neutered, weight, body condition score, and goal weight

Stage #4. Turn on the Tracker and pair with the app


- 1. Turn on the Ani Fit Tracker when it is fully charged
- 2. Turn on bluetooth
- 3. Scan and connect to Ani Fit device




Basic Setup

Stage #5. Attach the Ani Fit tracker to your pet's collar


1. Put the collar strapping band into the strapping band holder.

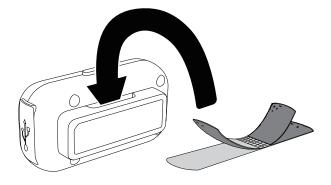

2. Fix the strapping band holder with the inner layer of collar strapping band.

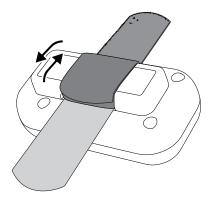

3. Attach the Ani Fit tracker to your pet's collar with outer layer of collar strapping band.

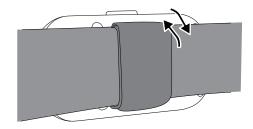

Stage #6. Start Pre-Test

- 1. Read "How Pre-Test Goes" carefully
- 2. Press START when you are ready to start Pre-Test Note: To learn more,

see How Pre-Test works on page 9~10.



How Pre-Test works


Following the instructions of Pre-Test and completing the Pre-Test is the key to enjoy the Ani Fit's tailor-made service. The essence of Pre-Test is that your dog has to wear Ani Fit for a week (24h/7d) with power on, and the amount of feeding should be the same as usual, and during Pre-Test, your dog's life pattern should be the same as usual.







How Pre-Test works

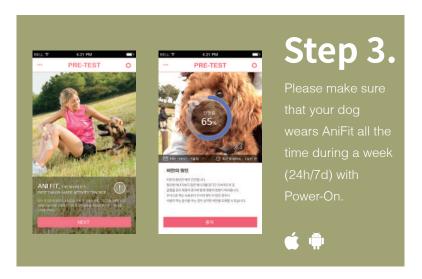





If Pre-Test progress doesn't reach 80% within a certain period, Pre-Test shall be resumed.



Activity Log

Activity Log has one dashboard and three tabs.

- · Dashboard. Calorie burning Current / Goal / Goal hits rate
- · Tab #1. Daily tracking
- · Tab #2. Weekly tracking
- · Tab #3. Monthly tracking

Dashboard. Calorie burning - Current / Goal / Goal hits rate

- Daily goal amount of calorie burning is automatically calculated
- It tracks the amount of calorie burned and its achievement rate to the goal

Tab #1. Daily tracking

- It shows the amount of calorie burned during the day

Tab #2. Weekly tracking

- It shows daily calorie burned amount of the week


Tab #3. Monthly tracking

- It shows goal hit dates with stamp
- It shows activity levels (Rest/Normal/Dynamic) per day







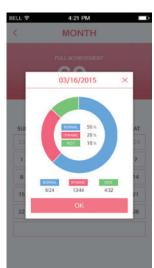



Weight Log

Weight Log has one dashboard and three tabs.

- · Dashboard. Weight Current / Goal / Goal hits rate
- · Tab #1. Weight trend
- · Tab #2. Before & After
- · Tab #3. Feed calculator

Dashboard. Weight - Current / Goal / Goal hits rate

- It tracks and shows its achievement rate to the goal

Tab #1. Weight trend

- There're three graphs (Goal weight, Current weight, and its guide to achieve the goal)
- With those graphs, you can check whether your dog's weight loss or maintenance is going right or not
- You need to input your dog's weight once a week

Tab #2. Before & After

- You need to post your dog's photo once a month
- You can compare your dog's old and current photos

Tab #3. Feed calculator

- Easy way to calculate daily feeding amount for your pet
- The food not on the list, you can input nutrients information









Specification


USB cap

USB charging port (Micro USB 5pin)

Power & status check button

Strapping band holder

Cover bottom

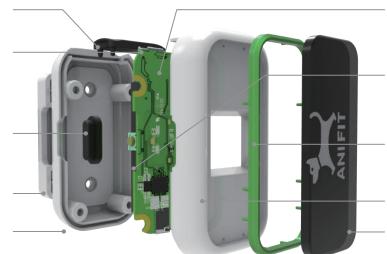

3 axis accelerometer Bluetooth 4.0(BLE)

Li-polymer 3.7V 150mAh battery

Window decor

Cover top

Status indicator

Technical details



• Size: 51.6 x 27.6 x 18 mm (2.03 x 1.09 x 0.71 in)

• Weight: 15g(0.53 oz)

• Display: LED lamp

• Compatibility: Android, IOS

• Battery Life: 7~14 days

• Bluetooth 4.0(BLE)



Compatibility





Bluetooth smart ready

Brand		Manufacturer product name type of product	
å	Apple	iPhone (6+, 6, 5S, 5C, 5, 4S) / iPad (Air, Mini, 3rd & 4th gen)	
SAMSUNG	Samsung	Galaxy Series	
(LG	LG	Optimus Exceed 2, Fuel, L35, L40, L65, L70, L80, L90, G, G pro, F60, F70, Realm, Tribute, Volt, VU 3.0	
***	BlackBerry	Q5, Q10, Z3, Z10, Z30, Passport, P'9982, P'9983	
nexus	Google	Nexus 5, 4	
NOKIA	Nokia	Lumia 525, 530, 620, 625, 630, 635, 720, 730, 735, 830, 930, Icon, 1320, 1520, 2520	
&	Motorola	Droid RAZR, Ultra, Maxx, Mini	
hтс	НТС	Butterfly 2, S, One Series	
HUAWEI	Huawei	Ascend P7	
PANTECH	Pantech	Vega Secret UP	

(*May vary by service provider or country.)

FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is con-nected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

IMPORTANT NOTE:

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

The antennas used for this transmitter must be installed to provide a separation distance of at least 20Cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

CAUTION

To reduce the risk of electric shock, do not remove the top cover (or the rear section). No user serviceable parts inside, refer servicing to qualified personnel.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure-voltage that may be sufficient to constitute a risk of sock.



This symbol, wherever it appears, alerts you to the important operating and maintenance instructions in the accompanying literature. Please read the manual.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this equipment near water.
- 6) Do not using near any heat sources such as radiators, heat resisters, stove, or other equipment that produce heat.

CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

European CE notice to users and product statements

This product is CE marked according to the provisions of the R&TTE Directive(99/5/EC). Hereby, Ani Fit Co., Ltd. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For further information, please contact http://www.anifit.co.kr

C€1177

Ani Fit Co., Ltd.

302, Shinwon Vision Tower, 88, Jeonpa-ro, Dongan-gu, Anyang-si, Gyeonggi-do, 14042 South Korea

Tel: +82-70-5030-2972 Fax: +82-70-7500-0565 URL: www.anifit.co.kr

CONTACT INFORMATION

Manufacturer Address: 302, Shinwon Vision Tower, 88, Jeonpa-ro, Dongan-gu, Anyang-si, Gyeonggi-do, 14042 South Korea

To locate in-country ANI FIT CO., LTD., distributors of the WEARABLE APPCESSORY please refer to the ANI FIT CO., LTD. Website http://www.design-craft.co.kr

These distributor(s) represent local contacts for this product.

CORPORATE HEADQUARTERS:

ANI FIT CO., LTD.

302, Shinwon Vision Tower, 88, Jeonpa-ro, Dongan-gu, Anyang-si, Gyeonggi-do, 14042 South Korea

Tel: +82-70-5030-2972

Fax: +82-70-7500-0565

Web: http://www.anifit.co.kr

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is Subject to the following two condition: (1) this device may not cause interference ,and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

EUROPEAN UNION "DECLARATION OF CONFORMITY"

DECLARATION OF CONFORMITY

ANI FIT CO., LTD.

302, Shinwon Vision Tower, 88, Jeonpa-ro, Dongan-gu, Anyang-si, Gyeonggi-do, 14042 South Korea

declare under our sole responsibility that the product(s)

WEARABLE APPCESSORY - ANIFIT

to which this declaration relate(s) is in conformance with the following standards:

EN 301 489-1 V1.9.2:2011 EN 301 489-17 V2.2.1:2012 EN 60950-1:2006/A2:2013 EN 300 328 V1.8.1:2012

following the provisions of the 1999/5/EC Directives.