


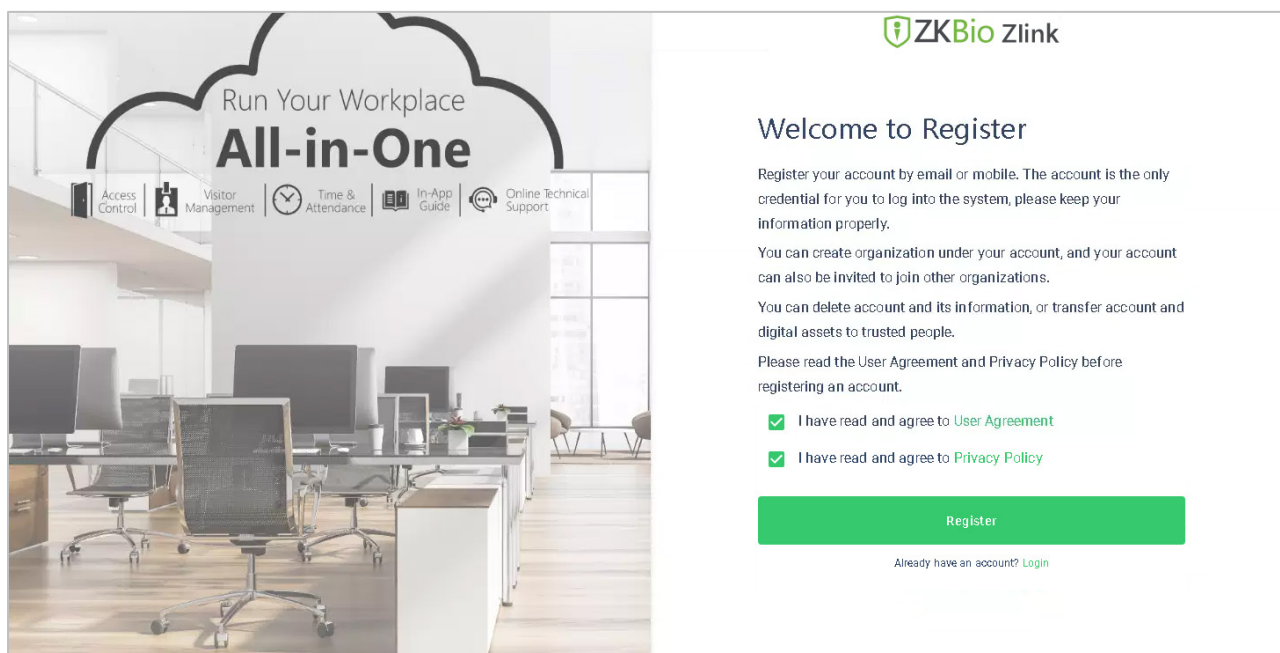

4. Enter user's information and set password, then click **Register**.

ZKBio Zlink

Register

First Name*

Please enter your First Name

Last Name*

Please enter your Last Name

Email*

Please enter your Email

Country*

Select your Country

Create Password*

Create your Password

Confirm Password*

Confirm your Password

Register

5. Set the organization's name and Organization code, click **Create**, then complete registration. If you do have an organization, please click **Select an Organization**.

Run Your Workplace
All-in-One

Access Control | Visitor Management | Time & Attendance | In-App Guide | Online Technical Support

ZKBio Zlink

Create Organization

Organization Name*
Please enter your Organization Name ?

Organization Code*
Please enter your Organization Code ?

Create

Already have an Organization? [Select an Organization](#)

[Back to Login](#)


*Functions will be limited subject to region, please contact support team for details

Powered by MINERVAIoT


22.2 Add Device

22.2.1 Set Organization (Add Person)

1. Click **Me > Organization** on the main menu.

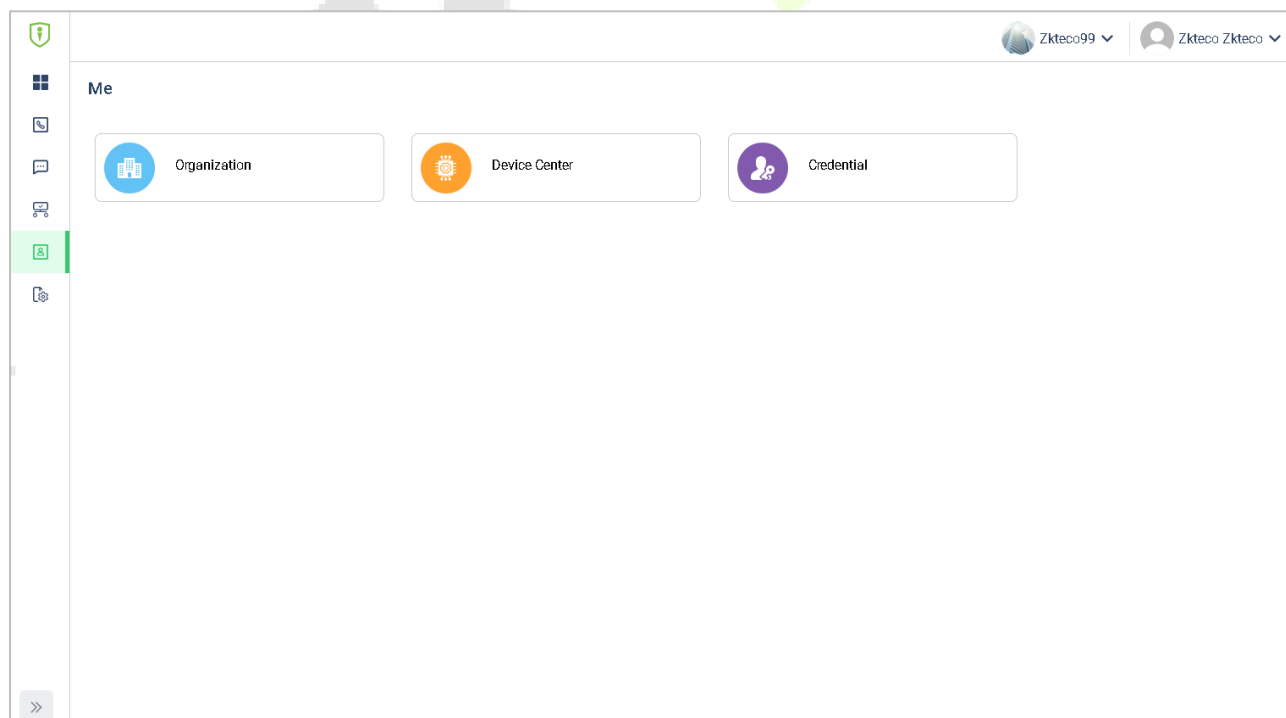


- Click **Add** icon  to add a new person (Repeat adding the department, role and permission, job title, site list, and zone list).

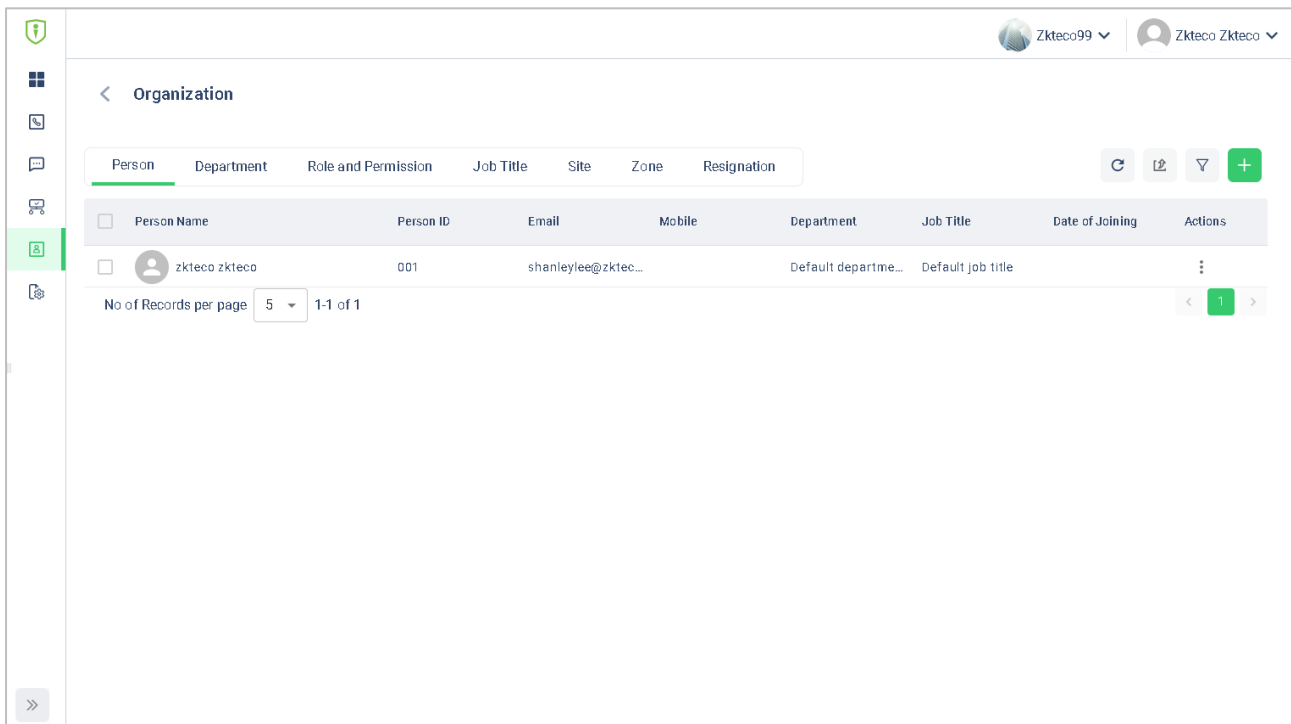

The screenshot shows the 'Organization' management page. At the top, there are tabs for 'Person', 'Department', 'Role and Permission', 'Job Title', 'Site', 'Zone', and 'Resignation'. The 'Person' tab is selected. Below the tabs is a table with the following columns: Person Name, Person ID, Email, Mobile, Department, Job Title, Date of Joining, and Actions. The table contains one record for a person named 'zkteco zkteco' with ID '001' and email 'shanylee@zkteco...'. To the right of the table, there are icons for refresh, delete, filter, and add. Below the table, there is a 'No of Records per page' dropdown set to '5' and a pagination indicator '1-1 of 1'.

- Enter the person's details and click **Save** (Repeat adding the department, role and permission, job title, site list, and zone list).

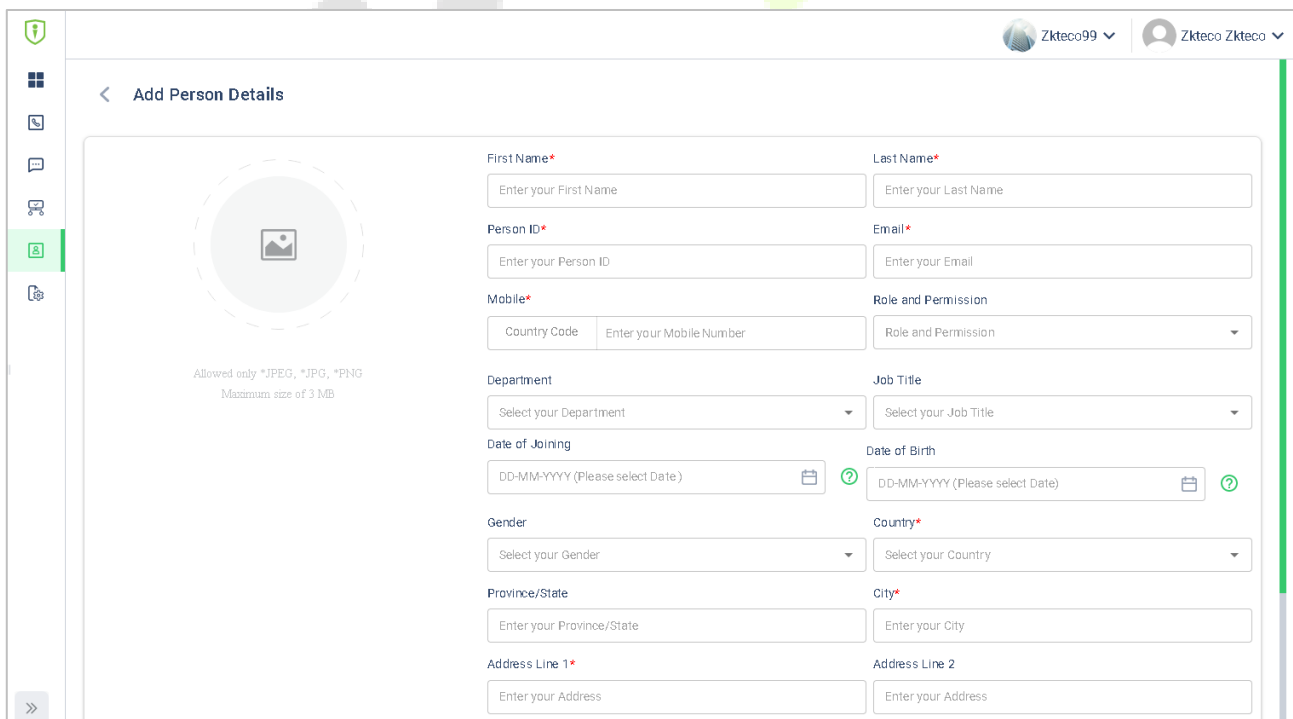

The screenshot shows the 'Add Person Details' form. It includes a profile picture upload area on the left with a dashed circle and a camera icon. Below it, text indicates 'Allowed only *.JPEG, *.JPG, *.PNG' and 'Maximum size of 3 MB'. The form fields are organized into two columns:


- First Name***: Text input field.
- Last Name***: Text input field.
- Person ID***: Text input field.
- Email***: Text input field.
- Mobile***: Text input field with a 'Country Code' dropdown.
- Role and Permission**: Dropdown menu.
- Department**: Dropdown menu.
- Job Title**: Dropdown menu.
- Date of Joining**: Date picker (DD-MM-YYYY).
- Date of Birth**: Date picker (DD-MM-YYYY).
- Gender**: Dropdown menu.
- Country***: Dropdown menu.
- Province/State**: Text input field.
- City***: Text input field.
- Address Line 1***: Text input field.
- Address Line 2**: Text input field.

22.2.2 Add Device

1. Press **M/OK** and enter **COMM.** > **Ethernet** on the device to set the IP address and gateway of the device.

Ethernet	
Display in Status Bar	☒
IPv4	
IP Address	192.168.163.129
Subnet Mask	255.255.255.0
Gateway	192.168.163.1
DNS	

2. Click **Workshop** > **CloudACC** on the main menu to enter the **ZKBio Cloud Access** interface.

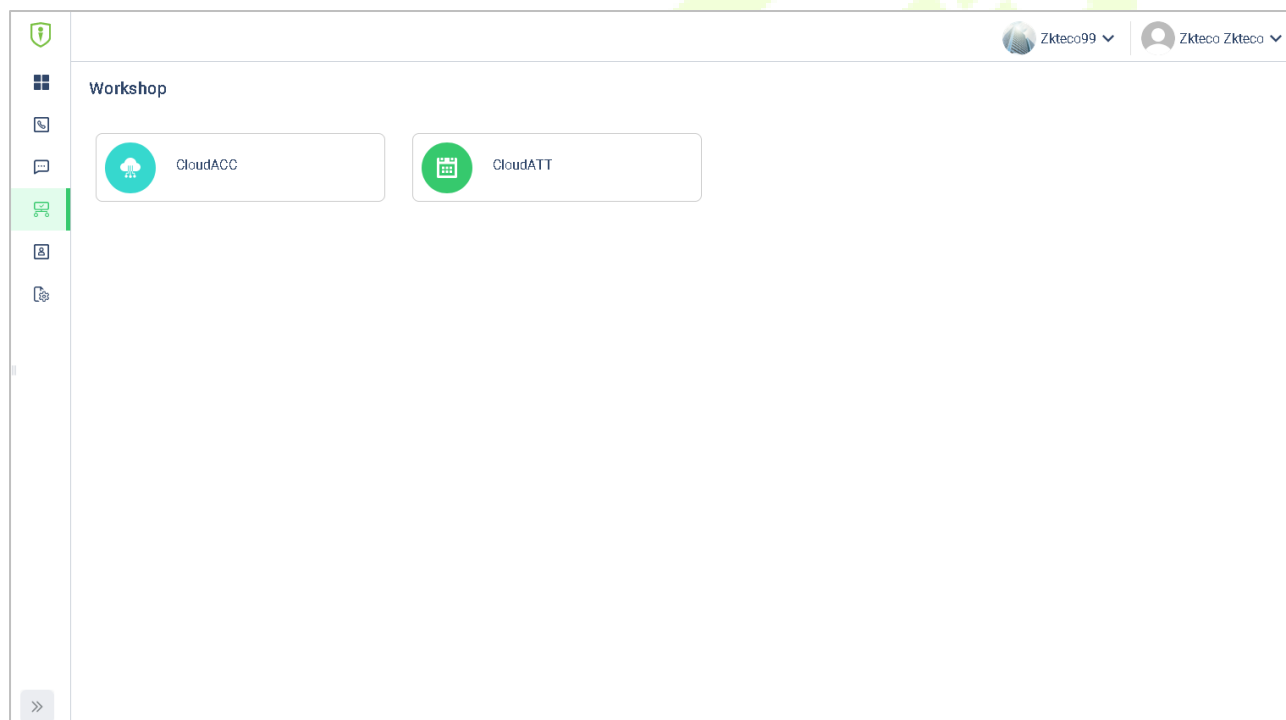

3. Click **Device Management** > **Device** to enter the **Device** interface in the **ZKBio Cloud Access**.
4. Click **+Add Device** button to add a new device.
5. Read and check to the instructions, then click **Continue**.

Cloud ACC

zkteco99 | zkteco zkteco

< Add Device

Device Network Configuration Steps

Step 1: Power up and turn on the Device
If the Device has a network, it will automatically connect to the network and start working.

Step 2: Configure the Network
You may use Bluetooth to set up the network. Or some Device has touch screen that has network setting in Firmware.

Step 3: Restore the Factory Settings
Some Devices can not have network setting. You may try to Reset the Device factory setting.

☐ I have read these instructions

Continue

version V 2.1.0

6. Enter the device's serial number, then click **Add**. (Press **M/OK** and enter **System Info > Device Info** on the device to view the serial number)

Cloud ACC

zkteco99 | zkteco zkteco

< Add Device

Manual Register Device

Power Up and Set Device Network

1. Plug in the network cable if Device support Ethernet function.
2. Enter your Device Ethernet setting/WiFi setting menu to enter communication setting page. Network setup is successful, Device will display a QR code in standby page.
3. On the side of Device box or on the back of Device, can find the Device Serial Number.
4. Fill in Device Serial Number on system.

Device Serial Number

Please Enter Device Serial Number

Add

version V 2.1.0

7. Choose a site and a zone, then click **Bind** to finish.

Bind Device to your Organization

 NYU7240500231

Please bind the Device to a Site and Mapped Zone

Bind Site *

Please select your Site

Bind Zone *

Please select your Zone

Bind

Clear

22.3 Time Slot

Time Slot is used to set the access time period for person or doors.

22.3.1 Set Time Slot

In **ZKBio Cloud Access** interface, click **Access Control > Time Slots** to set time slot.

Cloud ACC

Dashboard

Organization

Site Management

Device Management

Access Control

Time Slot

Door Access Time

Group Access Time

Report

Operation Log

zkteco99

zkteco zkteco

Time Slot

Time Slot Name

24-Hours General

No of records per page

5

1-1 of 1

1

Click **+Add Time slots** to add a new slot, or click  to modify an existing slot.

22.3.2 Set Door Access Time

In **ZKBio Cloud Access** interface, click **Access Control > Door Access Time** and click  to allocate a time slot to this door.

Cloud ACC

zkteco99 | zkteco zkteco

Door Access Time

☐	Door Name	Device Name	Device Serial Num...	Door Number	Enable	Active Time Slot	Verification Mode	Actions
☐	Door-1	zkteco099	zkteco099	1	✓	24-Hours General		

No of records per page: 5 | 1-1 of 1

version V 2.1.0

22.3.3 Set Group Access Time

You can set a group to control the access time of the person and the door at the same time.

In **ZKBio Cloud Access** interface, click **Access Control > Group Access Time**.

Cloud ACC

zkteco99 | zkteco zkteco

Group Access Time

☐	Name	Time Slot	Start Date and Time	End Date and Time	Actions
☐	1	24-Hours General	10:37 01-08-2023	11:37 10-08-2023	

No of records per page: 5 | 1-1 of 1

version V 2.1.0

Click **+ Add Group Access Time** to add a new group.

Click to allocate doors to this group.


Click  to allocate person to this group.

Click  to allocate a time slot to this group.


Click  to delete this group.

22.4 Synchronize Person to Device


1. Click **Workshop > CloudACC** on the main menu to enter the **ZKBio Cloud Access** interface.

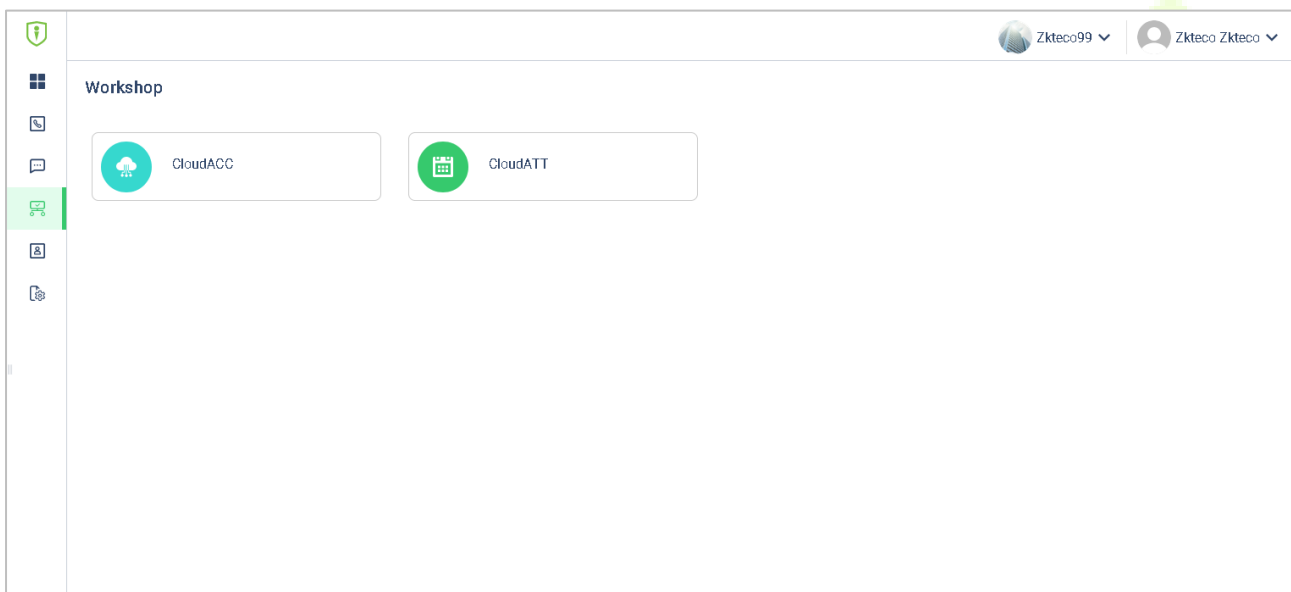

2. Click **Access Control > Group Access Time**.

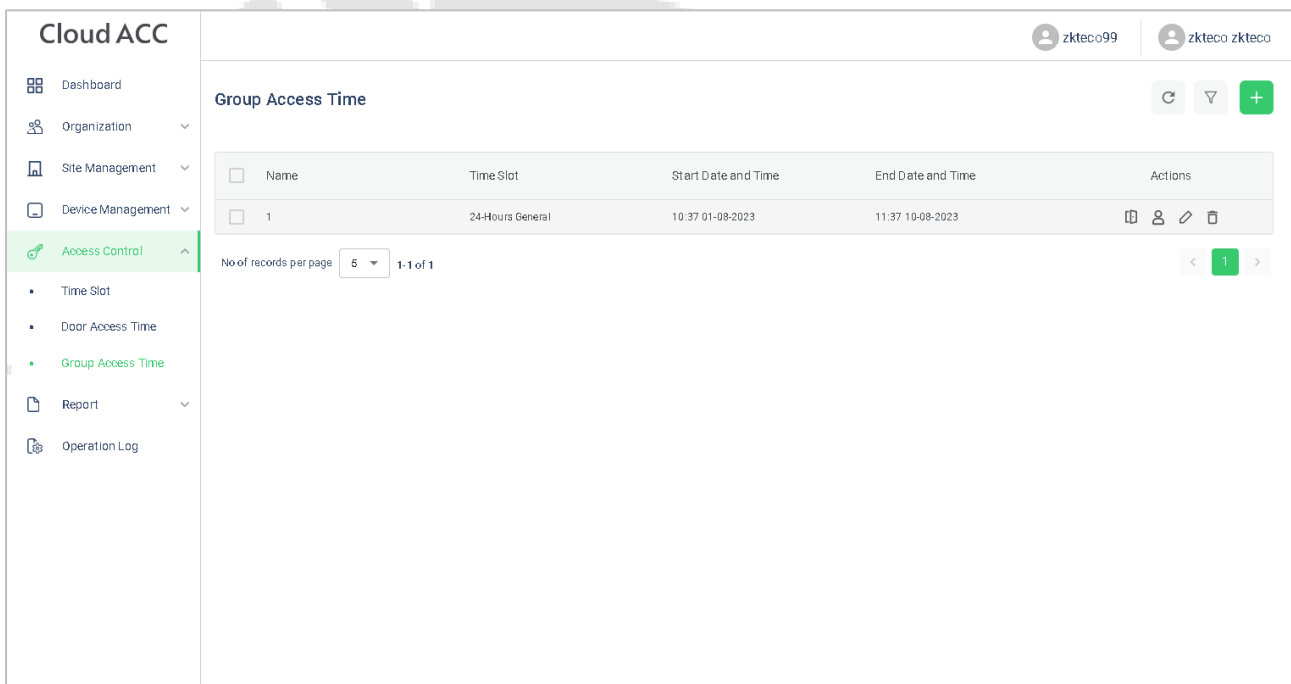

3. Click  >  to choose a device.

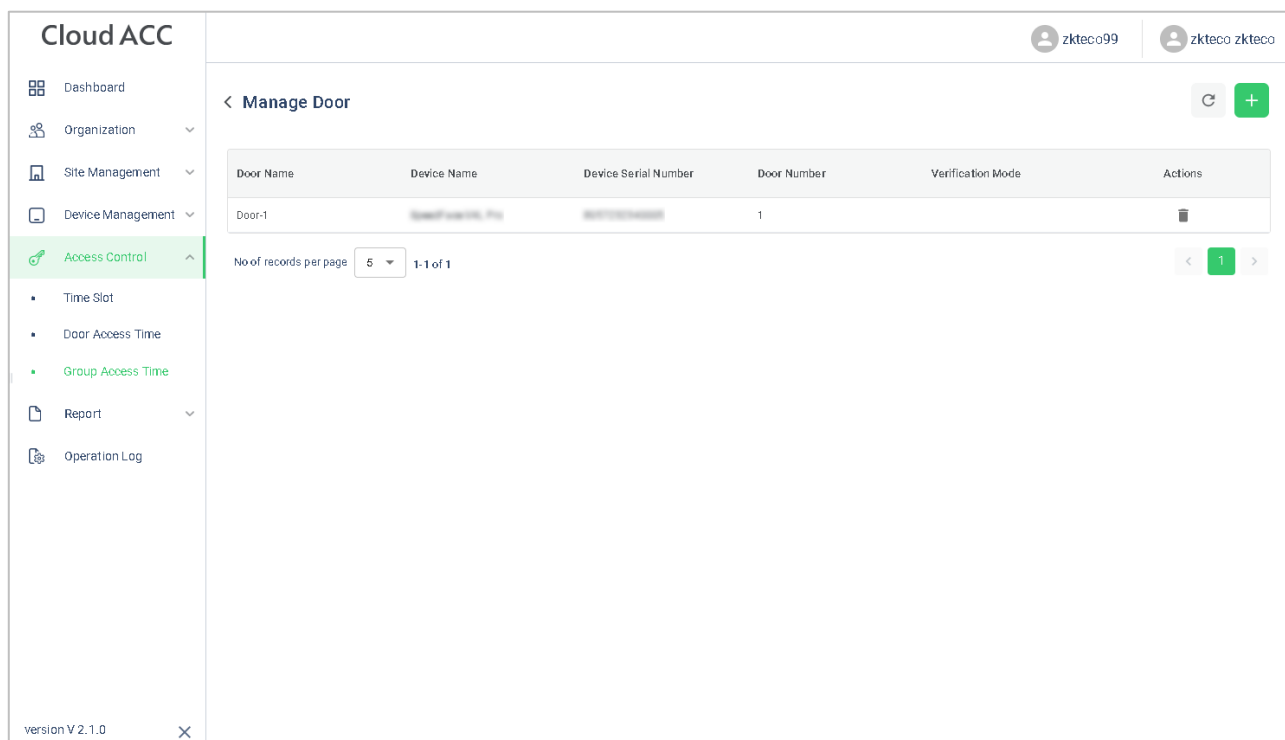

Cloud ACC

zkteco99 | zkteco zkteco


< Manage Door

Door Name	Device Name	Device Serial Number	Door Number	Verification Mode	Actions
Door-1	Zkteco099	1	1		

No of records per page: 5 | 1-1 of 1

version V 2.1.0

4. Click  >  to allocate person to this device.

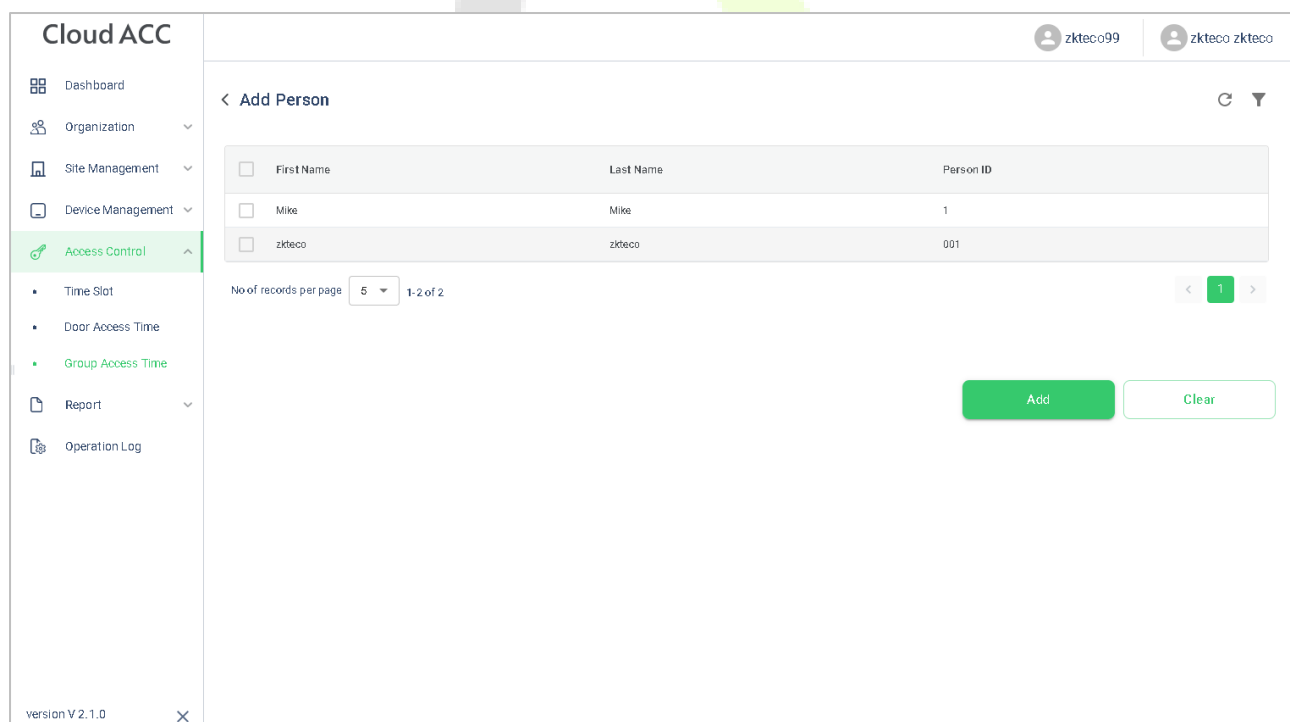

Cloud ACC

zkteco99 | zkteco zkteco

< Add Person

☐	First Name	Last Name	Person ID
☐	Mike	Mike	1
☐	zkteco	zkteco	001

No of records per page: 5 | 1-2 of 2

Add Clear

version V 2.1.0

5. Click **Device Management > Device** to enter the **Device** interface.

The screenshot shows the Cloud ACC interface with the 'Device Management' menu item highlighted in the left sidebar. The main content area displays the 'Device' interface. At the top right, there are user avatars for 'zktco099' and 'zktco zktco'. Below the header, there are icons for refresh, search, delete, and a '+ Add Device' button. A table lists device information:

☐	Device Name	Serial Number	IP Address	Device Model	Firmware Version	Status	Actions
☐	SpeedFace V10 Pro	8887102888888	192.168.163.175	SpeedFace V10 Pro	2024-04-08 10:00:00 V1.0	Online	

Below the table, it shows 'No of records per page' as 5 and '1-1 of 1'. A pagination bar at the bottom indicates page 1 of 1.

6. Choose a device and click **Persons in the Device** icon to view the person list.

The screenshot shows the Cloud ACC interface with the 'Device Management' menu item highlighted. The main content area displays the 'Person In This Device' view. At the top right, there are user avatars for 'zktco099' and 'zktco zktco'. Below the header, there is a card for the selected device 'SpeedFace V10 Pro' with 'Site: 1' and 'Zone: 1'. Below this, there is a section titled 'Person & Person Credentials in this Device ?' with a refresh icon. A table lists person information:

Person Name	Person ID	Role	Person Credentials
Mike Mike	1	Select User role	0 0 0 0 0 0

Below the table, it shows 'No of records per page' as 5 and '1-1 of 1'. A pagination bar at the bottom indicates page 1 of 1.

22.5 User Registration


22.5.1 Register a User ID and Name

Please refer to [22.2.1 Set Organization](#).

22.5.2 Setting the User Role

There are two types of user accounts: the **Normal User** and the **Super Admin**. If there is already a registered administrator, the normal users have no rights to manage the system and may only access authentication verifications. The administrator owns all management privileges.

1. Click **Device Management > Device** on **ZKBio Cloud Access** interface to enter the **Device** interface.
2. Choose a device and click **Persons in the Device** icon  to view the person list.

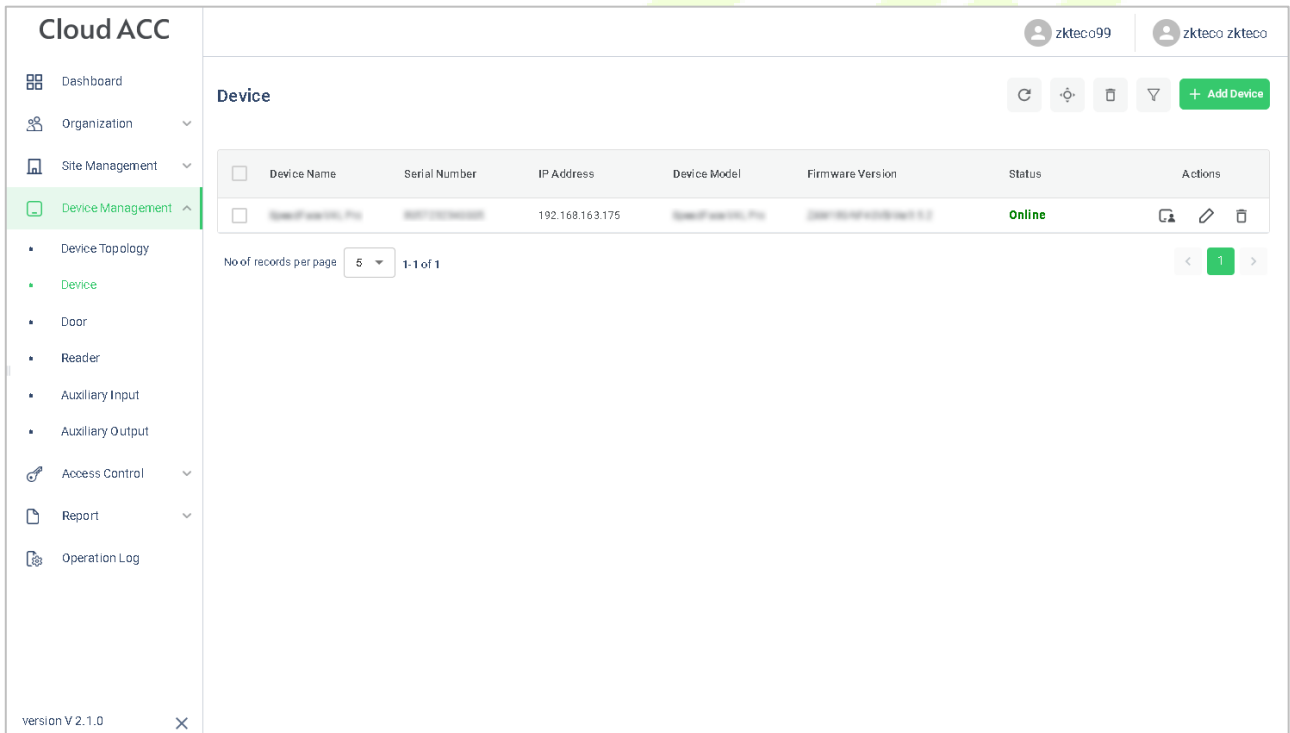

Cloud ACC

zkteco99 | zkteco zkteco

Device Management

- Dashboard
- Organization
- Site Management
- Device Management**
 - Device Topology
 - Device**
 - Door
 - Reader
 - Auxiliary Input
 - Auxiliary Output
- Access Control
- Report
- Operation Log

version V 2.1.0

Device

+ Add Device

☐	Device Name	Serial Number	IP Address	Device Model	Firmware Version	Status	Actions
☐	zkteco99	zkteco99	192.168.163.175	zkteco99	zkteco99	Online	  

No of records per page: 5 | 1-1 of 1

< 1 >

3. Choose the **Select User** role.

Cloud ACC

zkteco99 | zkteco zkteco

< Person In This Device

SpeedFaceV10 Pro
Site: 1
Zone: 1

Person & Person Credentials in this Device ?

Person Name	Person ID	Role	Person Credentials
Mike Mike	1	Select User role	0 0 0 0 0 0

No of records per page: 5 | 1-1 of 1

version V 2.1.0

22.5.3 Register Fingerprint

1. Click **Device Management > Device** on **ZKBio Cloud Access** interface to enter the **Device** interface.
2. Choose a device and click **Persons in the Device** icon to view the person list.

Cloud ACC

zkteco99 | zkteco zkteco

Device


+ Add Device

Device Name	Serial Number	IP Address	Device Model	Firmware Version	Status	Actions
SpeedFaceV10 Pro	88871027460008	192.168.163.175	SpeedFaceV10 Pro	zkfacecloudaccess V2.1	Online	


No of records per page: 5 | 1-1 of 1

version V 2.1.0

3. Click  icon to choose a finger, click **Submit**, then register fingerprint on the device.

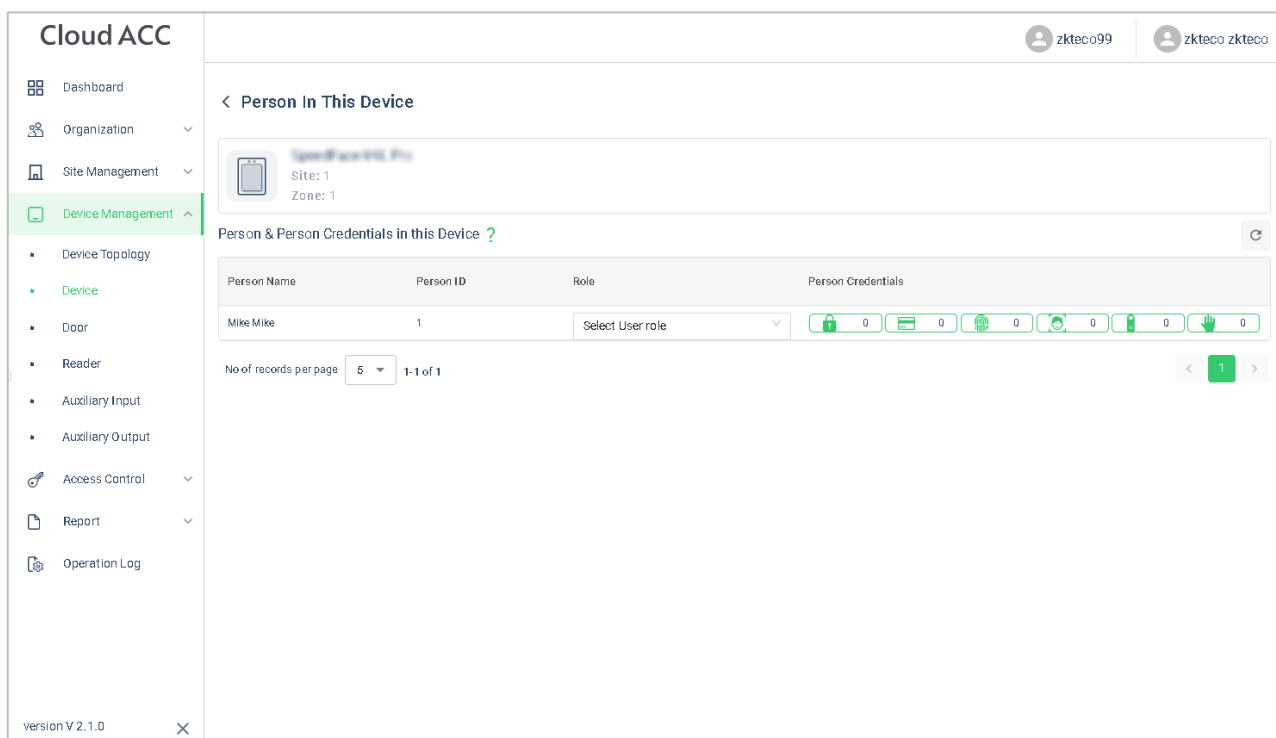

4. Press the same finger on the device three times. Green indicates that the fingerprint was enrolled successfully.

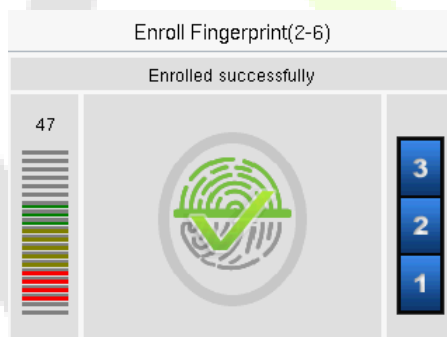

22.5.4 Register Face Template

1. Click **Device Management > Device** on **ZKBio Cloud Access** interface to enter the **Device** interface.
2. Choose a device and click **Persons in the Device** icon  to view the person list.




- Copyright © 2024 ZKTECO CO., LTD. All rights reserved.

- Click  icon to register password on the device.

Note: The password may contain one to eight digits by default.


22.5.6 Register Card

1. Click **Device Management > Device** on **ZKBio Cloud Access** interface to enter the **Device** interface.
2. Choose a device and click **Persons in the Device** icon  to view the person list.

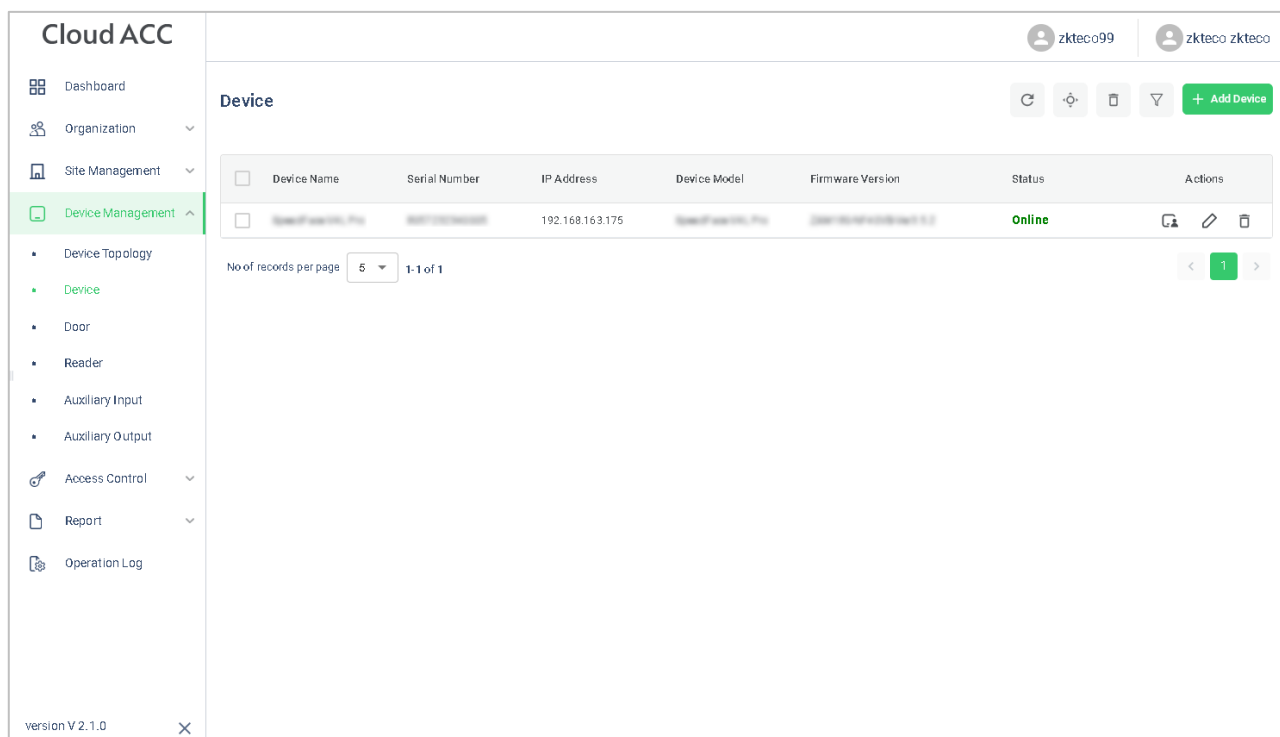

The screenshot shows the 'Cloud ACC' interface. On the left is a sidebar with navigation options: Dashboard, Organization, Site Management, Device Management (highlighted), Device Topology, Device, Door, Reader, Auxiliary Input, Auxiliary Output, Access Control, Report, and Operation Log. The main area is titled 'Device' and contains a table with columns: Device Name, Serial Number, IP Address, Device Model, Firmware Version, Status, and Actions. One device is listed: 'SpeedFace V10 Pro' with IP '192.168.163.175' and status 'Online'. Below the table, there are pagination controls showing 'No of records per page' as 5 and '1-1 of 1'. At the bottom left, it says 'version V 2.1.0'.

3. Click  icon to register password on the device.

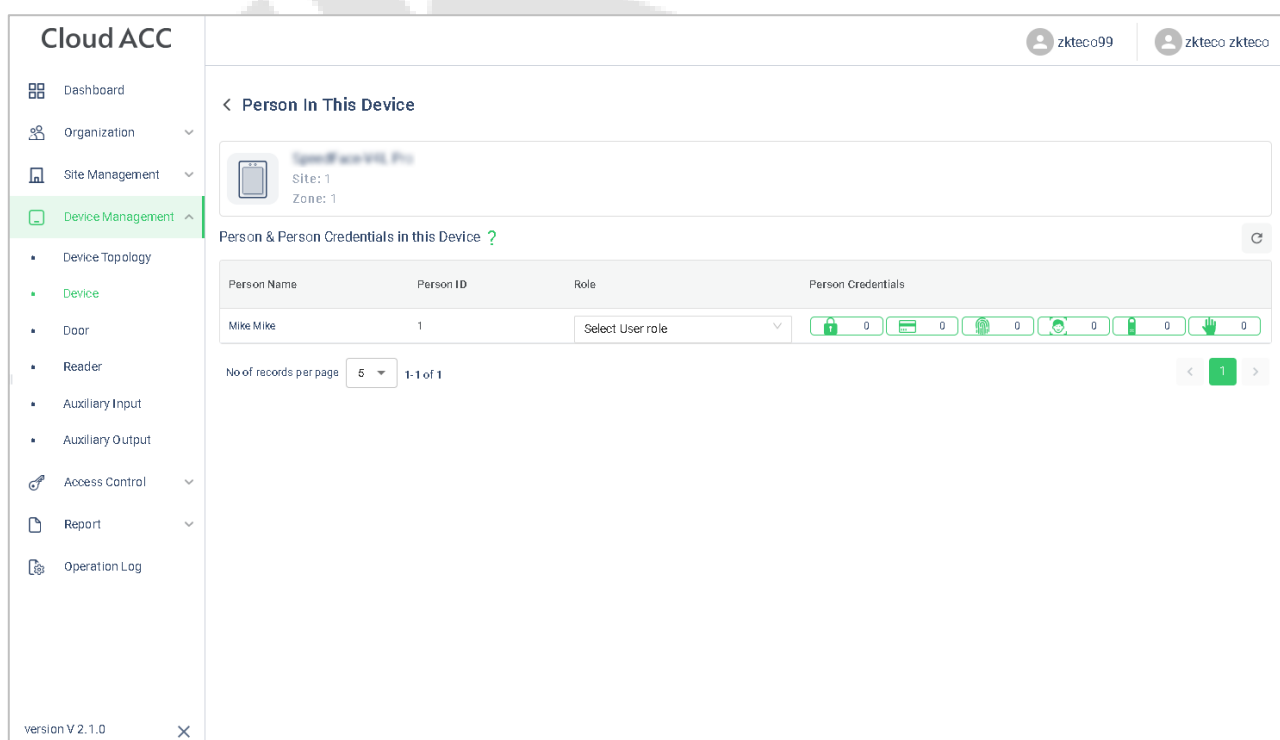


The screenshot shows the 'Cloud ACC' interface with the 'Person In This Device' sub-page. The sidebar is the same as the previous screenshot. The main area is titled '< Person In This Device'. It shows a device card for 'SpeedFace V10 Pro' with 'Site: 1' and 'Zone: 1'. Below this, it says 'Person & Person Credentials in this Device ?'. There is a table with columns: Person Name, Person ID, Role, and Person Credentials. One person is listed: 'Mike Mike' with ID '1' and role 'Select User role'. The 'Person Credentials' column shows various icons with counts: a lock (0), a card (0), a fingerprint (0), a face (0), a key (0), and a hand (0). At the bottom left, it says 'version V 2.1.0'.

22.6 Data Search

22.6.1 Dashboard

In **ZKBio Cloud Access** interface, click **Dashboard** to check the sites, devices, doors, person of this application, events overview graph, and sites overview map.

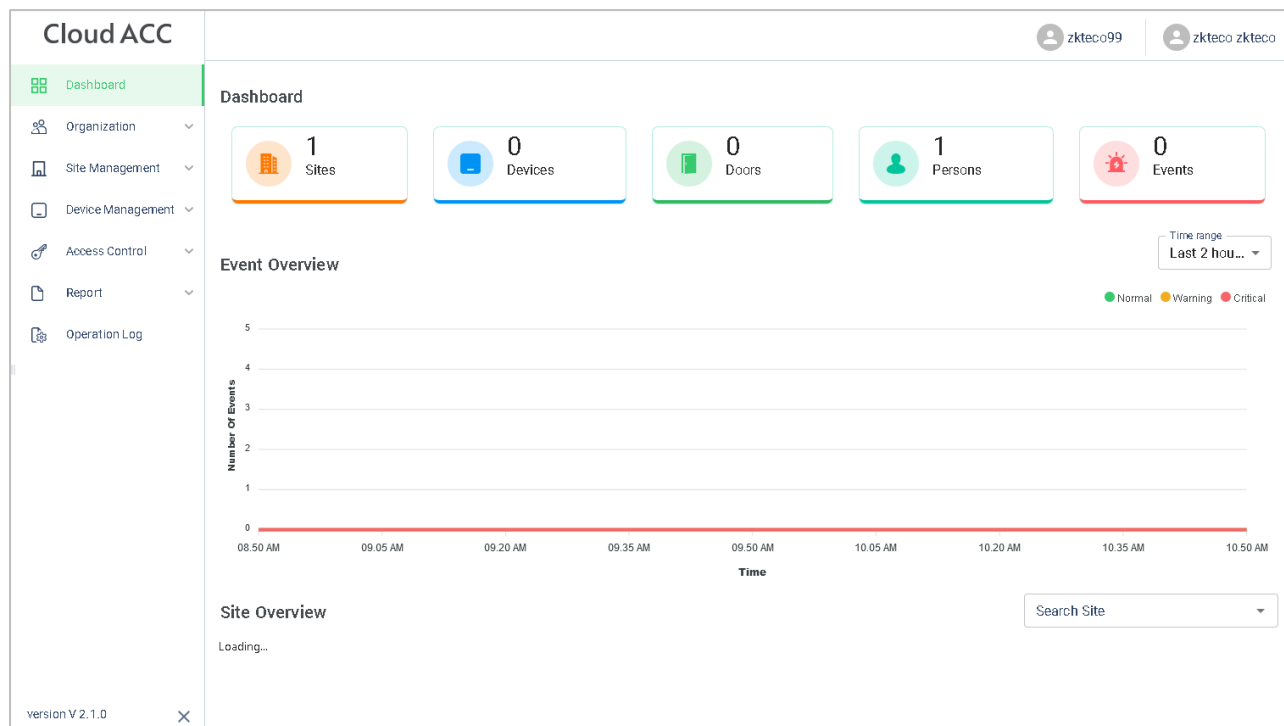

22.6.2 Event Report

In **ZKBio Cloud Access** interface, click **Report > Events** to check the specific information of all devices' events.

Cloud ACC

Dashboard

Organization

Site Management

Device Management

Access Control

Report

Events

Operation Log

zkteco99

zkteco zkteco

Events

↺

🔍

📄

Person ID	Person Name	Device Name	Device Serial Number	Event Time	Event Address	Event Name	Verification Mode
10220		SpeedFace V4L...	8057232340305	2023-08-11 10:4...	1		
		SpeedFace V4L...	8057232340305	2023-08-11 10:4...	1		
		SpeedFace V4L...	8057232340305	2023-08-11 10:4...	1		
			8057232340305	2023-08-11 10:3...	1		
			8057232340305	2023-08-11 10:3...	1		

No of records per page

5

1-5 of 12

<

1

2

3

>

version V 2.1.0

✕


23 Connecting to ZKBio Zlink App

Change the device communication protocol to BEST protocol, then the device can be managed by ZKBio Zlink, please refer to [11.5 Device Type Setting](#).

Users can use the created account to access ZKBio Zlink App to connect devices, unlock the device remotely and query records.

23.1 Register Account

1. Search for the ZKBio Zlink App in Apple App Store or Google Play Store and download the App to your smartphone.
2. Open the ZKBio Zlink App and if you do not have an account, please click **Create account** to add a new account.
3. Read and agree to User Agreement and Privacy Policy, then click **Register**.
4. Enter user's information and set password, then click **Register**.

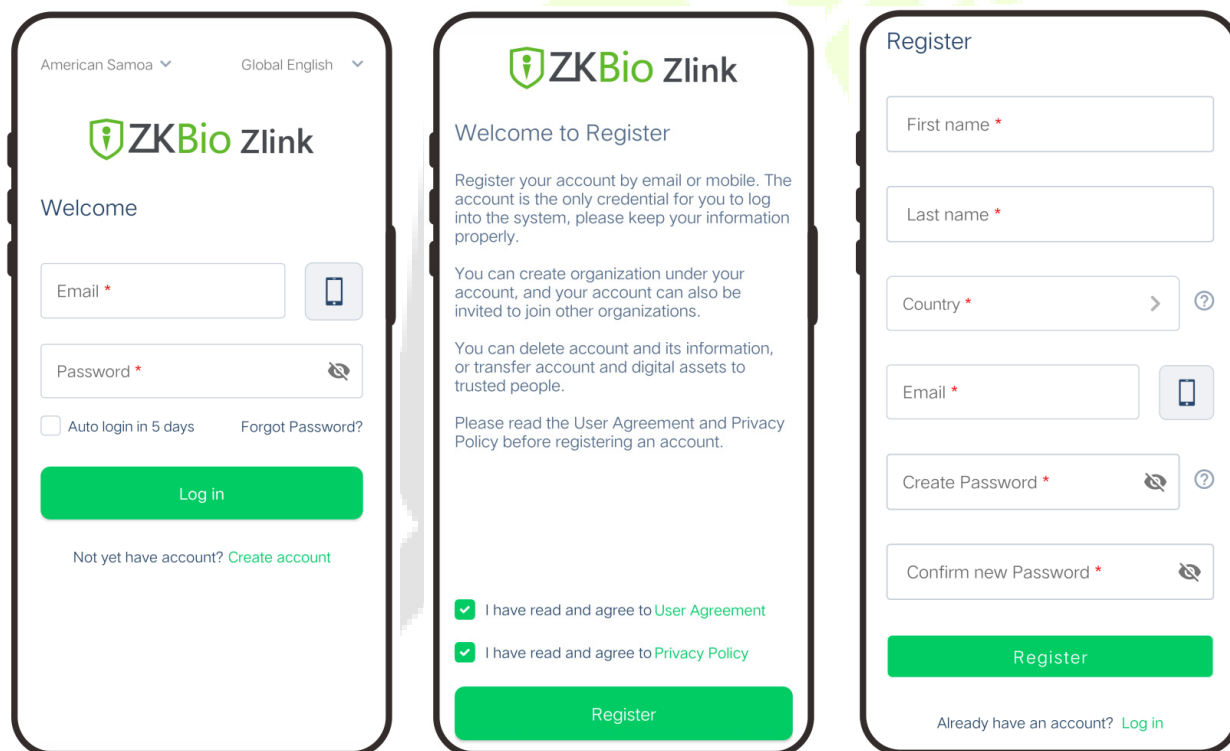


5. Choose an organization, click **Enter**, then complete registration. If you do not have an organization, please click **Create one**.

The image shows two mobile app screens for ZKBio Zlink. The left screen is titled 'Select organization' and contains the following text: 'Please select the organization you created and enter this organization.', 'You can also switch between your multiple organizations after logging in.', a dropdown menu labeled 'Select organization name*', a green 'Enter' button, and a link 'Don't have an organization? Create one'. The right screen is titled 'Create organization' and contains the following text: 'Organization name*' with a dropdown menu showing 'Public Resources', 'Organization code*' with a dropdown menu showing 'Public Resources', a green 'Create' button, and a link 'Already have an organization? Select an organization'.

23.2 Add Person


1. Click **Me > Organization > Person** on the main menu.
2. Click  icon to add a new person. Enter the information, and click **Save**.

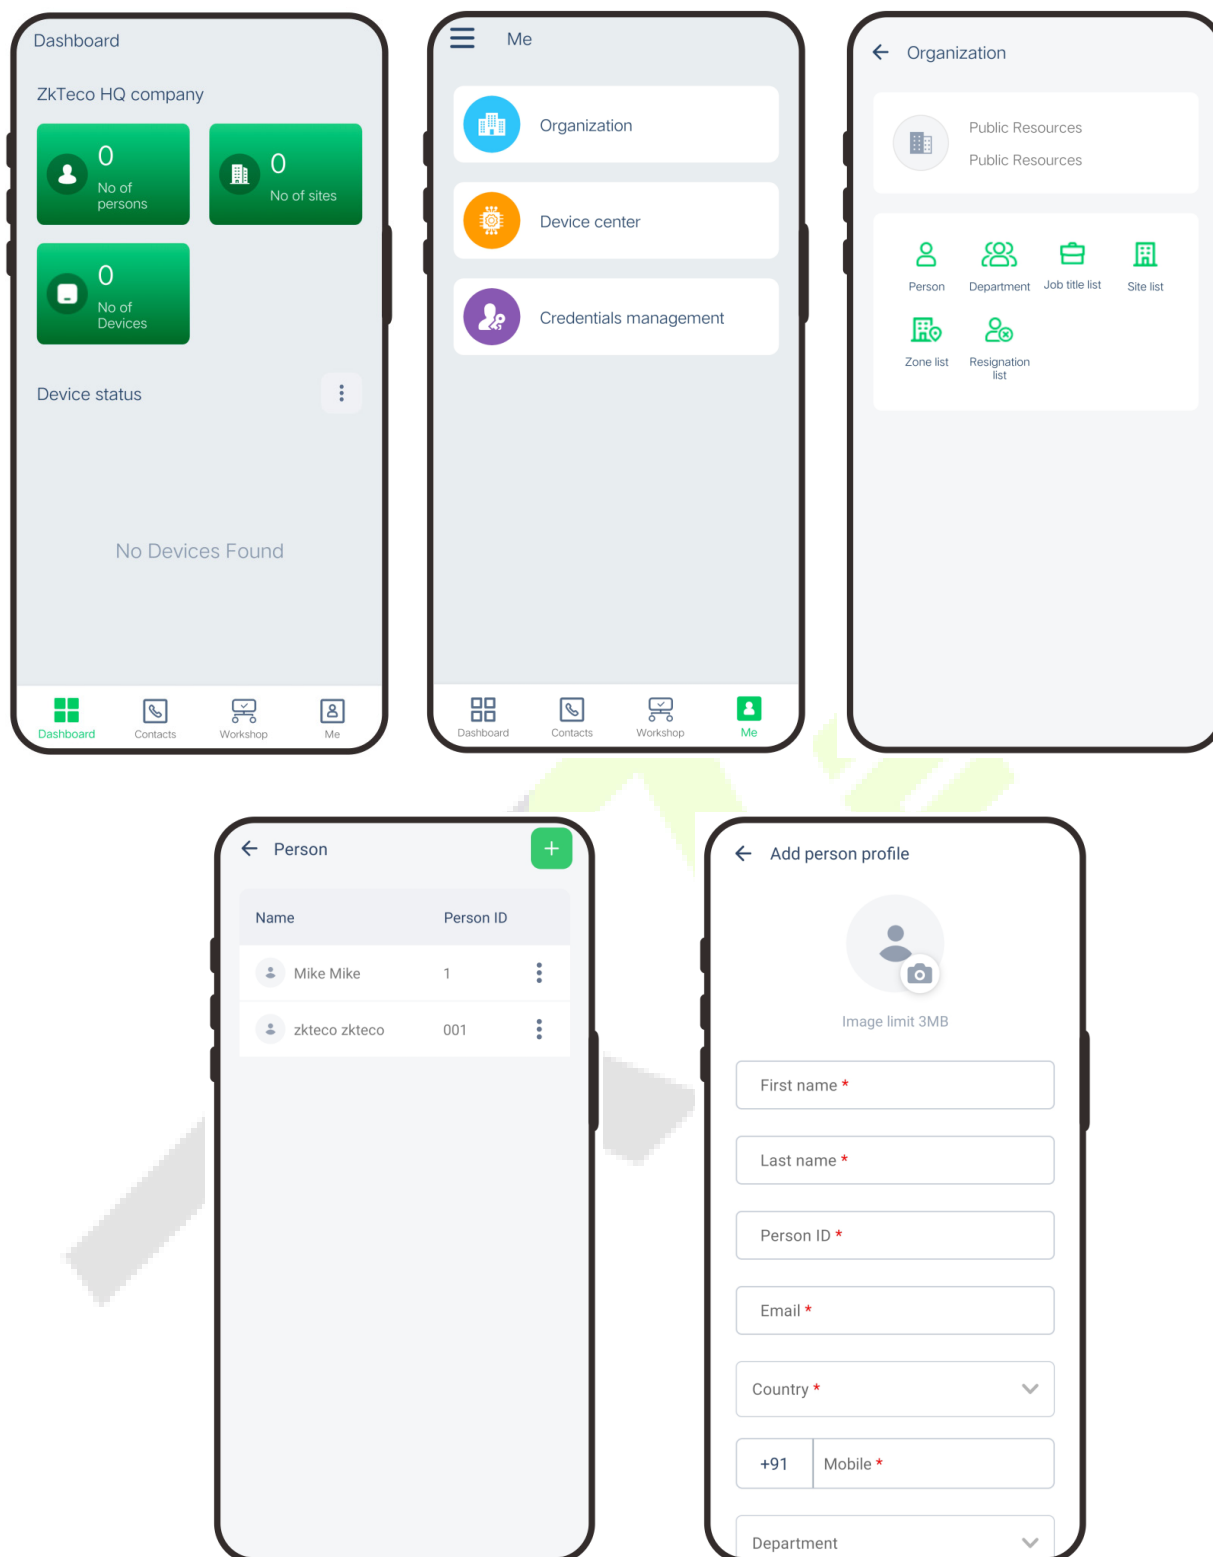


23.3 Add Device

23.3.1 Add Site and Zone


1. Click **Me > Organization > Site (or Zone)** on the main menu.
2. Click  icon to add a new site or zone. Enter the information, and click **Save**.

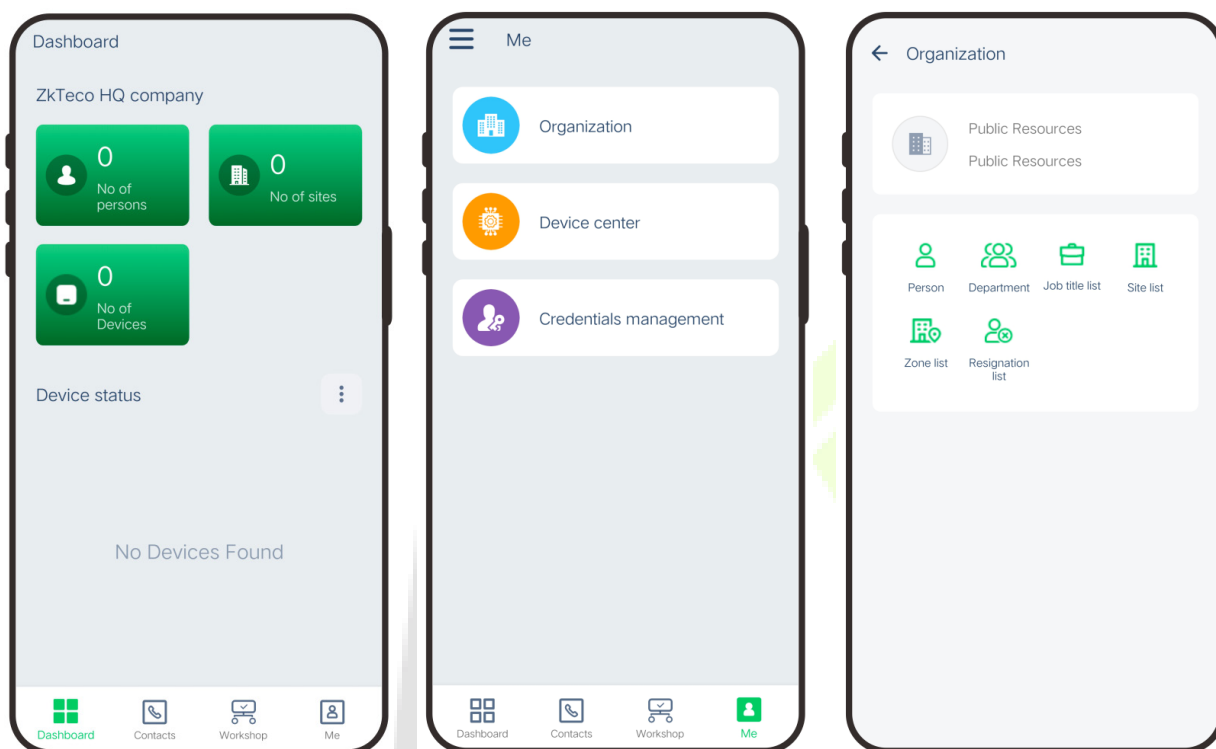

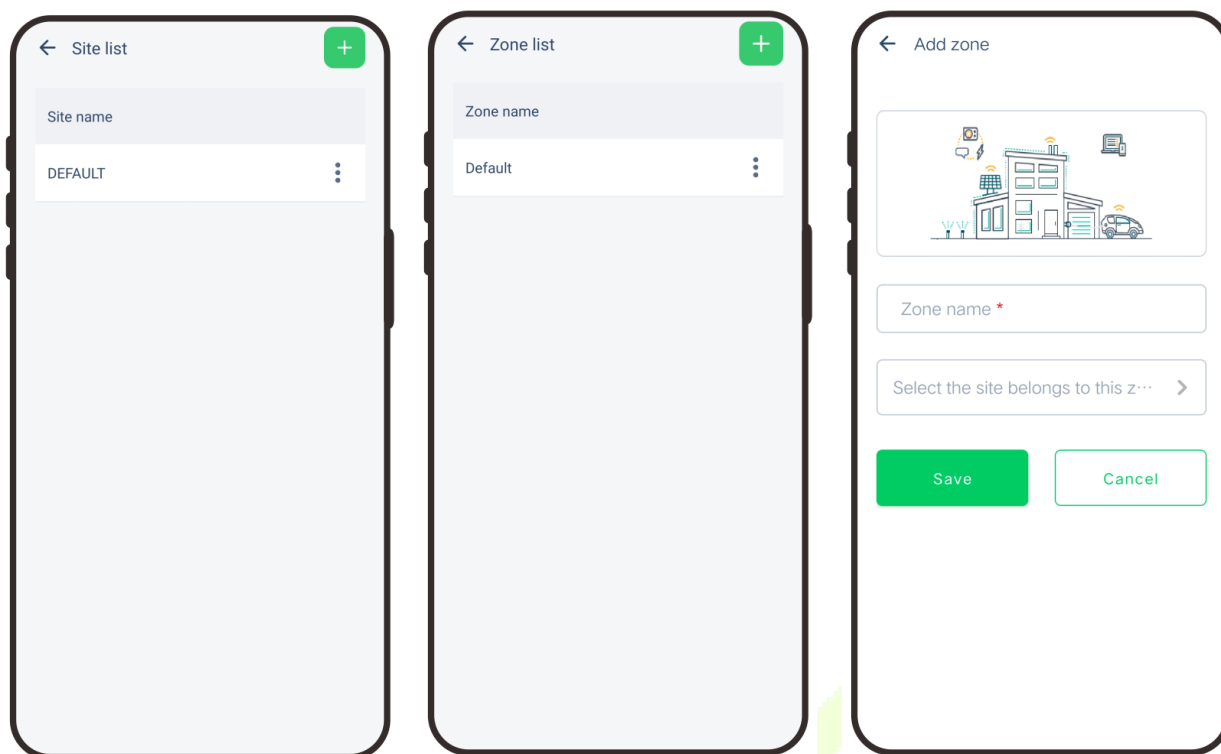


23.3.2 Add Device

1. Press **M/OK** and enter **COMM.** > **Ethernet** on the device to set the IP address and gateway of the device.
2. Click **Workshop** > **CloudACC** on the main menu to enter the **ZKBio Cloud Access** interface.
3. Click **Me** > **Device List** to enter the **Device** interface. And click  icon to add a new device.
4. Click **Manually register device**.
5. Read and check to the instructions, then click **Continue**.
6. Enter the device's serial number, then click **Confirm**. (Press **M/OK** and enter **System Info** > **Device Info** on the device to view the serial number.)

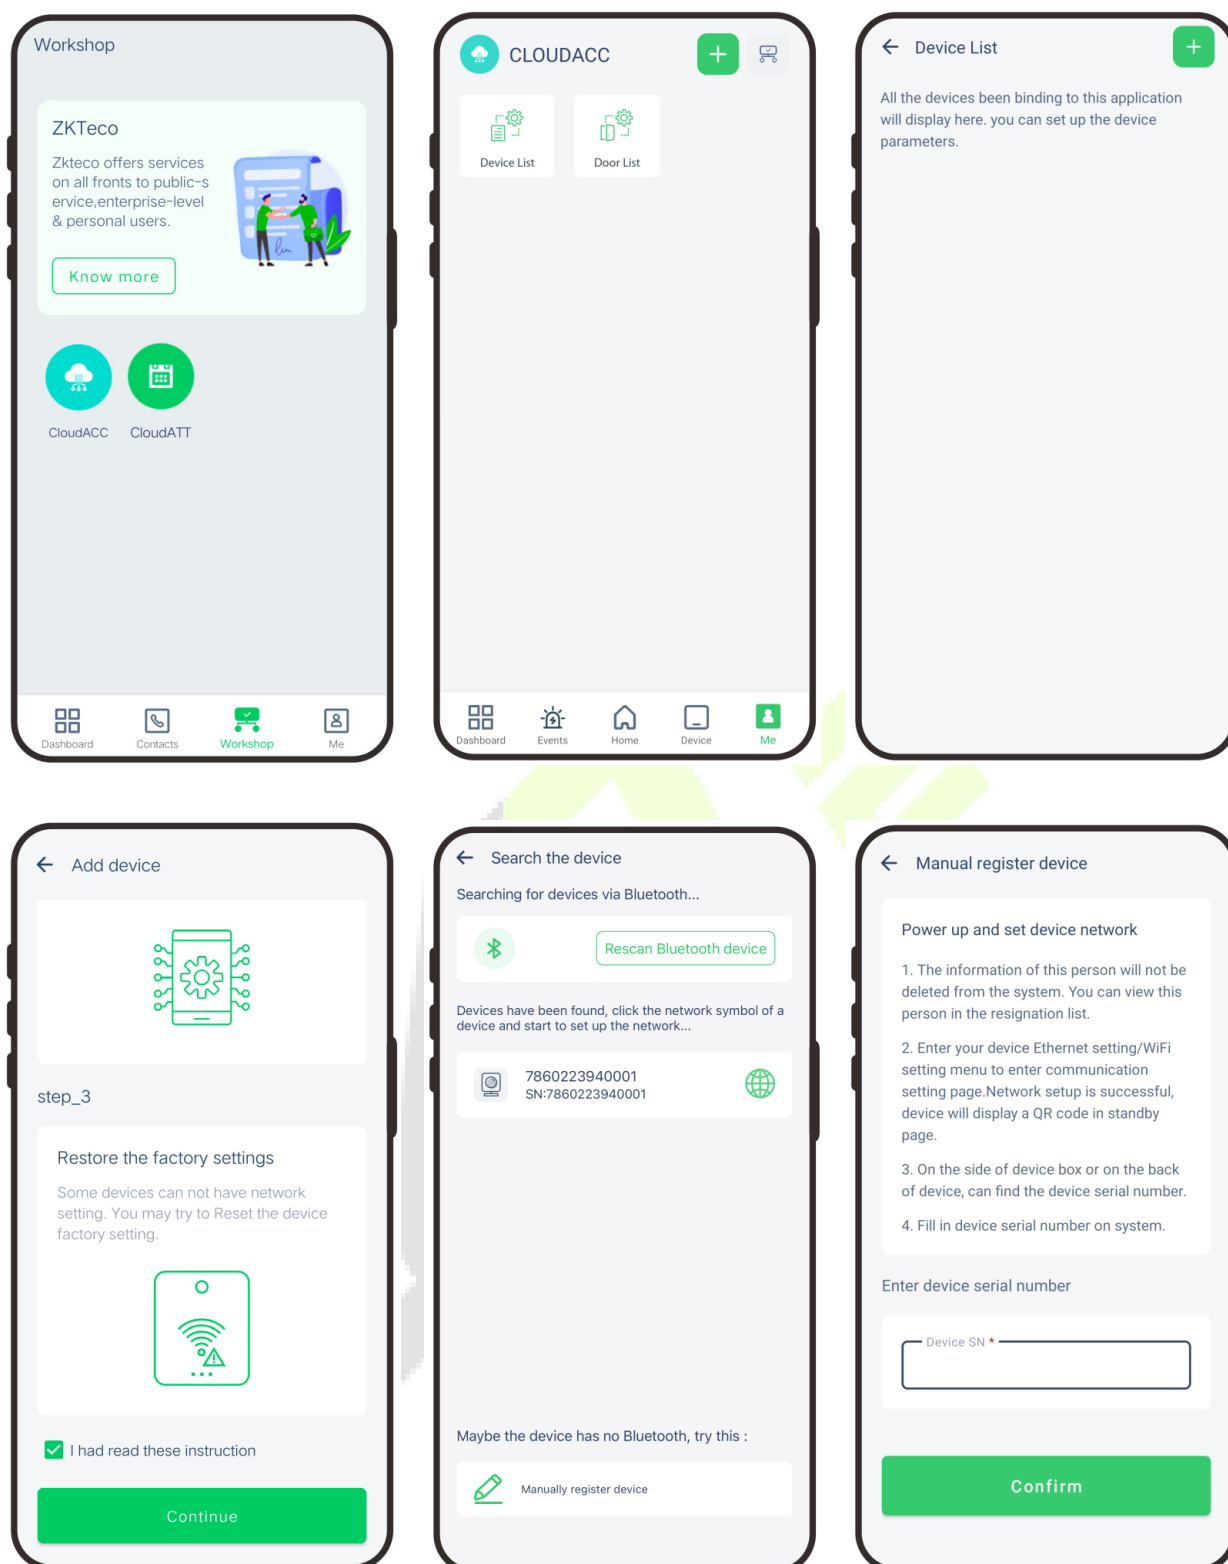

7. Choose a site and a zone, then click **Save** to finish.
8. Then click **Device**, users can view the device status and unlock remotely in this interface.

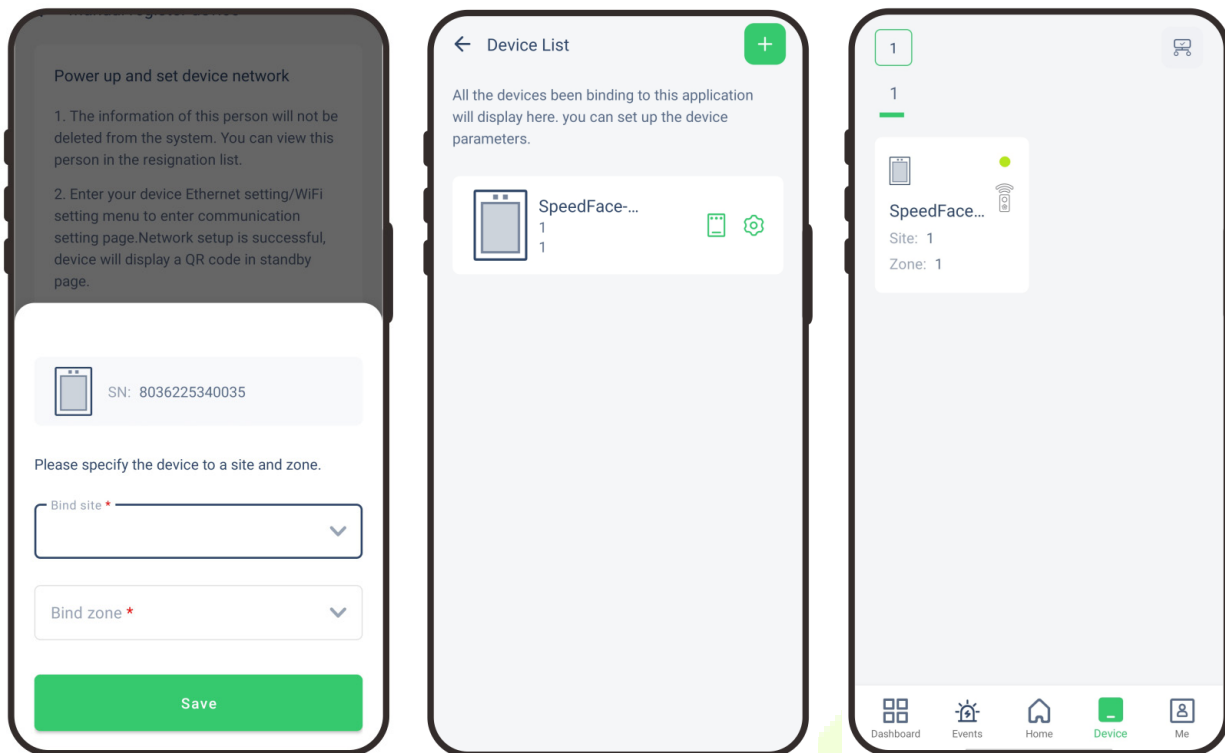



24 Connecting to Wireless Doorbell★



Note: This function needs to be used with the wireless doorbell.

24.1 Connect the Wireless Doorbell

1. First, power on the wireless doorbell. Then, press and hold the music button  for 1.5 seconds until the indicator flashes to indicate it's in pairing mode. After that, press the doorbell button  on the device, if the wireless doorbell rings and the indicator flashes, it means the pairing was successful.

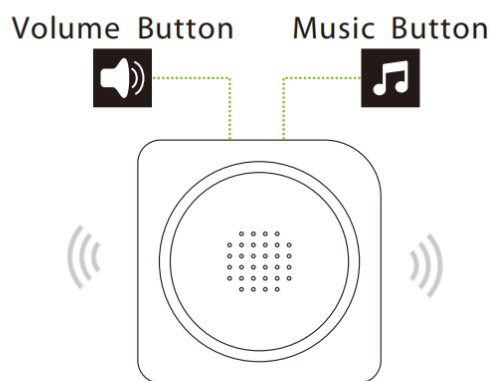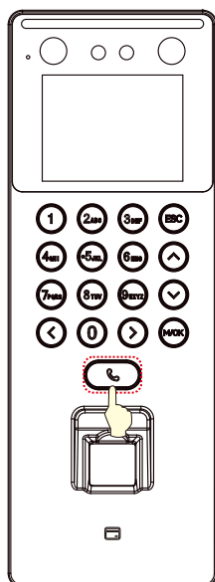

2. After a successful pairing, press the doorbell button  on the device will ring the wireless doorbell.

Note:

- 1) To use this function, you need to enter the menu ([**Intercom**] > [**Doorbell Setting**]) and set it as **Doorbell Only** or **Doorbell + Video Intercom**.
- 2) Each F35 only supports one wireless doorbell.
- 3) Wireless doorbell needs to be purchased by the customers themselves.


24.2 Unbinding the Wireless Doorbell

Power off the wireless doorbell first, then re-installing the batteries while pressing and holding the music button  until the indicator is on, indicating that the unbinding is successful.

Appendix

Requirements of Live Collection and Registration of Visible Light Face Templates

- 1) It is recommended to perform registration in an indoor environment with an appropriate light source without underexposure or overexposure.
- 2) Do not place the device towards outdoor light sources like door or window or other harsh light sources.
- 3) Dark-color apparels, different from the background color is recommended for registration.
- 4) Please expose your face template and forehead properly and do not cover your face template and eyebrows with your hair.
- 5) It is recommended to show a plain facial expression. (A smile is acceptable, but do not close your eyes, or incline your head to any orientation).
- 6) Two templates are required for a person with eyeglasses, one template with eyeglasses and the other without the eyeglasses.
- 7) Do not wear accessories like a scarf or mask that may cover your mouth or chin.
- 8) Please face template right towards the capturing device, and locate your face template in the template capturing area as shown in the template below.
- 9) Do not include more than one face template in the capturing area.
- 10) A distance of 50cm to 80cm is recommended for capturing the template. (The distance is adjustable, subject to body height).

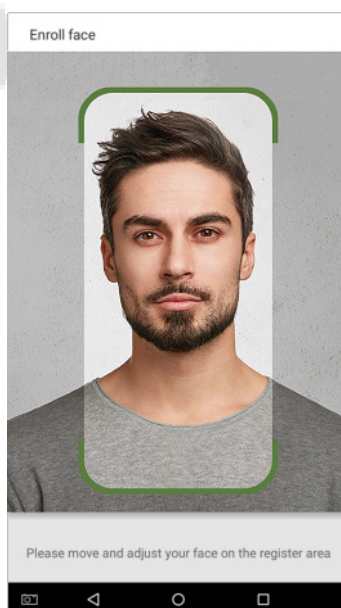

Requirements for Visible Light Digital Face Template Data

The digital photo should be straight-edged, colored, half-portrayed with only one person, and the person should be uncharted and in casuals. Persons who wear eyeglasses should remain to put on eyeglasses for getting photo captured.

- **Eye distance**

200 pixels or above are recommended with no less than 115 pixels of distance.

- **Facial expression**

Neutral face template or smile with eyes naturally open are recommended.

- **Gesture and angel**

Horizontal rotating angle should not exceed $\pm 10^\circ$, elevation should not exceed $\pm 10^\circ$, and depression angle should not exceed $\pm 10^\circ$.

- **Accessories**

Masks or colored eyeglasses are not allowed. The frame of the eyeglasses should not cover eyes and should not reflect light. For persons with thick eyeglasses frame, it is recommended to capture two templates, one with eyeglasses and the other one without the eyeglasses.

- **Face template**

Complete face template with clear contour, real scale, evenly distributed light, and no shadow.

- **Template format**

Should be in BMP, JPG or JPEG.

- **Data requirement**

Should comply with the following requirements:

- 1) White background with dark-colored apparel.
- 2) 24bit true color mode.
- 3) JPG format compressed template with not more than 20kb size.
- 4) Resolution should be between 358 x 441 to 1080 x 1920.
- 5) The vertical scale of head and body should be in a ratio of 2:1.
- 6) The photo should include the captured person's shoulders at the same horizontal level.
- 7) The captured person's eyes should be open and with clearly seen iris.
- 8) Neutral face template or smile is preferred, showing teeth is not preferred.
- 9) The captured person should be clearly visible, natural in color, no harsh shadow or light spot or reflection in face template or background. The contrast and lightness level should be appropriate.

Privacy Policy

Notice:

To help you better use the products and services of ZKTeco and its affiliates, hereinafter referred to as "we", "our", or "us", the smart service provider, we consistently collect your personal information. Since we understand the importance of your personal information, we took your privacy seriously and we have formulated this privacy policy to protect your personal information. We have listed the privacy policies below to precisely understand the data and privacy protection measures related to our smart products and services.

Before using our products and services, please read carefully and understand all the rules and provisions of this Privacy Policy. If you do not agree to the relevant agreement or any of its terms, you must stop using our products and services.

I. Collected Information

To ensure the normal product operation and help the service improvement, we will collect the information voluntarily provided by you or provided as authorized by you during registration and use or generated as a result of your use of services.

- 1. User Registration Information:** At your first registration, the feature template (Fingerprint template/Face template/Palm template) will be saved on the device according to the device type you have selected to verify the unique similarity between you and the User ID you have registered. You can optionally enter your Name and Code. The above information is necessary for you to use our products. If you do not provide such information, you cannot use some features of the product regularly.
- 2. Product information:** According to the product model and your granted permission when you install and use our services, the related information of the product on which our services are used will be collected when the product is connected to the software, including the Product Model, Firmware Version Number, Product Serial Number, and Product Capacity Information. **When you connect your product to the software, please carefully read the privacy policy for the specific software.**

II. Product Security and Management

- 1.** When you use our products for the first time, you shall set the Administrator privilege before performing specific operations. Otherwise, you will be frequently reminded to set the Administrator privilege when you enter the main menu interface. **If you still do not set the Administrator privilege after receiving the system prompt, you should be aware of the possible security risk (for example, the data may be manually modified).**

2. All the functions of displaying the biometric information are disabled in our products by default. You can choose Menu > System Settings to set whether to display the biometric information. If you enable these functions, we assume that you are aware of the personal privacy security risks specified in the privacy policy.
3. Only your user ID is displayed by default. You can set whether to display other user verification information (such as Name, Department, Photo, etc.) under the Administrator privilege. **If you choose to display such information, we assume that you are aware of the potential security risks (for example, your photo will be displayed on the device interface).**
4. The camera function is disabled in our products by default. If you want to enable this function to take pictures of yourself for attendance recording or take pictures of strangers for access control, the product will enable the prompt tone of the camera. **Once you enable this function, we assume that you are aware of the potential security risks.**
5. All the data collected by our products is encrypted using the AES 256 algorithm. All the data uploaded by the Administrator to our products are automatically encrypted using the AES 256 algorithm and stored securely. If the Administrator downloads data from our products, we assume that you need to process the data and you have known the potential security risk. In such a case, you shall take the responsibility for storing the data. You shall know that some data cannot be downloaded for sake of data security.
6. All the personal information in our products can be queried, modified, or deleted. If you no longer use our products, please clear your personal data.

III. How we handle personal information of minors

Our products, website and services are mainly designed for adults. Without consent of parents or guardians, minors shall not create their own account. If you are a minor, it is recommended that you ask your parents or guardian to read this Policy carefully, and only use our services or information provided by us with consent of your parents or guardian.

We will only use or disclose personal information of minors collected with their parents' or guardians' consent if and to the extent that such use or disclosure is permitted by law or we have obtained their parents' or guardians' explicit consent, and such use or disclosure is for the purpose of protecting minors.

Upon noticing that we have collected personal information of minors without the prior consent from verifiable parents, we will delete such information as soon as possible.

IV. Others

You can visit https://www.zkteco.com/cn/index/Index/privacy_protection.html to learn more about how we collect, use, and securely store your personal information. To keep pace with the rapid development of technology, adjustment of business operations, and to cope with customer needs, we will constantly deliberate and optimize our privacy protection measures and policies. Welcome to visit our official website at any time to learn our latest privacy policy.



Eco-friendly Operation



The product's "eco-friendly operational period" refers to the time during which this product will not discharge any toxic or hazardous substances when used in accordance with the prerequisites in this manual.

The eco-friendly operational period specified for this product does not include batteries or other components that are easily worn down and must be periodically replaced. The battery's eco-friendly operational period is 5 years.

Hazardous or Toxic substances and their quantities

Component Name	Hazardous/Toxic Substance/Element					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr6+)	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Chip Resistor	×	○	○	○	○	○
Chip Capacitor	×	○	○	○	○	○
Chip Inductor	×	○	○	○	○	○
Diode	×	○	○	○	○	○
ESD component	×	○	○	○	○	○
Buzzer	×	○	○	○	○	○
Adapter	×	○	○	○	○	○
Screws	○	○	○	×	○	○

○ indicates that the total amount of toxic content in all the homogeneous materials is below the limit as specified in SJ/T 11363—2006.

× indicates that the total amount of toxic content in all the homogeneous materials exceeds the limit as specified in SJ/T 11363—2006.

Note: 80% of this product's components are manufactured using non-toxic and eco-friendly materials. The components which contain toxins or harmful elements are included due to the current economic or technical limitations which prevent their replacement with non-toxic materials or elements.

Attachment 1

"Hereby, ZKTECO CO.,LTD declares that this Product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received,
including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter."

ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

