



1. WELT


SMART HEALTH FROM THE WAIST

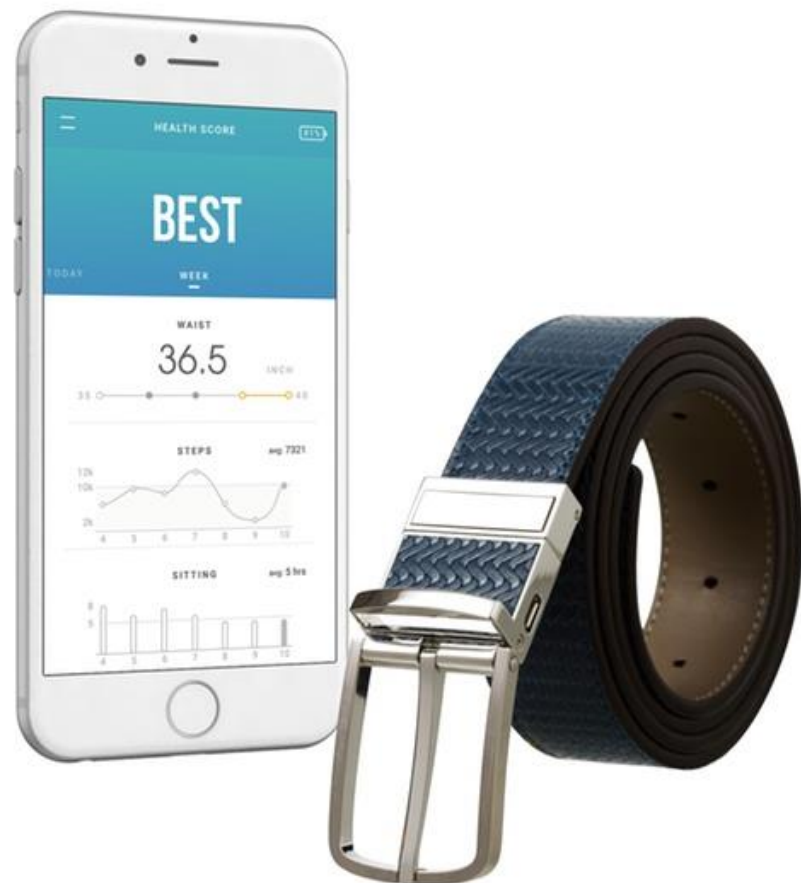

2. Mobile App install and run

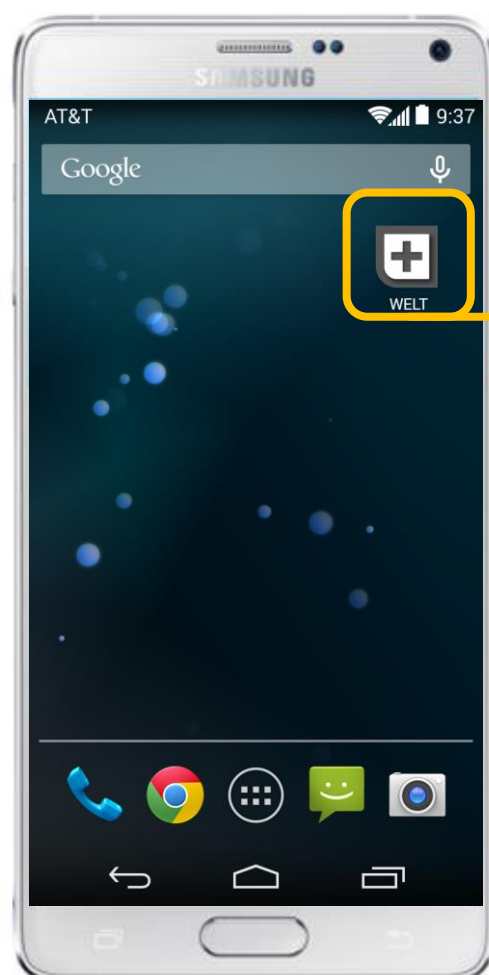


Search 'WELT' in the Apple App or Google Play Store and install the app to your smartphone.

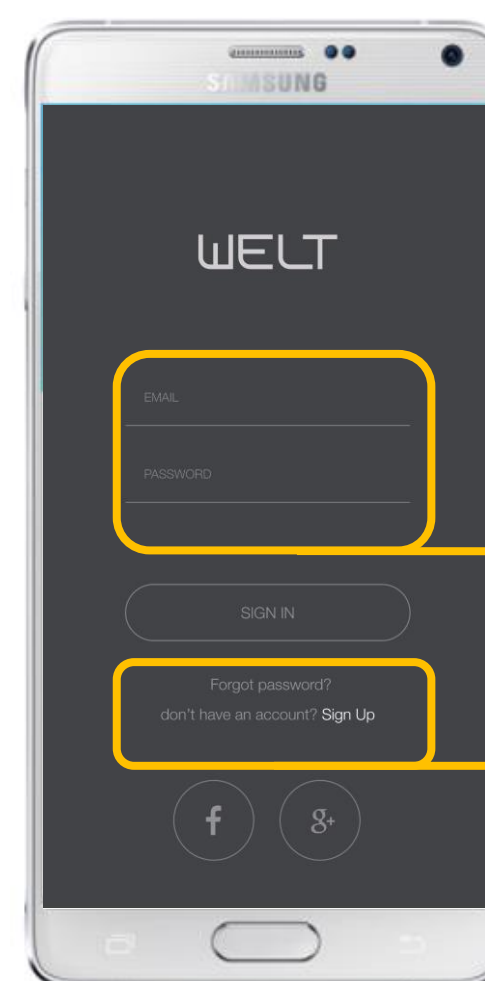

Use your registered username and password to log in and start using the app.

If you are a new user, sign up by entering your name, e-mail address, and password.

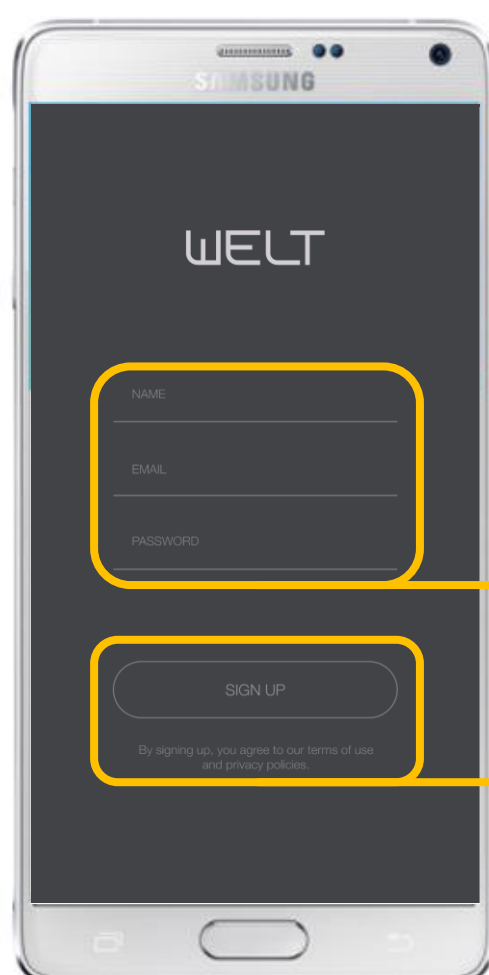


Enter user's name, E-mail address and password

Double check that you have correctly entered the required fields, then touch the Sign-Up button to complete your registration.


3. Registering Personal Information

* First-time users are required to register their profiles, which users may continue to update.

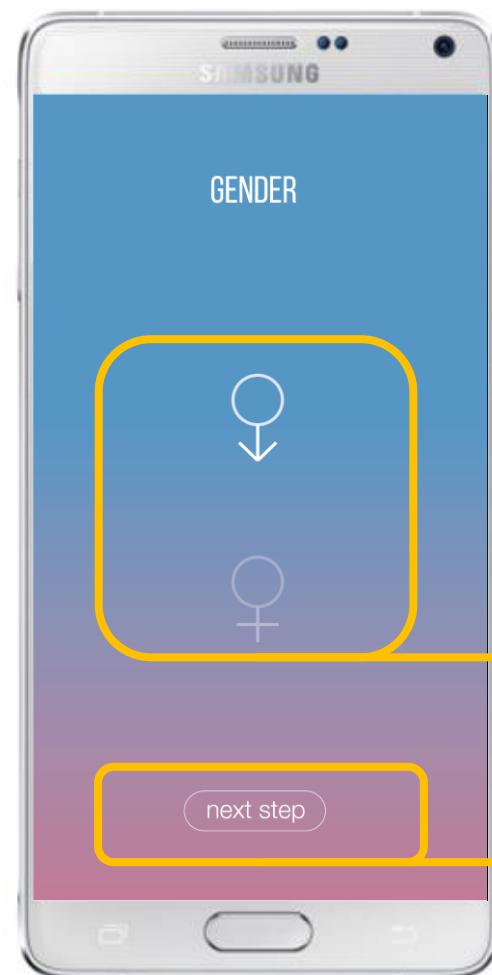


Choose user's Gender.

Make sure that the entered information is correct, then touch the Next Step button to continue.

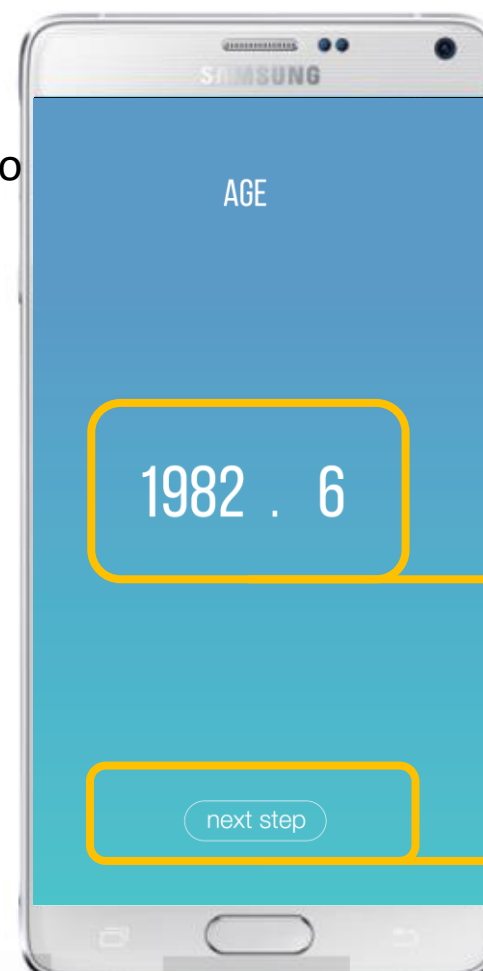

Choose user's age.

Make sure that the entered information is correct, then touch the Next Step button to continue.

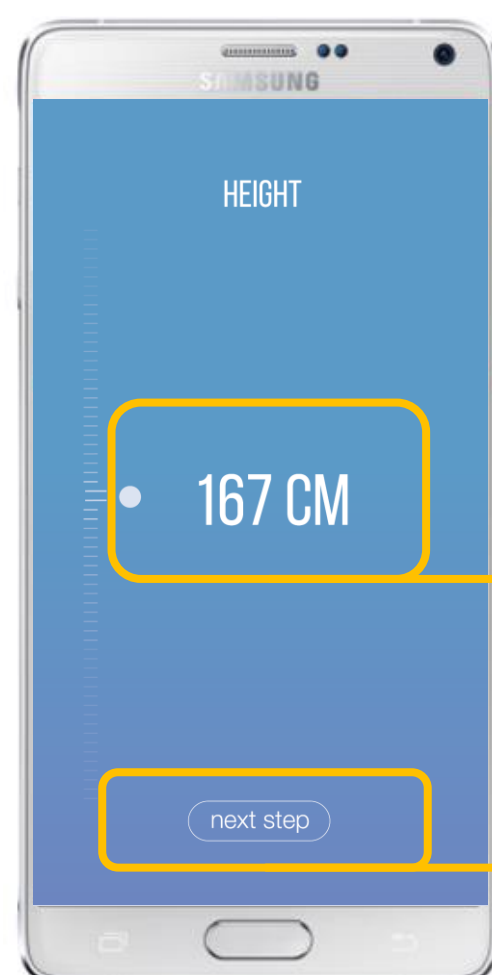


Choose user's Height.

Make sure that the entered information is correct, then touch the Next Step button to continue.



Choose user's Weight.


Make sure that the entered information is correct, then touch the Next Step button to continue.

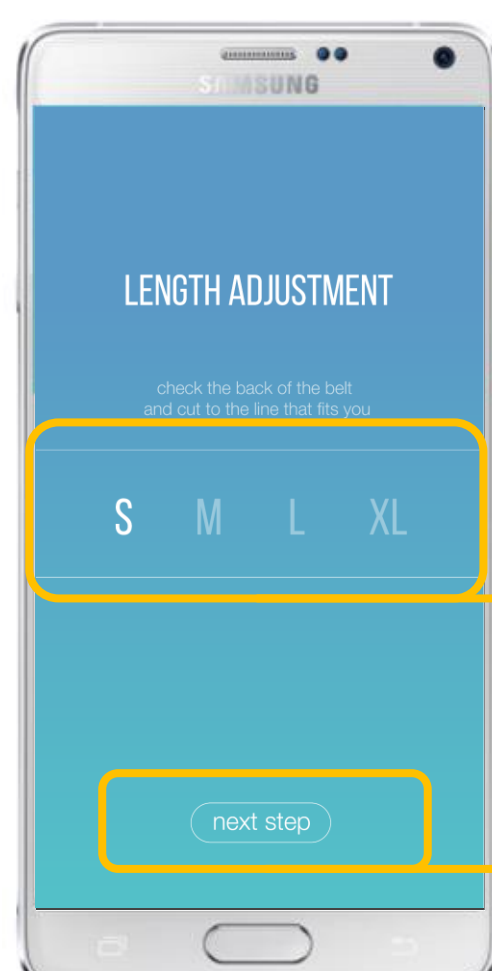


Choose user's belsize


Make sure that the entered information is correct, then touch the Next Step button to continue.

4. Device connection

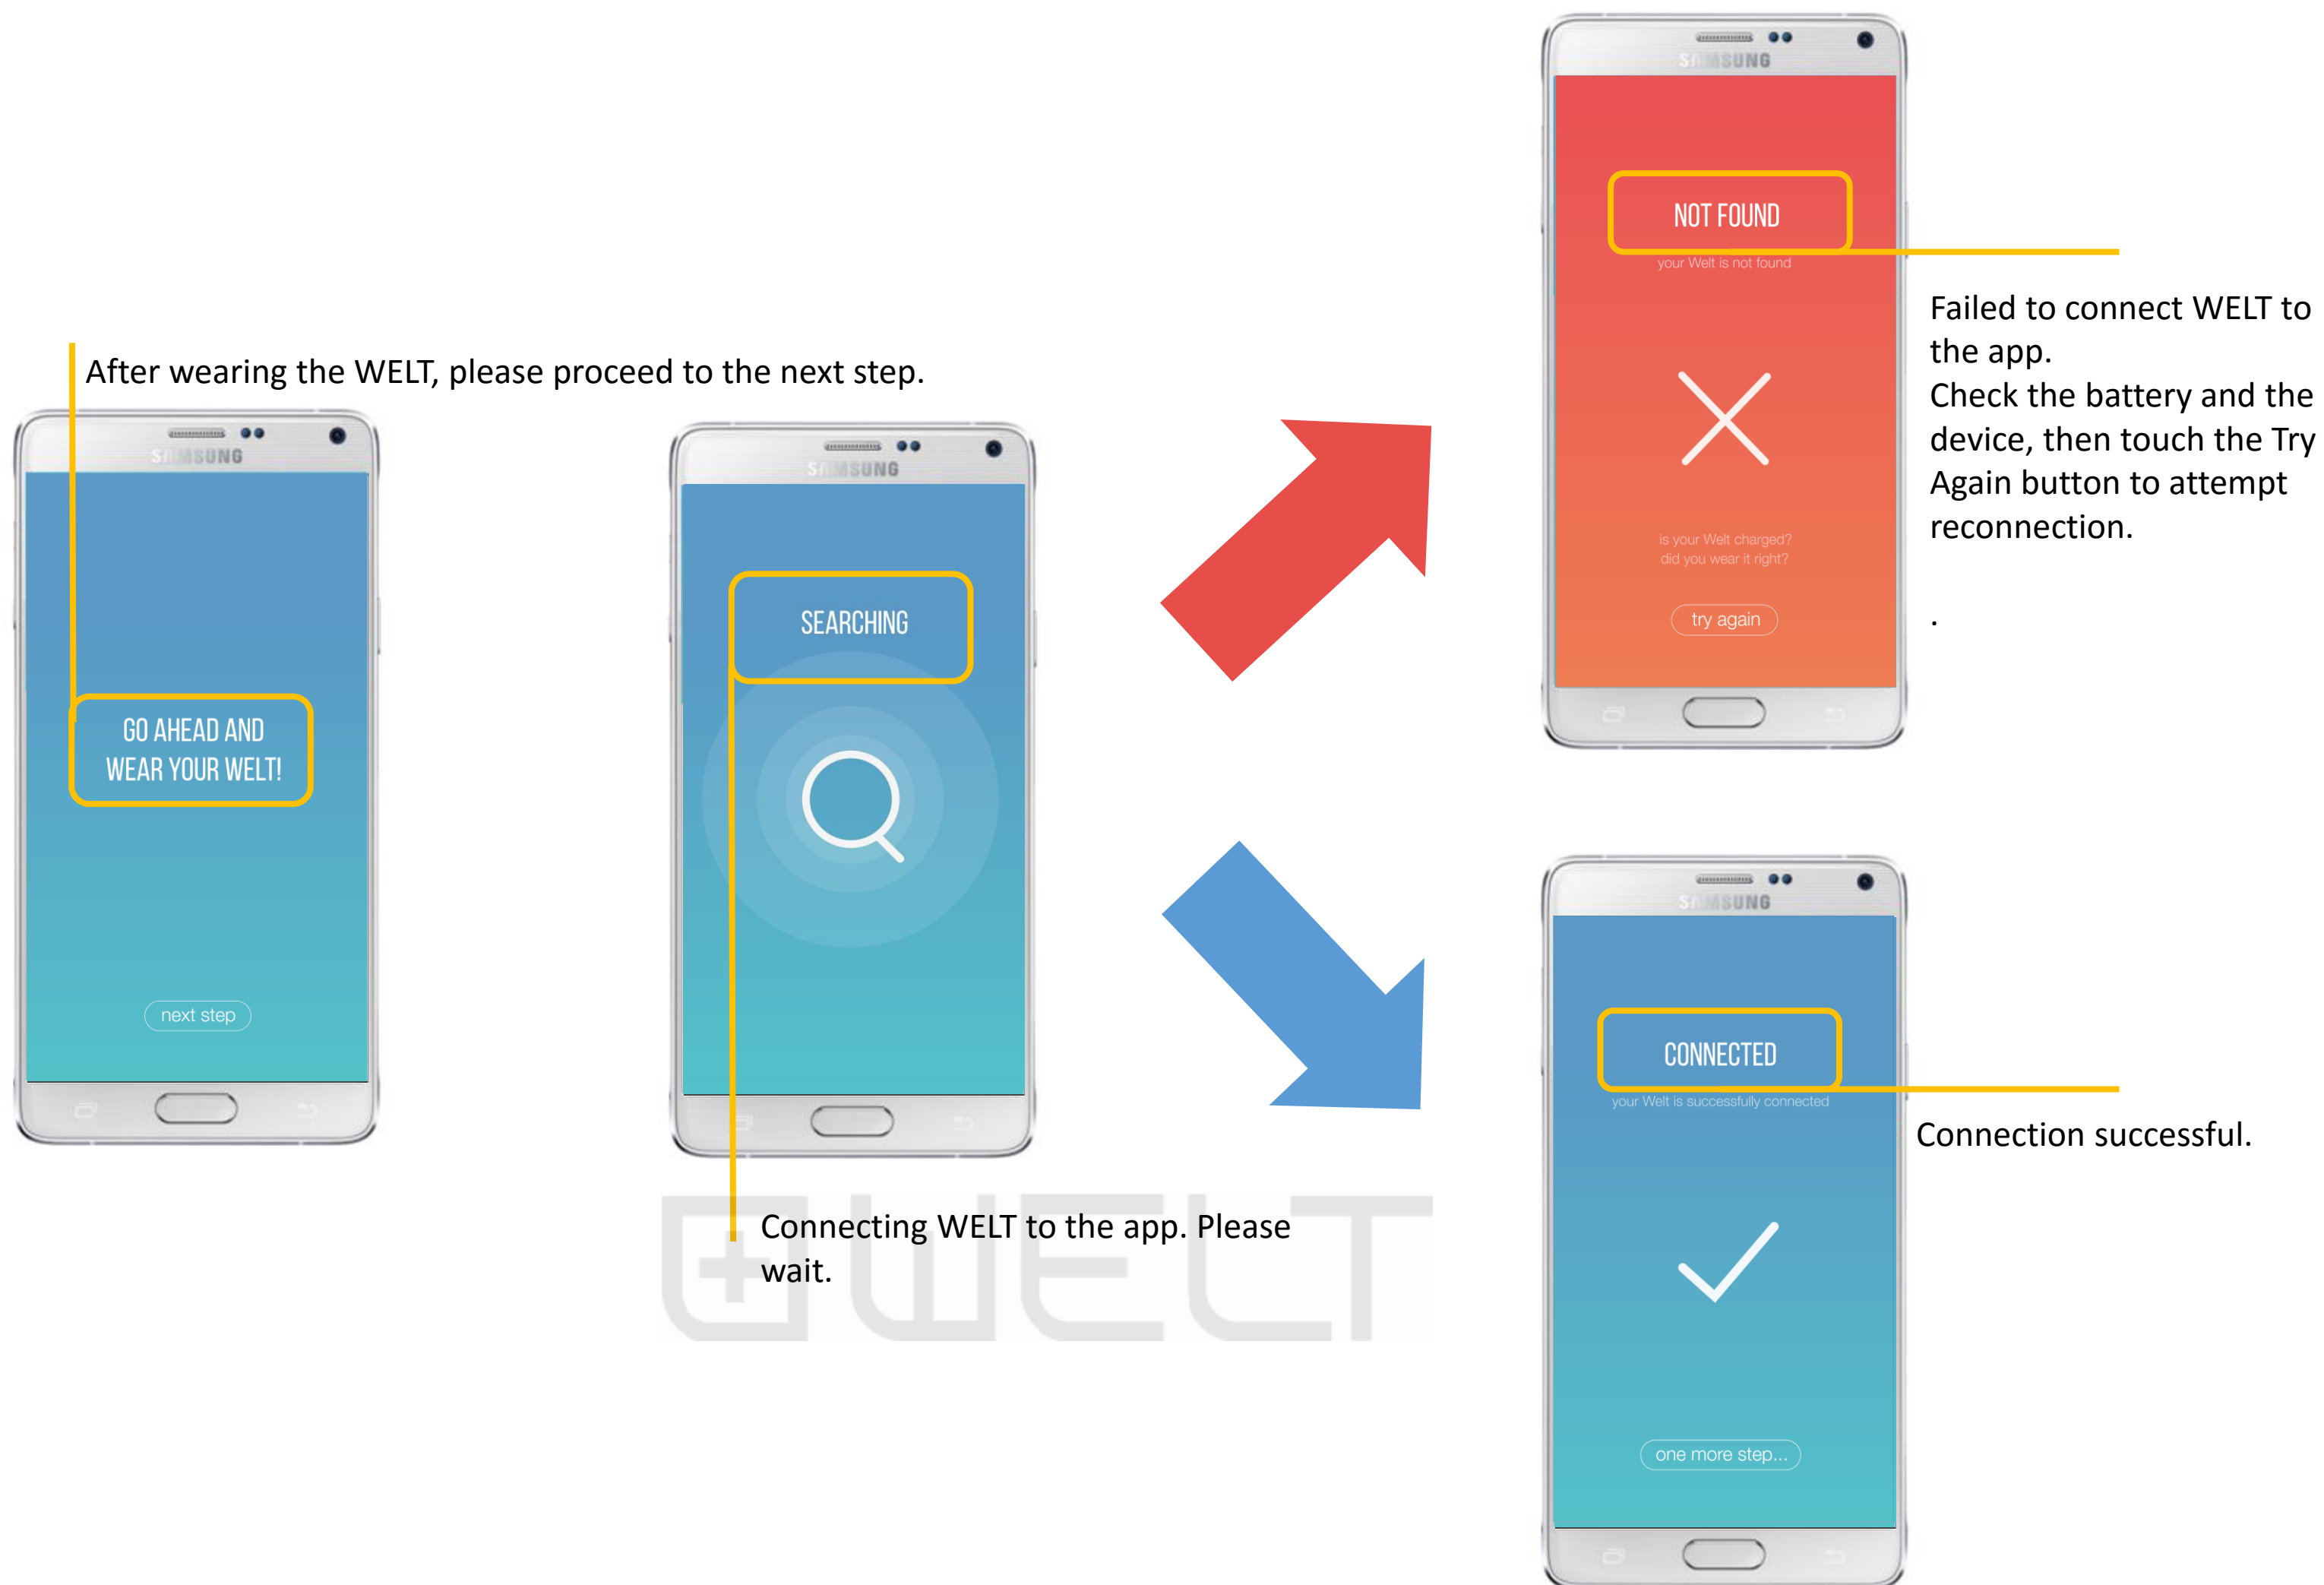


5. Interface

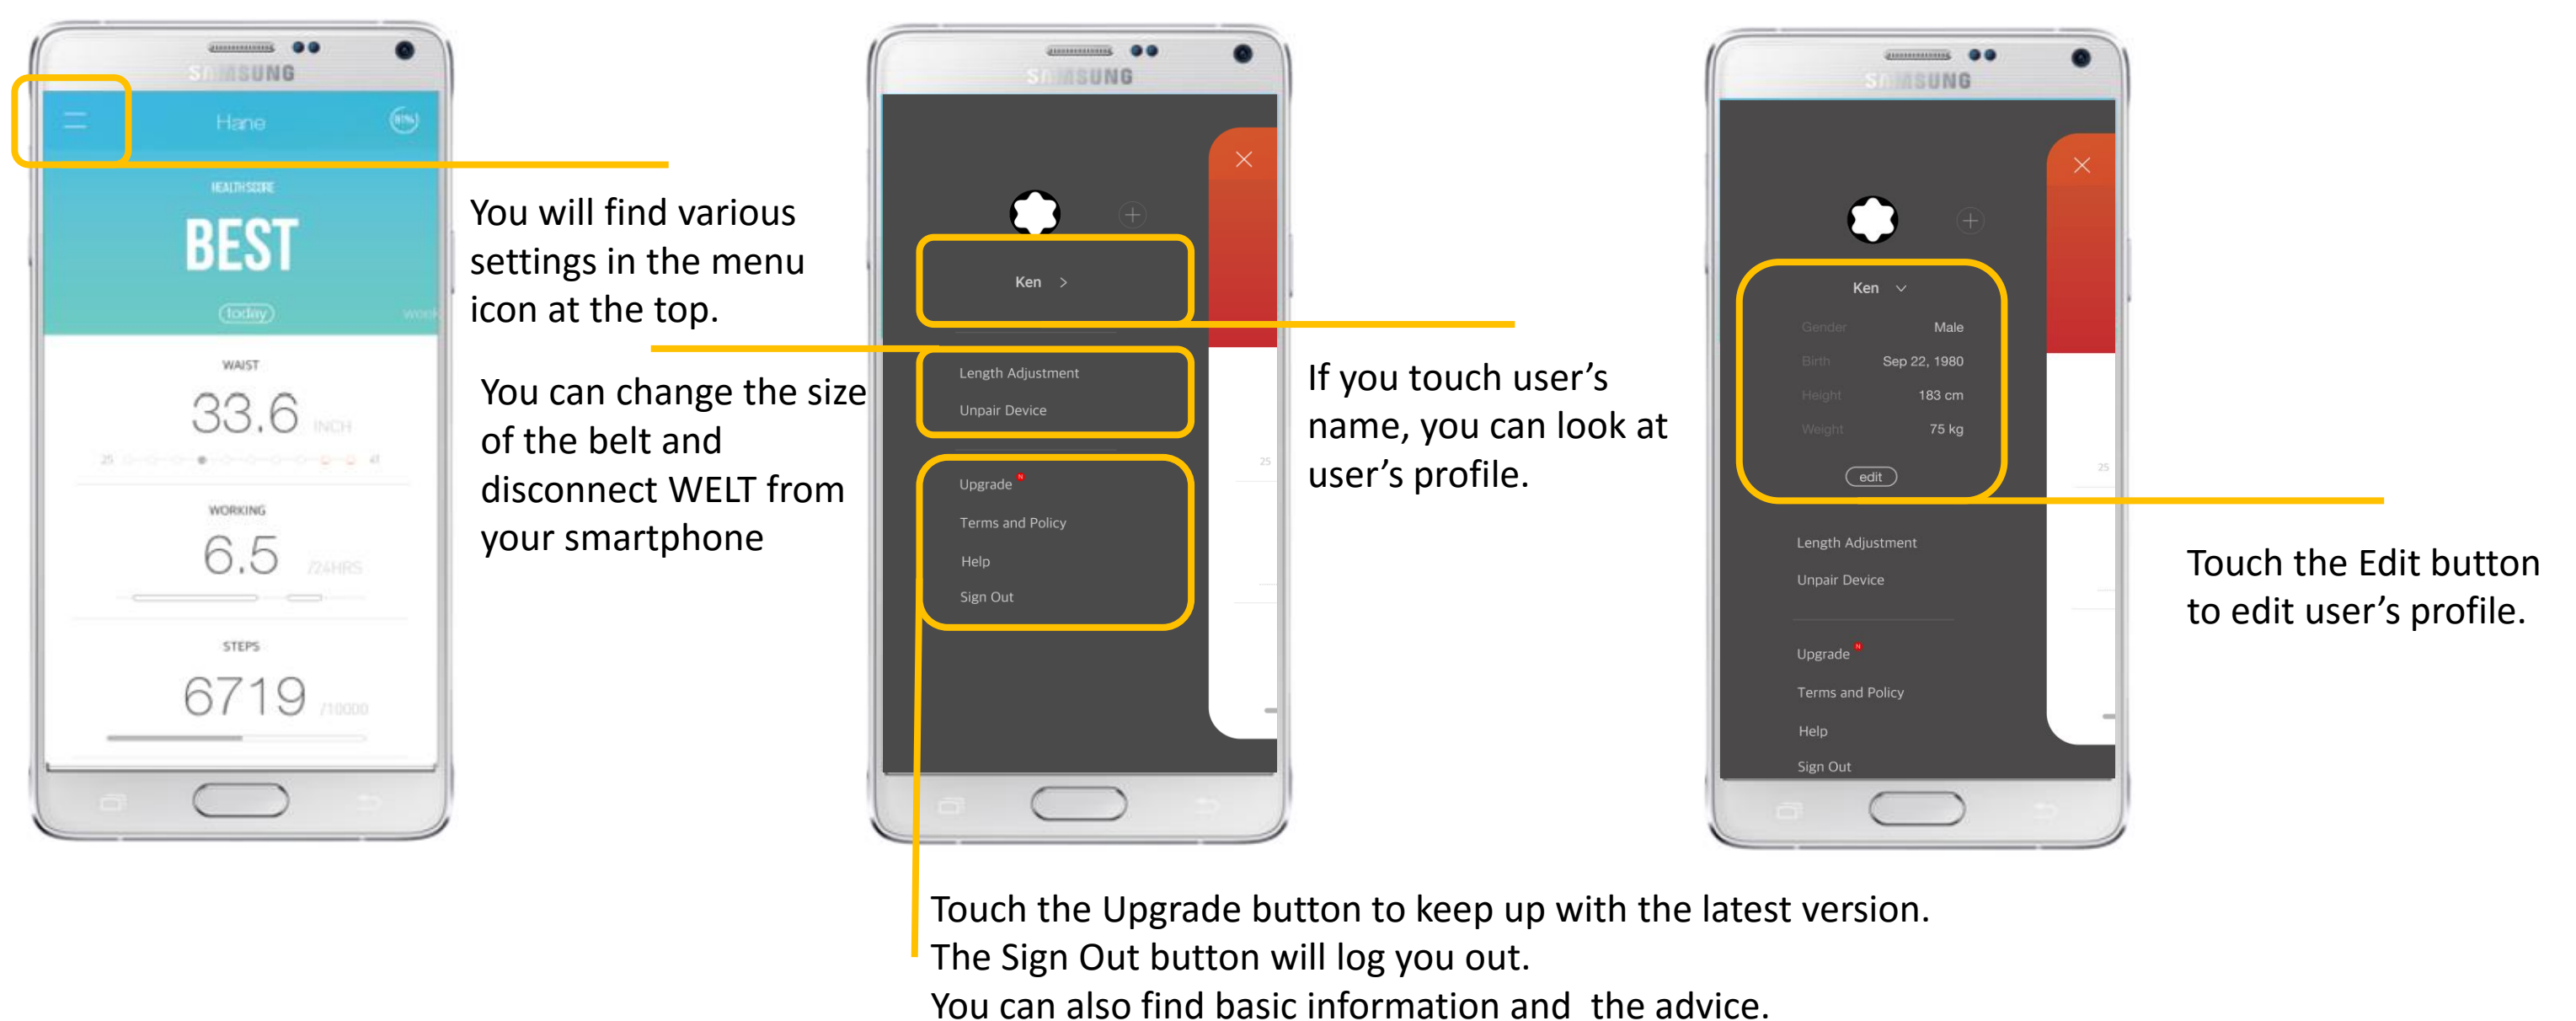

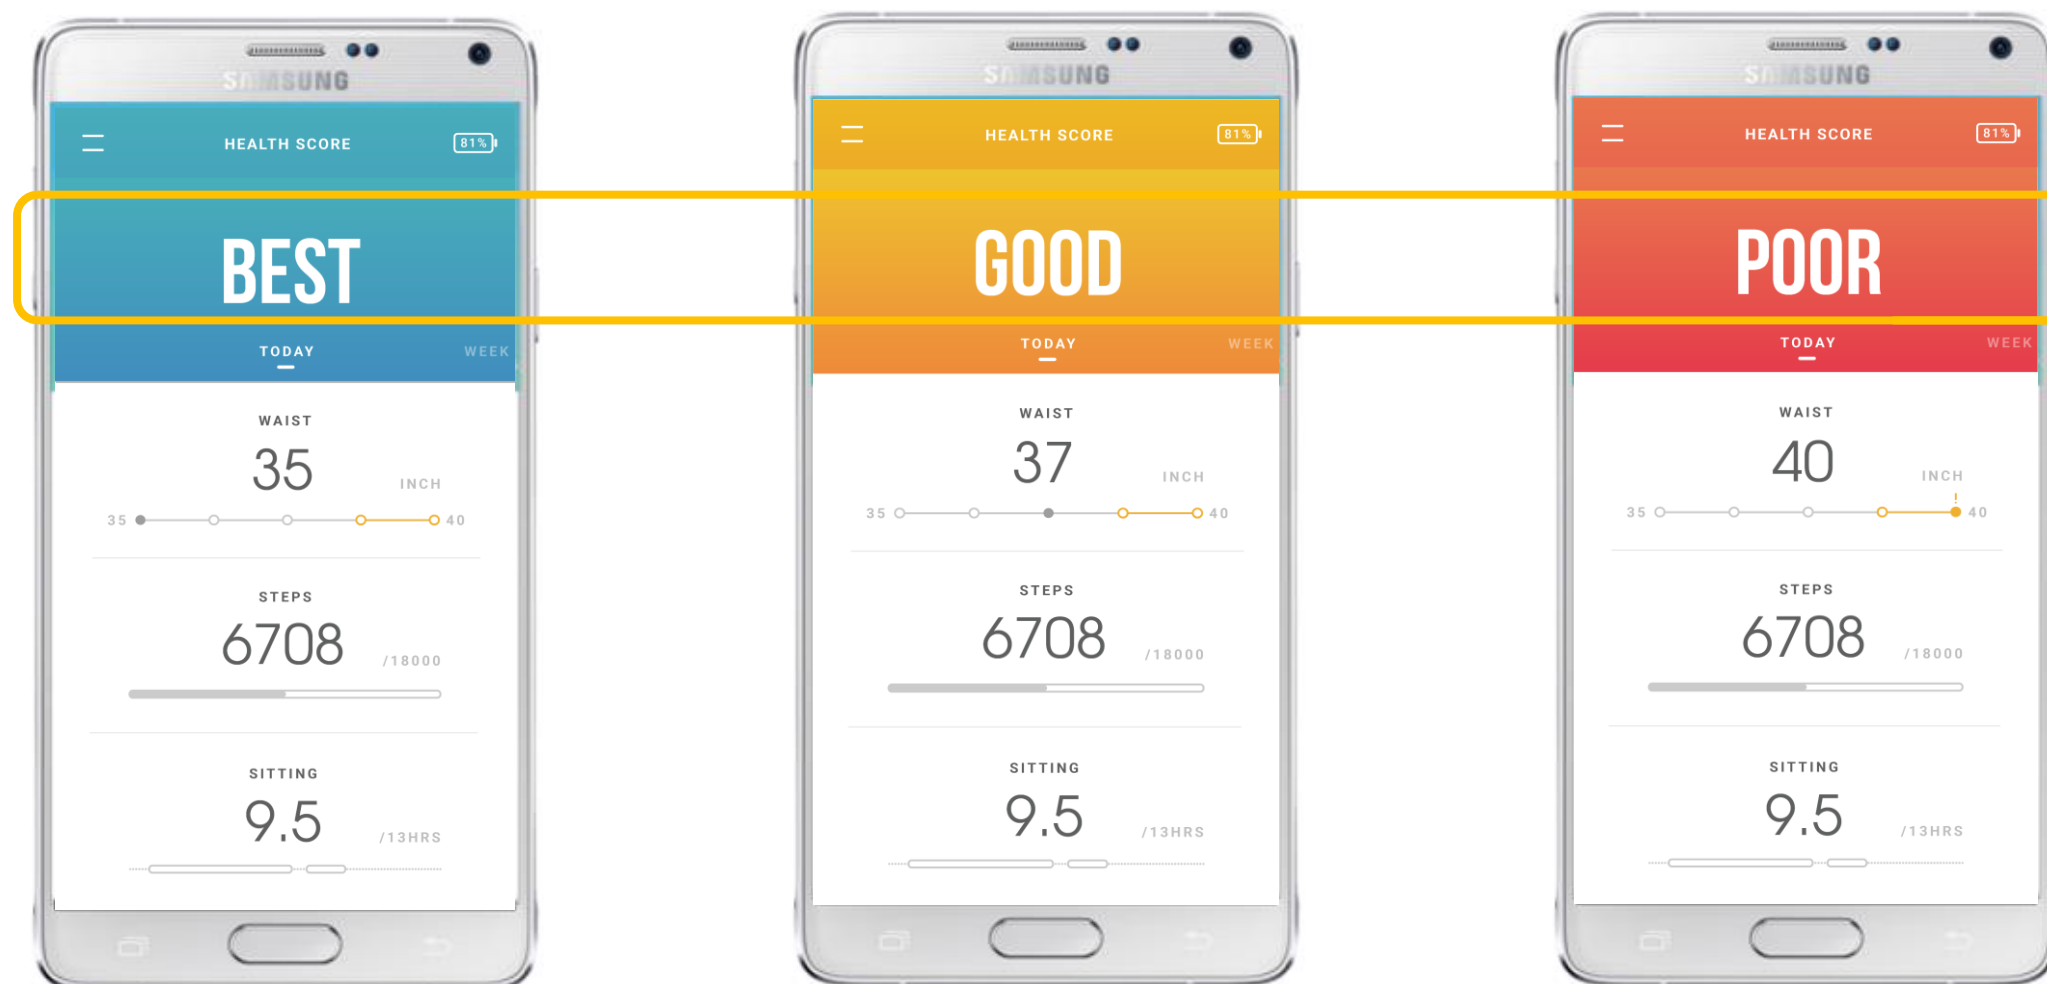

WELT will keep record of your waist size, the number of steps you took, the amount of time for which you were sitting down, and how much you ate, to let you know how you are doing.

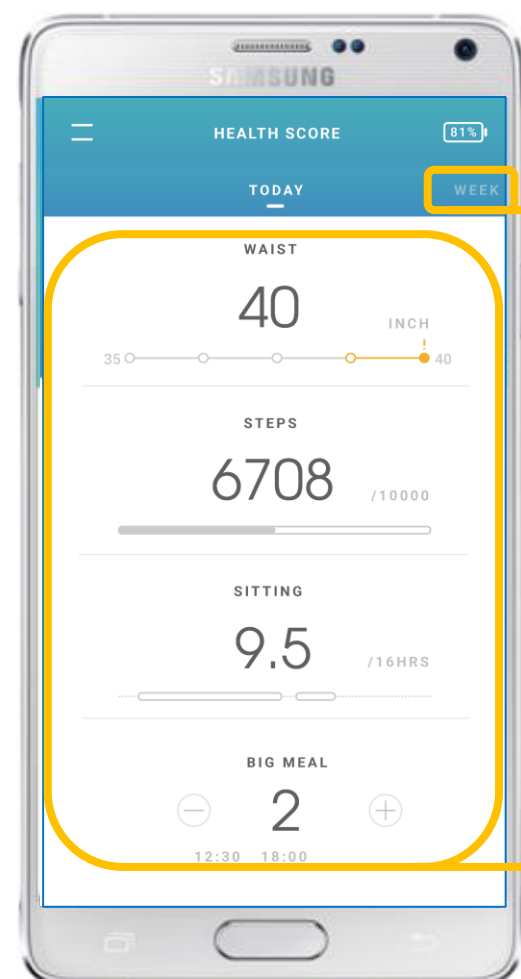

Touch Week for data on the past week.


Touch Today for today's data

By keeping track of your waist size, the number of steps you took, the length of time during which you were sitting down, and whether you ate in excess, WELT will help you to be healthy.




To analyze the information that has been stored for a week, to help the user health management.

6. Charging

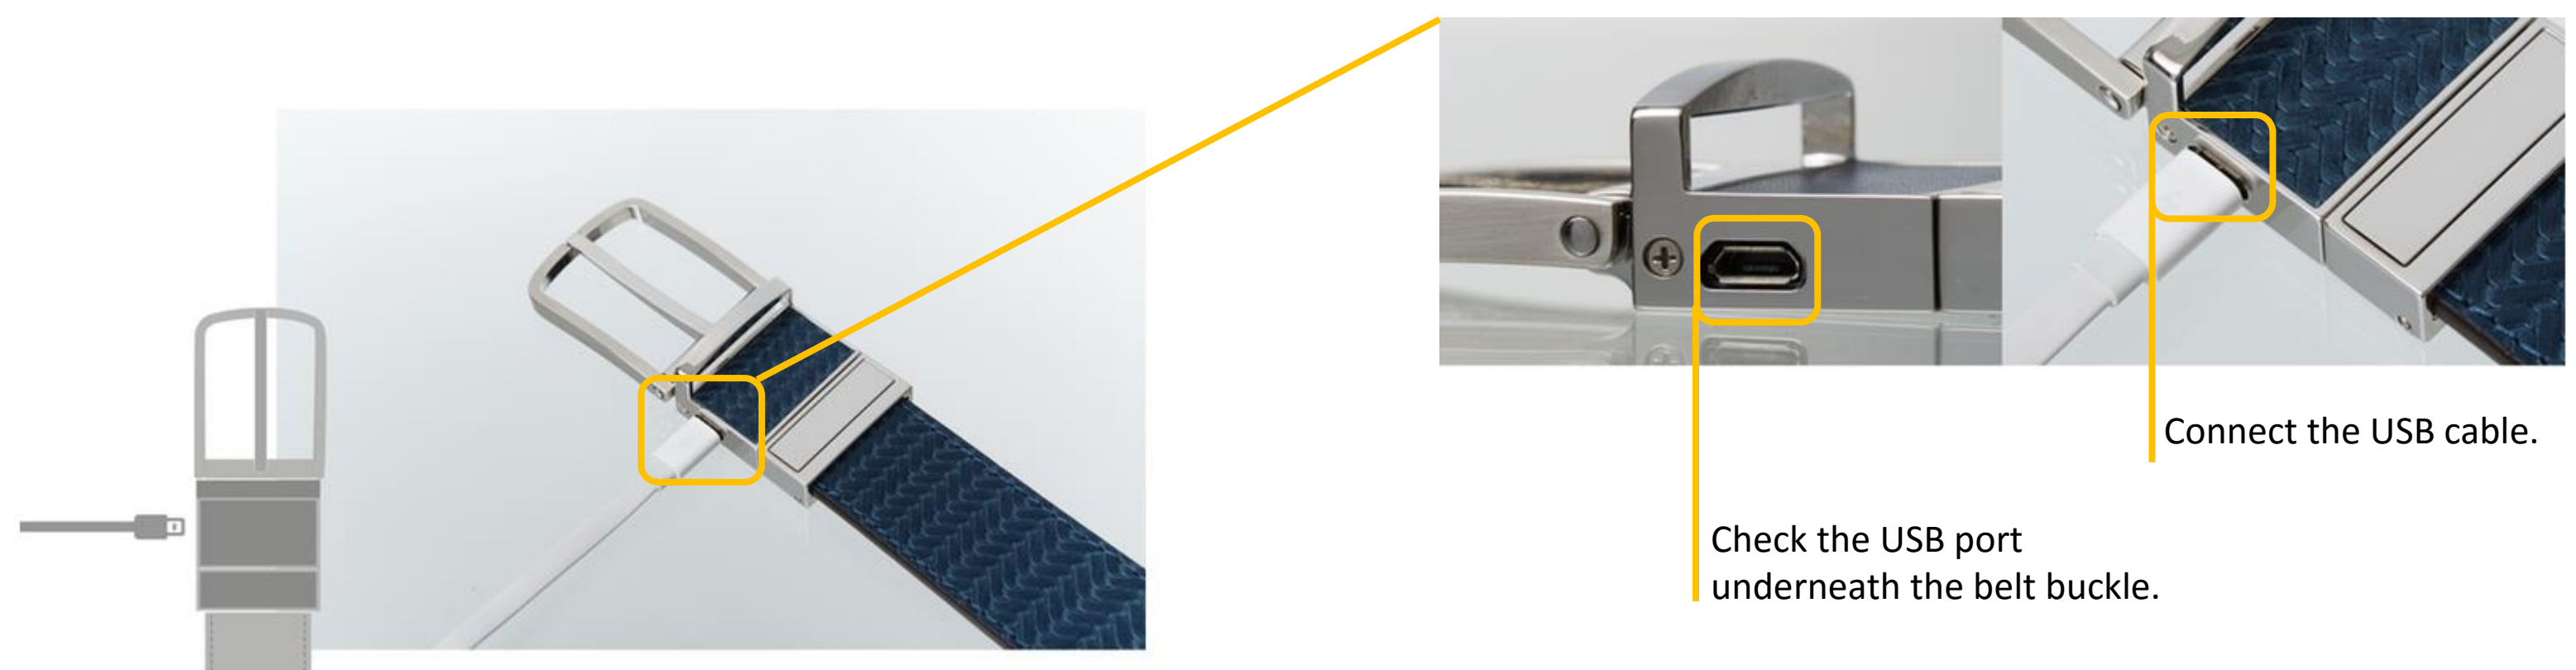

7. Specifications

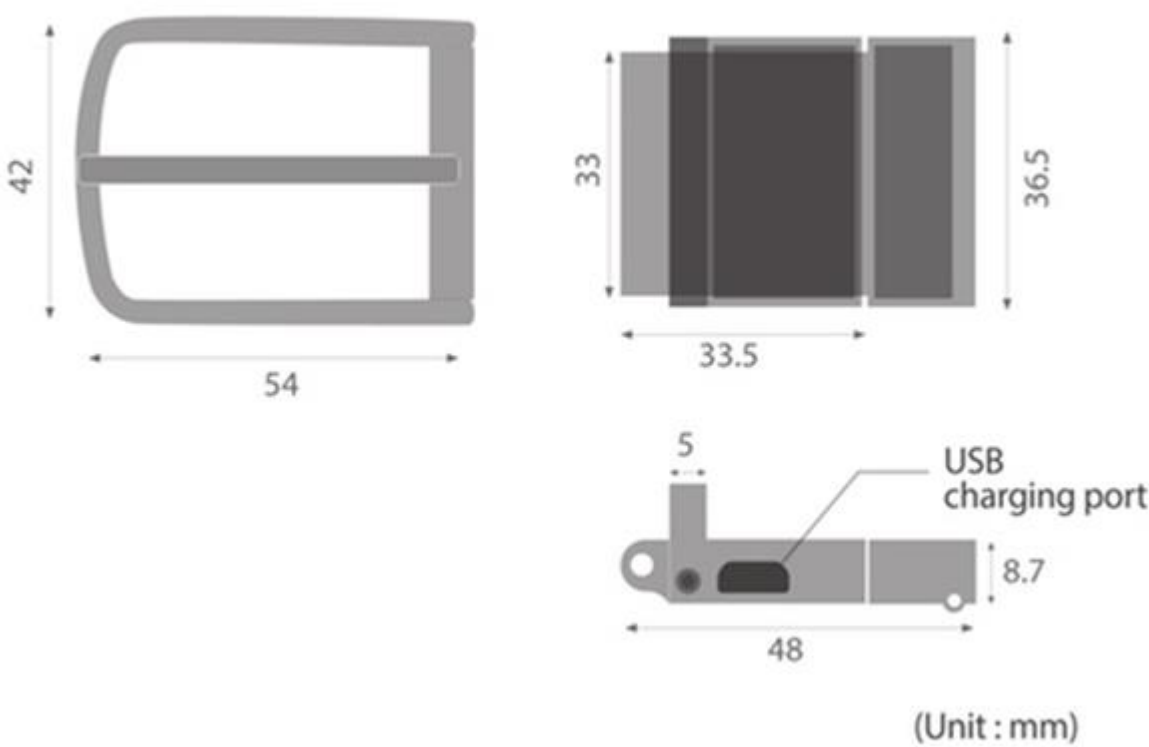

Buckle Weight	100g
Materials	Buckle: Zinc Alloy Strap: Genuine Leather
Compatible OS	Android, iOS
Bluetooth	Bluetooth 4.1 BLE
Sensors	Accelerometer, Hall Sensor
Battery	Built-in rechargeable Li-Po 90mAh
Battery time	Lasts more than 20 days (May vary by usage)

Charging	Micro 5pin USB
Data storage capacity	30 days per sync
Waist Measurement Range	27~43 (inches)
S	27~31
M	31~35
L	35~39
XL	39~43

if you have questions on the use (service) of the product, visit the official Welt website: www.weltcorp.com

FCC Part 15.19

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21

Any changes or modifications (including the antennas) to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.