


# MuseHeart Manual

## ©The Mousika smart ring


### 2 The purpose of the ring operation steps

#### n The product structure

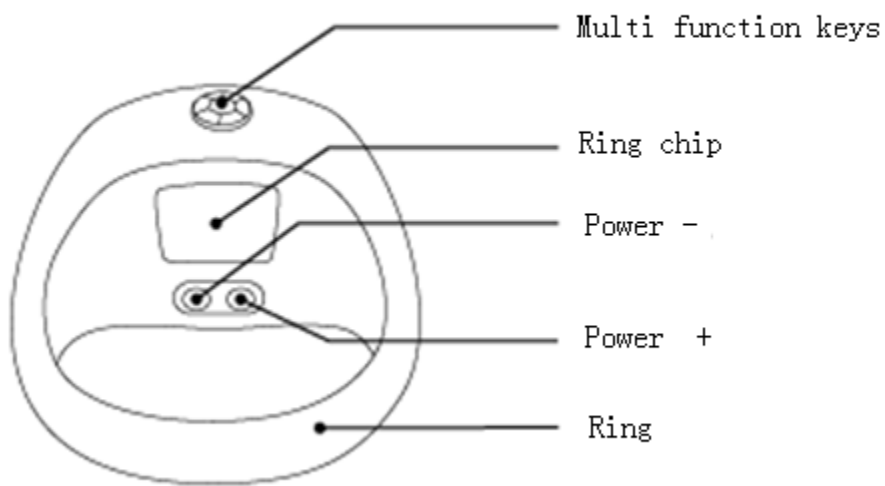

#### n The wear ring

Remove the ring from the jewelry box and put the ring on the finger.

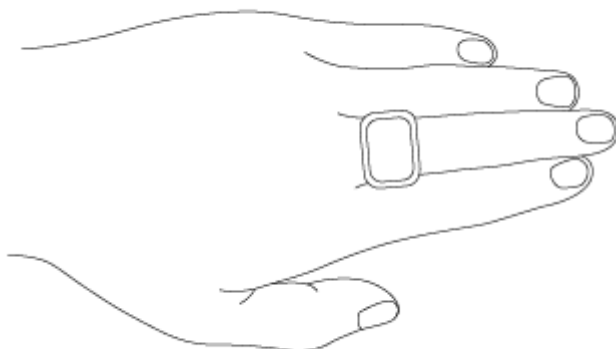


## n The installation of MsueHeart App on mobile phone

Chinese mainland users in the Mousika official website or apple App Store search MuseHeart, or scan the two-dimensional code download and install MuseHeart App; foreign users on the Google search MuseHeart download.



## n The mobile phone will ring and connection binding

Start MuseHeart App, in accordance with the prompts to enter the phone account and search the ring Bluetooth, when the ring indicator flashing blue light, said the ring has been successfully connected Bluetooth and complete binding.

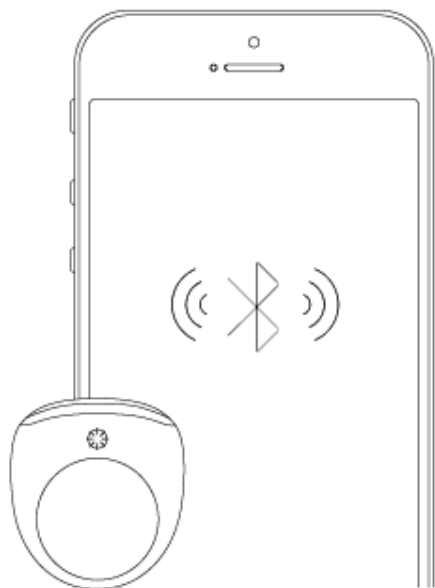

n You begin to experience

Ring successfully bound the phone, began to experience the various functions of Mousika smart ring.



2 The purpose of the ring flash and vibration vibration prompt list of tips

The purpose of the Mousika ring in the process of use, functional operation ring different flash and

Instruction reminder Function operation	Indicator light	Indicator color	Vibration
	Ring usage status		
来电提醒	Twinkle3 s	green	Vibration1 s
被亲友关爱	Twinkle1 s	green	Vibration1 s
收到好友申请	Twinkle1 s	green	Vibration1 s
M 你发送成功	Twinkle1 s	blue	

Photograph	Twinkle1 s	blue	
Care for success	Twinkle1 s	blue	
Send add friend request	Twinkle1 s	blue	
Instant Heart Rate	Twinkle1 s	blue	
Connecting equipment	Twinkle3 s	blue	
SOSOne key call for help	Twinkle8 s	red	Vibration3 s
Heart rate exceeded (friend exceeded)	Twinkle3 s	red	Vibration1 s
Heart rate exceeded (their excessive)	Twinkle3 s	red	
Device disconnect	Twinkle1 s	red	Vibration1 s
Ring remaining power below 20%	Twinkle2 s	red	
Ring remaining power below 10%	Twinkle2 s	red	
SOS key code (receiver)	Twinkle3 s	Green, blue	Vibration1 s
SOS a key call sent successfully			Vibration2 s
Ring charging status			
Ring charge < 90%	Twinkle1 s/ interval 5 s	red	
Ring charge ≥ 90%	Continue bright / up to full power	green	

Note: in the implementation of Vibration and intelligent ring flash command Vibration3 s first then began to flash.

## 2 The purpose of the ring product parameters

### I basic parameters

Item name: Mousika smart ring battery capacity: 15 mAh

Battery type: lithium polymer sync mode: Bluetooth 4.0

Operating temperature: -10 DEG C ~50 C waterproof grade: IPX5

Equipment requirements: running Android4.4 and above system, and Bluetooth 4 support mobile phone;

Run above IOS7.0 system iphone 6/6 Plus/6s/6s Plus/7/7Plus.

## 2 The purpose of the ring battery

Ring the battery capacity of 15 mAh, the normal use of 3-7 days, when the ring power is lower than 10%, 20% ring will flash and Vibration to remind the ring charging. Recommended before going to bed at night to remove the ring back ring box charging.

## 2 The purpose of the ring function description

### n The detection rate

- users need to properly wear the ring, before the test handle flat, open the phone APP enter the heart rate function interface click the heart button to start testing heart rate.
- set the heart rate warning value at the upper right corner of the heart rate interface. If the detected value is higher than their set alarm parameters, smart jewelry will Twinkle red light 3 s as a reminder.
- normal heart rate values generally 60-100 times / minute (often exercise crowd heart rate may be 50-60 times / minute). If the heart rate is not wearing a good ring, App will be prompted to wear tight ring, put your hands flat, so you better record each heart rate.

### n The key photo

Open the phone APP camera interface, press the button on the button for remote shooting. After the successful shooting, smart jewelry will Twinkle blue light 1 s as a reminder to complete the operation, the photos will be automatically saved to the phone display to the directory under the system album. Remote shooting the most effective distance of 15 meters (specific distance to the actual situation)

## n The remote care

This feature must add Mousika users for relatives and friends, and the other party agreed to add you to the premise of friends and relatives to use.

- slide the care floating window in the mobile App home screen, click on the floating window, you can view the nearest friend heart rate value.
- when remote relatives and friends heart rate exceeded, the ring will vibrate 1 s and Twinkle red light alert of 3 s.
- start caring floating window, choose friends who need remote detection of heart rate, click on the floating window red heart button, you can anytime, anywhere remote friends and relatives to detect the current heart rate.

## n Myou

- *This feature for frequent contact objects, and contacts must be Mousika users.*
- *Such as: the boss secret secretary, short press the button to send a message such as "to come to my office".*
- *Such as: parents call their children, short press button to send information such as home something, quick return call".*
- *Such as: girlfriends between lovers, short press the button sends out information such as "baby, I miss you".*
- *- the wearer needs in the Mousika "APP M you" function in advance to add code object before using this function. And fill in the custom content (whisper 15 words).*
- *In need to send the code, the wearer simply click the smart jewelry button code message to send to send the app message push way to object code.*
- *In an object - code code message will receive app message push, if the same code object wearing Mousika smart jewelry, smart jewelry will be issued 1 shock and Twinkle color light as a reminder.*

- call reminder

- open call reminder function. When the mobile phone incoming call, smart jewelry will shake 1 s and Twinkle 3 s lights as a reminder.

A call for help.

This feature is used when sending an emergency.

Such as: when the elderly heart disease emergencies and other emergencies, long press the button 3 s until the shock call information issued to the pre-set contact with positioning and distress information such as "heart attack, emergency help".

Beautiful night in distress situation, long press the button until the shake for 3 s the information sent, send the locating and distress information such as "I need help to preset emergency contacts".

- call for help, the pre-set emergency contact (recipient) will receive SOS call for SMS, if the emergency contact also wear Mousika smart jewelry received vibration 3 times and Twinkle red light s 8 as a reminder.

#### **The Moss code**

The wearer to send the password, you must first add a ring Mousika user, and then click any Moss password button, the other will receive the Moss code, and the ring will flash signals of varying lengths and flash message.

#### **The mobile phone anti lost**

Click APP to open mobile phone anti lost function, when the mobile phone left a range of smart jewelry (usually 10-20 meters), smart jewelry and mobile phone Bluetooth connection will automatically disconnect, smart jewelry will shake 1 s and Twinkle 3 s red light as a reminder.

#### **In terms of customer service**

##### **Mousika smart ring Three Guarantees certificate**

Mousika intelligent ring after-sales service commitment: strict accordance with the People's Republic of China consumer rights law, the people's Republic of China quality quantity law, the implementation of after-sales three pack service, service content as follows:

You may enjoy the right of repair, replacement and return in accordance with these Provisions within the validity period of the three package. Returns should be handled with invoice.

- from your date of purchase 7 within seven days, Mousika smart ring appeared "listed in the performance of failure of Mousika smart ring product performance fault form" situation, determined by Mousika customer service service center detection, can be free for return or replacement service.

- since you buy within 8 days ~15 days, Mousika smart ring appeared "listed in the performance of failure of Mousika smart ring product performance fault form" situation, determined by Mousika customer service service center detection, can be free for replacement or repair service.

Since your purchase within 12 months, Mousika smart ring appeared "listed in the performance of failure of Mousika smart ring product performance fault form" situation, determined by Mousika customer service service center detection, free maintenance services.

#### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

[www.museheart.cn](http://www.museheart.cn)

Mousika service hotline: 400-0075-528

Producer: 0755-25538847

Shenzhen City, Luohu District Tianbei Road four two floor Pauline jewelry trading center