

KW281M Smart Watch

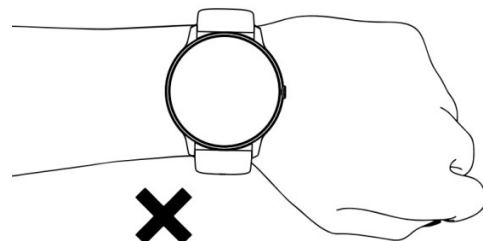
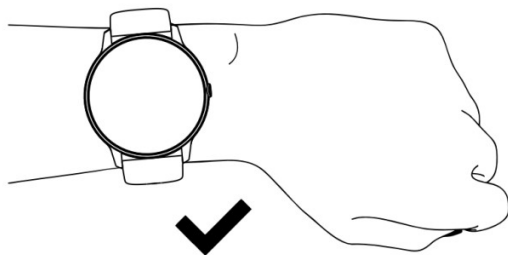
User Manual



01 How to wear

Please wear the device on your wrist correctly, about one finger from the carpal and adjust it to comfortable position.

Tip: Please wear the device a bit little tighter when heart rate monitors.



方屏图

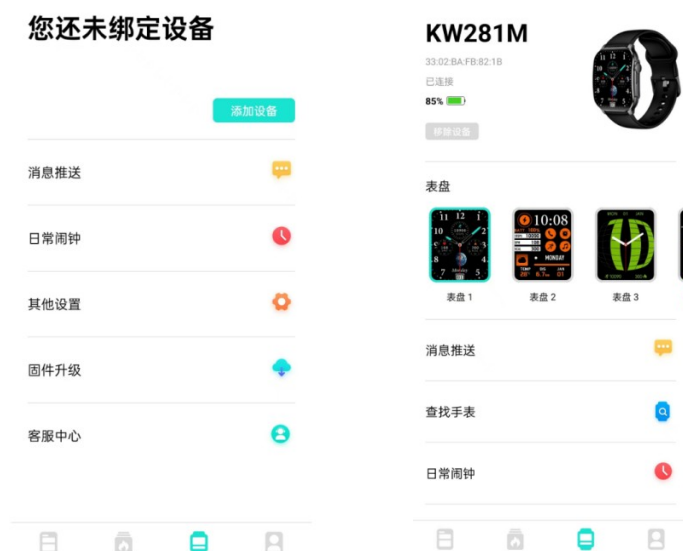
换

02 How to download & connect to APP

Press and hold the upper button of the watch to turn it on. After selecting the language , the APP download page and the QR code scanning page will be displayed . Use your mobile phone to scan the QR code to download and install the "Da Fit" APP.



02.2. Open “Da Fit” APP, select "Add Device" on the device page, and follow the on-screen instructions.



02.3 How to connect to BT call feature:

- 1) Android phone: After the APP and the watch are successfully bound, it will automatically prompt whether to pair with the audio Bluetooth KW281M, please click to pair it directly.
- 2) IOS phones and some Android phones: After the APP and the watch are successfully bound, when using the phone function , you need to manually enter the phone settings-- Bluetooth --search for KW281MP, click Pair KW281MP, and the phone function can be used normally after the pairing is successful.

蓝牙

蓝牙



设备名称

Juno MI CC9 Pro >



Tips:

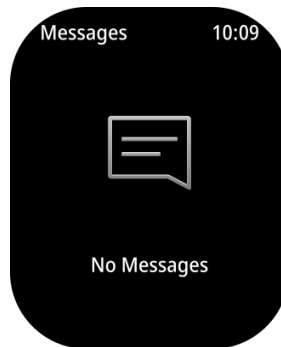
- 1) Please upgrade the APP to the latest version to get a better experience.
- 2) The system requires Android 5.0 or IOS 9.0 or above.
- 3) For the first time connection with iphone, "Pair" reminder will pop-up, click to pair, then incoming calls and instant messages will be pushed.
- 4) For the first time connection with android, "Permissions" reminder will pop-up, please follow up the guidance and allow permissions to ensure all functions working properly
- 5) To connect successfully, please turn on mobile phone's bluetooth, GPS and network.
- 6) If the device cannot be found during the device adding process , or the device cannot be connected during use, please try to turn the device off and then on again , or select factory restore in the watch system operation interface , and then add the device again.

03 Operating Instructions

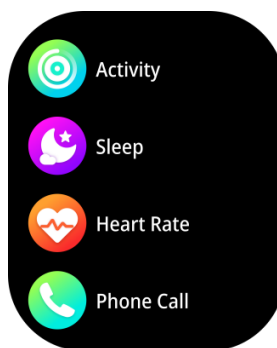
a.Open the control panel : Swipe down from the top of the watch face home page.



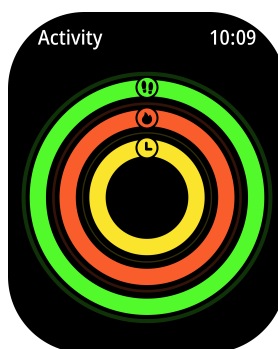
b.Open information : Swipe up from the bottom of the watch face.



c.Open the main menu : Slide the dial homepage from left to right , and you can switch between multiple view styles freely.



d.Open the shortcut interface : Slide the dial homepage from right to left, and long press the interface to enter the "Delete Component" page and the "Add Component" page, where you can delete or add components freely.



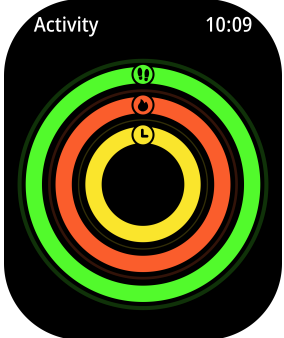
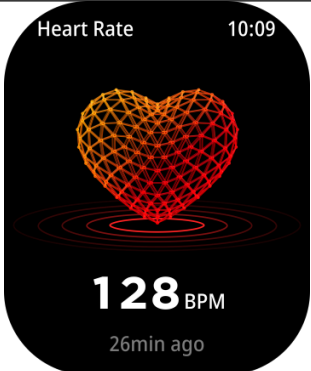
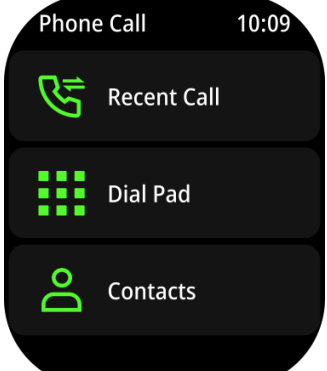
e.Power on/off: long press the upper button for 5 seconds.

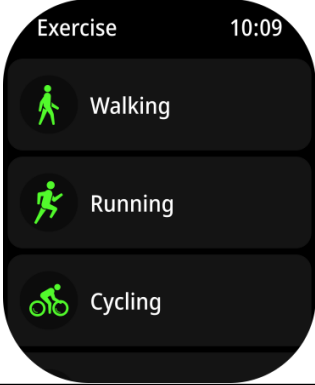
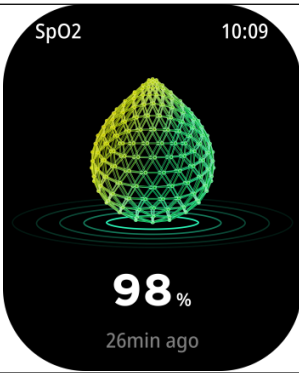
f.Normal operation function: Press the upper key to turn on/off the screen . In the menu interface, press the upper key to return to the previous interface.

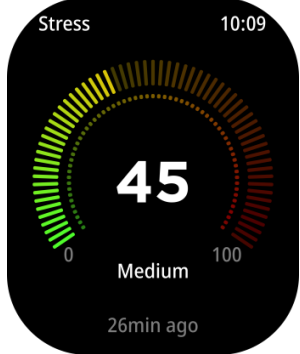
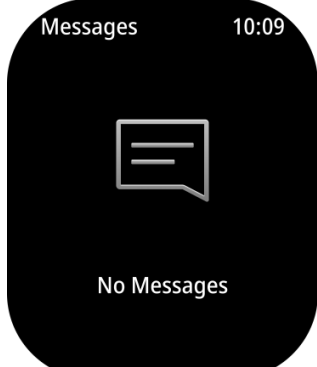
g.Rotate button function: Rotate the crown to quickly switch the dial, and rotate the crown to scroll up and down in the menu interface.

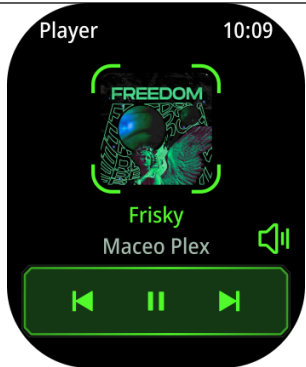
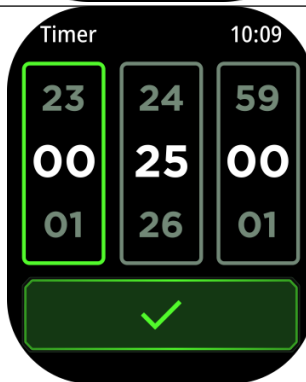
h. Enter the exercise list : press the button once.

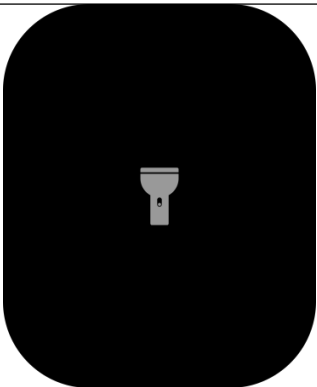
04 Function

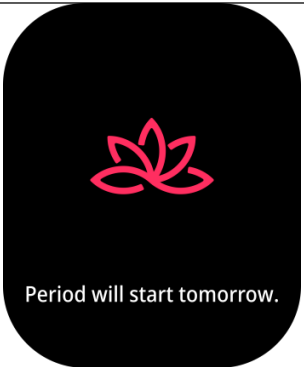
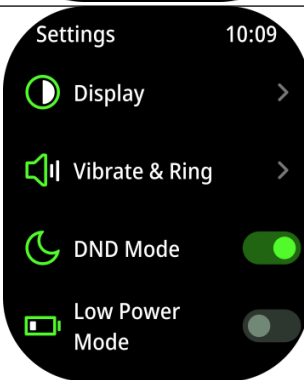
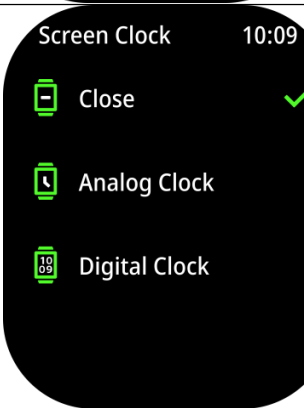
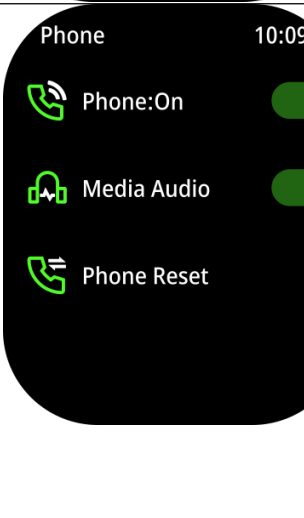
	Activity: Detailed record of steps, calories, and exercise duration for the day. More detailed information analysis and data records can be viewed in the APP .
	Sleep: You can record the total sleep time of last night and the duration of deep sleep and light sleep. More detailed information analysis and data records can be viewed in the APP .
	Heart Rate: Measure the current heart rate value, and you can enable 24-hour heart rate monitoring on the APP . More detailed information analysis and data records can be viewed on the APP. (The values are for reference only and cannot be used as medical evidence)
	Phone Call: You can make and receive calls, view call records, and add contacts simultaneously on the APP. When using the phone function, you need to keep the connection between the watch and the phone stable.

 The screen displays three exercise options: Walking (with a person icon), Running (with a person running icon), and Cycling (with a bicycle icon). The time 10:09 is shown in the top right corner.	Exercise: walking, running, outdoor cycling, skipping, badminton, basketball, football, mountaineering, tennis, rugby, golf, yoga, fitness, dancing, baseball, elliptical machine , etc. 100+ sports modes. More detailed information analysis and data records can be viewed in the APP.
 The screen shows a document icon with a person running on it. Below the icon, it says 'No Data'. The time 10:09 is shown in the top right corner.	Exercise Records: record the latest 5 exercise records.
 The screen displays a blood pressure gauge with a scale from 50 to 200. The current reading is 125/86 mmHg. Below the reading, it says '26min ago'. The time 10:09 is shown in the top right corner.	Blood Pressure: Measure the current blood pressure value and record the latest 7 blood pressure measurement records. More detailed information analysis and data records can be viewed in the APP . (The values are for reference only and cannot be used as medical basis)
 The screen displays a 3D model of a blood drop with a green mesh overlay. Below the model, it says '98 %'. Below the percentage, it says '26min ago'. The time 10:09 is shown in the top right corner.	Blood Oxygen: Measure the current blood oxygen value and record the latest 7 blood oxygen measurement records. More detailed information analysis and data records can be viewed in the APP . (The values are for reference only and cannot be used as medical basis)

	Stress: Measure the current pressure value. You can enable 24-hour pressure monitoring on the APP. More detailed information analysis and data records can be viewed on the APP . (The values are for reference only and cannot be used as medical evidence)
	Weather: Displays the weather conditions for the current day and the next 6 days. Weather information needs to be connected to the APP to obtain data. If the connection is disconnected for a long time, the weather information will not be updated.
	Messages: Synchronize message notifications from your phone and display the latest 8 messages stored. (Note: Turn on the corresponding information notification switch on the APP)
	Shutter: After connecting to the APP, open the camera control on the APP and click to remotely control the camera .

	Player: After connecting to the APP, the watch can control the music play/pause/previous song/next song and volume adjustment on the phone.
	Timer: You can set the timing time by yourself, such as 1 minute, 5 minutes, 10 minutes, etc.
	Alarm: You can add 8 sets of alarm clocks and set the reminder time. The alarm clock reminder will vibrate and light up the screen.
	Stopwatch: supports 99 sets of time records.

 AI Voice 10:09 Talk After Tap	AI Voice: Click on the voice assistant and say the function you want to wake up. (Note: The watch needs to be connected to the phone via Bluetooth to work)
	Flashlight: Turn on the flashlight to illuminate the environment, and then click the flashlight page to close it.
 Find Phone 10:09 Find Phone	Find Phone: Click Find phone, and the phone will vibrate and ring to remind you.
	Calculator: Supports simple calculation functions and can perform basic calculations such as addition, subtraction, multiplication, and division.

	Menstrual Period: Set the menstrual period function on the APP, and the watch will display the corresponding menstrual period, predicted menstrual period, and ovulation period reminder.
	Settings: Display, Vibration & Ringing, Do Not Disturb, Low Power Mode, Call switch, Media audio, Call reset, System, About.
	Screen Clock: You can choose a digital clock or an analog clock, which will be displayed when the watch screen is off . (If this function is turned on, the battery life will be reduced)
	Media Audio: Turn off entertainment sounds: When playing music/ watching Tik Tok/WeChat Moments videos, or watching TV/movies, the watch will not play any sound, but the phone will. Turn on entertainment sound: When playing music/ watching Tik Tok/WeChat Moments videos, or watching TV/movies, the watch will play sound, but the phone will not. (Mainly controls the third-party playback of sound)

--	--

05 Other Functions:

Electronic business card, watch search, 12/24h time system, online watch face push/custom watch face push, unit setting, screen light up by wrist flip, water drinking reminder, sedentary reminder, low battery reminder, power saving mode, high heart rate reminder, goal achievement reminder.

06 Charging

1. Place the watch on the charging head so that the charging contacts on the back of the watch fit completely with the metal contacts on the charging head.
2. Connect the charging cable to a standard USB charger purchased from a regular channel with an output voltage of 5V and an output current of 0.5A or above.
please wipe the charging contacts of the charging cable clean before using it again to avoid sweat or moisture residue.

07 Warranty Service

1. When this product is in normal use, if there are any quality problems caused by manufacturing, materials, design, etc., the motherboard will be guaranteed free of charge within one year from the date of purchase, and the battery and charger will be guaranteed for half a year.
2. Free warranty is not provided for failures caused by the user's personal reasons, as follows:
 - 1) Failures caused by unauthorized disassembly, modification of the watch, etc.
 - 2) Failure caused by accidentally falling during use.

3) Any man-made damage or third-party fault, misuse (such as water entering the host, external force cracking,

Scratches and damage to peripheral parts, etc.) are not covered by the warranty.

3. When requesting free warranty, you must provide a warranty card with the purchase date and place of purchase stamp.

4. When users need to repair the product, please take it to our company or our distribution point.

5. All functions of the product are based on the physical object.

Tips: 1. To ensure the waterproof performance of the product, please do not remove the screws on the back cover of the watch without authorization, and do not immerse it in hot water, hot tea or other corrosive liquids. 2. This product contains lithium batteries. When recycling the product, please be sure to place it at the designated battery recycling point.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.