


# AURGA Viewer Quick Start Guide




## Appearance

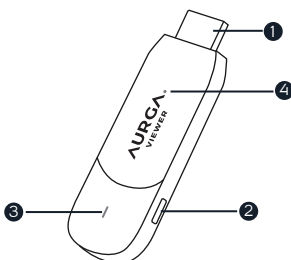

1.HDMI port 2.USB-C port 3.LED indicator 4.Inner RESET button



## Usage

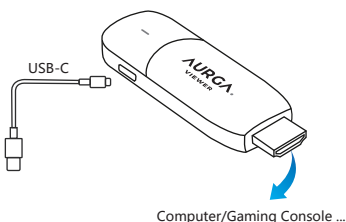

Plug HDMI port and USB-C port to target video output device. If the target device doesn't provide USB-A port, you need to prepare a standard USB-A 5V power adapter. Visit the website (<https://aurga.com>) and download apps from the Download page. For iOS and Android platform, please search "AURGA Viewer" from App Store/Play Store. To use the apps, please find more information from Help page on website.



## Factory Reset

After booting AURGA Viewer and LED indicator blinks, insert a paper clip into the small hole on the case. Press the inner reset button for 3 seconds and release it. AURGA Viewer will enter factory reset mode and the LED indicator blinks fast, finally it automatically reboots.



## LED Indicator

After AURGA Viewer boots

Blinking RED: Indicates that HDMI port is not plugged or there is no video output from the port.

YELLOW: Indicates that HDMI port is receiving video signals.

GREEN: Indicates that HDMI port is receiving video signals and app is streaming.

Blinking YELLOW: Indicates that app connects to AURGA Viewer but the HDMI port is not plugged or there is no video output from the port.



## Help

Please visit <https://aurga.com> to get more information.

## FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

AURGA Viewer has been tested and comply with FCC Body SAR limits at 5mm distance.