


Contents



1. VIE ZONE




2. Earphone Case




5. Eartip Case

How to wear

1. Please wipe your ear and neck with using a wet wipe before use.
2. Choose an ear tip that has the best fit for your ears. (S/M/L)
3. The sensors need to be kept clean for optimal performance.
You can use wipes to remove sebum from the sensors after use.
4. Place both the left and right neck sensors securely around your neck.

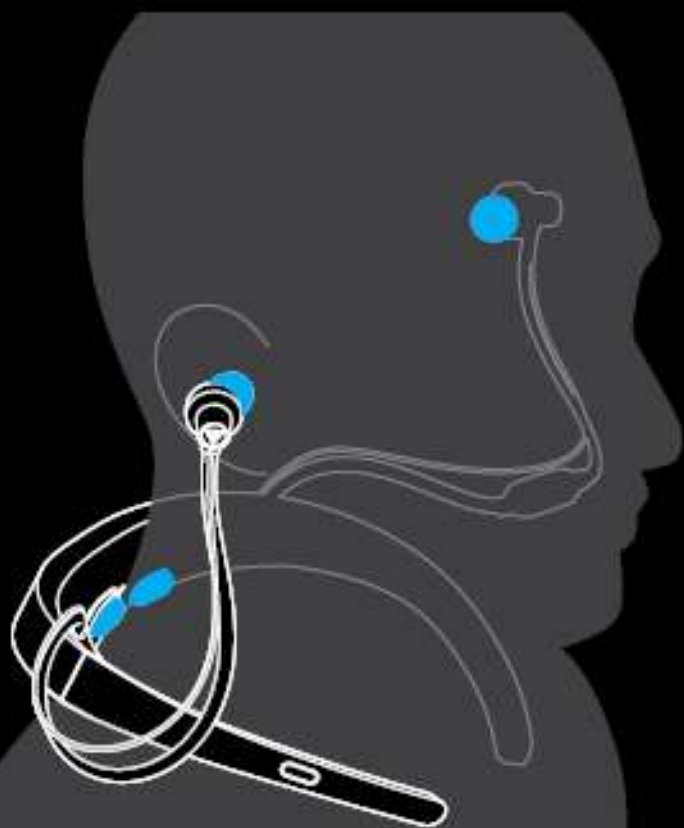

Control

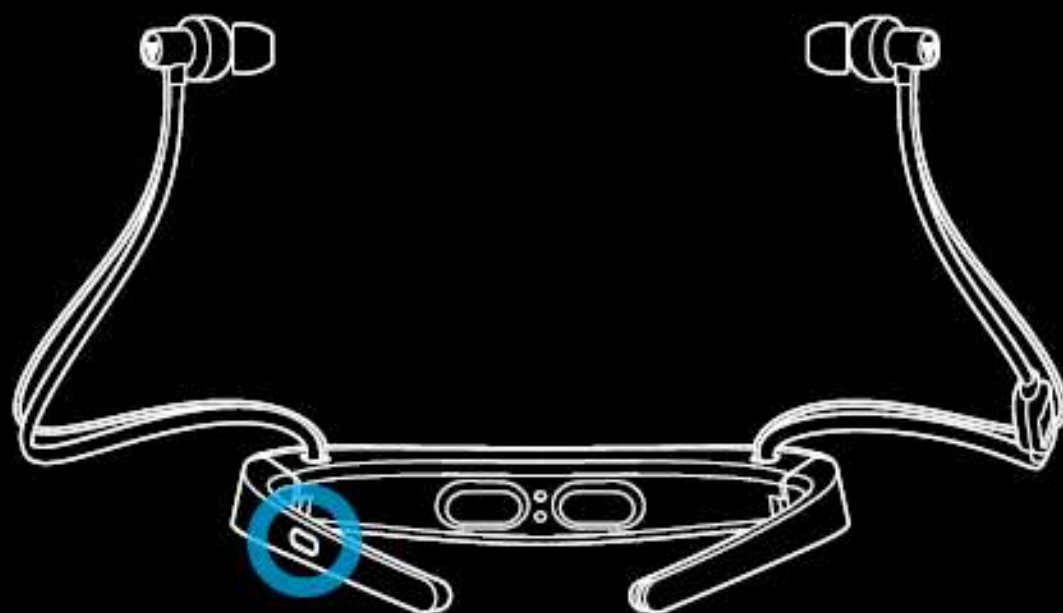

Vie Zone has a touch sensing button on the right side of the neck band.
You can control your Vie Zone by the following:

Power On	Long Press 3 Seconds
Power off	Long Press 2 Seconds (When connected to the device) Long Press 5 seconds (When not connected to the device)
Pairing Mode	Long Press 1 Seconds (When powered on)
Play/Stop	Long Press 2 Seconds
Take/End Call	Long Press 2 Seconds
Next Song	Tap 2 times
Call AI	Tap 3 times

How to charge

You can charge your Vie Zone using the USB Type-C cable and the charging adapter that came with your Vie Zone.

There is a limit of ampacity (Fast-charge (5V-3.0A) adapters are not compatible.)

Please charge using chargers that carry up to DC 5V/2.4A.

Eartip

Your Vie Zone uses special conductive eartips.

Make sure to choose tips that provide the best fit for both your right and left ears.

In order to best pick up your EEG signals, give them maximum contact with your ears by pushing them in deeply.

You can keep them clean by storing them in the their solutions in their cases.

Please use dual-purpose (for cleaning and storage) contact solutions.

Pairing

IOS

Go to the "VIE ZONE" app > Signal check.

Tap "CONNECT WITH DEVICE" and select "VIE ZONE" to pair.

Tap on it to hear "Connected".

You should hear "Pairing successful" and see VIE ZONE under your devices.

Android

Long press the button to get into the pairing mode (LED: Red/Blue flickering)

Go to the Setting > Bluetooth of your smartphone, and Select the "VIE ZONE" to pair the device.

Go to "VIE ZONE" app > Signal check.

Push "CONNECT WITH DEVICE" and select "VIE ZONE (Data)" to pair.

Download Link

Manual & Support



IOS App



Android App



Support and Warranty

The earphones are covered by a limited one year warranty from the date of purchase.

Please visit our website or contact us by E-mail when you need support.

<http://vie.style/support/>

MAIL : info@vie.style

Give Connected, Feel the Life.



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



220-JP5882

FCC ID : 2A099-VIEE

Model No : VIEE-10004