


PowerTALKIE

Power TALKIE user manual

(Please carefully read the user manual before using the product)

Product and accessories

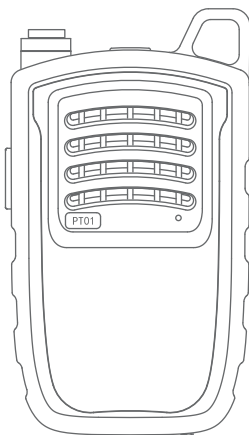


2pcs Power TALKIE



2pcs Antenna

Accessories

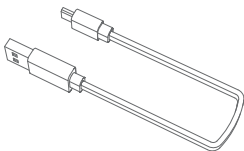

2pcs Micro usb cable




1pc User manual

Initial assembly

Install Antenna


Hold the bottom of the antenna and aim it at Antenna connection seat on the top of the power talkie , turn the antenna clockwise until it is tightened.

Note: please ensure that the antenna is properly installed before using. If the antenna is not installed when using, the launch parts may be damaged.

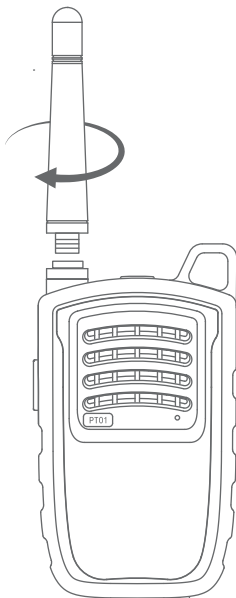


Connect Charging cable

Open bottom waterproof cover, plug USB cable to charge other device, plug micro usb cable to charge the Power talkie.

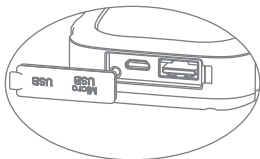


| Login with account

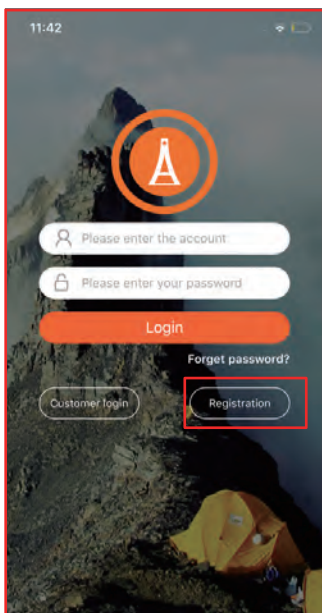

1. Please register an account for the first time using. (Need to register the account when there is network, directly login as a tourist when no network).
2. Click registration icon to access to account registration interface.
3. Click customer login icon to skip account login and go directly into APP.
4. Enter account and password to login directly if you already have an account.

Function sketch diagram

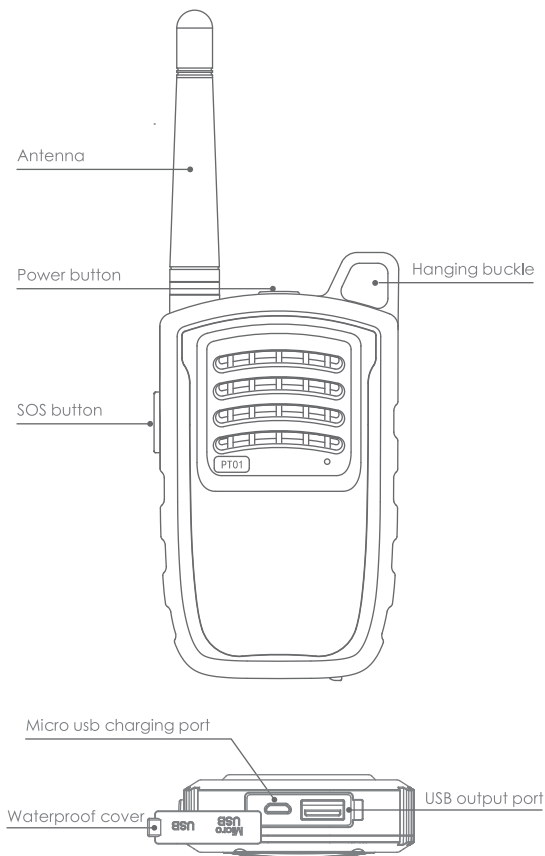

First time use

- Scan QR code or download Power talkie installation package in application store, then install it.




Android app on
Google™ play



Available on the iPhone
App Store


- Ensure that Power talkie is turn on, open the APP, and agree to obtain permission demands.



Click to turn on/turn off Power talkie
(Long press 5-7S to reset)



Long press 5S to
send out "SOS" signal

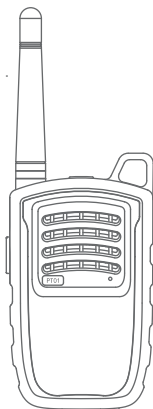

I Basic parameters

Product specifications

Model: PT01

Transmitting power: 2W

Frequency: 462.55MHZ-462.725MHZ

Battery type: polymer lithium battery

Capacity of battery: 6000mAh

Work temperature: -20°C-60°C

Charging temperature: 0°C-40°C

Power connector: Micro USB

Output connector: USB

Input: DC 5V 2A

Output: DC 5V 2.4A

Rated voltage: 3.8V

Support bluetooth version: 4.2&above

Product size(without antenna): 196x72x26mm,
antenna length: 80mm

Net weight: 233g

Receiver sensitivity: -116dbm

IP67 class, and drop-proof

I Warning

Do not use power talkie in below scenarios because Transmitting signal may affect electronic devices or medical devices.

- The place around hospitals, pacemakers and other medical devices;
- Explosive places such as gas stations;
- Aircraft, and other places where is easily interfered by electronic devices;
- Any other occasion where the restrictions or warning of the radio equipment are posted;

If the power talkie has the following abnormal conditions, please stop charging or using it immediately, turn off the power supply and contact the after-sale department

- If the power talkie or charger is fuming or smelling in the process of charging, please turn off the product immediately and pull out the power plug so as to prevent heat, combustion, fire and even explosion.

Additional Notes

- Please do not place power talkie in direct sunlight or near the heater;
- Please do not operate the machine near TVs or radios.(There is radio interference around TVs,walkie talkies or radios);
- Please do not disassemble or refit the machine.

| Warranty policy

Warranty policy

From the date of purchase, within warranty period, free repairing is available for product functional defects. The warranty period is one year.

Non warranty policy


The following circumstances, but not limited to the following circumstances, belong to non warranty range, need to pay for repairing:

- Accidents caused by unauthorized disassembly, repair, modification, misuse, and failure or damage due to the use of non-original accessories;
- Exceed the warranty period;
- Damage caused by force majeure;
- Failure of the product and its accessories due to personal reasons;
- Any damage caused by maintenance and adjustment not in accordance with the manual.
- The failure and damage don't caused by the design, manufacture and quality of the product.

After-sale service

During the process of using your product, about the questions, such as maintenance and safety, you can consult the dealer or login to the official website for details.


| Account registration

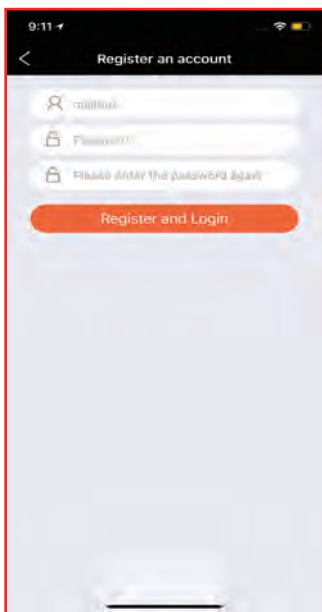

The screenshot shows a mobile application interface for account registration. At the top, the status bar displays the time 9:11, signal strength, and battery level. Below the status bar is a black header with a back arrow on the left and the title "Register an account" in the center. The main content area has a light gray background and contains three input fields: the first is for an email address (labeled "Email" with a person icon), the second is for a password (labeled "Password" with a lock icon), and the third is for re-entering the password (labeled "Please enter the password again" with a lock icon). Below these fields is a prominent orange button with the text "Register and Login".



1. Enter email address.
2. Enter password.
3. Enter password again.
4. Click register and login button to register the account.

Connect power talkie device

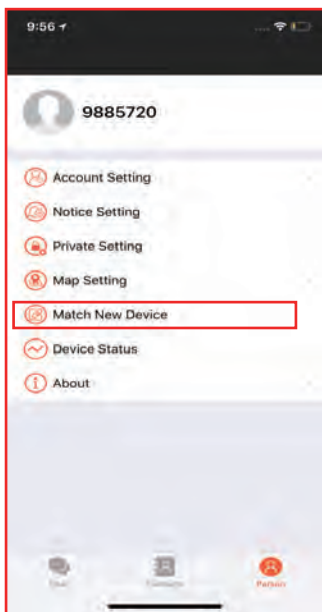




1. Enter into APP
2. person
3. match new device icon

Connect power talkie device

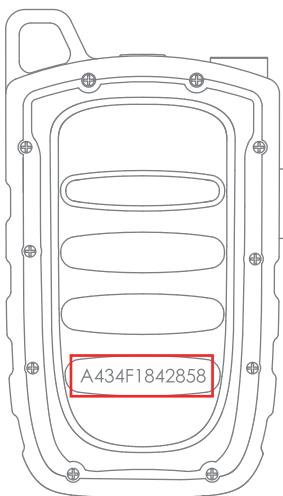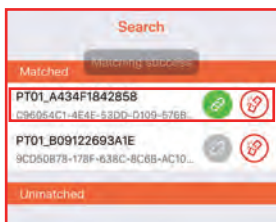



1. Check the ID number on the back of power talkie.
2. Click same ID number in the APP to connect power talkie.

Add friends

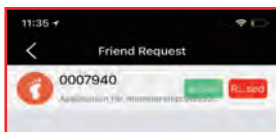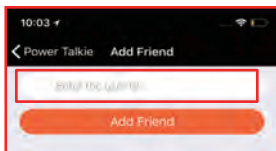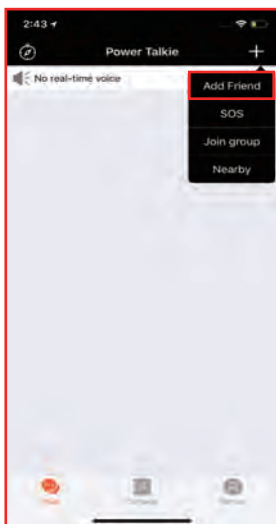



- 1.Chat
2. “+”
3. Add Friend
4. Enter the user ID
5. Accept

| Create Group chat

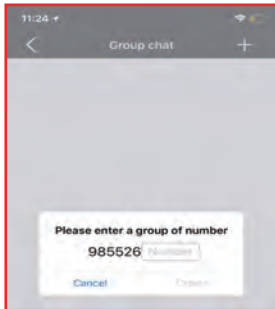



1. Contacts
2. “+”
3. group chat
4. Enter the ID
5. Create

| Apply to Join group

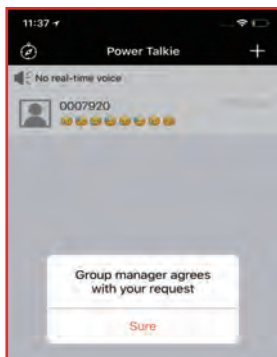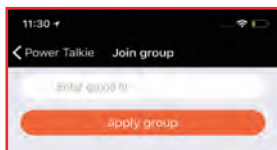

- 1.Chat
2. "+"
3. Join group
4. Enter the group ID
5. Apply group
- 6.Sure

Group manager agree the request

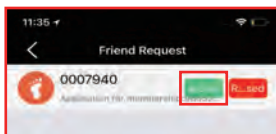
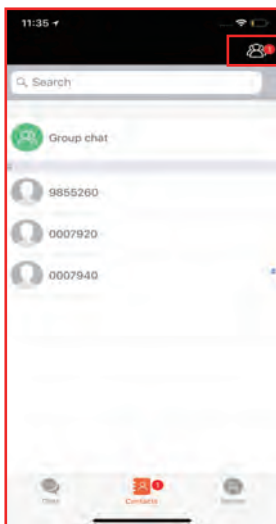


1.Contscts

2. Click①




3. Accept

Talking in Group chat

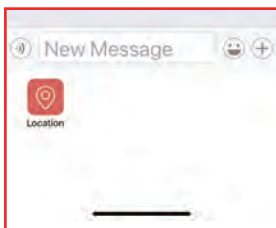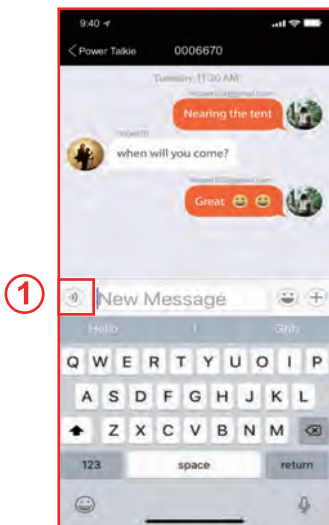

1. ①switch to enter voice or text.
2. click “+” , you will find location icon .
3. click location icon to share location .



Check SOS message

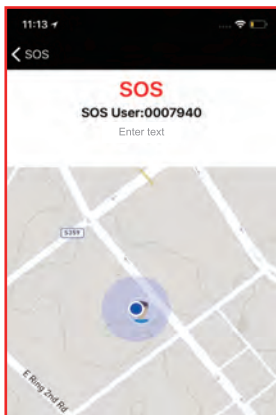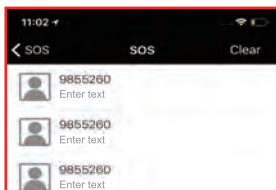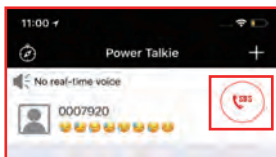

1.Chat




2. SOS message

Send SOS message

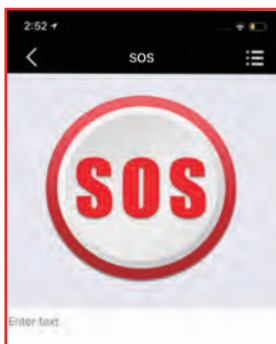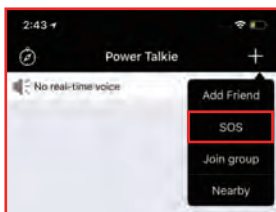

- | | | |
|---------------|--------|---------|
| 1.Chat | 2. “+” | 3. SOS |
| 4. Enter text | 5. SOS | 6. sure |

Download Offline Map

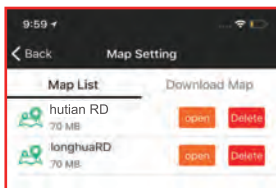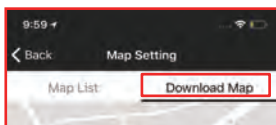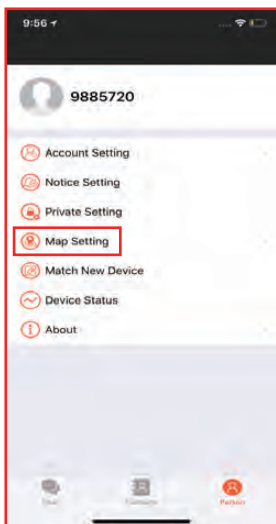


1.Person

2.Map setting

3.Download Map

| Search nearby user

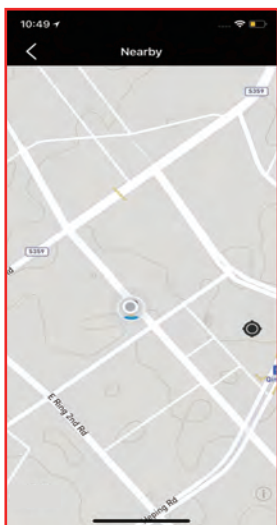

1.Chat

2. "+"

3. Nearby

Common problems and solutions

Question 1: Log in unsuccessfully.

Answer: 1. Check the network is connected normally.

2. Check the password is correct.

3. Check whether the account is logged in by other users.

Question 2: Power talkie connection is abnormal.

Answer: 1. Check whether power talkie is in Bluetooth pairing status, the blue light is flashing each second.

2. Check whether the phone turn on Bluetooth.

3. Check if distance between power talkie and the phone is beyond the Bluetooth effective distance.

Question 3: Can't send out message successfully.

Answer: 1. Check device matching in APP whether connect right power talkie Bluetooth.

2. Check whether your friend connect normally.

3. Check whether the send distance beyond over effective communication distance.

4. Check whether your friend in receiving message status.

Question 4: Can't charge successfully.

Answer: 1. Check whether power or usb connection is normal.

2. Turn on power talkie, then charge it, check whether

blue light is flashing. (It's normal if blue light is flashing

when turn on power talkie, there is no prompt when turn off power talkie).

Question 5: No sound prompt when receive message.

Answer: 1. Check whether open notifications.

2. Check whether open mobile phone sound.

Question 6: Can't find people nearby.

Answer: 1. Check whether your friend share location.

2. It need to wait 1 minute to find people nearby.

3. Check whether the other side is in the state of receiving a broadcast.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Remote controller, SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value.

Before a new model device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each device are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this model device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

PowerTALKIE

website: www.ptalkie.com

www.power-talkie.com