

# Getting Started



**SHIELD BIO**  
QUICK START GUIDE

## BEFORE YOU START



Read our Safety & Security Information before you start.




**Charge** your SecuX wallet for at least 2 hours. Keep the device in the charging dock during device setup and firmware update.



**Contact** us for further support and assistance:

<https://contact.secuxtech.com>

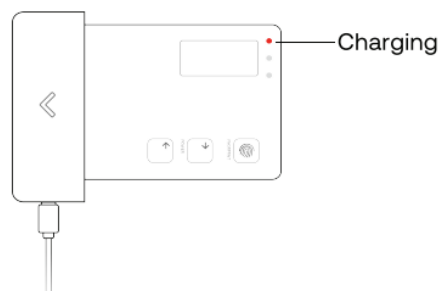

## Device Setup

Visit our step-by-step tutorials to get started.


Scan QR Code or visit: [secuxtech.com/howitworks](https://secuxtech.com/howitworks)






### 01

#### Power On

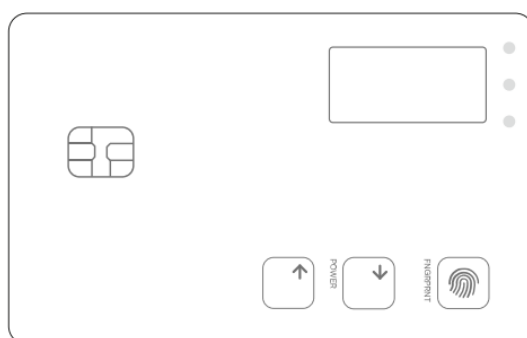


Hold down the power button  for at least two seconds to power on the device.



- Charging
- Fingerprint
- Bluetooth Connecting
-  UP
-  DOWN / POWER
-  FINGERPRINT / CONFIRM


## 02 PIN Setup

Enter a 4-8 digit number as your PIN.




Use  and  buttons to select number.  
Press  to confirm. Repeat the steps until all the numbers for your PIN are selected and confirmed.


Select  to complete PIN setup.

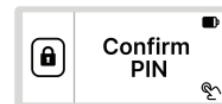Enter the same number again to confirm.





## 03 Choose Setup Type

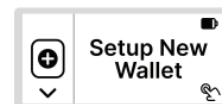Press  to set up a new wallet.  
Or use  to select Restore Wallet.  
Then press  to continue.



## 04<sub>a</sub> Setup a New Wallet

Select the number of words you preferred for your recovery seed phrase.  
24 is recommended for best practice.


Use  and  buttons to view the previous and next words of your recovery seed phrase.

Write each word down carefully in the correct order on your recovery sheets.

Press  to continue.


The device now displays all the words of your recovery seed phrase once again for final review.

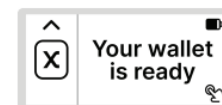


Press  to complete setup.




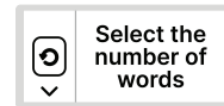


## 04<sub>b</sub> Restore an Existing Wallet

Select the number of words of your recovery seed phrase.

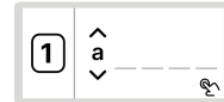

Use  and  buttons to select the correct letters of the first word of your recovery seed phrase and press .




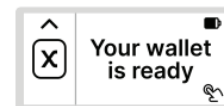
Select  to go back, or  to cancel. Select  to confirm the word entry.




Enter all the words of your recovery seed phrase in the correct order.




Once you have entered the last word of your recovery seed phrase and selected  to confirm, you have successfully restored an existing wallet.




## 05 Register Fingerprint

Select Fingerprint from main menu, and press  to confirm.



Scan your fingerprint by gently pressing the registered finger on the  button and then release.

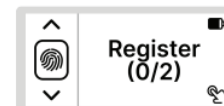

Continue the above actions until you reach 16 successful fingerprint scans.



You can register up to 2 fingerprints.



Congratulations!

You can now unlock the device and authorize transactions with fingerprint biometric authentication.



## Connect to Mobile

### Download App and Pair with Device

Download our **SecuX Mobile App** for iOS or Android. Open App, start pairing and enter OTP to connect.




## Firmware Update

### Download App

Download **SecuX Firmware Update App** for iOS or Android. Open App and select Shield BIO.



### Update Mode

Turn off device and press the power button  for 10 seconds to enter update mode.




Update  
Mode

## Check FCC ID Information


Please follow the steps below to read the FCC ID information

**Step 1:** Select **About** from main menu

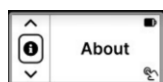

**Step 2:** Press Confirm (fingerprint) button to enter **About** section.

**Step 3:** Use **Up** and **Down** key to select FCC ID page below.

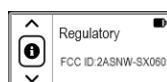

**FCC Statement:**

Federal Communication Commission Interference Statement This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Model : Shield Bio ID: 2ASNW-SX060**

**NOTE:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance