



User Manual

Q900D MANUAL

56mm x 100mm x 6p

Re:QM
Quality & Mission for Mobile

Q900D
Fast Wireless charger

USER
MANUAL



design by ororamobile co.,ltd.
www.ororamobile.com www.ororamall.com

Q900D MANUAL

Before USE

Re:QM Q900D is wireless charger for smartphone that allows enjoy the fun of digital products easily. Please read the manual carefully before using the product, and keep properly for checking.

Attention

- Do not squeeze or collisions.
- Do not disassemble or throw into fire or water, to avoid causing a short circuit leakage.
- Do not use the wireless charger in high temperature, humidity or corrosive environment, avoid damaging the circuit and avoid leakage.
- Do not close with magnetic stripe or chip card (ID card, bank card, etc) to avoid magnetic failure.
- Please keep the distance at least 20cm between implantable medical devices (pacemakers, implantable cochlear, etc) and the wireless charger, to avoid potential interference with the medical device.
- Take care of the children, to ensure that they won't play the wireless charger as a toy, to avoid unnecessary accidents.

Note. no power adapter, if you need, please purchase separately.

Description


Contents

The contents of the product are as follows and may be changes according to circumstances.

- Re:QM Q900D
- USB Type-C Cable
- Manual

Specification

- Size : 72 x 83 x 122mm / 105g
- Input : DC 5V / 2A, DC 9V / 1.8A
- Output : DC 5V / 1A, DC 9V / 1.3A Max
- Frequency : 110-205KHz
- Efficiency : $\geq 72\%$

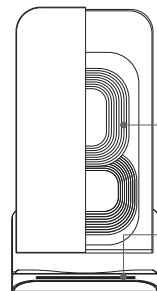


2 Coil Mounting
Wide charge area
to 2 coil fitment

LED Lamp
Mark marks clearly
with led lamp

Direction for USE

1. Connecting the Wireless charger

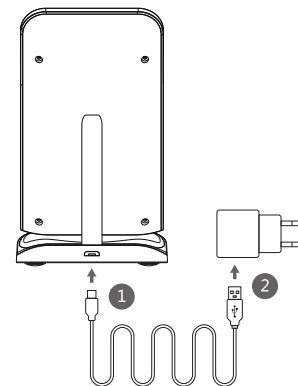

1. Connect to the rear input terminals using the USB Type-C cable provided.
2. Connect the home charge adapter and USB cable.

Notice

- Charging pad controlled by smart chips, long-term standby can assured.

Direction for USE

2. Charging for Mobile Devices



1. Connect the power supply, the charging pad indicator light turn to blue.
2. Put wireless charging mobile phone on the pad, the LED light will turn to green, if the charging position improper, the light will flash to blue, you should take the phone off then try to readjust the phone a little to find the right charging position, wait for the LED light turns to green.
3. When the wireless charging is complete, the LED light turns to blue.

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is

subject to the following two conditions :

Compliance Statement

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including

interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The antenna(s) used for this device must be installed to provide a separation distance of

a least 20 cm from all persons and must not be co-located or operating in conjunction with

any other antenna or transmitter.

품질보증서 Warranty Card

제품 정보	
제품명	
용량	
구입일	20년월일
구입처	
고객 정보	
성명	
연락처	
주소	



ORORAMOBILE Co.,Ltd.
FCC ID:2ASYJQ900D



Designed by ORORAMOBILE CO.,LTD.

