

Instruction on Installation and Operation of the Health Information Kiosk


Welcome to use the Health Information Kiosk

Thank you for choosing the product. Please read the instructions carefully to master the functions before your using.

1.Basic Information

Screen size: 49 In.	Video File Size: 1080px*608px (Horizontal version)
screen resolution: 1920*1080px	File resolution: 72 pixels
Output Voltage: 220V~50Hz 2.5A	Static File Format : PNG
Rated Power: ≤110W	File Size: ≤2MB(PNG); ≤6MB (MP4)
Play Duration: 15s	Color Mode: RGB
Animated File Format: MP4 (Support the Video and Picture Split-screen Mode)	
Network Support: Reticle, WIFI	


2. Product Appearance

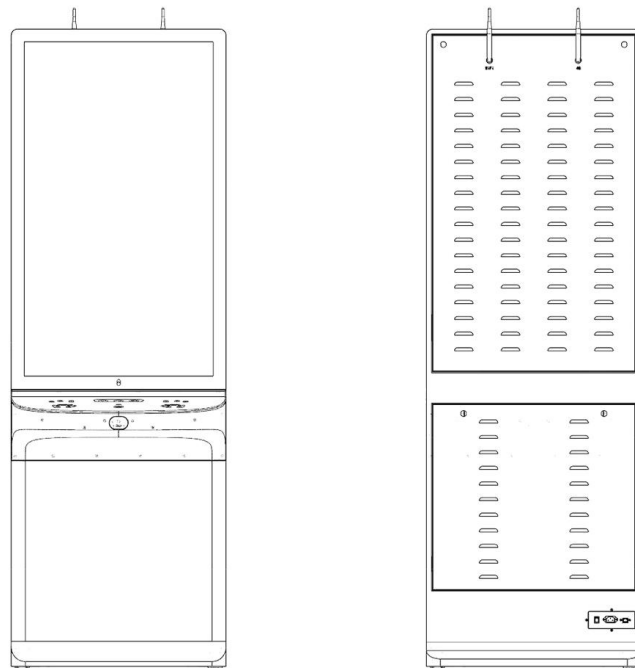

3. Installation Steps:

3.1 Adjustment and Installation of Casters

Lay down the kiosk on the flat ground, turn the caster gears into stable state. Then place the kiosk horizontally.

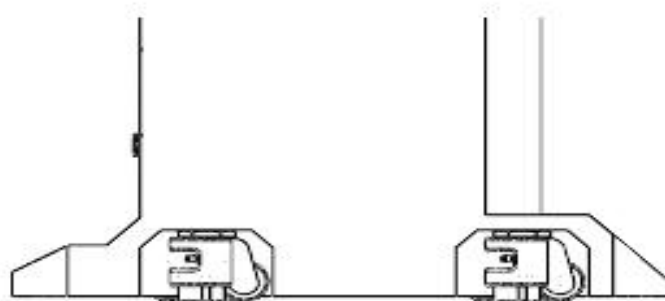


3.2 Expansion Screws Installation

3.2.1 Drill 4 holes referring to 4 installation points of the expansion screws under the kiosk with the pneumatic drill.

3.2.2 Install the expansion screws to the holes, fix the kiosk and finish the installation.

3.2.3 Please prepare the M10*100mm expansion screws by yourself.

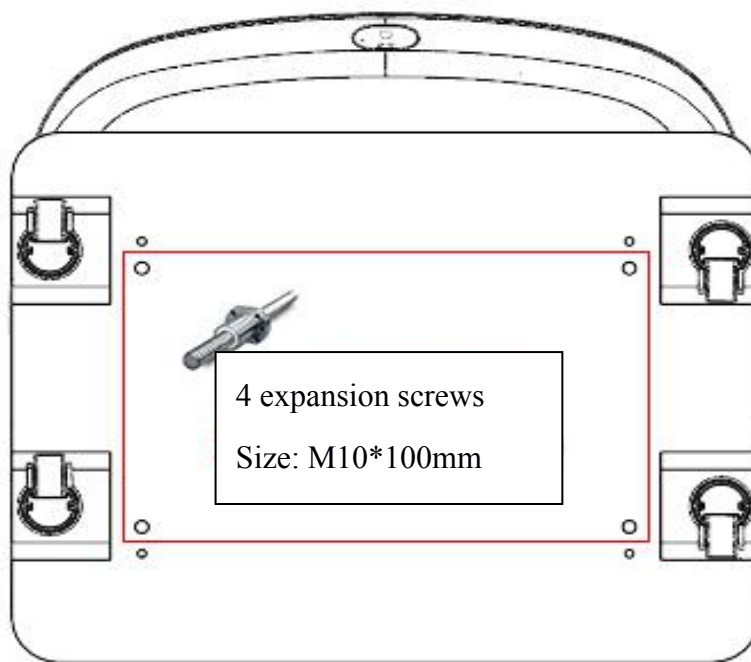

4.Kiosk Setup

4.1 Open the upper-back cover , plug the mouse in the USB port on the right side.

4.2 Star the kiosk up and right-click the mouse in to interface of setup.

4.3 WIFI Setup

- a. Click into the interface of setup
- b. Choose the correct WIFI account.
- c. Input the password and confirm.
- d. Click the “Refresh” button to set the network state.

4.4 Media Volume

- a. Check the media volume switch.
- b. Turn the volume up according to your preferences.

4.5 MAC address

MAC Address: Connect the reticle to the MAC address.

WIFI Address: Connect the WIFI to the MAC address.

5. Warranty Policy

5.1 One year warranty period for the fault and damage caused by quality of the hardware and electronic appliances of the kiosk.

5.2 Free charge for the maintenance and refresh of software.

5.3 The warranty do not include :

- a. damage caused by mistakenly using , maintaining and keeping.
- b. damage caused by unauthorized repair.
- c. damage caused by force majeure (such as lightning, rain, damp, machine collapsing, etc.)

6. After-sale Service Hot-line: 4000088666

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
3. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

RADIO FREQUENCY MAXIMUM TRANSMIT POWER AND FREQUENCY BAND INFORMATION

RADIO FREQUENCY MAXIMUM TRANSMIT POWER AND FREQUENCY BAND INFORMATION Frequency bands	Maximum output power
WiFi(EIRP)	18.52dBm

1. Adapter shall be installed near the equipment and shall be easily accessible.
 2. The operating temperature of the EUT can't exceed 50°C and shouldn't be lower than -20°C.
 3. The plug considered as disconnect device of adapter.
 4. The device complies with RF specifications when the device used at 20cm from your body
- Hereby, BEIJING MORE HEALTH TECHNOLOGY GROUP CO.,LTD. declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU. This product is allowed to be used in all EU member states.