 A Phoenix Mecano Company	Issue Department: Bedding Division	Date:	2025-4-16
	System Instruction	Author:	Alexandria
Instruction of RF6719		Edition:	1.1
		Page 1 of 4	

Instruction of RF6719

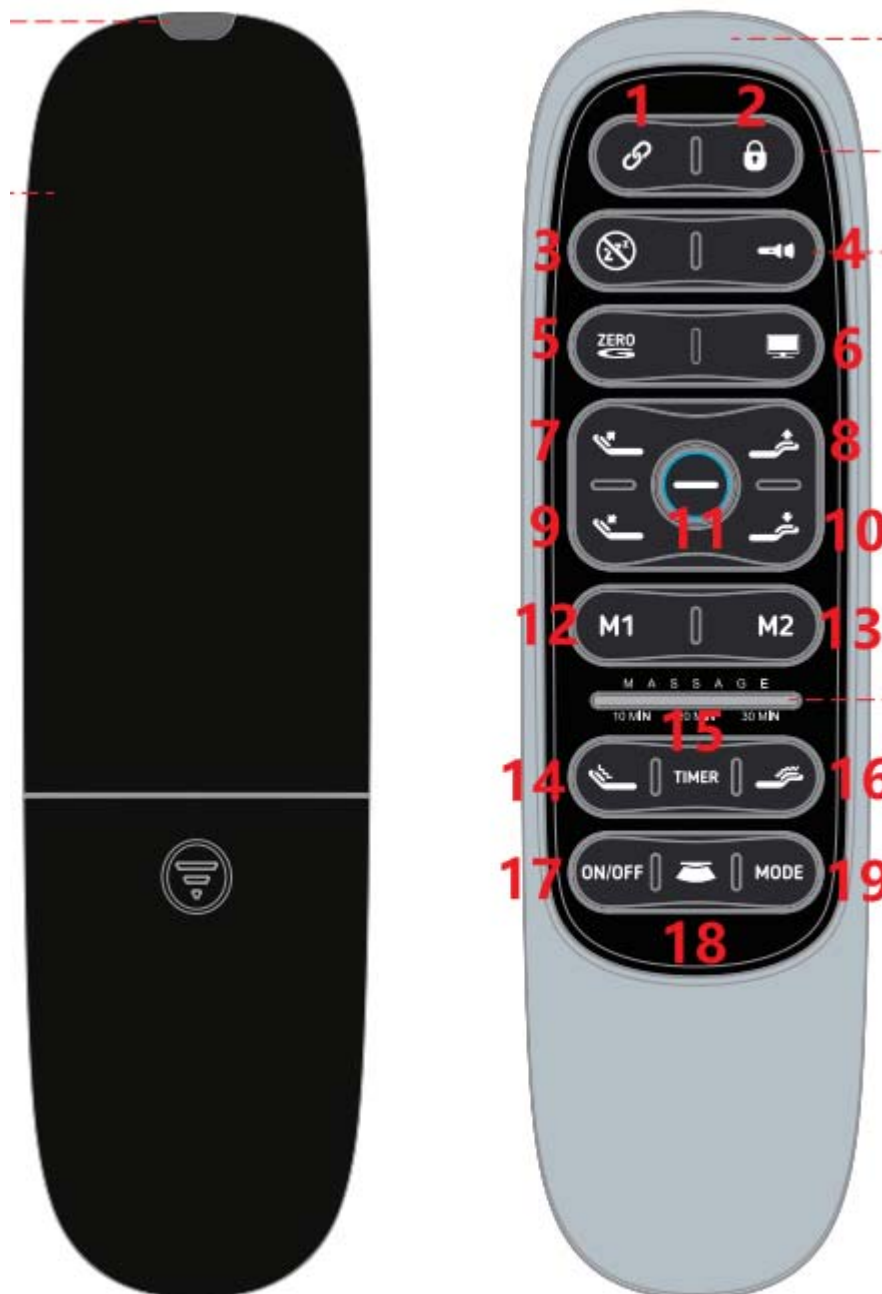



Figure 1 button of remoteItem

 A Phoenix Mecano Company	Issue Department: Bedding Division	Date:	2025-4-16
	System Instruction	Author:	Alexandria
Instruction of RF6719		Edition:	1.1
		Page 2 of 4	

1.1 Matching Code button 1

Press and hold this key to perform the pairing code operation.

1.2 Child Lock button 2

Press and hold CHILD LOCK button for 5s until backlight flashes, then the lock/unlock is complete.

1.3 AntiSnore button 3

Press the ANTI SNORE button, and the bed will move to the ANTI SNORE position.

1.4 LIGHT button 4

Click this button to turn on/off lighting.

1.5 ZeroG button 5

Press the zeroG button, and the bed will move to the zeroG position. Hold the zeroG button for 5 seconds until the backlight blinks, and the control box will set the current position as the zeroG position.

1.6 TV button 6

Press this button to recline the bed to the position.

1.7 HEAD UP button 7

press and hold this button, head actuator moves out, stop when released.

1.8 FOOT UP button 8

press and hold this button, foot actuator moves out, stop when released.

1.9 HEAD DOWN button 9

press and hold this button, head actuator moves in, stop when released.

1.10 FOOT DOWN button 10

press and hold this button, foot actuator moves in, stop when released.

1.11 FLAT button 11

Press this button to recline the bed to a flat position.

1.12 M1 button 12


Click M1 button, the bed moves to M1 position, press and hold it for 5s until backlight flashes, the control box set the current position as M1 position.

1.13 M2 button 13

Press the M2 button, and the bed will move to the M2 position. Hold the M2 button for 5 seconds until the backlight blinks, and the control box will set the current position as the M2 position.

1.14 HEAD MASSAGE button 14

Click here to select the head massage mode.

 A Phoenix Mecano Company	Issue Department: Bedding Division	Date:	2025-4-16
	System Instruction	Author:	Alexandria
Instruction of RF6719		Edition:	1.1
		Page 3 of 4	

1.15 MASSAGE TIMER button 15

When the massage function is activated, press the button to switch the massage duration (10-20-30min-Off).

1.16 FOOT MASSAGE button 16

Click here to select Foot Massage.

1.17 ON/OFF button 17

Click here to turn the massage on or off.

1.18 UNDER BED LIGHT button 18

click this button to turn on/off under bed lighting.

1.19 MODE button 19

Click here to select the massage mode.

FCC Statement:


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This Equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However,there is no guarantee that interference will not occur in a Particular installation.If this quipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

	Issue Department: Bedding Division	Date:	2025-4-16
	System Instruction	Author:	Alexandria
Instruction of RF6719		Edition:	1.1
		Page 4 of 4	

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada's licence - exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.