


Translator



User Manual

Product

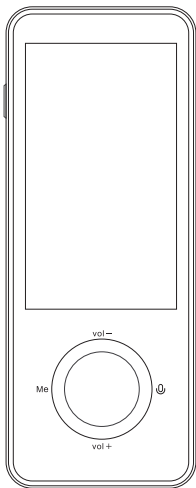

main engine*1



USB cable*1



specification*1




Certificate
of approval*1



warranty card*1

(Note: please check whether the above accessories are complete after unpacking. If not, please contact the dealer)

Key specification

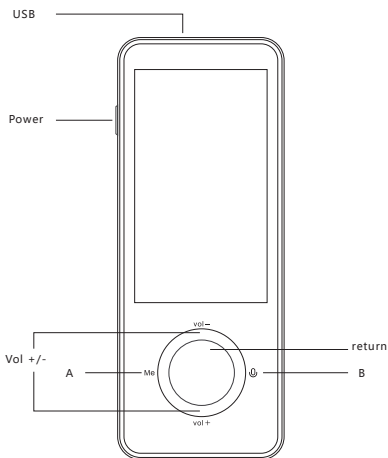

Double click any key to swipe the screen to unlock

A/B: Corresponding to the left & right translation language of the display interface

return: Only one level up operation can return

Vol+/-: Adjust volume

Power: Short press lock screen / wake up screen, long press shutdown / power on

USB: Connect USB cable or charge

Quick Start Guide

Preparation

Please check if the accessories in the package are well provided SSSbefore using this device: Smart Translation Machine*1, Data Cable*1, User Manual *1, Certificate*1, Warranty Card*1. This device supports wireless network networking mode. Please select the networking mode according to the current actual use environment.

Wireless network

After the boot up of the device, the wireless network can be configured through the following steps:

- Launch “settings” and enter “WIFI” submenu.
- Toggle on the switch.
- Select the desirable wireless name (SSID) and input the correct password if there is.
- Click “Confirm” to connect.

Charging

When the device is in low-power state, the battery icon on the Status Bar will turn into an obvious low-power state as well. During the low-power state, some functions of the device may not work properly. When the battery state is below the 3.4V, the device will automatically shut down to protect the data. To boot up require sufficient charging.

- Charging with device power off, there will be a charging icon with current battery state in the center of the screen about 10 seconds after cable plugged in.
- Charging with device power on, the battery icon on the right top will turn into a charging state.
- When charging complete, a solid battery icon will be presented.

Power On / Off

Power On:

Long press the Power Button till the screen is on. The initialization of the device may spend some time, please wait a while.

Power off:

Long press the Power Button till a dialog prompted, select “Power Off” to turn off the device.

Wake up / Sleep

Manually:

- Sleep the device by short pressing on the Power Button.
- Wake up the device by short pressing on the Power Button.

Automatically:

- The device will go into sleep mode automatically when there were no operations for a period of time.(Settings>Display, in this menu, you can change the time it takes you device to go to sleep)
- Wake up the device by short pressing on the Power Button.

Home screen

The main screen of the device is the main function entrance of the device, with 12 operation options: translation, recording, mutual translation, photo translation, setting, etc.

. Perform click on these icons will lead to the corresponding function page.

Status bar

The top of the device screen displays some status information about the device, such as WiFi network status, power, Bluetooth and other status information.

Introduction of Core Functions

Translation

Language selection:

The translation function has two states: online translation and offline translation. It will switch automatically according to the current state of the translator.

At present, online translation supports real-time translation between major languages (which will change with the version update); Offline translation currently supports offline translation in 12 languages (which will change with version update). When the translator is offline, the translation will automatically switch to offline translation.

- Tap the language button at the top of the Translate page to see the list of available languages.
- Swipe up and down to find the language you need . Tap the name of the language to activate it.

Voice recognition:

- Long press the A/B Button on the device to trigger the Speech-Recognition mode.(A Button for the language on the left side, B Button for the language on the right side)
- After releasing the A/B Button, the speech will be automatically recognized and translated to the specified target language. The pronunciation starts automatically if voice broadcast is enabled in the application settings.
- The list presents previous voice translation results. Swipe up and down to review when the records are too many.

Favorites

- Long press on the specific item in the list of translated result will prompt with a dialog.
- Tap the "Favorites" option, with a notice, the specified translation result is marked as favorites.
- Swipe to the right will enter the Favorites page, in which you can review all the favorites.
- Short click on any record, the pronunciation starts automatically. To clear the record, tap and hold it.

Recording

Choosing the source and target languages:

- Click the three-dot icon at the top right of the recording page to see the list of available languages.
- Swipe up and down to find the language you need . Tap the name of the language to activate it.

Recording recognition:

- In the Recording Page, to start recording, click the 'microphone' icon at the bottom right.
- Automatically identify the source language in the process of recording and display it on the page.
- Click the 'Language Switch' icon at the bottom left to view the original / translated text.
- The recording function supports maximum of 1-hour recording.

Saving the recording results:

- Click the red 'stop' icon at the bottom right to prompt the confirmation.
- Tap "OK" to stop and automatically save the recording file.
- Click the three-dot icon at the top right to view the list of saved recording file .
- Recording text saving location: plug in the computer - click the recording translation folder

Conversation

Brief introduction:

The translation function of the translator provides multi person online voice communication, supports the recognition and broadcast of various mainstream countries (regions) in the world (may change with the version update), reduces the user's language skill requirements, widens the communication bridge, and truly realizes the barrier free voice communication

Hold a multi-person conversation:

- ◆ Create a multi-person conversation(Applicable only if the device did not join any existing one yet)
 - Click the "Create" icon on the conversation page
 - Input the ID of the target device that you need to invite, then click "Confirm".

- Click the "Done" button to complete the creation.
- ◆ Invite to join multi-person conversation
 - In the Multi-person conversation page, click the button at top right and select "Add member" options.
 - Input the ID of the target device that need to join, then click "Confirm".
 - Click "OK" to complete the invitation.

Voice recognition:

- Long press on the A/B Buttons in the conversation page to enter voice recognition mode
- Speak in the language that you have set in the system as spoken input.
- When you finish, then release the A/B Buttons, the translation is done automatically.

Add a member:

- In the Multi-person conversation page, click the button at top right and select "Add member" options.
- Input the Chat ID of the target device that need to invite, then click "Confirm".
- Click "OK" to complete the invitation.

Member management:

- In the Multi-person conversation page, click the button at top right and select "Member management" options.
- Click "Leave conference" to quit the conversation.
- Click the "X" button next to each member to exclude the specific member.

Language selection:

- Click the button at top right of the Multi-person conversation page and select "Select language" options.
- Set the language according to the actual needs.

Advanced Settings:

- Click the button at top right of the Multi-person conversation page and select "Settings" options.
- Switch on / off "Automatic broadcast" will enable / disable automatic message broadcast
- Switch on / off "Block information" will enable / disable message blocking function

Instant camera translation

Language selection:

- Click the button at top of the instant camera translation page and select "Select language" options.
- Click to choose the source language / target language as needed.

Instant camera translation

- Click the button at top of the instant camera translation page and select "Select language" options.
- Turn camera flash on or off as you need.
- Tap Take photo.
- At the bottom ,tap the button.
- The text on your screen is translated.

Offline translation

Language selection:

- Tap the language button at the top of the Translate page to see the list of available languages.
- Swipe up and down to find the language you need . Tap the name of the language to activate it.

Voice recognition:

- Long press the A/B Button on the device to trigger the Speech-Recognition mode.(A Button for the language on the left side, B Button for the language on the right side)
- After releasing the A/B Button, the speech will be automatically recognized and translated to the specified target language. The pronunciation starts automatically if voice broadcast is enabled in the application settings.
- The list presents previous voice translation result. Swipe up and down to review when the records are too many.

Favorites:

- Long press on the specific item in the list of translated result will prompt with a dialog.
- Tap the "Favorites" option, with a notice, the specified translation result is marked as favorites.
- Short click on any record, the pronunciation starts automatically. To clear the record, tap and hold it.

Settings

WIFI: Configure WIFI network for the devices.

Mode: you can choose either automatic broadcast or manual broadcast mode. When you choose the manual mode, the translation results will need to be manually clicked to broadcast.

Bluetooth: you can connect you device with a compatible Bluetooth enabled device.

Display: In this menu, you can change the time it takes your device to go to sleep. The time limit you can choose: 30 seconds, 1 minute, 3minutes, Never turn off.

Date & Time: automatic mode and manual mode are available to choose.

Reset: reset the device to its factory state (delete all user data on the device, and this cannot be undone)

Firmware upgrade: check information of the existing version and new version.

About us: check the model name, version number, patent information of the device.

Online Update

When there is a new version upgradable, the device will check for it when user switched language, reboot the device, or 24 hours after the previous check. Both WIFI and mobile network are applicable for the update.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.